

MKRY3 ROCK ASSEMBLY




WARNING

ENSURE THE UNIT IS COMPLETELY COOL BEFORE STARTING INSTALLATION

TO AVOID DANGER OF SUFFOCATION KEEP THE PACKAGING BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE IN CRIBS, BED, CARRIAGES OR PLAY PENS. THIS BAG IS NOT A TOY. KNOT BEFORE THROWING AWAY.

YOU WILL NEED:

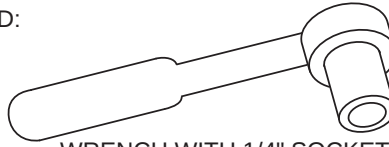

WRENCH WITH 1/4" SOCKET

INCLUDED IN THIS KIT:

ROCK #	PART #	DESCRIPTION
#1	W135-0549	REAR ROCK ASSEMBLY
#2	W135-0550	MID REAR ROCK ASSEMBLY
#3	W135-0551	MID RIGHT ROCK ASSEMBLY
#4	W135-0552	MID LEFT ROCK ASSEMBLY
#5	W135-0553	FRONT LEFT ROCK ASSEMBLY
#6	W135-0554	FRONT RIGHT ROCK ASSEMBLY


NOTE: All the rock assemblies have slots or openings to fit over the studs and brackets.



1. Remove the three screws from the rear log support and burner as shown.



2. Secure the three brackets as shown. Make sure the two rear brackets face towards the front of the firebox and the bracket on the burner faces the rear.

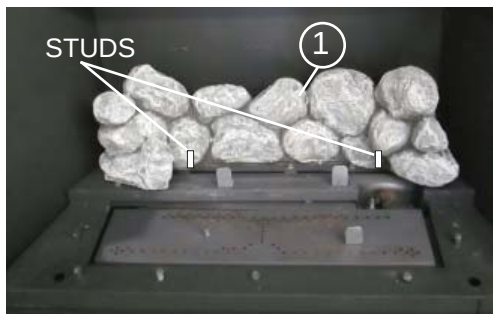

3. Place the #1 rock assembly onto the studs located on the rear support as shown.




4. Place the #2 rock assembly onto the two corresponding brackets in front of the #1 rock assembly as shown.

Quality System Certified To

ISO
9001-2008


W415-1230 / 10.08.13

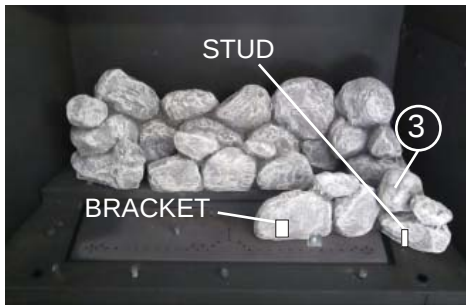


5. Place the # 3 rock assembly on the bracket and stud located onto the right of the burner cover as shown.



6. Place the # 4 rock assembly onto the two corresponding studs on the left side of the burner cover as shown.

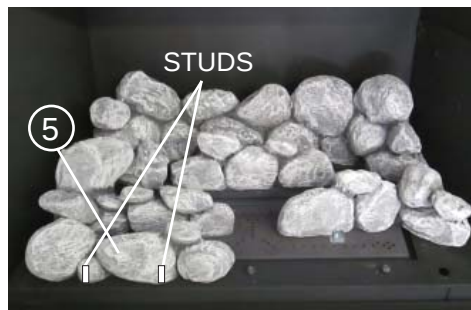

7. Place the # 5 rock assembly onto the two corresponding studs located on the left side of the front as shown.

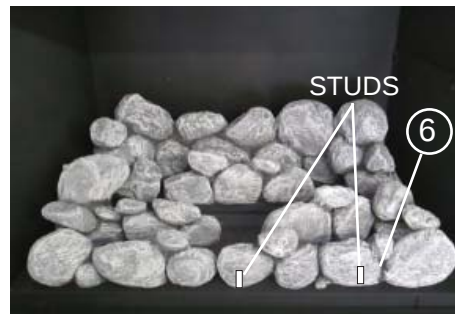

8. Place the # 6 rock assembly on the two corresponding studs located on the right side of the front burner as shown.


ASSEMBLAGE DE ROCHES MKRY3

! AVERTISSEMENT

ASSUREZ-VOUS QUE L'APPAREIL EST COMPLÈTEMENT REFROIDI AVANT DE COMMENCER L'INSTALLATION.

AFIN D'ÉVITER LES RISQUES DE SUFFOCATION, GARDEZ LE SAC D'EMBALLAGE LOIN DES BÉBÉS ET DES JEUNES ENFANTS. NE LE LAISSEZ PAS TRAÎNER DANS LES BERCEAUX, LES LITS, LES POUSSETTES OU LES PARCS DE JEU. CE SAC N'EST PAS UN JOUET. NOUEZ-LE AVANT DE LE JETER.

VOUS AUREZ BESOIN DE:

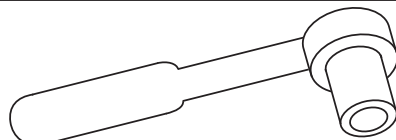

1/4" CLÉ À DOUILLE

FOURNI DANS L'ENSEMBLE:

# DE ROCHE	# DE PIÈCE	DESCRIPTION
#1	W135-0549	ENSEMBLE DE ROCHES ARRIÈRE
#2	W135-0550	ENSEMBLE DE ROCHES MI-ARRIÈRE
#3	W135-0551	ENSEMBLE DE ROCHES MI-DROITE
#4	W135-0552	ENSEMBLE DE ROCHES MI-GAUCHE
#5	W135-0553	ENSEMBLE DE ROCHES AVANT GAUCHE
#6	W135-0554	ENSEMBLE DE ROCHES AVANT DROITE


NOTE : Tous les ensembles de roches ont des fentes ou des ouvertures pour recevoir les goujons et les supports.



1. Enlevez les trois vis du support de bûches arrière et brûleur comme illustrée.




2. Fixez les trois supports comme illustré. Assurez-vous que les deux supports arrière soient orientés vers l'avant du caisson, et le support sur le brûleur, orienté vers l'arrière.

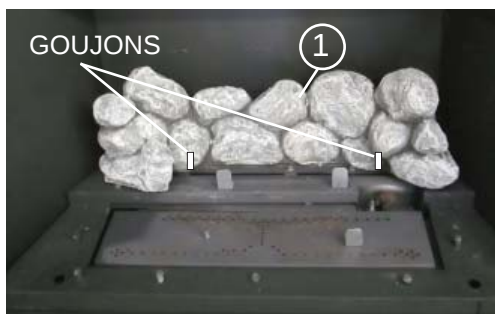

3. Placez l'assemblage de roche #2 sur le goujon du support comme illustrée.




4. Placez l'ensemble de roches #2 sur les deux supports correspondants, en avant de l'ensemble de roches #1 comme illustré.

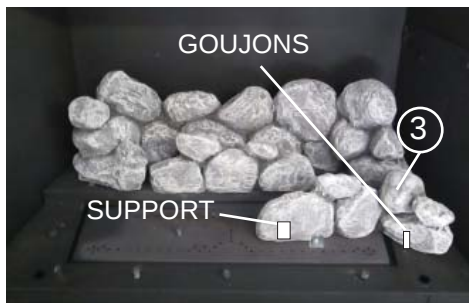

5. Placez l'ensemble de roches #3 sur le support et le goujon situés à la droite du couvercle du brûleur comme illustré.



6. Placez l'ensemble de roches #4 sur les deux goujons correspondants, du côté gauche du couvercle du brûleur comme illustré.

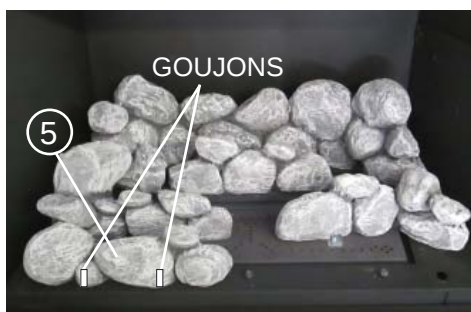

7. Placez l'ensemble de roches #5 sur les deux goujons correspondants, situés sur le côté gauche avant comme illustré.



8. Placez l'ensemble de roches #6 sur les deux goujons correspondants, situés sur le côté droit du brûleur avant comme illustré.