



OWNER'S MANUAL

OSCILLATING CERAMIC HEATER

10" | 1500 / 900W



MODEL 1VAHC10WC

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using any electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, hyperthermia, and personal injury, including the following:

1. Read all instructions before using the heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch the hot surfaces. If provided, always use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet from the front, sides or rear of the heater.
3. Extreme caution is necessary when any heater is operated by, or used near children or individuals with reduced physical, sensory, or mental capabilities.
4. NEVER leave the heater operating while unattended.
5. Always unplug the heater when it's not in use.
6. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard, or call customer service before you return the heater to authorized service facility for examination or repair.
7. Do not use the heater outdoors.
8. This heater is not intended for use in bathrooms, laundry areas, or similar moist indoor locations. Never locate the heater where it may fall into a bathtub or other water container.
9. Do not run cord under carpeting, throw rugs, runners, or similar coverings. Do not run the cord under furniture or appliances. Arrange the cord away from high traffic areas where it will not be tripped over.
10. **CAUTION:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way into a polarized outlet. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to bypass this safety feature. Doing so could result in an electric shock hazard.
11. This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit with other working appliances.
12. **CAUTION:** It is normal for the plug to feel warm to the touch; however, a loose fit between the plug and outlet may cause overheating and damage to the plug. Contact a qualified electrician to replace loose or broken outlet.
13. To disconnect the heater, first turn it off, then remove the plug from the outlet. Never pull by the cord.
14. Do not insert foreign objects- or allow them to enter- into any vents or exhaust openings, as this may cause an electric shock, fire, or damage to the heater.
15. To prevent a possible fire, do not block air vents in any manner. Do not use the heater on soft surfaces, like beds or rugs, where the openings may become blocked.
16. A heater has hot, arcing, or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are either stored or used.
17. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury.
18. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
19. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
20. **CAUTION:** Always plug heaters directly into a 115~120 V wall outlet. Never use with an extension cord, adapter, or power strip.
21. The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Using this heater is not recommended for people with reduced sensitivity to heat or an inability to react to burn avoidance.
22. **CAUTION:** To prevent electric shock, match wide blade of plug to wide slot and fully insert.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT INSTRUCTIONS

WARNING: CONTINUOUS OPERATION AND TIMER USE


- Plug directly into a wall outlet. Do not use an extension cord, power strip, surge protector, outlet adapter, or any other type of cord extension.
- Do not use the space heater in an outlet that is loose or does not hold the plug securely.
- Do not operate the unit if the power cord, plug, or outlet is damaged, loose, or overheating.
- This unit is not designed for unattended use or continuous operation for indefinite periods.
- If this unit includes a timer, the timer function is provided solely for convenience. It is not a safety device and is not a substitute for active supervision.
- Periodically turn the unit off and discontinue use immediately if any abnormal operation is observed.

IMPORTANT SAFETY WARNING: PACKAGING REMOVAL

DO NOT operate this unit while it is inside, resting on, or in contact with Styrofoam, foam blocks, plastic bags, tape, or any packaging materials.

FAILURE TO REMOVE ALL PACKAGING MATERIALS BEFORE USE MAY RESULT IN OVERHEATING, MELTING, SMOKE, FIRE, PROPERTY DAMAGE, OR PERSONAL INJURY.

PARTS DIAGRAM

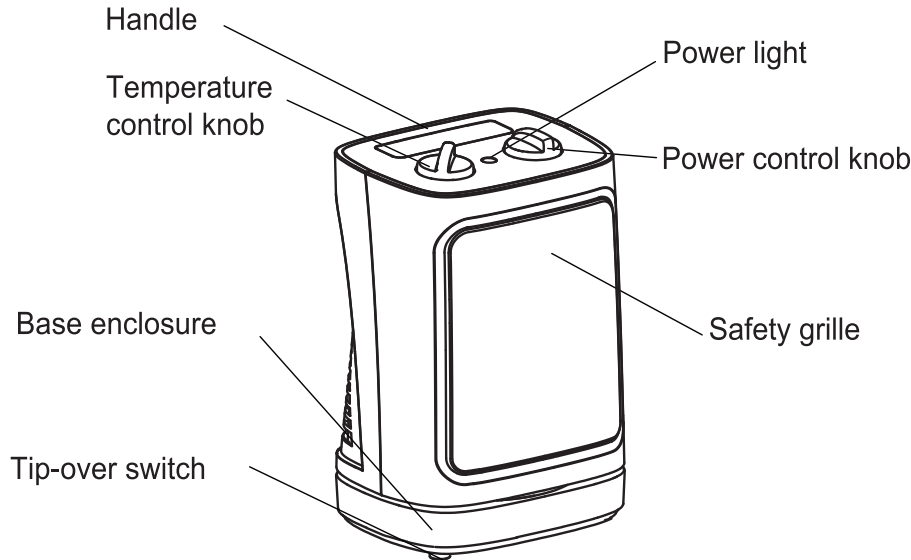

OPERATING INSTRUCTIONS

BEFORE USING THIS PRODUCT

- Remove the unit completely from the carton.
- Remove ALL Styrofoam, foam inserts, plastic coverings, tape, and protective materials.
- Inspect all air intake and exhaust openings to ensure they are fully clear and unobstructed.

⚠ NEVER attempt to operate the unit while packaging materials are attached or nearby.

For safe operation

- Stop using immediately if unusual noise, odor, or abnormal operation occurs.
- Do not operate this unit unattended for extended periods of time.
- Keep the heater out of reach of children and pets during operation.
- Do not rely on the timer function as a substitute for supervision.
- This heater is intended for **indoor, dry-location use only**.
- Do not operate outdoors or in damp environments.
- Do not place the heater on soft surfaces such as beds, sofas, or thick carpeting that may restrict airflow.
- Maintain proper clearances and ventilation during operation.
- Do not insert or allow foreign objects to enter ventilation or exhaust openings.
- Do not modify the plug or attempt to bypass built-in safety features.

OPERATING INSTRUCTIONS

- Always unplug the unit when not in use or before cleaning or maintenance.
- Allow the unit to cool before moving or storing.
- Turn the unit off periodically to allow internal components to cool.

⚠ Failure to follow these instructions may result in damage to the unit or unsafe operating conditions.

Before turning on the heater:

1. Check the power cord and plug for damage. Never operate the unit with a damaged cord.
2. Plug your heater into a grounded 115-120V AC outlet. Be sure the voltage and frequency are the same as the voltage and frequency listed on the rating label. Otherwise, contact a qualified electrician to replace it.
3. Position the heater on a flat surface. Unlevel or soft surfaces may cause the Tip-over switch to disengage causing the unit to not work after being powered on, so ensure the heater is placed on a sturdy, flat surface during operation.

Temperature Control Knob

Insert the plug directly into the outlet, then turn the Temperature Control knob clockwise (to the right). When you hear the "click" sound, it means the temperature control function is on; proceed to adjust the knob to the desired temperature level.

Power Control Knob

Settings: Low/Low Swing - 900W High/High Swing - 1500W

Turning the Power control knob allows you to choose between 4 settings: **LOW, HIGH, LOW SWING, HIGH SWING.**

Turn off the Heater

1. Turn the Power control knob to the **OFF** position.
2. Turn the Temperature Control knob all the way to the left.
3. Unplug the unit from the wall outlet; wait until the heater has cooled completely before storing it.

Safety Protection

Overprotection

This heater includes an overheat protection system that shuts the unit off if it overheats due to abnormal temperature conditions. If this occurs turn the heater off, unplug it, then inspect and remove any objects on or near the heater. Allow it to cool for 5-10 minutes before plugging it back in and resuming normal operation.

Tip-over switch

As a safety measure, the unit will shut off automatically if it is knocked over. If this occurs, turn the heater off and stand it back up to a regular upright position, then turn it back on.

UNIT SPECIFICATIONS

Power supply: AC 120V ~ 60Hz

MODEL	POWER REGULATION RANGE (W)			
	LOW	HIGH	LOW SWING	HIGH SWING
1VAHC10WC	900	1500	900	1500

CLEANING AND STORAGE

For optimal performance, we recommend cleaning the heater at least once a month, as well as before storing for the off-season.

- Turn the heater **OFF** and unplug it. Allow it to cool.
- Use a dry cloth to clean the outer surfaces of the heater.

DO NOT USE WATER, WAX, POLISH, OR ANY CHEMICAL SOLUTION.

- Clean your heater using the above-mentioned steps, then pack the heater in its original container before storing it in a cool, dry place.
- This heater has no user serviceable parts and cannot be disassembled.
- The motor is factory lubricated for life and will require no further lubrication.

TROUBLESHOOTING

If the heater does not operate- properly or at all, first check the following list. If the reason the heater does not operate or does not operate properly is not on the list, it may have failed. Contact Customer Service at 1-833-950-1185 for further assistance.

Issue	Possible Cause	Solution
After the power has been turned on, the power light does not illuminate and the unit does not work.	The heater may not be plugged in correctly.	Make sure the heater is plugged firmly into the outlet.
	The temperature control knob has not been turned on.	Turn the temperature control knob to the ON position.
The unit suddenly stops working during heating.	The temperature exceeded the threshold for the thermal cut-off protection.	Unplug the heater: allow the unit to cool before turning it back on.



4560 W. 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com

www.visionairproducts.com