



OWNER'S MANUAL

OIL-FILLED HEATER

15" | 700W



MODEL 1VAHL15M

CONTENTS

Safety Guidelines	4
Safety Features.....	6
Product Diagram & Assembly	7
Usage	8
Care and Maintenance	9
Troubleshooting	10

TECHNICAL DATA

Model: 1VAHL15M

Voltage Rating: 120V~ / 60Hz

Watts: 700W

Size: 5.4 in. W x 15.1 in. D x 12.4 in. H

Weight: 8.2 lbs.



CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

 WARNING	Read and understand this entire owner's manual, including all safety information, before electric shock, or serious personal injury.
 CAUTION	Keep this owner's manual for future reference.

SAFETY GUIDELINES

Thank you for choosing our Product. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Thoroughly read the instructions and familiarize yourself with all the operational aspects of your new product.

IMPORTANT INSTRUCTIONS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read ALL instructions before using this unit.
2. **CAUTION:** Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handle(s) when moving this heater. DO NOT place it against walls, furniture, curtains, etc.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas, showers or swimming pools and similar locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

SAFETY GUIDELINES

(Continued)

11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
14. To avoid fire or shock hazard, plug the unit directly into a 120 V AC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
18. Always use on a dry, level surface. Use on floor only.
19. DO NOT use outdoors.
20. **WARNING:** To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
21. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts.
22. Always use the product in an upright position.
23. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
24. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

READ AND SAVE THESE INSTRUCTIONS

SAFETY FEATURES

OVERHEAT SAFETY FEATURE

This heater is equipped with an overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheating and possibly, the heater will automatically shut off.

- A thermal overload protector is built in to prevent overheating. When an "overheat" temperature is reached, the heater will automatically shut off. Operation can resume only when the user resets the unit.
- Follow the below steps to reset the unit:
 1. Turn the Power Switch to "ON" position, and turn the Thermostat Control Dial to the "OFF" position.
 2. Disconnect the power cord from the electrical outlet.
 3. Allow heater to cool down for at least ten minutes.
 4. Ensure that both intake and exhaust vents are clear of obstructions.
 5. Connect the power cord to the electrical outlet.
 6. Turn on the Power Switch, and then turn the Thermostat Control Dial to the highest setting.


⚠ WARNING It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

IN THE BOX

- Oil-filled Radiator Heater
- Base Feet
- Owner's Manual

PRODUCT DIAGRAM & ASSEMBLY

PRODUCT DIAGRAM

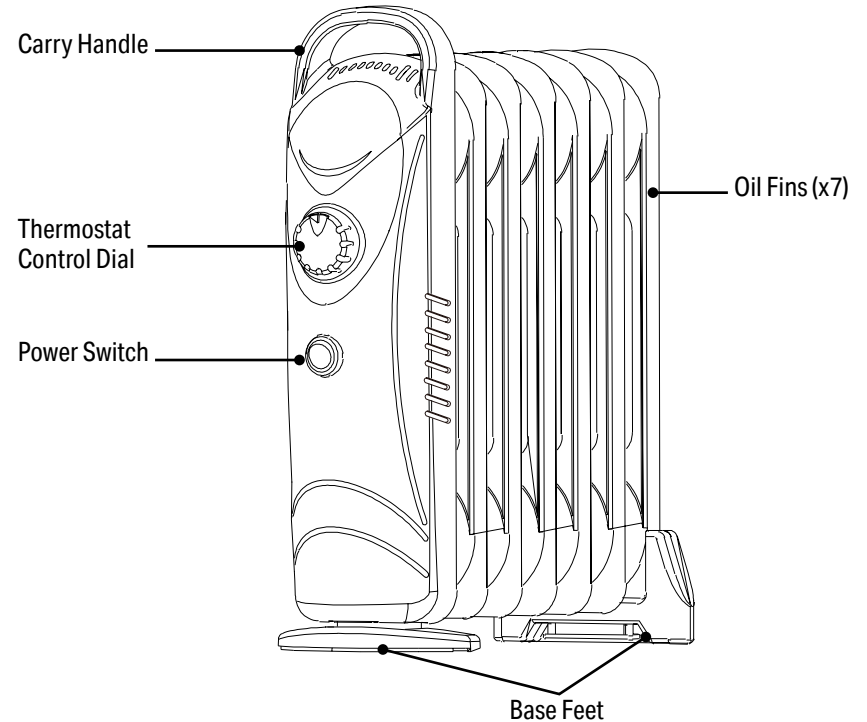

INSTRUCTIONS FOR ASSEMBLY

Remove the heater and all the accessories from the box.

1. Turn the heater upside down.
2. Slide the Base Feet on to the fins ends as shown in above image.
3. Turn the heater right side up.
4. Check the stability of the heater by standing it on a smooth level surface.


⚠ WARNING DO NOT open or refill / change oil fins. Oil fins are permanently sealed and DO NOT require refilling or oil changing. Attempting to open fins will damage the unit. This unit is filled with a non-toxic mineral oil.

USAGE

INSTRUCTIONS FOR USE

1. Place the product on a firm, level surface.
2. Plug the unit directly into a 120V AC electrical outlet. **THE PLUG NEEDS TO BE INSTALLED DIRECTLY INTO A WALL OUTLET, NEVER USE AN EXTENSION CORD OR ANY TYPE OF ADAPTER. THE HEATER SHOULD NEVER SHARE A WALL OUTLET WITH ANOTHER APPLIANCE.**
3. Turn the POWER SWITCH to the "ON" position.
4. Turn the THERM OSTAT CONTROL DIAL to "LOW".
5. For faster heat up or to increase heat output, turn the THERMOSTAT CONTROL DIAL clockwise to the "HIGH". The thermostat function controls the temperature output. To decrease the heat output, turn THERMOSTAT CONTROL DIAL counter clockwise.
6. Once the room reaches the desired temperature, slowly turn the THERMOSTAT CONTROL DIAL counter clockwise until you hear a "click". This sets the heater to cycle ON/OFF to maintain the desired heating temperature for energy efficiency.
7. It will normally require approximately 15 minutes to reach operating temperature.

NOTICE When the heat function is used for the first time, a slight odor may be present. This is normal and should not occur again unless the heater is not used for an extended period of time.

 **WARNING** DO NOT cover heater at any time during operation, as there is risk of FIRE if heater is covered.

CARE AND MAINTENANCE

MAINTENANCE

1. Turn the POWER SWITCH to the "OFF" position.
2. Unplug the unit and let it cool completely.
3. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. A mild detergent can be used if necessary.
4. After cleaning, dry the unit with a soft cloth.
5. Wait until the unit is completely dry before use.

WARNING

- DO NOT let liquid enter the heater.
- DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- DO NOT immerse the heater in water.

STORAGE

1. Save the original box for off-season storage.
2. Clear the heater with a soft, damp cloth.
3. Remove the Base Feet.
4. Place the Radiator and Base Feet in the original box, and store in a cool and dry place.
5. Ensure the heater is covered to protect from the dust.

TROUBLESHOOTING

TROUBLESHOOTING

If the heater will not operate, please check the following:

1. Check if the power cord is plugged into an electrical outlet. If not, plug in unit to appropriate outlet.
2. Ensure the POWER SWITCH is turned to "ON" position.
3. Make sure heater is placed on solid surface.
4. Check for obstructions at the intake and exhaust vents.
 - If obstructions are present, refer to the instructions for resetting your heater when the Overheat Protection System has been activated.
 - If no obstructions are present, and your heater still does not operate normally, turn the POWER SWITCH to the "OFF" position, disconnect the power cord from the electrical outlet, and consult an authorized repair technician.

NOTE: The product is equipped with an overheat safety feature protector which will switch off the heater in case of accidental over heating.



4560 W. 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com
www.visionairproducts.com