



---

## OWNER'S MANUAL

# 1/2 HP AIR BLOWER

---



---

MODEL 1VAFBW2800



# CONTENTS

|                                |   |
|--------------------------------|---|
| OPERATION / INSTRUCTION .....  | 4 |
| SAFETY INSTRUCTIONS .....      | 5 |
| MAINTENANCE INSTRUCTIONS ..... | 5 |
| TROUBLE SHOOTING .....         | 6 |
| SPECIFICATIONS .....           | 6 |
| STACKING FOR STORAGE .....     | 7 |

## **IMPORTANT NOTE:**


Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

 **WARNING:** Cancer [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# INSTRUCTIONS

The Air Mover is intended to move air and to dry floors, walls, carpet, furniture, etc. Durable and easy to operate with an effective balance of static pressure and airflow, the units are suitable for a variety of applications.

1. Your Air Mover is prepped for use upon delivery. Before connecting it to power, thoroughly check for any shipping damage.
2. Plug the electrical cord into an outlet.
3. Gently position the Air Mover on a solid, level, and dry surface. The unit features three Air Mover positions that can direct airflow across flat or upward-angled surfaces.

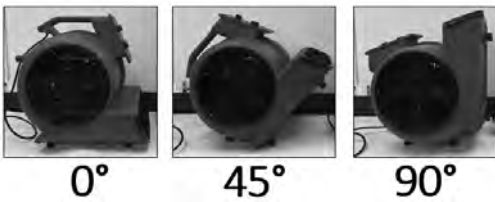

4. Set your preferred speed (1-LOW, 2- MED, 3- HIGH) using the control knob. If your fan will not turn on, make sure the Timer knob is set to "ON", then try setting preferred speed again.



5. Your air blower comes equipped with a convenient 180-minute (3 Hour) timer knob that allows you to set the operating time as needed.

**Turn Clockwise:** To set the timer, gently grasp the timer knob and turn it in a clockwise direction. As you turn it, you will notice the timer markings indicating the selected time interval.

**Choose Your Time:** Turn the knob to align the desired operating time with the reference mark or indicator on the control panel. This indicates how long the air blower will run before automatically turning off.

**Start the Blower:** Once you've set the desired time, simply start the air blower using the speed control knob as instructed in the user manual.

**Timer Activation:** The blower will run for the duration you've set on the timer. The fan will automatically switch off when the timer reaches zero.

**Important Note:** To reset the timer, turn the knob counter counter-clockwise to "ON", then reselect your new settings.

**NOTE:** Keep constant supervision on all active Air Movers.

# SAFETY INSTRUCTIONS

1. To prevent electric shock, do not operate the unit in standing water. Never plug in or unplug the unit with wet hands or while standing in water.
2. To avoid risk of injury, do not direct air flow at face or body.
3. To reduce the risk of fire or electric shock, do not use the Air Mover with any solid-state speed control device.
4. Do not operate any Air Mover with a damaged cord or plug. Discard the unit or return it to an authorized service facility for examination and/or repair.
5. Unplug the Air Mover from the power supply before servicing or cleaning.
6. Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or similar coverings. Place the power cord away from traffic area to prevent tripping.
7. Do not allow children to play with or around an Air Mover at any time.
8. Do not move or carry an Air Mover while unit is operating.
9. All Air Movers in operation must be supervised at all time.

## MAINTENANCE INSTRUCTIONS

---

1. To keep the Air Mover clean, use a damp cloth to wipe the surface of the housing.
2. Never submerge or soak the Air Mover with water.
3. When not in use, unplug and store the Air Mover in a dry indoor place out of reach of children.
4. Always disconnect the Air Mover from its power source before performing any maintenance or cleaning.

# TROUBLE SHOOTING

For any problems not listed below, call your local distributor or contact our Service Department.

| PROBLEM                        | POSSIBLE CAUSE                    | SOLUTION  |
|--------------------------------|-----------------------------------|---|
| Air Mover not running          | No power input                    | Plug in the Air Mover; check power source             |
|                                | Switch not turning on             | Turn on switch  |
|                                | Air Mover fan wheel jammed        | Remove material jamming fan                           |
|                                | Intake or exhaust blocked         | Turn unit off and allow to cool, then remove blockage |
| Air Mover vibrates excessively | Accumulation of dirt on fan blade | Clean Air Mover fan blades                            |

## SPECIFICATIONS

|                        |                     |
|------------------------|---------------------|
| Model                  | 1VAFBW2800          |
| Power                  | 1/2HP               |
| Voltage                | 115V/60Hz           |
| Amp                    | 4.6                 |
| Speeds                 | 3                   |
| Timer                  | 3 Hours             |
| Size (L x W x H)       | 19.3" x 16" x 19"   |
| Stackable              | Yes                 |
| Cord Length            | 18Awg 20Ft          |
| Overheating protection | Thermally protected |
| Positions              | 0°, 45°, 90°        |
| Safety Marks           | ETL/CETL            |
| Housing                | PP                  |
| Gross Weight           | 27 Lbs              |

# STACKING FOR STORAGE

**IMPORTANT NOTE:** Stacking the fan is solely intended for storage purposes, as outlined in the provided diagram. Under no circumstances should the fan be operated while stacked. This precaution is crucial to ensure safe and optimal functioning of the equipment.

**Max stacking:** 4 units



For your records, staple your sales receipt to this manual and record the following:

**Date of Purchase:** \_\_\_\_\_

**Place of Purchase:** \_\_\_\_\_

**NOTE:** Proof of purchase is required for all warranty claims.

**NOTE:** As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.



4560 West 160th Street  
Cleveland, OH 44135

833-950-1185 | [support@visionairproducts.com](mailto:support@visionairproducts.com) | [www.visionairproducts.com](http://www.visionairproducts.com)