




**OWNER'S MANUAL**

# **OUTDOOR WALL / CEILING MOUNT INFRARED IP65 PATIO HEATER**

---

18" | 1500W | OUTDOOR

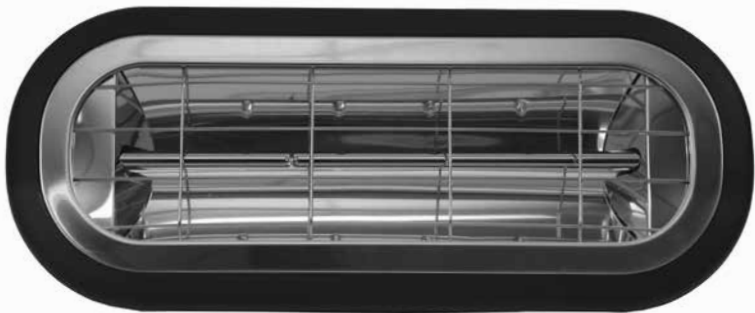

---

**MODEL 1VAHPT18**

# CONTENTS

Safety Guidelines .....	4
Grounding Methods .....	7
Installation.....	8
Use and Maintenance.....	13
Cleaning and Storage.....	14
Troubleshooting .....	15

## TECHNICAL DATA

---

**Model:** 1VAHPT18

**Voltage Rating:** 110-120V~ / 60Hz

**Watts:** 1500W

**Size:** 18 in. W x 7.5 in. D x 3 in. H

**Weight:** 4.9 lbs.

## CONSUMER PRODUCT INFORMATION



---

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: \_\_\_\_\_

Location: \_\_\_\_\_

Date Purchased: \_\_\_\_\_

 <b>WARNING</b>	THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE. We cannot be liable for any damages caused by failure to observe these instructions.
 <b>CAUTION</b>	FOR OUTDOOR USE ONLY

## IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY—The infrared heater is designed for safe operation. Nevertheless, installation, maintenance and operation of the heater can be dangerous. Observing the following procedures will reduce the risk of fire, electric shock, injury to persons and keep installation time to a minimum. Save these instructions for future use.

1. Read ALL instructions before using this unit.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of package (such as plastic bags).
4. Check the household voltage to ensure it matches the heater's rated specification.
5. Check the power cord and plug carefully before used, to make sure that they are not damaged.
6. Before unplugging the power cord, be sure to turn off the power, when energizing the unit, be sure your hands are dry to prevent from electric shock.
7. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (1 m) from the front of the heater and keep them away from the sides and rear.
8. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
9. Do not use near or in the immediate vicinity of a bath or swimming pool or any source of liquid.
10. To protect against electric shock, do not immerse cord or plug in water or any other liquid.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the heater.
12. Always unplug the heater when not in use.
13. Connect to properly grounded outlets only.

14. Always plug heaters directly into a wall outlet / receptacle. Never use with an extension cord or relocatable power tap (outlet / power strip).
15. Do not allow cord to overhang the counter top where it can be easily pulled by children.
16. Do not put fingers or foreign objects into the grill while in operation.
17. Do not leave the appliance unattended when in use.
18. This heater is not intended for use in bathrooms, laundry and similar indoor locations, never located heater where it may fall into a bathtub or other water container.
19. No liability can be accepted for any damage caused by non compliance with these instructions or any other improper use or mishandling.
20. This appliance is not intended for use by persons (including children) with reduces physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children and vulnerable people should be supervised to ensure they do not play with the appliance.
21. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
22. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Disconnect power at service panel and have heater inspected by a reputable electrician before reusing. If the supply cord is damaged in any way, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
23. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
24. To disconnect heater, turn controls to off, then remove plug from outlet.
25. To prevent overheating of this appliance, keep the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets from time to time to ensure it is clear of any dirt or dust accumulation. DO NOT COVER.

## SAFETY GUIDELINES

(Continued)

26. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
27. Parts of the heater may exceed 392°F (200°C), contact with the heating tube, reflector, or metal parts near the heating tube, may cause severe BURNS. To avoid burns, do not let bare skin touch hot surface.
28. NEVER place hands under the heating elements. ALWAYS allow heating element to cool at least 10 minutes before touching the heating tube or adjacent parts.
29. This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.
30. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
31. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

## READ AND SAVE THESE INSTRUCTIONS

## GROUNDING METHODS


### INTRODUCTION

The VisionAire carbon infrared heaters produce instant and comfortable heat like the sun. These robust and weatherproof heaters are designed for domestic and commercial heating applications at outdoor well-protected areas.

This heater is for use on 120 volts. The cord has a plug as shown at **A** in Grounding Method below. Always plug the heater directly into a grounded wall outlet. Never use an extension cord or outlet adapter. This ensures proper grounding and reduces the risk of electrical hazards.

A loose connection to the outlet can impact performance and pose a hazard. Ensure the plug is firmly inserted into the wall outlet. If the outlet is worn out or the plug doesn't fit securely, consult a certified electrician for replacement.

### GROUNDING METHOD

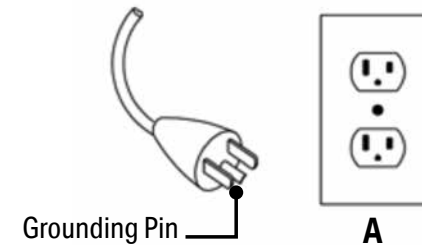

# INSTALLATION

## INSTALLATION

### Tools Needed:

- Pencil
- Level
- Power Drill and Drill Bits
- Hammer
- Screw Driver

A wall mounting bracket is provide with the heater which has been specifically designed to allow this product to be fitted to a ceiling before drilling the holders for the ceiling is solid and that there are no hidden water pipes or electric wires. The heater must be installed no less than 1.64 ft (0.5 m) from side walls and no less than 7.87 ft. (2.4 m) off the floor.

**ATTENTION!** The appliance must be installed on the solid surfaces like concrete, wood or metal etc.

**Important:** Ensure that the supply cables is well mounted and that it does not come into contact with reflector of the heater or that does not trail into heated area, the supply cable can be fixed to the metal mounting bracket behind heater with plastic zip ties.

1. This heater should be installed by a competent person, i.e. a qualified electrician.
2. Always disconnected the heater from the electricity supply and allow it to cool before installation.
3. For ceiling mounting, the lowest part of the heater must be located at or above a minimum height of 7.87 ft. (2.4 m) from ground level, so that the heater can not be touched when in operation.
4. For ceiling mounting, there must be a 7.87 ft. (2.4 m) distance from your appliance to the ground.
5. When installed to the ceiling, there must be a distance of 1.64 ft (0.5 m) between corners and the appliance.
6. The distance of your appliance from the living beings is to be min 3 ft. (1 m).
7. The distance from the front side of the heater to materials such as wood, carton, cloth etc., must be min. 3 ft. (1 m).
8. When mounting to a ceiling, do not position the heater at an angle more than 90°.


# INSTALLATION

(Continued)

9. The supply cable must be at the lower end of the heater if the heater is installed at an angle or vertically.
10. Keep the supply cord away from the body of the heater which will get hot during use.
11. Do not install the heater on an inflammable surface.
12. Observe the minimum safe distance between the heater body and the inflammable surfaces when mounted.
13. The heater should always have a minimum clearance of 1.64 ft (0.5 m) from a ceiling and adjacent walls.
14. If the heater is to be used outside, a weatherproof outlet is recommended.
15. Before drilling ensure that there are no wires or water pipes in the area where the heater is to be installed.
16. The heater must be installed on the mounting brackets provided.
17. Fasten the brackets securely to the mounting surface and the backside of the heater using the nuts and screws supplied.
18. Fasten the heater securely on the brackets using the nuts and bolts supplied.
19. The brackets can be used to adjust the direction of the heater, adjust the heater angle by loosening the two bolts on the wall mounting bracket, tighten the bolts again when the desired angle is reached.

### CORRECT INSTALLATION POSITION - 1

**Note:**  
*Mounted angle  
with 30°- 45°*

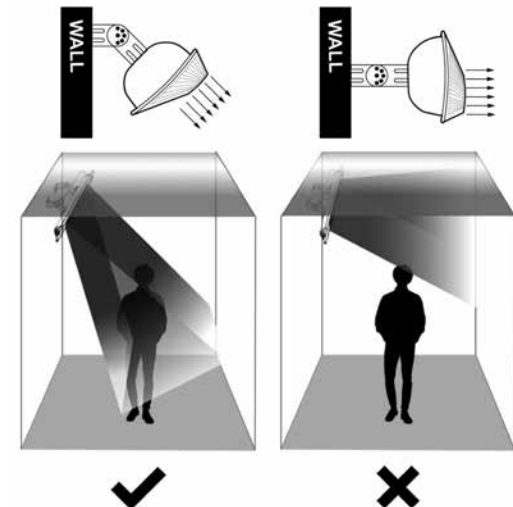


# INSTALLATION

(Continued)


## CORRECT INSTALLATION POSITION - 2

**Note:**  
Heater should be wall or ceiling mounted under well protected environments, at least 3 feet (1 m) away from any combustible objects.

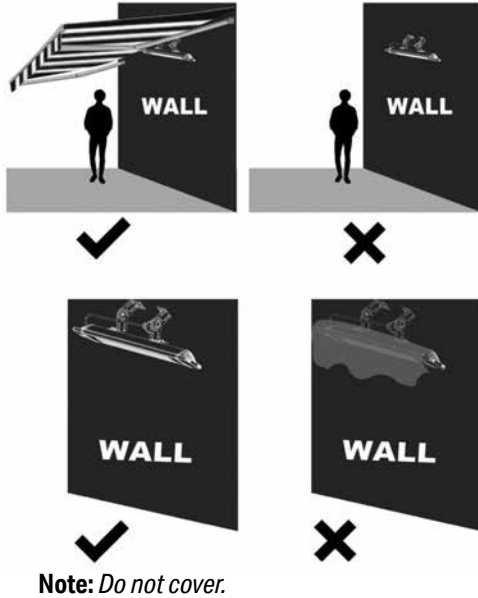


**Note:** Do not cover.


## WARNING—TO REDUCE THE RISK OF FIRE

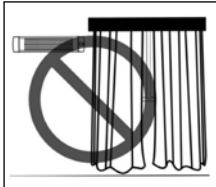


**Caution:**  
Keep combustible materials, such as furniture, pillows, curtains at least 3 feet (1 m) from the front of the heater and keep them away from the sides and rear.

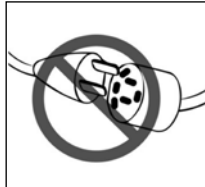

**Caution:**  
DO NOT use with an extension cord or relocatable power tap (outlet / power strip).

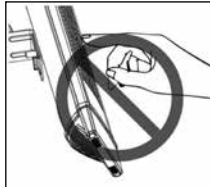

**Caution:**  
Hot surface, DO NOT touch





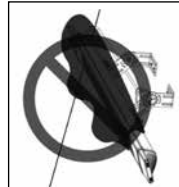


**Caution:**  
DO NOT cover with any objects such as blanket on the heater

# INSTALLATION

(Continued)

1	Bracket	U Shape	1 PCS
2	Bracket	L Shape	2 PCS
3	Plastic Wall Anchors		2 PCS
4	Screw	PA5mm*25 mm	2 PCS
5	Nut	M6 mm	2 PCS
6	Gasket	6mm*1 mm	2 PCS
7	Screw	M6mm*12 mm	2 PCS

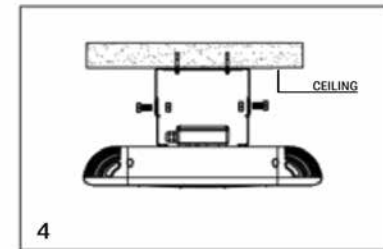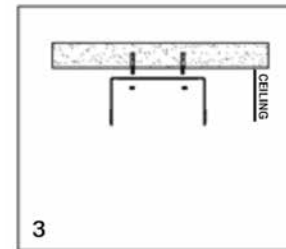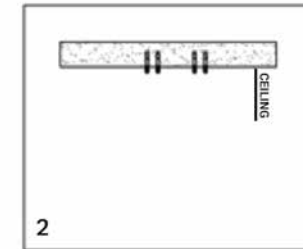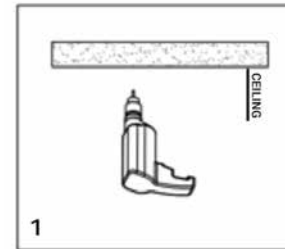
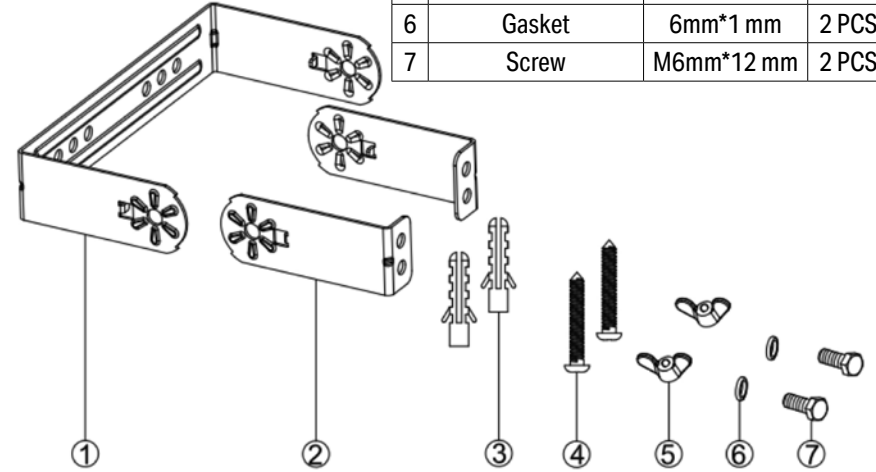


# INSTALLATION

(Continued)

The heater must be installed at least 7.87 ft. (2.4 m) above the floor or grade.

**ATTENTION:** Cable should NOT pass through the heater.

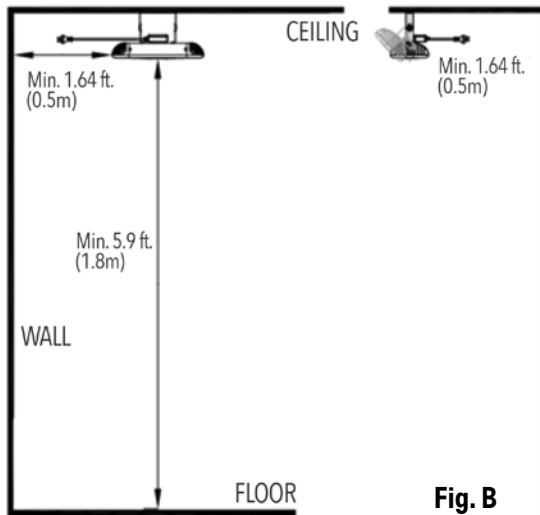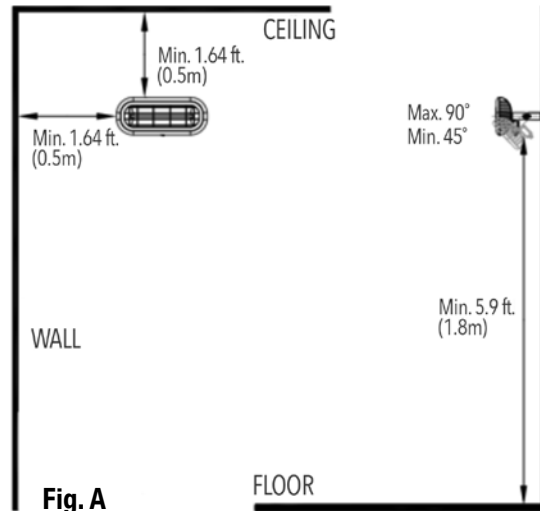

**Caution:** When the appliance is not operated for a long period of time, cleaning or maintenance is conducted or when the location of the heater is changed, the heater should be turned to OFF and unplugged from the electrical connection.

Periodic inspection and removal of dirt and contaminants will ensure that equipment can be operated safely.

# USE AND MAINTENANCE

## OPERATION

To turn the machine ON or OFF, toggle the red button located on top of the machine. One heating setting is available (1500W), the machine does not contain a fan.



## MAINTENANCE

**Attention!** Careful and regular maintenance of your heater considering our instructions assume great importance so as to attain a long efficient operation of your appliance.

1. Check the filthiness of the Reflector and IR-Filament at least once a month. If necessary, apply cleaning and maintenance instructions.
2. The number of checks may be increased considering the amount of the dust in the environment.
3. Check the deformation of the Reflector, Wire and Frame visually while cleaning the appliance. In case of deformation, consult to your technical service.
4. Check the Power Cord and Plug visually while cleaning the appliance. In case of deformation, consult to your technical service.

## CLEANING AND STORAGE

### CLEANING

---

Regular and careful cleaning helps your infrared heater operate efficiently for many trouble-free years. To clean your heater, follow steps below:

1. Unplug the power cord for your safety before cleaning your appliance.
2. Make sure the heater is cool before continuing.
3. To keep the heater clean, the outer shell maybe cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. (CAUTION: DO NOT let liquids enter the heater).
4. DO NOT use alcohol, gasoline, abrasive powders, furniture polish or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
5. DO NOT immerse the heater in water
6. Wait until the heater is completely dry before use.

### STORAGE

---

Store the heater in a cool, dry location when not in use to prevent dust and dirt build up. Use packaging carton to store.

## TROUBLESHOOTING

### ATTENTION:

---

1. Always disconnect the heater from the electricity supply and allow it to cool before attempting to work on it.
2. If the heater has collected dust or dirt inside the unit or around the heating element, have to unit cleaned by a qualified service agent. Do not operate the heater in this condition.
3. The only maintenance required is cleaning of the external surfaces of the heater.
4. Do not touch the heating element with bare fingers, as residue from your hand could affect the life of the lamp. If it is accidentally touched, remove the finger marks with a soft cloth moistened with mentholated spirit or alcohol.
5. Do not attempt to repair or adjust any electrical or mechanical functions on this heater.
6. The heater contains no user serviceable parts. Should the product suffer damage or breakdown, it must be returned to the manufacturer or its service agent.
7. Damaged supply cords to be replaced by the manufacturer, service agent or similarly qualified person in order to avoid hazard.

### RECYCLING

---

At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

### TROUBLESHOOTING

---

1. Unplug the machine and check for any damage to the cord or plug.
2. Check if the power cord is plugged into an electrical outlet, if not, plug in.
3. Check if electricity to the main fuse is working.





4560 W. 160th Street  
Cleveland, OH 44135

833-950-1185 | [support@visionairproducts.com](mailto:support@visionairproducts.com)  
[www.visionairproducts.com](http://www.visionairproducts.com)