



OWNER'S MANUAL

**6" OSCILLATING RECHARGEABLE
USB TABLE FAN**



MODEL 1VAFDR6

CONTENTS

INTENDED USE	4
IMPORTANT INSTRUCTIONS.....	4
SPECIFICATION	6
INCLUDED ITEMS.....	6
USAGE	7
CONTROL PANEL.....	8
CARE AND MAINTENANCE	10

IMPORTANT NOTE:

Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

INTENDED USE

This product is intended for indoor and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate,

While using your fan, you should follow the **IMPORTANT INSTRUCTIONS** listed below. As part of those instructions, we have used the word "WARNING" to indicate the level of hazard: WARNING indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric precautions:

- Read all the instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electric
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- Use of extreme caution is necessary when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended.
- Do not place the fan on a small, unlevel, uneven or any surface which might allow fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible, level surface.
- Always unplug fan when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments, not recommended or sold by the manufacturer, may cause hazards.
- Do not use outdoors.

- Do not use fan in window. Rain may cause electrical hazard (for non-window models).
- Do not operate the fan with blade guards or any safety device removed.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- Children should be supervised to ensure they do not play with the appliance.



WARNING Shock Hazard:

Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.



WARNING Hot Surfaces:

Do not touch fan motor when in use. This motor is hot when in use, to avoid burns, do not let bare skin touch hot surfaces.



WARNING Fire Hazard:

Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. **DO NOT USE** in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

INTENDED USE

(Continued)

DO NOT operate any fan with a damaged cord or plug or after fan malfunctions, has been dropped or damaged in any manner. Do not operate fan with a broken blade, safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement. For all other repairs contact VisionAir Customer Service by mail for information and assistance.

DO NOT run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Do not use an extension cord. Unplug the fan when not in use. Do not operate fan with its ventilation obstructed.

SPECIFICATION

Model Name	1VAFDR6
Speed Mode	4
Output Power	5W
Charging Input	DC5V. 1A
Battery Specification	4400mAh
Working Time	3-17h
Charge Time	6-8h
Product Weight	2 lbs

INCLUDED ITEMS

- Cordless Folding Desk Fan
- Micro-USB Cord
- Instruction Manual

USAGE

Adjust the tilt: When the fan is folded, gently pull upward to open the fan. Rotate the fan following the direction of the arrows to your desired position.


NOTE: Do not use the fan in the folding position.



Fan Operation: Always operate the fan in the upright position following all instructions and recommendations listed in this manual.


Fan Location: Place the fan on stable level surface that will provide proper fan cooling.

CONTROL PANEL

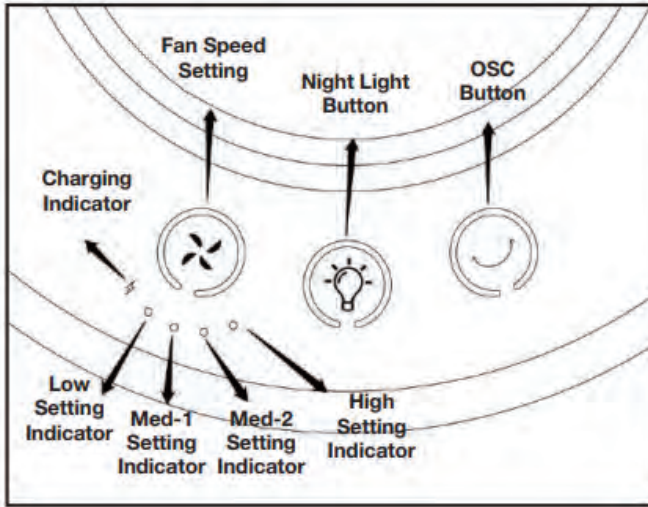


Operation Instructions:

Press the Fan Speed button () to turn the fan on.

Press the Fan Speed button () button to cycle through speed options and turn the fan off:

LOW – MED 1 – MED 2 – HIGH - OFF


Operation Instructions:


Press the Night Light button () once, the night light will repeatedly cycle from light to dark.

Press the Night Light button () again, and the night light will stay on.

Press the Night Light button () a third time, and the night light will turn off.

Operation Instructions:

Press the Oscillation button () once, and the fan will swing side to side.

Press the Oscillation button () again, and the fan will stop oscillating.

Charging Status Indicator: Stay informed about your fan's charging status with the help of the "Charging Indicator." Always ensure that your fan is charged for optimal performance.

Standby Mode Battery Alert: If you attempt to start the fan in standby mode with low battery, the "Charging Indicator" will blink rapidly three times and then turn off. This blinking pattern indicates that the battery is low and requires charging.

Charging Process: To recharge the fan, use the provided micro-USB cord. Plug the micro-USB end into the fan and the standard USB end into any DC5V USB port (not included).. The "Charging Indicator" will emit a calming pulsing green light during charging.

Charging While Operating: Much like a smartphone, if you attempt to start the fan while in standby mode with a low battery, you'll observe the "Charging Indicator" rapidly blinking three times on the fan before turning it off. This blinking pattern indicates the battery is critically low and requires recharging before operating the fan, even if connected to a main power source. Similar to how you'd wait for a phone to acquire a charge when it's very low on battery, please allow the fan to charge consistently for approximately 10 minutes before attempting to use it..

Full Charge Confirmation: Once the fan is fully charged, the "Charging Indicator" will transition to a steady green light, indicating that the fan's battery is fully replenished.

LAPTOP COMPUTER USER NOTE: When plugged into your laptop USB port, this USB fan gets its power from the computer laptop. To avoid laptop battery drain, plug laptop computer into a receptacle while using this fan.

Attention: Do not use other power source than USB cable or rechargeable batteries included. Disconnect USB cable when not using the fan.

CARE AND MAINTENANCE

Cleaning: ALWAYS DISCONNECT THE UNIT FROM THE POWER SOURCE BEFORE performing any cleaning or maintenance. Clean the grille surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners.

DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER:

Allow fan to dry completely before use. Periodic grille cleaning with a vacuum will prevent dust build up. The motor is sealed and does not require any interior maintenance, cleaning or lubrication.

Maintenance: The Internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

Repair: DO NOT OPERATE THE FAN WITHOUT THE GRILL IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

Storage: Keep original carton for storage of the fan. Coil and tie the power cord to avoid damage during storage.

WARNING: At the end of the fan's life, it must be disposed of correctly. Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

For your records, staple your sales receipt to this manual and record the following:

Date of Purchase: _____

Place of Purchase: _____

NOTE: Proof of purchase is required for all warranty claims.

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.



4560 W. 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com

www.visionairproducts.com