

OWNER'S MANUAL

OUTDOOR CARBON FIBER INFRARED IP55 PATIO HEATER WITH REMOTE

39" | 1500W / 750W



MODEL 1VAHPT39

CONTENTS

Safety Guidelines	4
Package Contents	
Assembly	
Display and Remote	
Troubleshooting	
Care and Maintenance	
Cleaning	14

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name:	
Location:	
Date Purchased:	

IMPORTANT NOTE:

Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

SAFETY GUIDELINES

IMPORTANT INSTRUCTIONS



READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.

 
WARNING—TO REDUCE THE RISK OF FIRE




Caution: DO NOT cover any objects such as clothes on the heater.



Caution: DO NOT place the heater near the bed.




Caution: Keep furniture, papers, clothes, etc. away from the sides and rear.

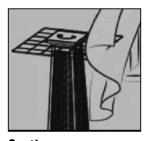


Caution:

Keep combustible materials, such as furniture, pillows, curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.

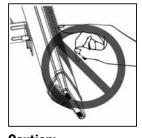

Caution: Hot surface, DO NOT touch.

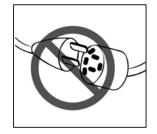

Caution: DO NOT use with an extension cord or relocatable power tap (outlet / power strip).

GENERAL SAFETY

- 1. Remove the unit from its packaging and check to make sure it is in good condition before using.
- Do not let children play with parts of package (such as plastic bags).
- No liability can be accepted for any damage caused by non compliance with these instructions or any other improper use or mishandling.
- This appliance is not intended for use by persons (including children) with reduces physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children and vulnerable people should be supervised to ensure they do not play with the appliance.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 7. Risk of Fire Do Not Operate Without Legs (Base) Attached.
- Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- 9. Always unplug the heater if it is not being used
- 10. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.
- 11. The heater should not be operated unless the extending guard is in place.
- 12. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
- 13. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

SAFETY GUIDELINES

(Continued)

OPERATION SAFETY

- 1. Do not use near or in the immediate vicinity of a bath or swimming pool or any source of liquid.
- 2. To protect against electric shock, do not immerse cord or plug in water or any other liquid.
- 3. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the heater.
- Do not allow cord to overhang the counter top where it can be easily pulled by children.
- 5. Do not put fingers or foreign objects into the grill while in operation.
- 6. Do not leave the appliance unattended when in use.
- 7. This heater is not intended for use in bathrooms, laundry and similar indoor locations, never put heater where it may fall into a bathtub or other water container.
- 8. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- To prevent overheating of this appliance, keep the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets from time to time to ensure it is clear of any dirt or dust accumulation. DO NOT COVER.
- 10. NEVER place hands under the heating elements. ALWAYS allow heating element to cool at least 10 minutes before touching the heating tube or adjacent parts.
- 11. This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

ELECTRICITY SAFETY


- 1. Check the household voltage to ensure it matches the heater's rated specification.
- 2. Check the power cord and plug carefully before use, to make sure that they are not damaged.

- 3. Before unplugging the power cord, be sure to turn off the power, when turning on the heater, be sure your hands are dry to prevent from electric shock.
- 4. Always unplug the heater when not in use.
- 5. Connect to properly grounded outlets only.
- 6. Always plug heaters directly into a wall outlet / receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- 7. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Disconnect power at service panel and have heater inspected by a reputable electrician before reusing. If the supply cord is damaged in any way, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9. To disconnect heater, turn controls to off, then remove plug from outlet.
- 10. Risk of fire—Do Not Operate without the protection bracket attached.

This heater is designed for 120 volts AC input. The cord has a plug as shown at **A** in figure below. Always plug the heater directly into a grounded wall outlet. Never use an extension cord or outlet adapter. This ensures proper grounding and reduces the risk of electrical hazards.

A loose connection to the outlet can impact performance and pose a hazard. Ensure the plug is firmly inserted into the wall outlet. If the outlet is worn out or the plug doesn't fit securely, consult a certified electrician for replacement.

GROUNDING METHOD

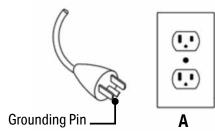


CONTENTS

PACKAGE CONTENTS

- 1× Infrared Heater
- 1× Base
- 1× Protection Guard
- 4× Screws PM5*20mm
- 1× Remote Control
- 1× User Manual

PRODUCT OVERVIEW

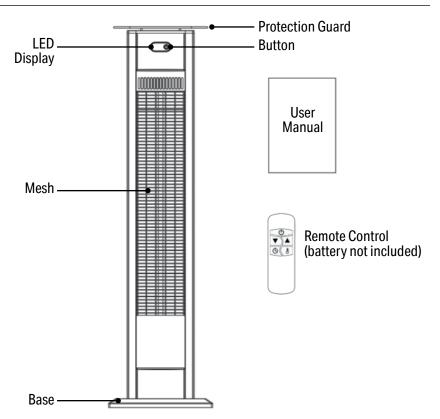

ASSEMBLY

ASSEMBLY INSTRUCTIONS

- 1. This heater should be installed by a competent person, i.e. a qualified electrician.
- 2. Always disconnected the heater from the electricity supply and allow it to cool before installation.
- 3. Keep the supply cord away from the body of the heater which will get hot during use.
- 4. If the heater is to be used outside, a weatherproof outlet is recommended.



CAUTION: Do not operate the heater if the base and protection guard have NOT been installed.

1. Fasten the heater securely on the base plate using the screws provided.



ATTENTION: MUST ASSEMBLE PROTECTION GUARD BEFORE PLUG-IN

2. Fasten the protection guard on the top using the screws provided. The protection guard is important for your safety and we urge you to always using it when the machine is in use.




DISPLAY AND REMOTE


DISPLAY AND REMOTE


(Continued)

LED DISPLAY

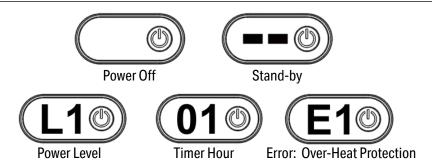

REMOTE CONTROL

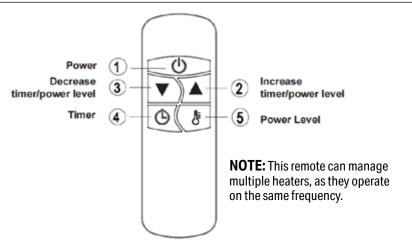

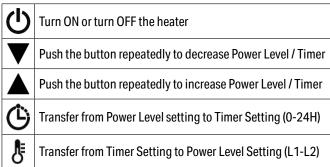

INSERTING BATTERIES (not included)

Insert 2 AAA/ Alkaline type batteries into your remote control.

- 1. Flip the backside of your remote control and pull out battery cover. Insert the batteries in accordance with the instructions and polarity the batteries.
- 2. Change the batteries in the same way depicted above.

NOTICE:

- 1. Replace the old batteries with the same type batteries. Otherwise, your heater may not function well.
- 2. Pull out the batteries in case of long terms of disuse to prevent leakage which may impair your remote control.
- Do not allow water or liquid to get into the remote control.



WARNING: Chemical Burn Hazard. Keep batteries away from children.

BUTTON SWITCH

 
Step 1

Plug in the Heater



Step 2


- 1. To power on the machine, use the power button located on the top of the machine, near the display.
- 2. Once powered on, the product will enter Standby Mode and show (--) on the display.
- 3. You can adjust the heating level (L1-L2) by repeatedly pressing the same power button.



TROUBLESHOOTING

TROUBLESHOOTING

The troubleshooting guide addresses the most common problems.

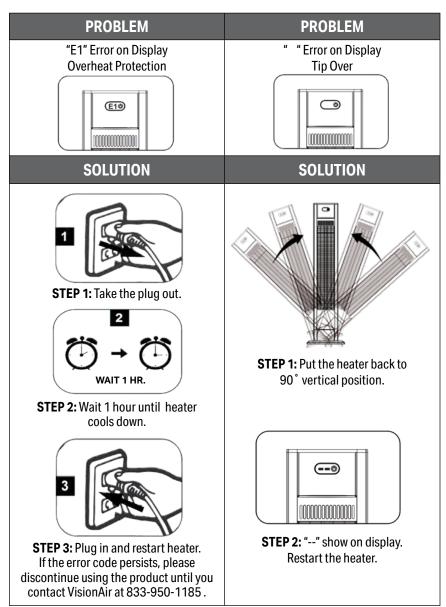

CARE AND MAINTENANCE

CLEANING AND MAINTENANCE

CAUTION



- 1. Always unplug the heater before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
- 2. Do not immerse in water or get water inside the heater.
- 3. Do not use any chemical agents when cleaning the heater.
- 4. Store in a cool, dry place and cover it to protect from dust.

Attention! Careful and regular maintenance of your heater considering our instructions assume great importance so as to attain a long efficient operation of your appliance.

- 1. Check the filthiness of the Reflector and IR-Filament at least once a month. If necessary, apply cleaning and maintenance instructions.
- 2. The number of checks may be increased considering the amount of the dust in the environment.
- Check the deformation of the Reflector, Wire and Frame visually while cleaning the appliance. In case of deformation, consult your technical service.
- 4. Check the Power Cord and Plug visually while cleaning the appliance. In case of deformation, consult to your technical service.

CLEANING

HOW TO CLEAN

Regular and careful cleaning helps your infrared heater operate efficiently for many trouble free years. To clean your heater, follow steps below:

- 1. Unplug the power cord for your safety before cleaning your appliance.
- 2. Make sure the heater is cool before continuing.
- 3. To keep the heater clean, the outer shell maybe cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. (CAUTION: DO NOT let liquids enter the heater).
- 4. DO NOT use alcohol, gasoline, abrasive powders, furniture polish or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- 5. DO NOT immerse the heater in water.
- 6. Wait until the heater is completely dry before use.



4560 W. 160th Street Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com www.visionairproducts.com