 




OWNER'S MANUAL

OUTDOOR CARBON FIBER INFRARED IP44 PATIO HEATER

32" | 1500W | OUTDOOR

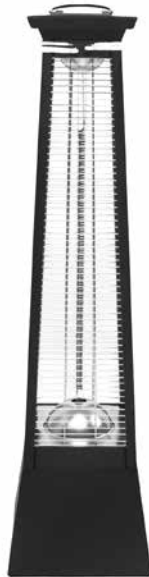

MODEL 1VAHPT32

TECHNICAL DATA

Model: 1VAHPT32

Voltage Rating: 120V~ / 60Hz

Watts: 1500W

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

CONTENTS

Safety Guidelines	4
Usage	6
Fire Risk	7
Assembly and Use	9
Care and Maintenance	10
Recycling	11

WARNING:

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

We cannot be liable for any damages caused by failure to observe these instructions.

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY—The infrared heater is designed for safe operation. Nevertheless, installation, maintenance, and operation of the heater can be dangerous. Observing the following procedures will reduce the risk of fire, electric shock, injury to persons and keep installation time to a minimum. Save these instructions for future use.

1. Check the household voltage to ensure it matches the heater's rated specification.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the package (such as plastic bags).
4. Connect to properly grounded outlets only. Always plug heaters directly into a wall outlet/receptacle. Never use an extension cord or relocatable power tap (outlet/power strip).
5. Do not run cord under carpeting or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
6. Do not allow the cord to overhang the counter top where it can be easily pulled by children.
7. If provided, use handles when moving this heater. NEVER place hands under the heating elements. ALWAYS allow the heating element to cool at least 10 minutes before touching the heating tube or adjacent parts.
8. To prevent overheating of this appliance, keep the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets from time to time to ensure it is clear of any dirt or dust accumulation. **DO NOT COVER.**
9. Always unplug the heater when not in use. Before unplugging the power cord, be sure to turn off the power, be sure your hands are dry to prevent electric shock.
10. Do not leave the appliance unattended when in use.
11. To protect against cause fire, please Keep combustible materials, such as furniture, bedding, papers, clothes, and curtains at least 3 feet (1m) from the front of the heater and Keep them away from the heater.

12. To protect against electric shock, Do not use near or in the immediate vicinity of a bath or swimming pool or any source of liquid. Do not immerse the cord or plug in water or any other liquid.
13. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
14. Do not put fingers or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire, or damage to the heater.
15. Parts of the heater may exceed 392°F (200°C), contact with the heating tube, reflector, or metal parts near the heating tube, may cause severe BURNS. To avoid burns, do not let bare skin touch hot surfaces of the heater.
16. This appliance is not intended for use by persons (including children) with reduces physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children and vulnerable people should be supervised to ensure they do not play with the appliance.
17. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
18. This product contains recyclable materials. Do not dispose of this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.
19. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
20. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
21. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
22. To avoid excessive room temperatures which can cause hyperthermia: **DO NOT** leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.


READ AND SAVE THESE INSTRUCTIONS

INTRODUCTION

Always plug the heater directly into a grounded wall outlet. Never use an extension cord or outlet adapter. This ensures proper grounding and reduces the risk of electrical hazards.

A loose connection to the outlet can impact performance and pose a hazard. Ensure the plug is firmly inserted into the wall outlet. If the outlet is worn out or the plug doesn't fit securely, consult a certified electrician for replacement.


GROUNDING METHOD

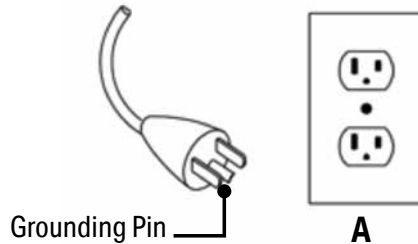


CAUTION:

1. This heater should be installed by a competent person, i.e. a qualified electrician.
2. Always disconnected the heater from the electricity supply and allow it to cool before installation.
3. When the appliance is not operated for a long period of time, the heater should be turned OFF and unplugged from the electrical connection.
4. Storage: Store the heater in a cool, dry location when not in use to prevent dust and dirt build-up. Use packaging cartons to store.
5. Do not attempt to repair or adjust any electrical or mechanical functions on this heater.
6. The heater contains no user-serviceable parts. Should the product suffer damage or breakdown, it must be returned to the manufacturer or its service agent.

WARNING—TO REDUCE THE RISK OF FIRE

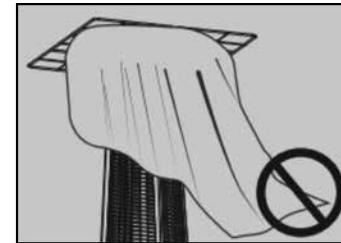


Caution:
DO NOT cover any objects such as clothes on the heater.

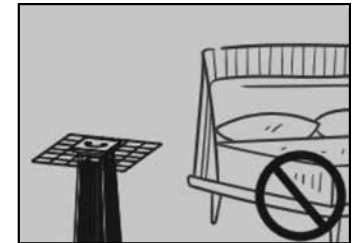


Caution:
DO NOT place the heater near the bed.

FIRE RISK


(Continued)

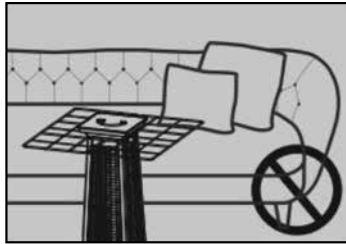


CAUTION:
Keep furniture, papers, clothes, etc. away from the sides and rear.

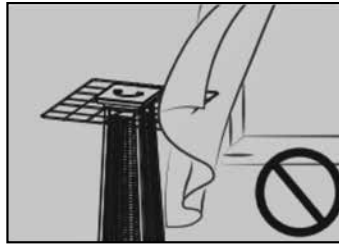

CAUTION:
Keep combustible materials, such as furniture, pillows, curtains at least 3 feet (1m) from the front of the heater and keep them away from the sides and rear.

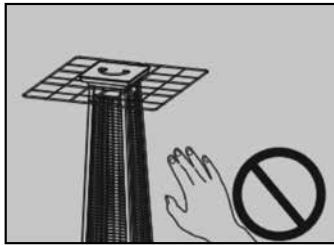

CAUTION:
Hot surface, DO NOT touch.

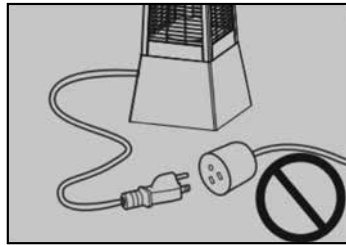


CAUTION:
DO NOT use with an extension cord or relocatable power tap (outlet / power strip).

ASSEMBLY AND USE


ASSEMBLE

Secure the protection guard on the top using the provided screws. The protection guards are important for your safety and we urge you to always using them when the machine is in use.

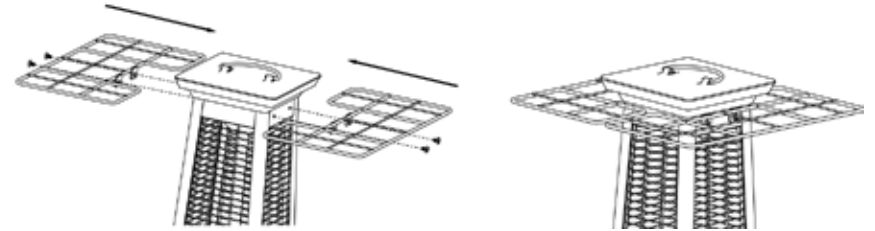

THE HEATER MUST PLACE ON A FLAT, STABLE SURFACE

NOTE: The heater has a tilt protection function. When the heater exceeds a 45° angle, it automatically stops working. Please set it back a originally flat stable horizontally to make it work.

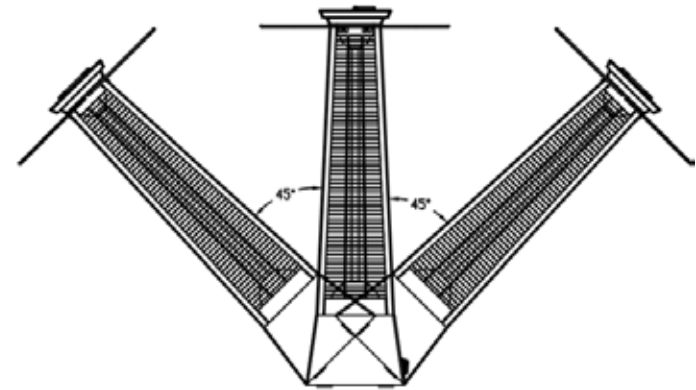

OPERATION

To supply power to the machine, toggle the red button located on back of the machine. One heating setting is available (1500W), the machine does not contain a fan.



CARE AND MAINTENANCE

CLEANING AND MAINTENANCE

Check and remove dirt regularly to ensure the long-term efficient operation of your equipment.

1. Check the filthiness of the and IR-Filament at least once a month. The number of checks may be increased considering the amount of dust in the environment.
2. Visually inspect the condition of the wire, frame, and lamp, and consult with after-sales staff if deformed.
3. Unplug the power cord for your safety before cleaning your appliance. Make sure the heater is cool before continuing.
4. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. (CAUTION: DO NOT let liquids enter the heater).
5. Do not touch the heating element with bare fingers, as residue from your hand could affect the life of the lamp. If it is accidentally touched, remove the finger marks with a soft cloth moistened.
6. DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
7. DO NOT immerse the heater in water. Wait until the heater is completely dry before use.
8. If the heater has collected dust or dirt inside the unit or around the heating element, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
9. The only maintenance required is cleaning the external surfaces of the heater.

RECYCLE

RECYCLING

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.



4560 W. 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com
www.visionairproducts.com