




Tayla™

Modular Stroller

Max 50 lb (22.67 kg)

Instructions
CV369, TR428

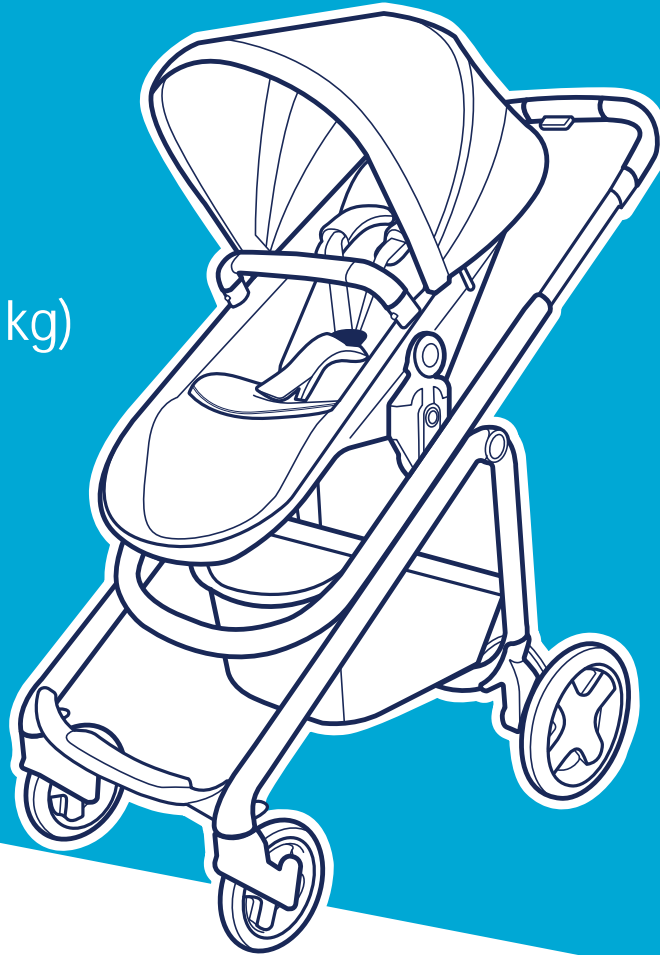

MAXI-COSI® 4358-7811 3.16.20

We carry the future

KEEP INSTRUCTIONS FOR FUTURE USE.
Read all instructions before using this stroller.

Safety Information

WARNINGS

FOR THE SAFETY OF YOUR CHILD, PLEASE READ THE FOLLOWING WARNINGS AND ASSEMBLY INSTRUCTIONS AND KEEP FOR FUTURE REFERENCE.


- Adult assembly required. **CAUTION:** Keep small parts away from children during assembly.
- **NEVER LEAVE CHILD UNATTENDED. ALWAYS** keep child in view when in stroller.
- **AVOID SERIOUS INJURY** from falling or sliding out. **ALWAYS** use the harness system. Check frequently to make sure it is secure.
- **ALWAYS** keep fingers away from moving parts, when folding, unfolding or adjusting stroller to prevent finger entrapment.
- **ALWAYS** make sure stroller is **FULLY OPEN AND LOCKED** before using.
- **ALWAYS** use the brakes when stroller is stopped.
- **ALWAYS** remove protective material and poly bags and dispose before assembly.
- **NEVER** put hot liquids in the cup holder.
- **NEVER** use stroller on stairs or escalators.
- **NEVER** rollerblade with stroller.
- **NEVER** allow children to play with or hang onto the stroller.
- **NEVER** allow children to climb into the stroller unassisted. Stroller may tip over and injure child.

- NEVER place or hang parcels, bags, or accessories on the handle or canopy. The stroller may tip over or the canopy may collapse.
- This product will become unstable if a parcel bag or rack is used when there is no provision for one.
- This product may become unstable if a parcel bag, other than the one recommended by the manufacturer is used.
- This product will become unstable if the manufacturer's recommended load is exceeded.
- Care must be taken when folding and unfolding the stroller to prevent finger entrapment.
- DO NOT carry additional children, goods, or accessories in or on this product except as recommended in the manufacturer's instructions.
- NEVER place more than 1 lb (.5 kg) in cup holder.
- NEVER place more than 25 lb (11.3 kg) in the storage basket. If weight is exceeded, hazardous unstable conditions may exist.
- STROLLER is only for use with children up to 50 lb (22.67 kg), and WHEN SEATED, the midpoint of your child's head is at or below the top of the stroller seat.
- ONLY use this stroller with ONE child at a time.
- STROLLER mode is for use with children who can sit up unassisted and is NOT recommended for newborns.
- Failure to follow the steps and warnings on the labels and in the instruction manual can result in serious injury or death to your child.

Contents

Parts of Stroller	1	Adjusting Canopy & Footrest	12
Installing Wheels	2	Privacy Shade & Storage Basket Use	13
Unfolding Stroller Frame	3	Adjusting Stroller Seat Harness Straps	14
Adjusting Handle	4	Securing Child in Stroller Seat	16
Using Parking Brake and Locking Swivel Wheels	5	Folding Stroller	17
Attaching Car Seat to Stroller Frame	6	Removing & Installing Stroller Seat Pad	18
Removing Car Seat from Stroller Frame	7	Accessory Use & Care	21
Attaching Stroller Seat Forward-Facing	8	Wash & Care of Stroller Parts	22
Removing Stroller Seat from Stroller Frame	9	Dorel Juvenile Group Information	23
Attaching Stroller Seat Rear-Facing	10	Replacement Parts	23
Reclining Stroller Seat	11	Warranty	23

Parts of Stroller

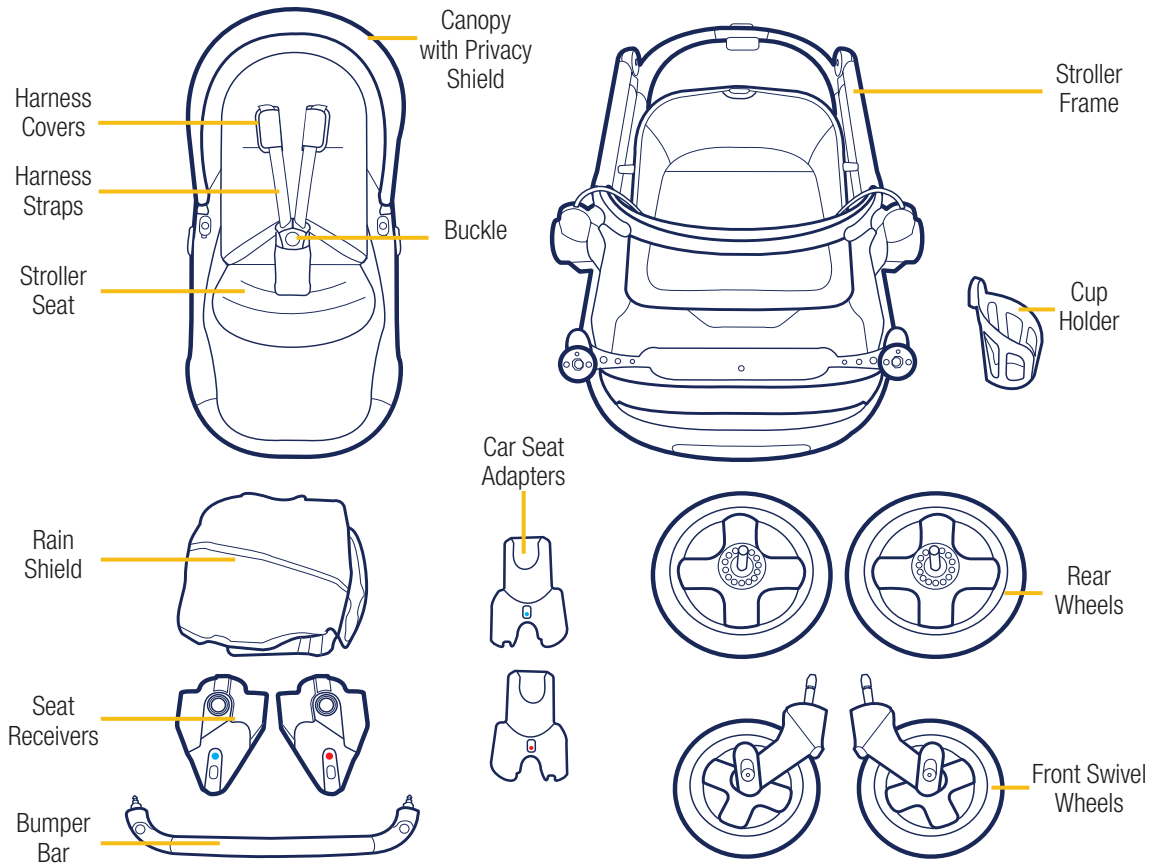

Lay out and identify all of the parts.


If any parts are missing, **do not return this product to the place of purchase.**

Please contact Consumer Care via:

- Phone: 1-800-951-4113
- Text: 1-812-652-2525
- Chat: www.maxi-cosi.com


You will need to know the model number and manufacture date.

It is located on a label on the stroller frame.

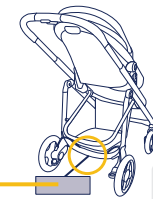


Installing Wheels


Front Swivel
Wheels

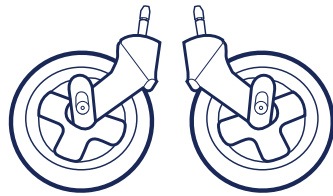

Rear Wheels

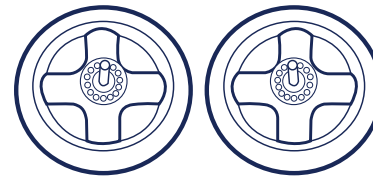


1

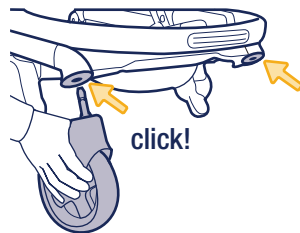


Attach the front
swivel wheels.

2

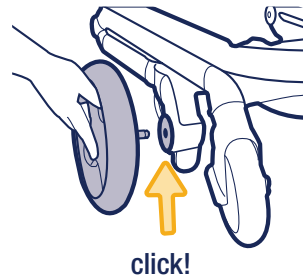

Attach the rear wheels.

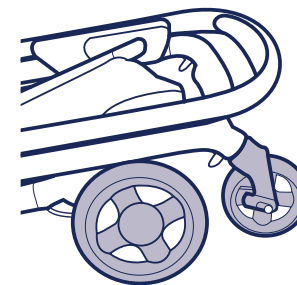


Finished!


NOTE: Pull out on the
wheels to make sure they
are secured.

Unfolding Stroller Frame

Release Buttons

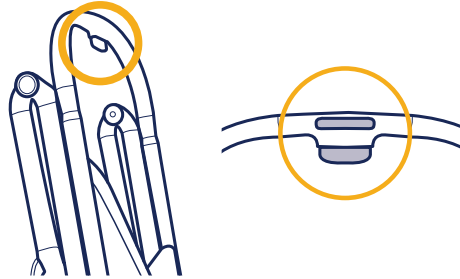


1

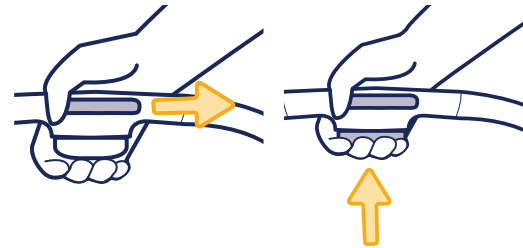

- Slide the stroller frame release button to either the left or right.
- Then squeeze the handle adjustment button.
- Hold them together.

2

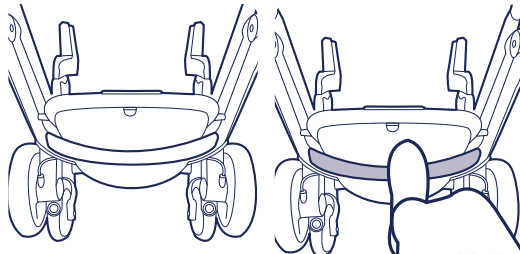


Place your foot on the storage basket frame.

3



- Push your foot down to start unfolding.
- Then release the buttons.
- Continue to push down until the stroller locks into place.

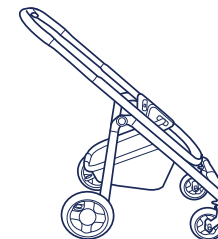


Finished!


Adjusting Handle

This stroller's handle is adjustable and has 5 positions: 4 strolling heights and 1 storage. Adjust to a strolling height that is comfortable for you.


Handle Height Adjustment Button

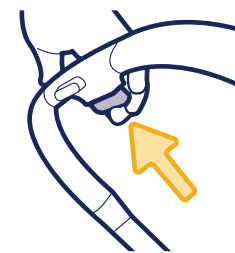

Squeeze the handle adjustment button and hold it in.

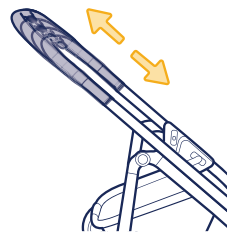


Lift or lower the handle to your desired position.

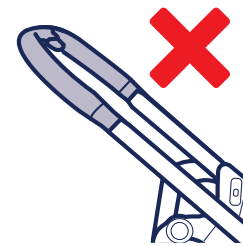


DO NOT use with the handle in the storage position. This is when the handle is all the way down.

Using Parking Brake & Locking Swivel Wheels


Rear Wheels

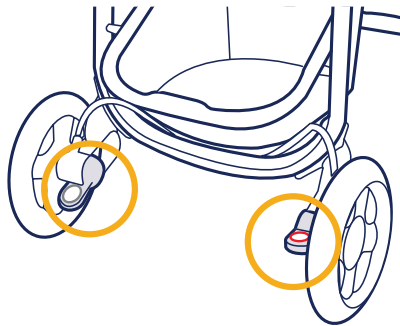


To Lock Parking Brake

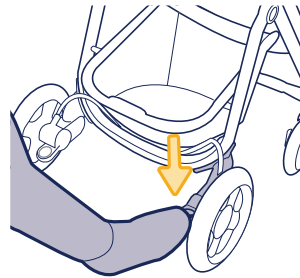


To Release Parking Brake

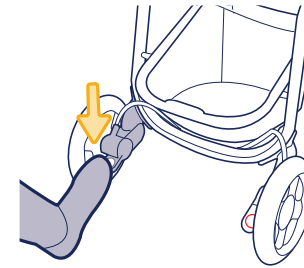


Front Swivel Wheels

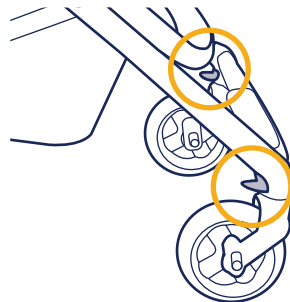

To Lock Swivel Wheels

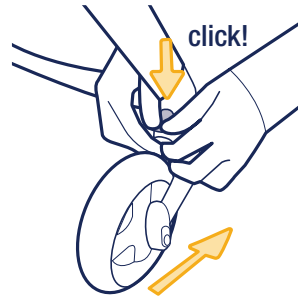


To Release Swivel Wheels

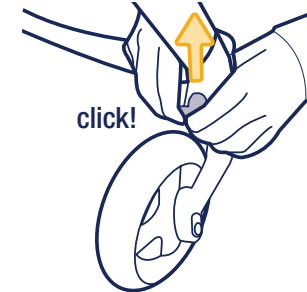


- The wheels must face forward as shown.
- Firmly push the lock tabs down with both of your thumbs.
- Locked swivel wheels are best for traveling over rocky or uneven surfaces.
- Firmly pull the lock tabs up with both of your index fingers.
- Unlocked swivel wheels are best for everyday strolling.

Attaching Car Seat to Stroller Frame

Illustrations show a generic car seat icon.

 


Seat Receivers

 


Car Seat Adapters

1

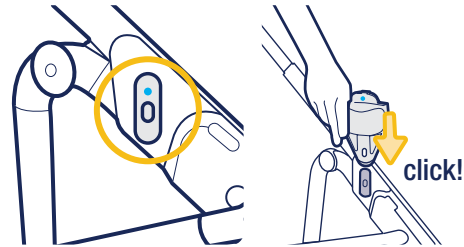


Install the seat receivers to the stroller frame fixtures. Match the colored dots on the receivers with the colored dots on the fixtures.

2

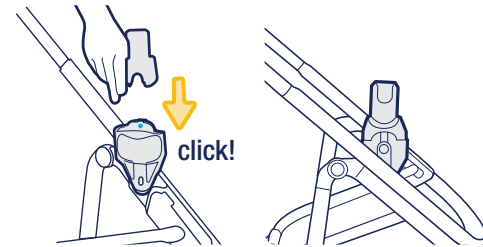


Match the colored dots on the adapters with the colored dots on the receivers and attach.

3

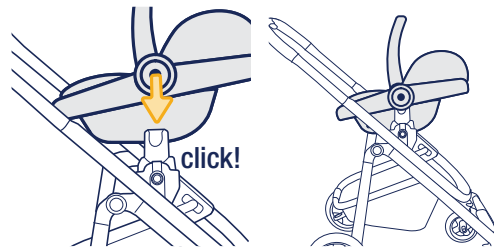


Attach the car seat to the car seat adapters. **ONLY** install the car seat rear-facing.

4

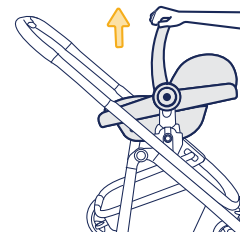


Pull up on the car seat either at the carry handle or handle hubs to check if it is securely attached.

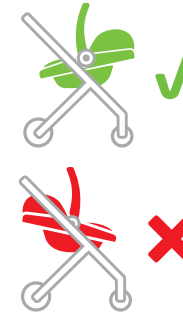

Removing Car Seat from Stroller Frame

Illustrations show a generic car seat icon.


1

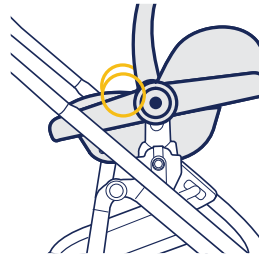

Locate the stroller release buttons on the car seat and hold them in.

Please review your car seat's instruction manual to locate the stroller release buttons.

2

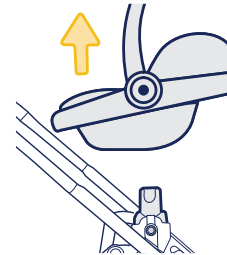


While holding the stroller release buttons in, lift the car seat off the stroller frame.

Removing Car Seat Adapters


You can fold and store the stroller frame with the adapters still attached.
You **must** remove the adapters before using the stroller seat.

1

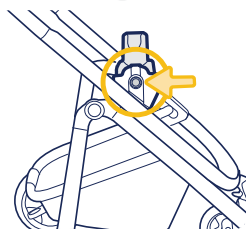

Press the release button on the seat receiver.


2

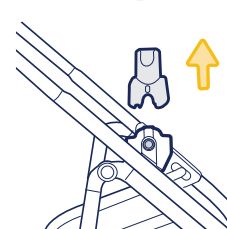


Remove the car seat adapter.

Attaching Stroller Seat Forward-Facing

1

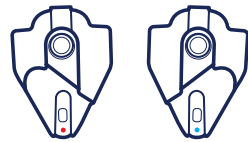


Seat Receivers

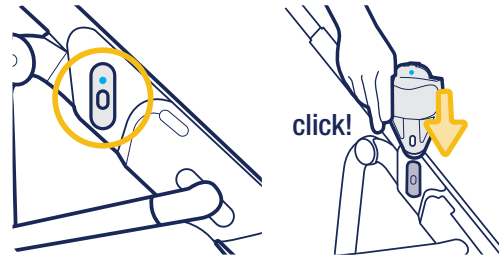

Install the seat receivers to the stroller frame fixtures. Match the colored dots on the receivers with the colored dots on the fixtures.


2

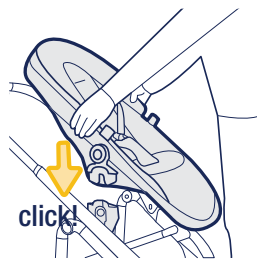

Attach the seat to the receivers.


NOTE: You **must** remove the car seat adapters if they are attached. See page 7.

3

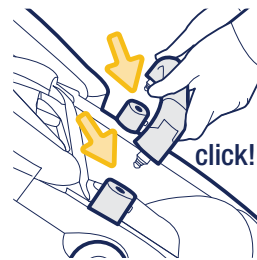

Attach the bumper bar to the stroller seat.


NOTE: This is optional.

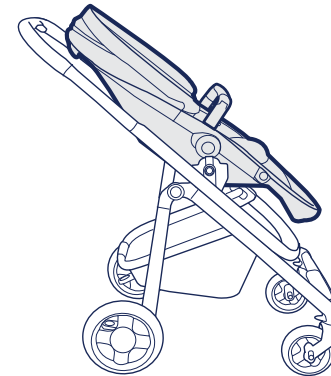

Finished!

Removing Stroller Seat from Stroller Frame


Removing Stroller Seat from Receivers

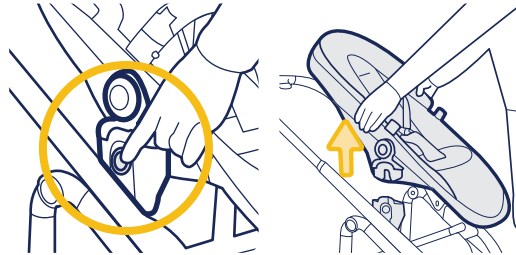

Press each of the release buttons and lift the stroller seat up to remove it from the stroller.

Removing Seat Receivers from Stroller Frame

You can fold and store the stroller frame with the receivers still attached.

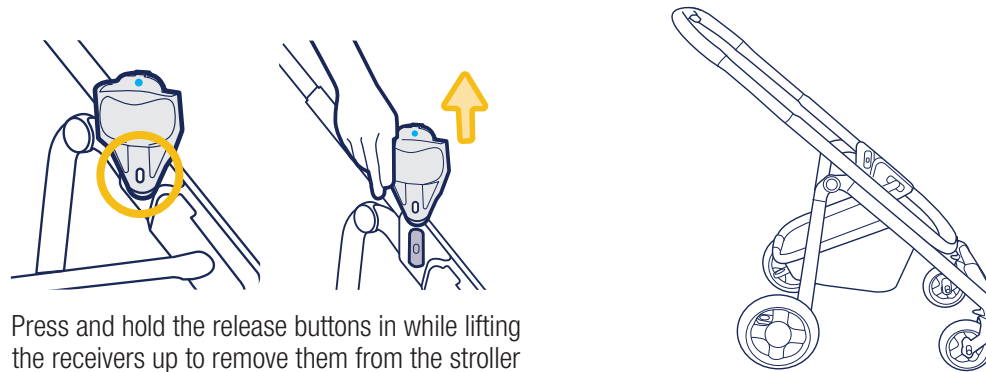


Press and hold the release buttons in while lifting the receivers up to remove them from the stroller frame.

Finished!

Attaching Stroller Seat Rear-Facing

1

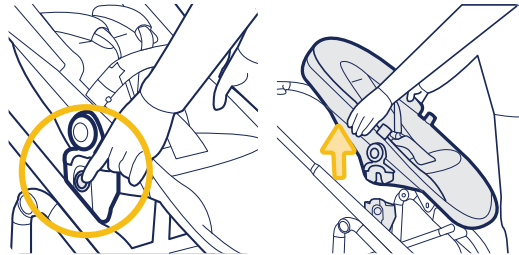


Press each of the release buttons and lift the stroller seat up to remove it from the stroller.

2



Turn the stroller seat rear-facing and reattach it to the receivers.

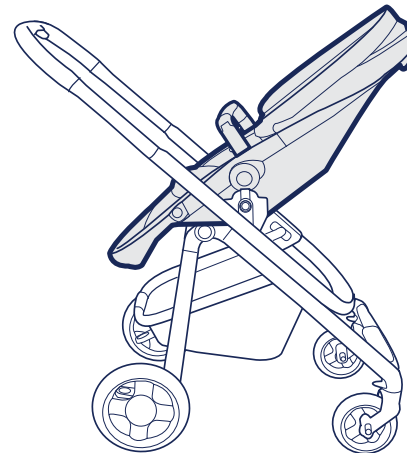

Finished!

Reclining Stroller Seat


This stroller seat has multiple recline positions.
Adjust to a position that is comfortable for your child.

1




Extend the stroller handle to one of the 4 strolling heights that is comfortable for you.


2

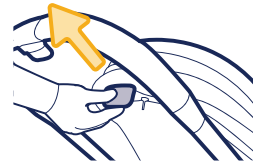

Lift the recline lever to recline the stroller seat.

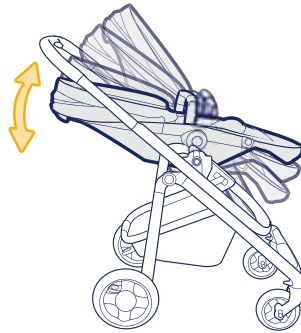

Forward-Facing

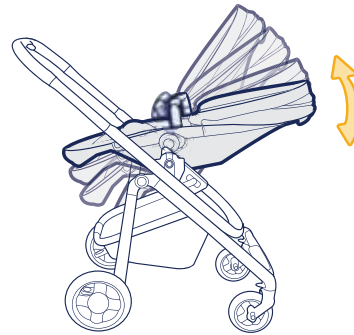


Rear-Facing

WARNINGS



DO NOT use **STROLLER** mode for infants who cannot sit up unassisted.
For infants who cannot sit up unassisted use an attached infant carrier car seat.

Adjusting Canopy & Footrest

Adjusting Canopy

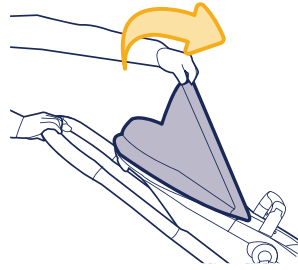


Pull the canopy forward.

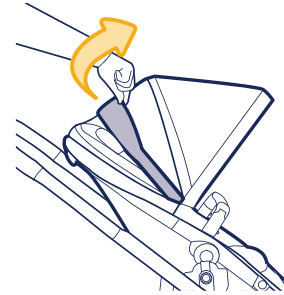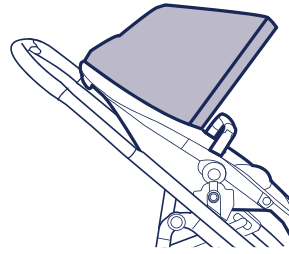



Lift the fabric to access the Peek-a-Boo window.

Adjusting Footrest

The footrest does not lock into the lowest position.

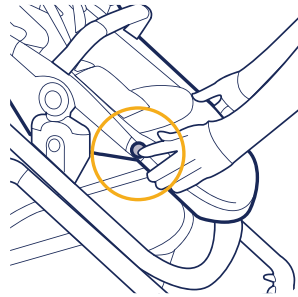


To lower footrest, press the footrest adjustment buttons and push down on the footrest.

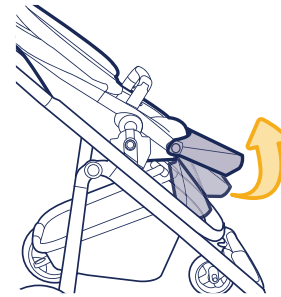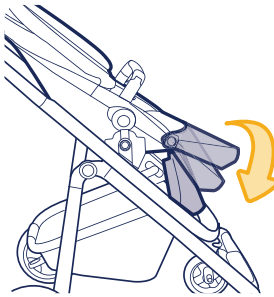

To raise footrest, pull the footrest up until it locks into place.


Privacy Shade & Storage Basket Use

1

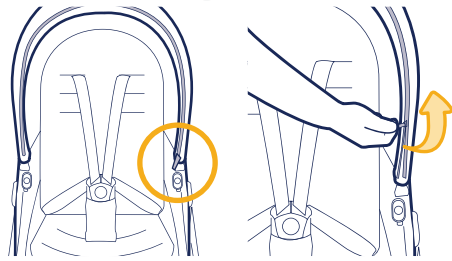

Unzip the storage pocket in the canopy and pull the privacy shade out.

2

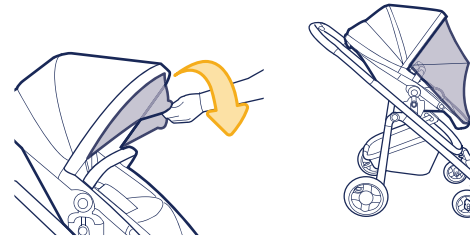


Pull the privacy shade down and tuck it around the front of the stroller seat footrest.

Storing Privacy Shade



Fold the privacy shade up and tuck into the storage pocket in the canopy. Zip the pocket.

Storage Basket

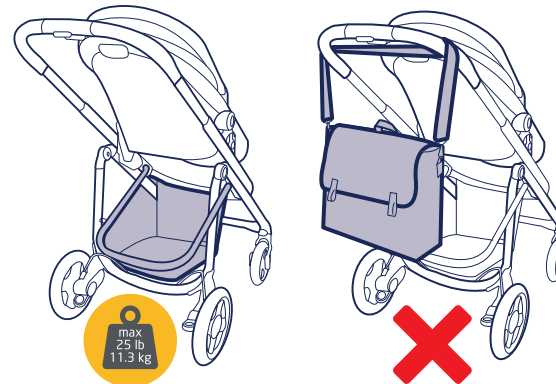


⚠ WARNINGS

- If weight is exceeded, hazardous unstable conditions may exist.
- NEVER place more than 25 lb (11.3 kg) in the storage basket.


Adjusting Stroller Seat Harness Straps

As your child grows, you will need to adjust the harness strap height.

Harness System

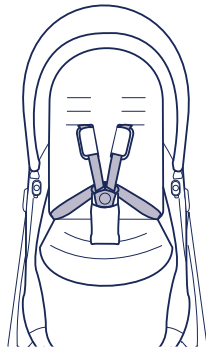


1

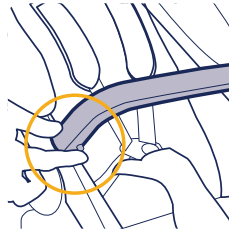


Press the buttons on both sides of the bumper bar to remove.

2

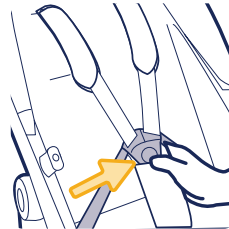

Unbuckle.

3

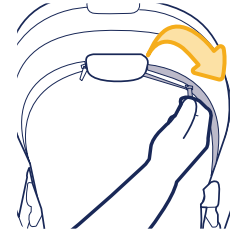


From the back of the seat, unzip the stroller seat's back panel.

4




Push the harness covers' retainers through the harness slots.

5

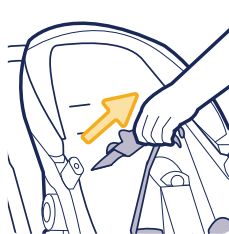

Pull the harness cover out of the harness slot.

6

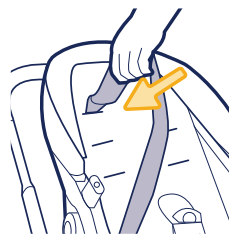

Push the harness covers' retainers into the harness slot closest to your child's shoulders.

7



Pull the harness covers' retainers through the harness slots.

8





Zip the back panel.

WARNINGS



STROLLER mode is for use with children who can sit up unassisted and is NOT recommended for newborns.

NEVER use stroller without the harness system.

To Shorten Harness Strap

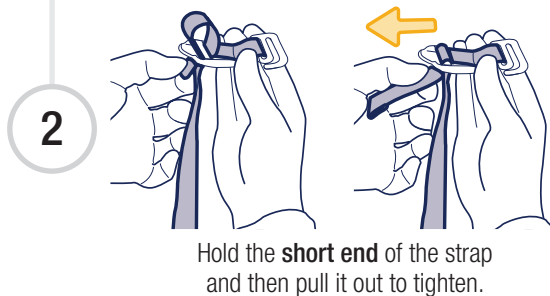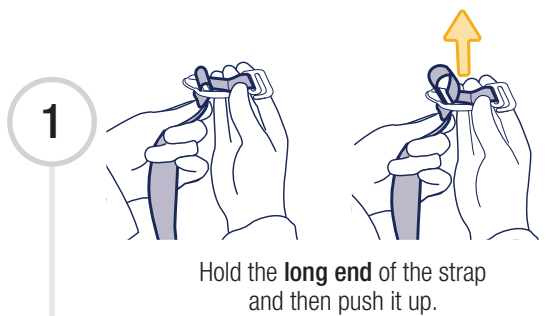


To Lengthen Harness Strap

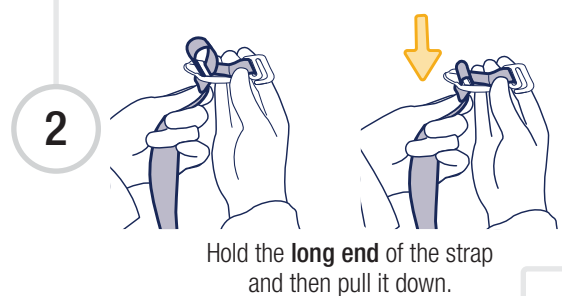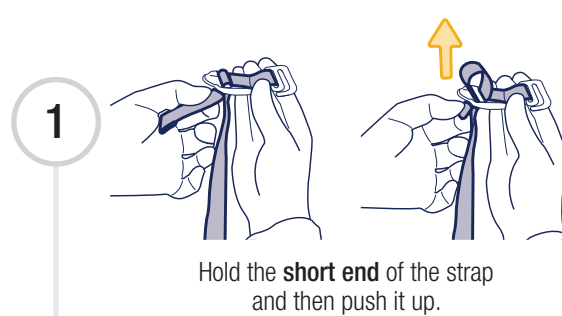


Securing Child in Stroller Seat

1

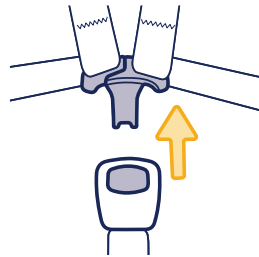


Unbuckle.

2

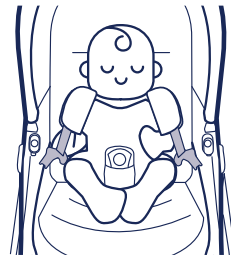


Place your child in the stroller seat.

3

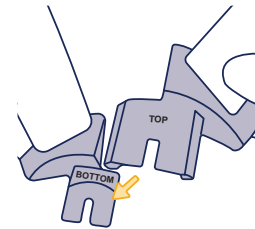


Fit the top buckle tongue over the bottom buckle tongue. Hold them together.

4

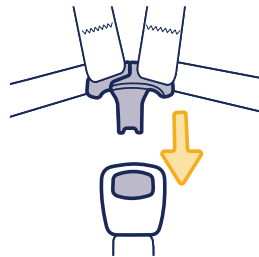

Buckle.

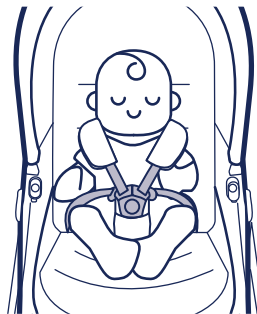


Finished!


WARNINGS

- **NEVER LEAVE CHILD UNATTENDED.** Always keep child in view when in stroller.
- **AVOID SERIOUS INJURY** from falling or sliding out. Always use harness system. Check frequently to make sure it is secure.
- Failure to follow these instructions could result in serious injury or death of your child.
- **ONLY** for use with children up to 50 lb (22.67 kg), and **WHEN SEATED**, the midpoint of your child's head is at or below the top of the stroller seat.
- **ONLY** use this stroller with **ONE** child at a time.
- **STROLLER** mode is for use with children who can sit up unassisted and is **NOT** recommended for newborns.

Folding Stroller

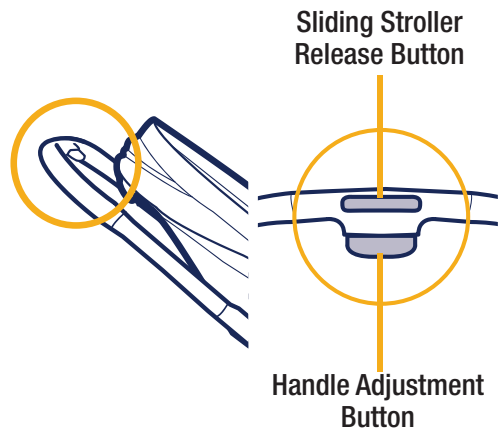


1

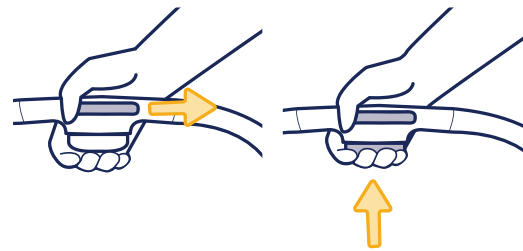


- Slide the stroller frame release button to either the left or right.
- Then squeeze the handle adjustment button.
- Hold them together until the stroller starts to fold.
- Then release the sliding stroller release button, but continue to squeeze the handle adjustment button and lower the handle to the storage position.

2

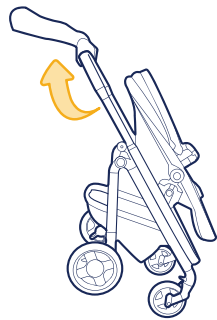

Lift the rear wheels off the ground and tilt the stroller forward until the stroller frame footrest touches the ground.

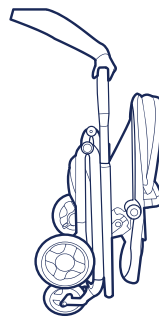

Finished!


NOTE: The stroller can self stand.




Removing & Installing Stroller Seat Pad

The stroller seat pad is reversible.

One side is for colder weather and the other for hotter weather.

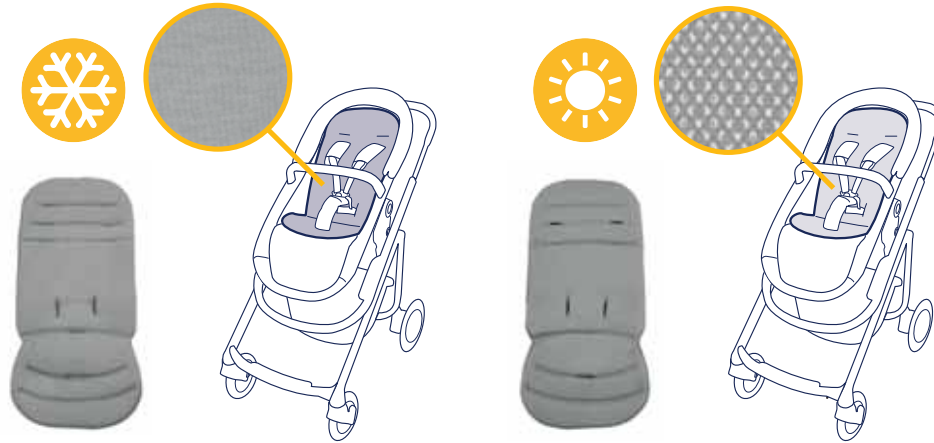


1

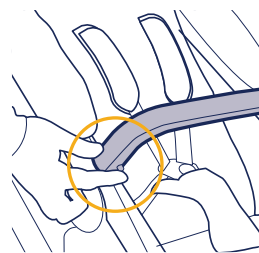


Press the buttons on both sides of the bumper bar to remove.

2

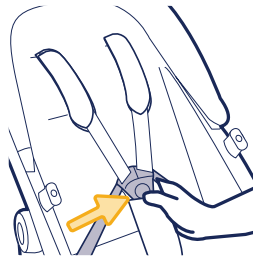


Unbuckle.

3

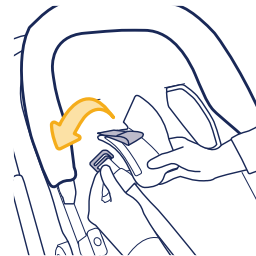

Undo the harness straps from the harness covers.

4

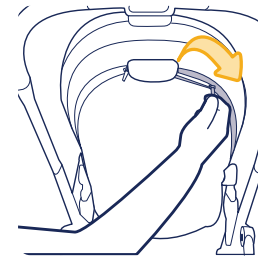


From the back of the seat, unzip the stroller seat's back panel.

5



Push the harness covers' retainers through the harness slots.

6

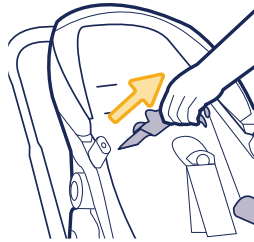


Pull the harness cover out of the harness slot.

7



Undo the fastening strip on the harness straps.

8

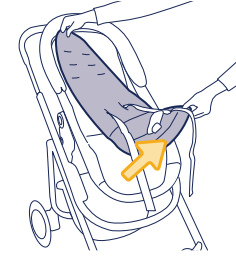


Pull the seat pad out of the stroller seat.

9




Flip the pad to the other side and place in the stroller seat.

10

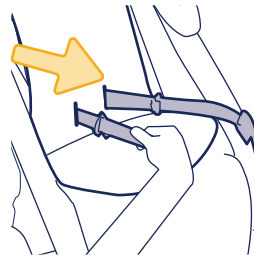

Thread the harness straps through the slots in the seat pad.


11

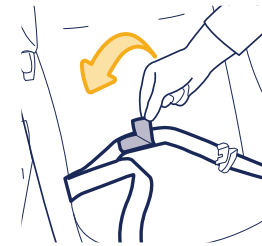

Attach the fastening strip on the harness straps.

continued on next page

12

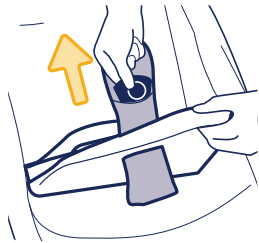

Pull the buckle through the slot in the seat pad.

13




Push the harness covers' retainers into the harness slot closest to your child's shoulders.

14




Pull the harness covers' retainers through the harness slots.

15

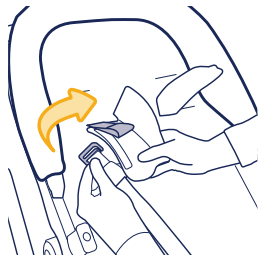


Attach the harness straps to the harness covers.

16

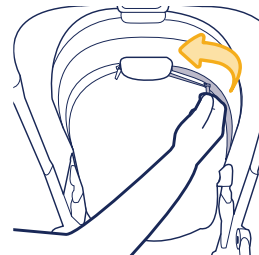



Zip the back panel.

17

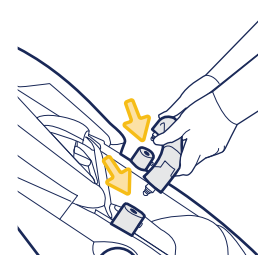

Attach the bumper bar.
NOTE: This is optional.

Accessory Use & Care

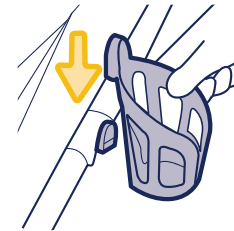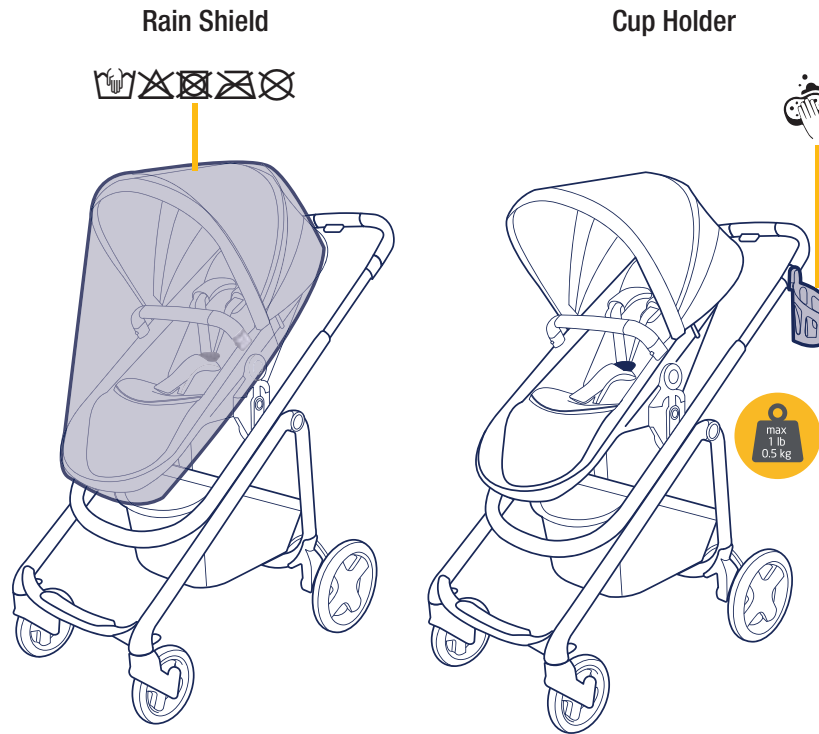



Secure the cup holder to the attachment.

-  Spot clean
-  Hand wash
-  Machine wash 30°C, gentle
-  Do not wash
-  Do not bleach
-  Do not tumble dry
-  Do not iron
-  Do not dry clean

WARNINGS

- Never hang parcels or accessories from the cup holder as the stroller may tip over.
- Never place more than 1 lb (.5 kg) in cup holder.

Wash & Care of Stroller Parts

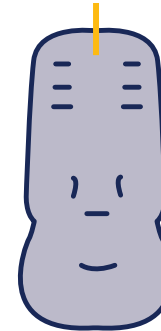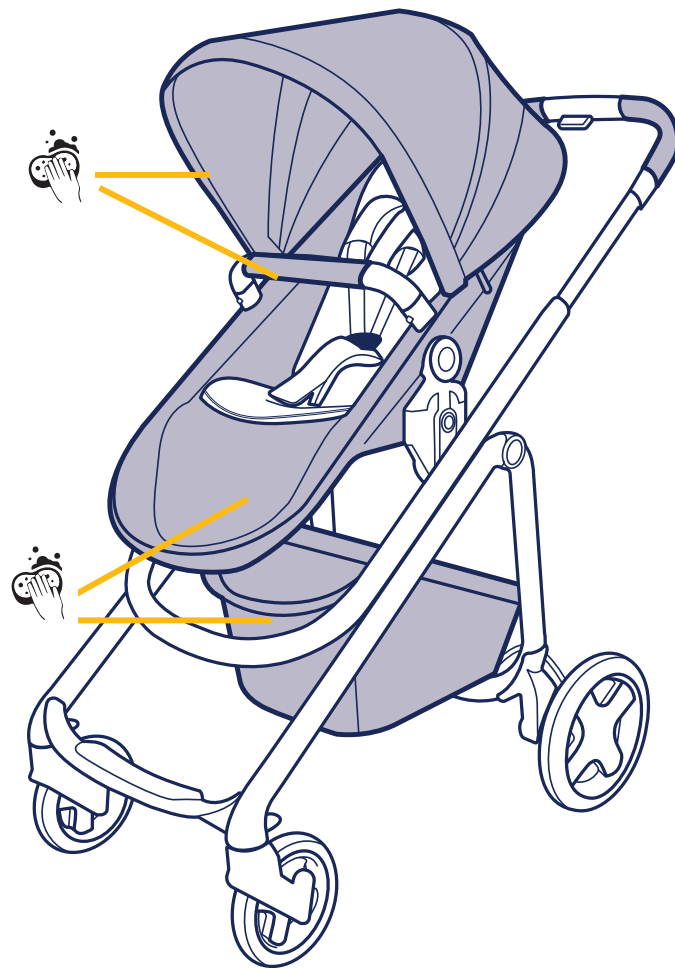

-  Spot clean
-  Hand wash
-  Machine wash 30°C, gentle
-  Do not wash
-  Do not bleach
-  Do not tumble dry
-  Do not iron
-  Do not dry clean

Dorel Juvenile Group Information

Thank you for choosing this stroller.

The DJG family is committed to creating strollers with the most comfort and convenience available today.

If you have questions or any concerns with this stroller, please contact our Consumer Care Department.

For parts availability and questions, please contact us via phone, text, or chat.

Include the model number and manufacture date (found on a sticker on the stroller frame) and a brief description of the part.

- Rear Wheels (2)
- Front Swivel Wheels (2)
- Harness Strap Covers (2)
- Cup Holder
- Bumper Bar
- Seat Pad
- Rain Shield
- Stroller Seat Receivers and Car Seat Adapters



Call: 1-800-951-4113



Text: 1-812-652-2525



Chat: www.maxi-cosi.com

Hours of Operation:

M-TH: 8:00 AM - 6:00 PM EST

FRI: 8:00 AM - 4:30 PM EST



**Date of
Manufacture Label**

Two-Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (Tayla Stroller), is free from material and workmanship defects when used under normal conditions for a period of two (2) years from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Care Department at the address noted on the back of this document and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse. This warranty excludes any liability other than that expressly stated previously, including but not limited to, any incidental or consequential damages. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.



Tayla™

Modular Stroller

Max 50 lb (22.67 kg)



©2020 Dorel Juvenile Group, Inc. (800) 951-4113 www.maxi-cosi.com. Styles and colors may vary. Les styles et les couleurs peuvent varier. Made in CHINA.
Fabriqué en CHINE. Distributed by (distribué par) Dorel Juvenile Group, Inc., 2525 State St., Columbus, IN 47201-7494. Dorel Juvenile Canada, 2855 Argenta Road, Unit 4, Mississauga, ON L5N 8G6. Importado y Distribuido en Chile por: Comercial e Industrial Silfa S.A. - San Ignacio 0201 / Parque Industrial Portezuelo Quilicura, Santiago Chile. Fono (562) 2339 9000. En Perú por: Comexa S.A. - Los Libertadores 455 - San Isidro, Lima - Perú. Fono (511) 4469014. En Centro América, Caribe y Ecuador por: Best Brands Group S.A. - Av. Balboa, Bay Mall Plaza, Planta Baja, local 9, Panamá. - Fono: (507) 300 2884. En Colombia por: Baby Universe S.A.S. - Vía 40 No. 77-29, Barranquilla, Colombia - Fono: (575) 353 1110 Importador: DJGM, S.A. DE C.V. Gabriel Mancera No. 1041 Col. Del Valle, Benito Juárez C.P. 03100 México, Ciudad de México R.F.C. DJG140305GN9 Tel. (55) 67199202



www.maxi-cosi.com