 


ADJUSTABLE POWER RECEPTACLE CORD ASSEMBLY INSTRUCTIONS

1. Refer to the Cabinet Instructions and follow the proper guidelines for installing the glass shelves. We recommend you choose the desired location of each display shelf at this time to avoid extra handling and repositioning of the electrical power receptacles.

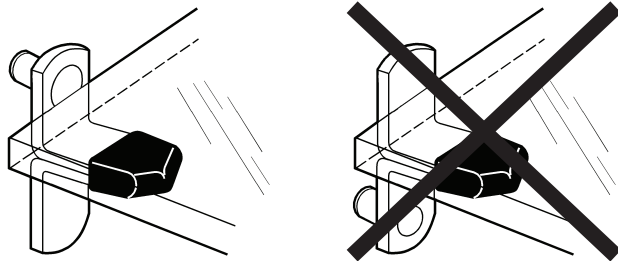


2. The electrical cord was installed at our factory and should remain along the inside of the cabinet.

WARNING: DO NOT PLUG THE CORD INTO AN OUTLET UNTIL THIS SET UP IS COMPLETE

3. Installing the Adjustable Electrical Outlets.

- With the outlets facing toward the center of the cabinet, position an Electrical Outlet Base approximately one inch above a glass shelf.
- Insert the Electrical Cord along the Base Outlet as shown.
- Align the Outlet Cover onto the edge of the Base and slide into position.
- Avoid twisting the cord between Outlets.

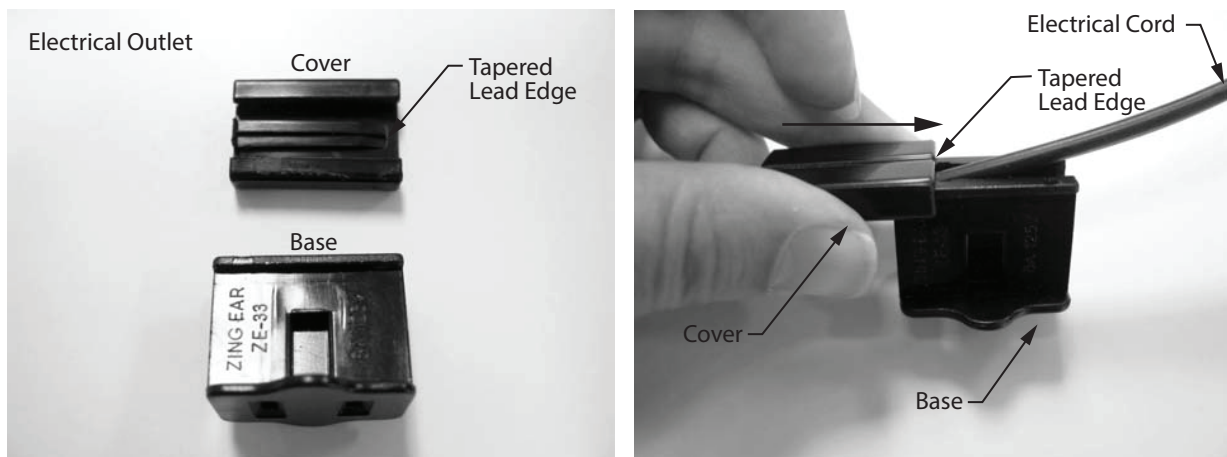

CAUTION: DO NOT REMOVE ADD-ON OUTLETS AFTER INSTALLING ONTO THE ELECTRICAL CORD. THESE OUTLETS ARE INTENDED FOR DECORATIVE VILLAGES AND ARE NOT INTENDED FOR HOUSEHOLD APPLIANCES AND TOOLS. LINE CORD MAXIMUM OF 700 WATTS 125V.

4. Attach the Clips to the Electrical Cord approximately one inch above each add-on outlet. Remove the adhesive backing from each Clip and adhere to the Cabinet.

