




**DYNACRAFT®**

**OWNER'S MANUAL**

# 24V PRINCESS CARRIAGE

---

THIS MANUAL CONTAINS IMPORTANT SAFETY, PERFORMANCE AND MAINTENANCE INFORMATION. READ THE MANUAL BEFORE TAKING YOUR FIRST RIDE OR ALLOWING YOUR CHILD TO RIDE YOUR NEW ELECTRIC RIDE-ON TOY. KEEP THE MANUAL HANDY FOR FUTURE REFERENCE.

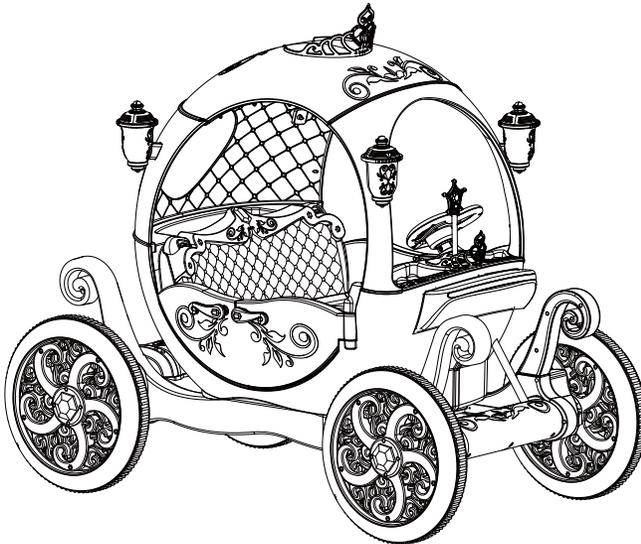

**DO NOT RETURN THIS ITEM TO THE STORE**  
CONTACT DYNACRAFT CUSTOMER SERVICE FOR ASSISTANCE

[dyncraftwheels.com/contact](http://dyncraftwheels.com/contact)

or 1-800-551-0032 8 AM–5 PM ET



---

**FOR AGES 3+**

**MAXIMUM WEIGHT: TOTAL 130lb (59kg), 65lb (29.5kg) per seat**

**NOTE:** Illustrations in this Manual are for reference purposes only and may not reflect the exact appearance of the actual product. Specifications are subject to change without notice.

# TABLE OF CONTENTS

---

<b>A</b> Introduction, Safety and Warnings . . . . .	2
<b>B</b> Before You Begin Assembly . . . . .	6
<b>C</b> Parts Diagram . . . . .	7
<b>D</b> Assembly . . . . .	8
<b>E</b> How to Use Your Ride-on toy. . . . .	20
<b>F</b> Detailed Maintenance and Repair . . . . .	23
<b>G</b> Troubleshooting Guide . . . . .	29
<b>H</b> Limited Warranty . . . . .	32

# ELECTRIC CAR SPECIFICATIONS

---

SUITABLE AGE . . . . .	3+
CAPACITY. . . . .	Up to 130 lb (59 kg)
MAX SPEED. . . . .	Low 2.5 MPH/High 5.0 MPH
CHARGER / INPUT. . . . .	AC120V/60HZ
OUTPUT. . . . .	DC 24V/1A
CHARGING . . . . .	12-18 Hours
BATTERY . . . . .	24V 7AH, 1x Battery
SIZE. . . . .	1510 x 830 x 1300 mm
AVERAGE BATTERY LIFE . . . . .	300 Charges

# INTRODUCTION, SAFETY AND WARNINGS

**ABOUT THIS MANUAL:** This Manual was written to help you and your child get the most performance, comfort, enjoyment and safety when riding your new electric ride-on toy. It is important for you to understand your new electric ride-on toy. By reading this manual before you let your child go out on his/her first ride, you will know how to get the most from your new electric ride-on toy. It is also important that you or your child's first ride be in a controlled environment, away from cars, obstacles, and other riders.

**⚠ GENERAL WARNING:** Riding an electric ride-on toy can be a dangerous activity, even under the best of circumstances. Proper maintenance of your new ride-on toy is your responsibility and helps reduce the risk of injury. Certain conditions may cause components to fail without fault of the manufacturer. The ride-on toy can and is intended to move, and it is therefore possible to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate. If such a thing does occur, your child can become seriously injured or die, even when using safety equipment and other safety precautions.

**⚠ WARNING:** To reduce risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than two (2) riders.

**⚠ WARNING:** CHOKING HAZARD—Small parts not suitable for children under 3 years old.

**⚠ WARNING:** This toy is unsuitable for children under 3 years due to its maximum speed.

**⚠ WARNING:** This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties. Parents must make sure that children can operate the ride-on toy safely before letting them ride it.

**⚠ WARNING:** Do not ride in rain, snow, or mud, or store the ride-on toy outside without covering. Water can damage components, including the motor, electrical system, and battery.

**⚠ WARNING:** This ride-on toy is intended to be ridden on smooth, level ground. Do not ride in loose dirt, sand, or gravel, which could damage moving parts, the motor, or the electrical system.

**NOTE:** Store the ride-on toy indoors when not in use or in a covered location. Avoid long term exposure to rain, excessive sun, or other inclement weather.

**RIDE AT YOUR OWN RISK AND ALWAYS USE COMMON SENSE.** This manual contains many warnings and cautions concerning the consequences of failing to inspect, maintain or properly use your electric ride-on toy. Because any fall can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned in this manual or the risk of falling leads to a warning.

**ALWAYS USE PROPER RIDING ATTIRE.** Always wear appropriate clothing and shoes. Never ride barefoot or in sandals and make sure that shoelaces or other fasteners are tied and kept away from the wheels and drive system of the ride-on toy.

## **RIDER USE AND REQUIRED PARENTAL SUPERVISION**

**RIDERS MUST NOT EXCEED THE WEIGHT LIMIT OF 130 LB (59 KG) AND MUST BE OVER 3 YEARS OLD. NEVER ALLOW MORE THAN 2 CHILDREN TO RIDE THE RIDE-ON TOY SIMULTANEOUSLY.**

The age grade for the electric ride-on toy is for 3 years and older. Just because your child is within the age and weight limitations specified for the electric ride-on toy, does not mean that his/her size is appropriate to fit or maintain control of the electric ride-on toy, or that he/she is capable of safely operating the electric ride-on toy. You are the best judge of whether you or your child can safely operate the electric ride-on toy; this includes determining whether your child is at the appropriate developmental stage for safe use of the electric ride-on toy. Any rider that is unable to fit comfortably on the electric ride-on toy should never attempt to ride it. A parent's decision to allow their child to use the electric ride-on toy should be based on the child's maturity, skill and their ability to follow rules. Remember that the electric ride-on toy is intended for use only by children who are, at a minimum, able to comfortably and safely operate it.

Children operating the electric ride-on toy should be supervised by an adult at all times. Parents should ensure that children only use the electric ride-on toy safely and within their age and physical limits.

This manual contains very important safety information. It is your responsibility to completely review this information and make sure that all riders understand all of the warnings, cautions, instructions and safety topics addressed in this manual and to assure that all riders are able to safely and responsibly use the electric ride-on toy. You should periodically review and reinforce all information in this manual with all riders, especially children. You should also regularly inspect and maintain your electric ride-on toy to ensure the safety of all riders. Make sure that your new electric ride-on toy is properly fitted to any child riding it; that it is in good repair and safe operating condition; that you and your child have gone over the use, operation and safety information in this manual; that you and your child have learned and understand what to do and what not to do with your new electric ride-on toy, including observing all applicable laws, rules and common sense.

Children should be made aware of all possible riding hazards and correct riding behavior before they ride the electric ride-on toy and should be supervised by an adult at all times. Please explain the following to them as often as necessary.

## **SAFE RIDING PRACTICES AND WARNINGS**

- Check and obey all local laws or regulations which may be in effect in the locations where the electric ride-on toy may be used.
- Always wear appropriate clothing and shoes.
- Observe the age and weight limitations on the cover of this manual.
- Always stay seated while riding the electric ride-on toy.
- Children must be supervised by an adult at all times to be safe.
- Always be alert and ride your electric ride-on toy defensively. Watch out for obstacles that could catch one of the electric ride-on toy's wheels or force you to turn suddenly and/or lose control. Be careful to avoid pedestrians, persons using other wheeled products (including roller or in-line skates, skateboards, scooters, bikes, etc.), children or animals who may enter your path. Always respect the rights and property of others.
- Do not activate the foot pedal unless you are seated in the ride-on toy and in a safe, outdoor environment that is suitable for riding your electric ride-on toy.
- Do not attempt or perform any stunts or tricks on the electric ride-on toy. It is not made to withstand such misuse and abuse.
- Keep both hands on the steering wheel at all times.
- Do not touch the motor on the electric ride-on toy when in use or directly after use as these parts can become extremely hot.
- Never allow more than two persons to ride the electric ride-on toy at one time and never try to tow anything.
- Do not use near steps, water, or swimming pools.
- Do not ride in wet weather.
- Never immerse the electric ride-on toy in water; electrical and drive components could be damaged by water or create other potentially unsafe conditions.
- Keep your fingers and other body parts away from the motor, steering system, wheels and all other moving components.
- Never hitch onto another vehicle or let yourself be pulled or pull anyone or anything while riding the electric ride-on toy.
- Ride only on smooth, flat, dry surfaces such as pavement or level ground without loose debris, such as sand, leaves, rocks or gravel. Water, mud, ice, bumpy, un-even, slick, or rough surfaces could impair traction and contribute to possible loss of control.
- Do not ride on or near hills or steep inclines. Ride only on level ground to avoid tip over.
- Avoid sharp turns, bumps, drainage grates, and other obstacles.
- Do not ride at night or where there is limited visibility.
- Do not ride indoors or on surfaces that could become damaged such as carpet or flooring.
- Do not ride on streets, around cars, or in foot or vehicle traffic.
- Regularly check the electric ride-on toy and its components. If any parts are broken or worn, do not ride the electric ride-on toy until you have fixed or replaced the broken or worn parts.

- This ride-on toy has no brake; to stop take foot off foot pedal. Do not park or ride on any slopes or steep inclines.
- Do not allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with wheels or other moving parts.
- Before each cycle of operation, you must perform the preoperation checks specified in this manual or by the manufacturer, including:
  - That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition;
  - That the area that the unit is to be operated in is safe and suitable for safe operation; and
  - That all safety labels are in place and understood by everyone, including the riders.
- Avoid sharp bumps, drainage grates, and sudden surface changes.
- Do not ride in the rain or on wet surfaces.

## PRE-RIDE SAFETY CHECKLIST

- Check to make sure that all components are properly secured and are functioning according to the manufacturer's specifications.
- Components must be maintained and repaired and only with the manufacturer's authorized replacement parts. Installation should be performed only by adult, qualified personnel.

## USING THE CHARGER

The charger should be examined regularly for damage to the cord, plug, enclosure and other parts. In the event such damage has occurred, the electric ride-on toy should not be charged until the charger has been repaired by qualified personnel or replaced. Use only the supplied, recommended charger.

- Always use caution when charging.
- The charger is not a toy and should be operated by an adult.
- Never operate the charger near flammable materials or liquids, and operate the charger in well-ventilated areas.
- Disconnect the charger and unplug it from the electric ride-on toy when not in use.
- Do not exceed the recommended charging time.
- Always disconnect the charger from the electric ride-on toy prior to wiping down or cleaning the electric ride-on toy with any liquid.

**⚠ WARNING:** Never modify or alter the electrical system. Risk of fire. Do not bypass the fuse. Replace only with 3A fuse, located under the pedal. Alterations could cause a fire or explosion resulting in serious injury or death and could also ruin the electrical system.

**FAILURE TO HEED THE WARNINGS LISTED ABOVE INCREASES RISK OF POTENTIALLY SERIOUS INJURY. USE THE APPROPRIATE CAUTION WHEN RIDING AND ALWAYS WEAR APPROPRIATE CLOTHING AND SHOES.**

# BEFORE YOU BEGIN ASSEMBLY

Remove all packing and items from the display box.

## ESTIMATED ASSEMBLY TIME

Because this ride-on toy is heavy and large, we strongly suggest two people to complete assembly. Allow approximately 90 minutes for assembly by two people, not including initial charging time. Initial charging can take approximately 18 hours. (see page 17–19 for charging information).

**⚠ WARNING: DO NOT USE NON-ORIGINAL OR NON-RECOMMENDED PRODUCTS WITH YOUR ELECTRIC RIDE-ON TOY.**


Altering of the original components or use of non-recommended replacement parts may or may not be compatible with the design and will void the warranty and may cause an unsafe condition resulting in serious injury or death.

If you experience a problem with this product, or are missing a part, please call us at **1-800-551-0032**, rather than return this product to the store.

Please identify all parts before assembly and save all packaging material until assembly is complete to ensure that no parts are discarded.

# PARTS DIAGRAM

C

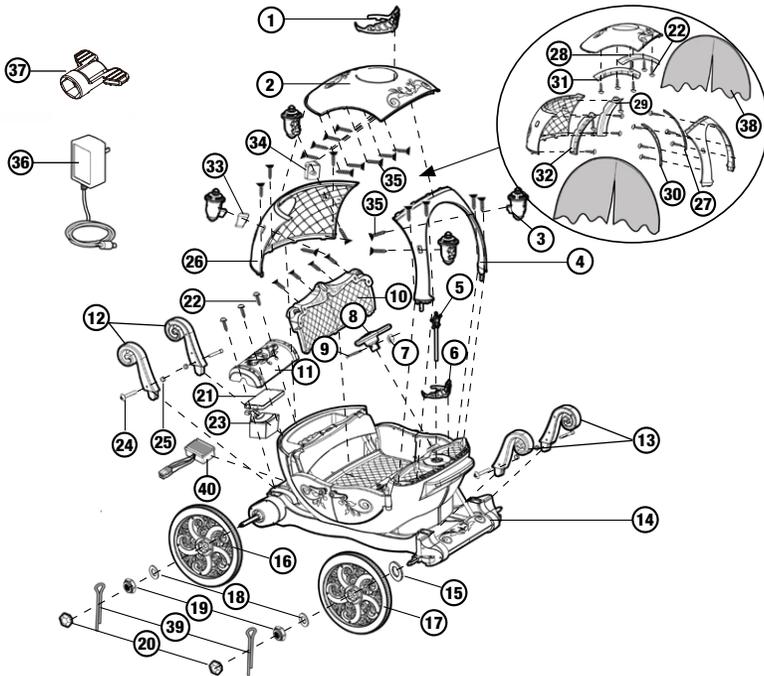

**NOTE:** Some parts shown are assembled on both sides of ride-on toy. Parts are packaged at both ends of box and in ride-on chassis. Ensure all parts are present before assembly.

- |                                       |   |
|---------------------------------------|---|
| 1. Carriage Roof Tiara x1             | 21. Battery Cover x1                    |
| 2. Carriage Roof x1                   | 22. 4x12 Round Head Screw x18           |
| 3. Lantern x4                         | 23. Battery x1                          |
| 4. Roof Support (Front) x1            | 24. M6x40 Machine Screw x4              |
| 5. Magic Wand x1                      | 25. M6 Lock Nut x4                      |
| 6. Dashboard Tiara x1                 | 26. Roof Support (Rear) x1              |
| 7. M5 Lock Nut x1                     | 27. Front Curtain Support (Left) x1     |
| 8. Steering Wheel Assembly x1         | 28. Middle Curtain Support (Left) x1    |
| 9. M5x35 Machine Screw x1             | 29. Rear Curtain Support (Left) x1      |
| 10. Seat Back x1                      | 30. Front Curtain Support (Right) x1    |
| 11. Battery Box Cover x1              | 31. Middle Curtain Support (Right) x1   |
| 12. Undercarriage Flourish (Rear) x2  | 32. Rear Curtain Support (Right) x1     |
| 13. Undercarriage Flourish (Front) x2 | 33. Lantern Bracket (Right) x1          |
| 14. Plastic Body Assembly x1          | 34. Lantern Bracket (Left) x1           |
| 15. Ø19 Front Axle Washer x2          | 35. 4x16 Round Head Screw x24           |
| 16. Rear Wheel x2                     | 36. Charger x1                          |
| 17. Front Wheel x2                    | 37. 17 mm Socket Wrench (for wheels) x2 |
| 18. Ø12 Washer x4                     | 38. Curtain x2                          |
| 19. M10 Lock Nut x4                   | 39. Spilt Pin x4                        |
| 20. Axle Cap x4                       | 40. Controller x1                       |

# ASSEMBLY

D

 
 
 
Your new ride-on toy requires adult assembly. Because your new ride-on toy is heavy and large, we strongly suggest using two people to finish assembly. Set aside around 90 minutes for assembly. Identify all parts before assembly and save all packaging material until assembly is completed to ensure that no parts are discarded.

## TOOLS REQUIRED:

Phillips Screwdriver  
(not included)

17 mm Socket Wrench  
(included)

Needle-Nose Pliers  
(not included)




**⚠ WARNING:** Children can be harmed by small parts, sharp edges and sharp points in the ride-on toy's unassembled state, or by electrical items. In the unassembled state, this package contains small parts. Adult assembly is required; children should not handle parts, or help in assembly of the ride-on toy.

## 1. UNDERCARRIAGE FLOURISH ASSEMBLY

- Remove all parts inside the carriage body (put them aside for later use).
- Find the four pieces of the undercarriage flourish in the accessories pack.
- Find one set of two pieces labeled “Rear”, remove the M6x40 machine screw and nut on them, and insert the rear flourishes into the back of the carriage body.
- Insert the M6x40 machine screw and M6 nut and tighten them with a Phillips screwdriver.

**NOTE:** There are left and right side undercarriage flourishes; the side with screws should face inside.

- Find the other set of two pieces labeled “Front”, remove the M6x40 machine screw and nut on them, and insert the front flourishes into the front of carriage body. Follow the previous instructions to tighten the front undercarriage flourishes.

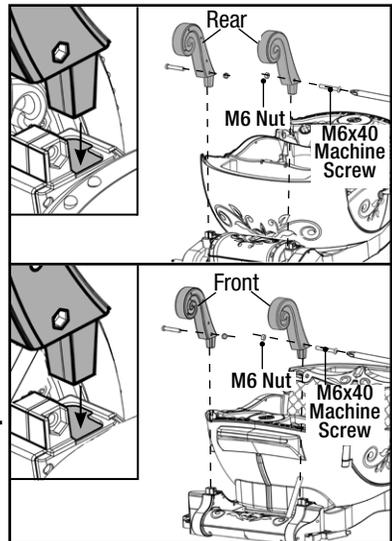

## 2. FRONT WHEEL ASSEMBLY

- Turn the carriage body upside down (handle gently by two people) to avoid damaging the door handles or flourishes.

**NOTE: Do not remove the packaging material from the handles until after completing the assembly!**


- Adjust the front wheel axle until the axle clicks into position for safety (see Figure A).
- Remove washers and nuts from the front wheel axle.

**⚠ WARNING: To avoid pinching your fingers, do not put your hand into the slot when adjusting the front wheel axle.**

- Fit a  $\varnothing 19$  washer onto the axle.
- Find a wheel labeled “Front”, apply a bit of white grease into center hole of the front wheel and then slide it onto the axle.
- Fit a  $\varnothing 12$  washer and M10 locknut onto the axle, then tighten it with socket wrench.


**NOTE: Do not over-tighten. For your safety, make sure you insert a split pin into the hole in the end of front axle, and split it using standard needle nose pliers.**

- Insert the axle cap until it clicks into place.
- Find another wheel labeled “Front” and repeat the previous steps for the front wheel on the other side.
- Front wheels should spin freely; if not, loosen nut slightly.

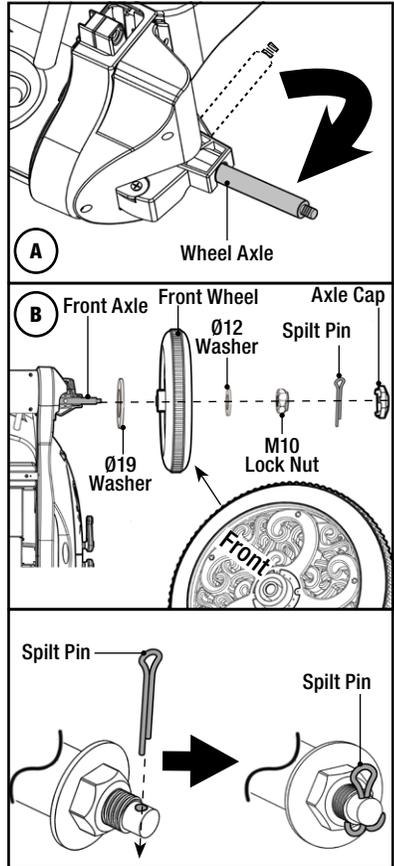

## 3. REAR WHEEL ASSEMBLY

- First, remove all washers and nuts from the rear axle and make sure the axle exposure at the left and right ends are equal.
- Find a wheel labeled “Rear”, apply a bit of white grease into center hole of the rear wheel and make sure the rear wheel cover pattern rotation is the same as the front wheel.
- Slide the wheel onto the rear axle and make it match up with the gear box.
- Insert a  $\varnothing 12$  washer onto the axle.
- While holding the rear axle with a 17 mm socket wrench, fit the M10 locknut to the

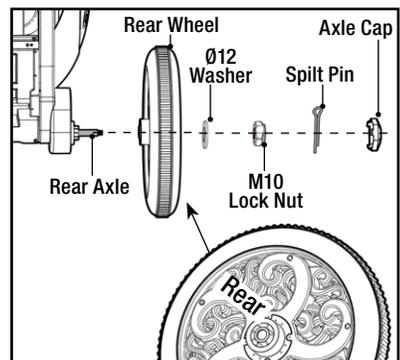

end of the rear axle with another 17mm socket wrench. DO NOT over tighten; the rear axle ends are supposed to be exposed; 1-2 threads exposed is acceptable.


- For your safety, insert a split pin into the hole in the end of rear axle, and split it using standard needle nose pliers. (Refer to the drawings illustrated for front wheel at page 9).
- Insert the axle cap.
- Find another wheel labeled “Rear” and repeat the previous steps on the other side to install the other rear wheel.

**NOTE: The front and rear wheels are different. For better aesthetics, mount all wheels on the carriage so the rim design is consistent (for example, the rim design appears clockwise).**

## IMPORTANT! CHECK WHEEL GAP

After assembling any wheel onto the axles, check the gap between the screw thread and the outside of the wheel (refer to the adjacent diagram).


If the gap is too big, add two or three washers on the axle to the inside of the wheel. After tightening the nut on the outside of the wheel, spin the wheel to check if the wheel spins smoothly. If the wheel gets caught or does not spin smoothly, the friction may cause damage to the motor. Try increasing the gap by removing one or two washers to ensure the wheel spins smoothly.

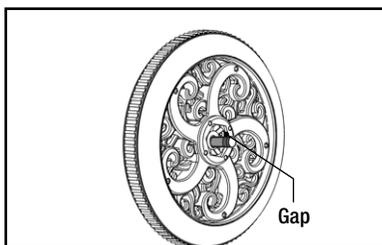

**NOTE: If the wheel nuts are loose, the wheels will not engage the forward gear. Tighten the nut with the socket wrench.**


## 4. SEAT BACK ASSEMBLY

- Gently turn the carriage body upright, making sure not to damage the door handles and undercarriage flourishes.
- Slide the seat back into the slots in the plastic body, push until it clicks into place. Use the screwdriver to tighten with four 4x16 round head screws at the back of the seat.

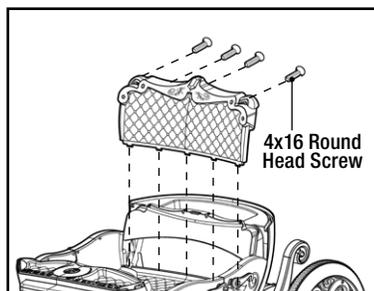

## 5. STEERING WHEEL ASSEMBLY

- Remove the M5x35 machine screw and nut from the steering wheel.
- Insert the screwdriver in the hole in the steering column and lift it as high as possible so that when inserting the steering wheel onto the end of the steering column, it can line up the hole in the steering wheel with the hole in the steering column.
- Remove the screwdriver and reinsert the M5x35 machine screw through the aligned holes, attach the M5 nut and tighten securely with the screwdriver.

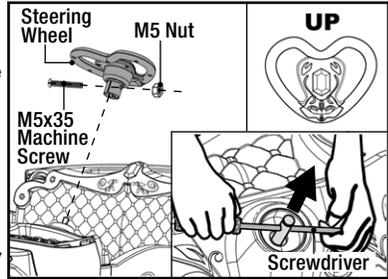


**NOTE: Make sure the steering wheel is mounted in correct direction.**

## 6. STEERING WHEEL BATTERIES INSTALLATION

**NOTE: Batteries are not included.**

- Unscrew the screw in the steering wheel and remove the cover.
- Insert 2x1.5V size AA AM-3 or LR6 batteries.
- Replace the cover and tighten the screw to secure it in place.

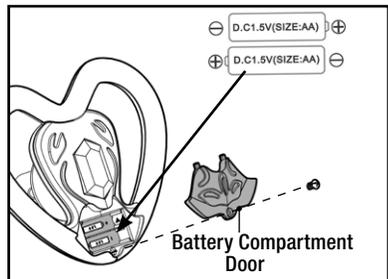


## STEERING WHEEL BATTERY SAFETY INFORMATION:

Batteries may leak fluids that can cause chemical burn, injury or ruin your product. To avoid battery leakage:

- Install batteries correctly, observing the polarity (+/-) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (NiMH).
- Remove the batteries from the battery compartment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the battery compartment.
- Do not dispose of batteries in fire.
- Do not short circuit the supply terminals.
- Replace the batteries when the horn sounds become distorted.
- Non-rechargeable batteries should not be recharged.
- Use only batteries of the same or equivalent type as recommended.
- If rechargeable batteries are used, they should only be charged by an adult.
- Remove rechargeable batteries from the product before charging.
- Battery chargers used with toys must be examined regularly for damage to the cord, plug, enclosure and other parts. In the event that such damage is found, the toy must not be used with the battery charger until the damage has been repaired.


## 7. FRONT ROOF SUPPORT ASSEMBLY

- Find the front roof support (labeled ④ inside) and the roof (labeled ② inside).
- Slide the front roof support into the slots on the carriage roof and push until it clicks into place.
- Insert four 4x16 round head screws and tighten with a screwdriver.

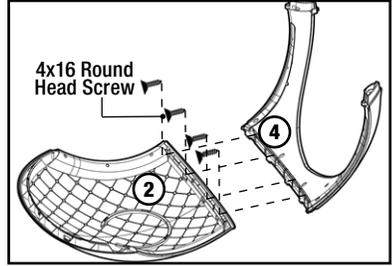


## 8. REAR ROOF SUPPORT ASSEMBLY

- Find the rear roof support (labeled ②⑥ inside).
- Slide the rear roof support into the slots on the carriage roof and push until it clicks into place.
- Insert five 4x16 round head screws and tighten with a screwdriver.

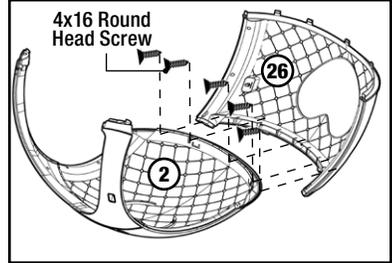


## 9. CARRIAGE ROOF ASSEMBLY

- Slide the rear roof support into the slots on the back of the carriage body; then, slide the front support into the front of the carriage body (make sure the smaller black metal tube of the front roof support is inserted into the bigger metal tube of the carriage body) and push until they click into place.
- Use three 4x16 round head screws to secure the rear roof support to the carriage body.
- Use four 4x16 round head screws to secure the front roof support to the carriage body.

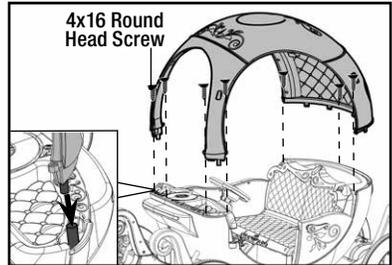


## 10. CURTAIN ASSEMBLY

Find the six curtain supports and line up into two parts (left and right).

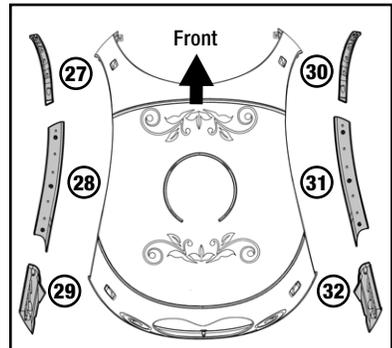

- Find the curtain support (labeled 26) and center a curtain over the 26 curtain support (make sure the small columns accommodate the curtain), then mount the curtain and curtain support onto the left side of the carriage roof. Secure with three 4x12 round head screws.

**NOTE: Make sure there are no creases where the curtain is attached to the support before tightening the screws.**

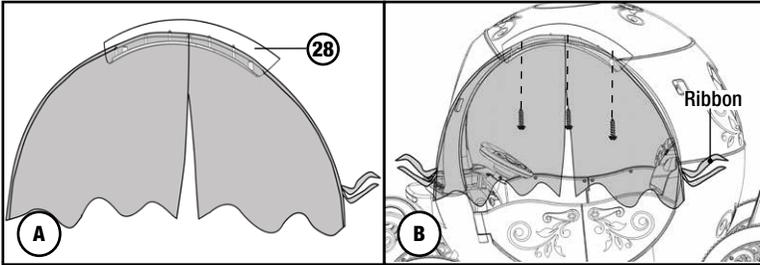


- Find the curtain support (labeled 29) and place the rear curtain over the 29 curtain support (make sure the small columns accommodate the curtain and leave the ribbon on the rear curtain out of the curtain support). Mount the curtain onto the rear carriage support.
- Secure with three 4x12 round head screws.


**NOTE: Make sure there are no creases where the curtain is attached to the support before tightening the screws.**



- Find the curtain support (labeled 27) and place the front curtain over the 27 curtain support (make sure the small columns accommodate the curtain and leave the ribbon on the front curtain out of the curtain support). Mount the curtain onto the front carriage support. Secure with three 4x12 round head screws.

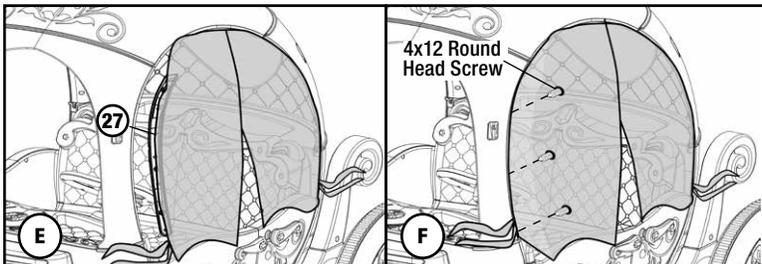

- Repeat the previous steps to mount the right side curtain. Find the curtain supports and center the right side curtain over the curtain support ③① (making sure the small columns accommodate the curtain), then mount the curtain with curtain supports ③② and ③③ onto the right side of the carriage roof. Secure with three 4x12 round head screws.

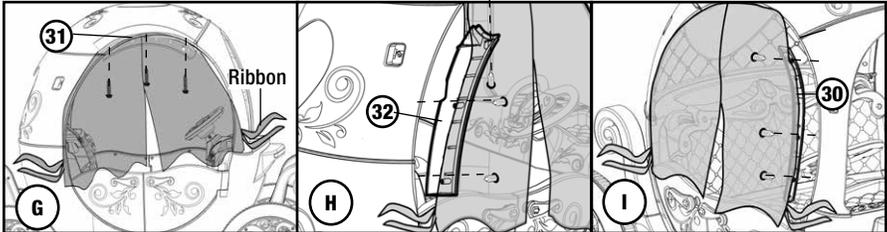


**NOTE:** Make sure the left and right ribbons on the curtain remain outside so you can tie the curtain.

**⚠ WARNING:** Make sure to tie the curtains back before riding the carriage. Do not ride in the carriage without tying the curtains back, as doing so would reduce visibility and increase the risk of a crash or fall.


## 11. FRONT LANTERN ASSEMBLY

- Align the lantern holder with the mounting hole on the front of the carriage body, and tighten it with a 4x16 round head screw.
- Repeat the steps for the other front lantern.

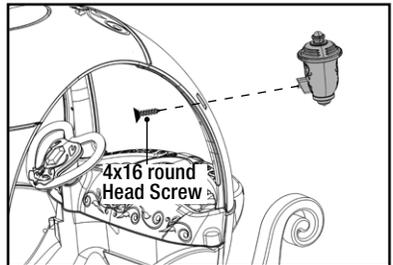

## 12. REAR LANTERN ASSEMBLY


- Find the small lantern bracket and slide it into the lantern (separate Left and Right). Align the bracket with the mounting hole in the rear of carriage body.
- Secure the lantern with a 4x16 round head screw.
- Repeat the steps for the other rear lantern.

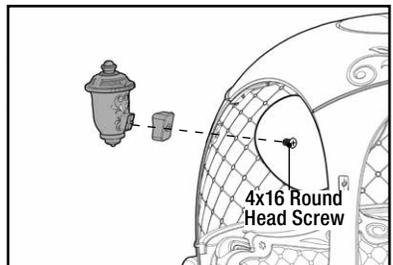

## 13. LANTERN BATTERIES INSTALLATION

**NOTE: Batteries are not included.**

- Unscrew the two 3x10 round head screws at the bottom of the lantern socket.
- Remove the lantern wick and insert 2x1.5V size AAA or LR03 batteries.
- Replace the socket and tighten the screws to secure in place.

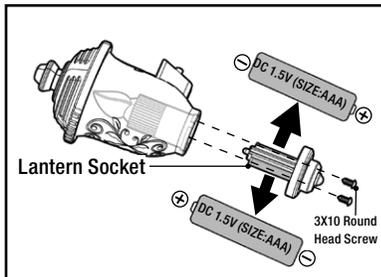


## LANTERN BATTERIES SAFETY INFORMATION:

Batteries may leak fluids that can cause chemical burn, injury or ruin your product. To avoid battery leakage:

- Install batteries correctly, observing the polarity (+/-) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (NiMH).
- Remove the batteries from the battery compartment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the battery compartment.
- Do not dispose of batteries in fire.
- Do not short circuit the supply terminals.
- Replace the batteries when the horn sounds become distorted.
- Non-rechargeable batteries should not be recharged.
- Use only batteries of the same or equivalent type as recommended.
- If rechargeable batteries are used, they should only be charged by adult.
- Remove rechargeable batteries from the product before charging.
- Battery chargers used with toys must be examined regularly for damage to the cord, plug, enclosure and other parts. In the event that such damage is found, the toy must not be used with the battery charger until the damage has been repaired.


## 14. ROOF TIARA ASSEMBLY

Insert the carriage roof tiara (larger size) into the slots in the roof until it clicks into place.

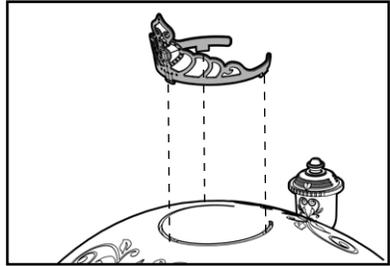

## 15. DASHBOARD TIARA ASSEMBLY


Insert the dashboard tiara (smaller size) into the slots in the dashboard until it clicks into place.

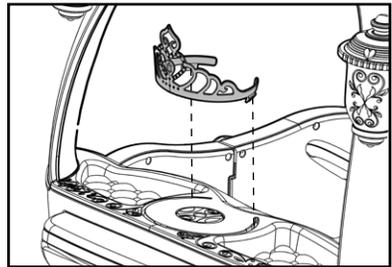

## 16. MAGIC WAND ASSEMBLY

- Insert the magic wand into the hole located on the dashboard tiara.
- Press the wand to activate the carriage lights.


**NOTE: The magic wand powers the LED light switch. To avoid damage, do not insert any other objects into the hole on the dashboard tiara.**

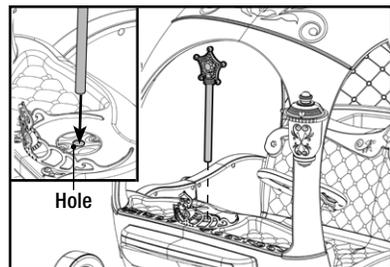

## 17. POWER SUPPLY CONNECTION

**NOTE:** The battery is disconnected for shipment to prevent the battery from draining.

- Unscrew the three screws on the battery box cover with a screwdriver and remove the battery box cover.
- Securely plug the battery connector into the control model connector.
- Secure the battery box cover with three screws.

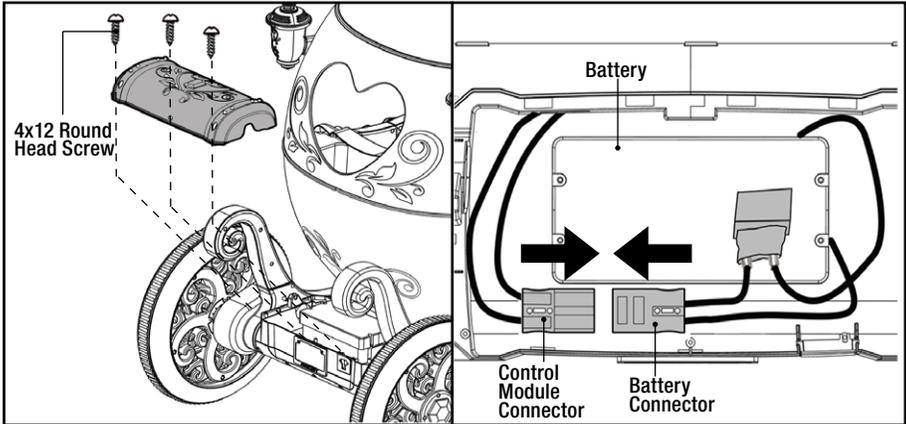

## BATTERY CHARGING


**IMPORTANT!** Before first time use, charge the battery for at least 18 hours. Charge the battery for at least 12 hours after each use of the ride-on toy. Never charge the battery longer than 30 hours. Overcharging or undercharging the battery may shorten battery life and decrease ride-on toy running time.

**⚠ WARNING:** The battery can fall out and injure a child if the ride-on toy tips over. Always use the battery cover.

## PREVENT FIRE

- Never modify the electrical system.
- Alterations could cause a fire resulting in serious injury and could also ruin the electrical system.
- Use of the wrong type battery or charger could cause a fire or explosion resulting in serious injury.
- Use of non-original components on this ride-on toy could cause overheating, fire or explosion.
- The battery must be handled by adults only.
- The battery is heavy and contains sulfuric acid (electrolyte).
- Dropping the battery could result in serious injury.
- Never allow children to charge the battery.
- Battery charging must be done by adults only. A child could be injured by the electricity involved in charging the battery.
- Never lift or carry the battery by the wires or connector, this can damage the battery and possibly cause a fire resulting in serious injury. Lift and carry the battery by the case only.
- Read the safety instructions on the battery.
- Examine the battery, charger and their connectors for excessive wear or damage each time you charge the battery.
- If damage or excessive wear is detected, do not use the charger or the battery until you have replaced the worn or damaged part.

**⚠ WARNING:** Use the charger in dry locations only.

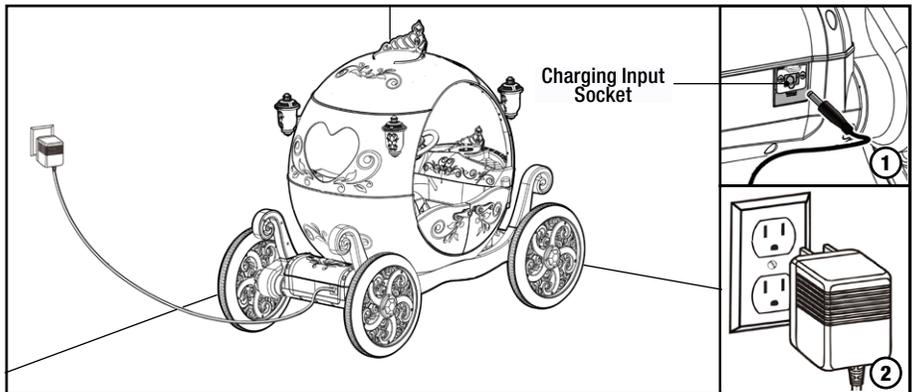

1. Plug the charger port into the input socket (the socket is at back of the carriage).
2. Plug the charger plug into a wall outlet. The battery will begin charging.

**NOTE:** Red LED light indicates the battery is charging and a green LED light indicates battery is fully charged. If the lights on the charger do not light up, check the power to the outlets.

## IMPORTANT NOTE


- The battery must be upright while charging.
- The charger is not a toy.
- Do not short-circuit the battery.
- You do not need to remove the battery from your ride-on toy to recharge it.
- Before charging the battery, examine the battery case for cracks and other damage which may cause sulfuric acid (electrolyte) to leak during the charging process. If damage is detected, do not charge the battery or use it in your ride-on toy. Battery acid is very corrosive and can cause severe damage to surfaces it contacts.
- Use only an original charger (AC 120V 60Hz) with an output of DC 24V (1A) to charge your ride-on toy battery.
- **NOTE TO ADULTS:** Regularly examine the charger for damage to the cord, plug, housing or other parts that may result in the risk of fire, electric shock or injury.
- If your battery is old and will not accept a charge, do not leave it in the ride-on toy. Always remove a dead battery from the ride-on toy.
- After the first charge, recharge the battery for at least 12 hours after each use. Never charge the battery longer than 30 hours. Charge the battery after each use, regardless of how long the ride-on toy was used.
- Do not allow the battery to run down completely before charging.
- Charge the battery before storing the ride-on toy.
- Charge the battery at least once per month, even if the ride-on toy has not been used.

### **NOTE:**

- This product has CHARGING PROTECTION: when charging, all the functions will be cut off.
- Initial charge – At least 18 hours, and never charge the battery longer than 30 hours.
- When the ride-on toy begins to run slowly, recharge the battery.
- After each use or once a month at minimum if not used, recharge the battery for at least 12 hours, but never more than 30 hours at most.

**⚠ WARNING: Use the charger in dry locations only.**

# HOW TO USE YOUR RIDE-ON TOY

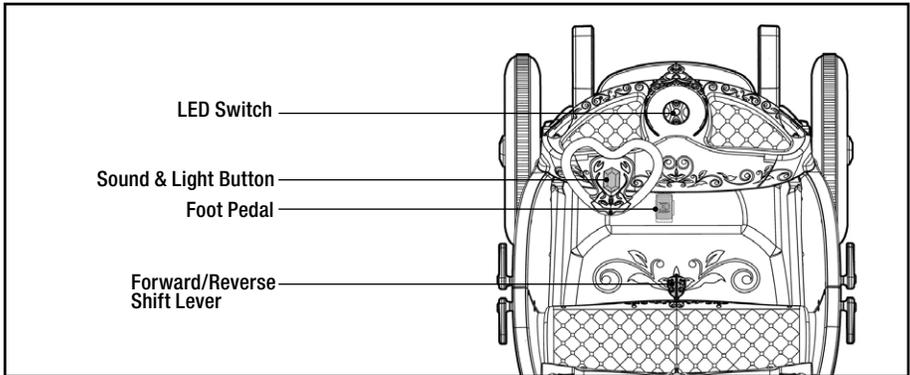

## FOOT PEDAL

- To move the ride-on toy, press the foot pedal down.
- To stop, take your foot off the foot pedal.

## FORWARD-REVERSE SHIFT LEVER

- To move the carriage forward at high speed, shift the lever to the “High” position.
- To move the carriage forward at low speed, shift the lever to the “Low” position.
- To move the carriage backward, shift the lever to the “Reverse” position.

**NOTE:** Use low speed until you get familiar with your new ride-on toy.

**IMPORTANT:** The carriage does not have brakes. Do not park or ride on any slopes or steep inclines.

## SOUND & LIGHT BUTTON

To activate sound and light, press the button on the steering wheel.

## STOP

To stop the ride-on toy, you must take your foot off the pedal.

## LED SWITCH


To activate the carriage lights, insert the magic wand into the hole in the dashboard where the LED switch is located. The LED strip at front of the carriage will light up and blink and the gem on the magic wand will also light up.

**NOTE:** The magic wand powers the LED light switch. To avoid damage, do not insert any other objects into the hole on the dashboard tiara.

## OPENING THE DOOR


To open the doors, push down on the handle.

**NOTE:** Only the front doors (near the dashboard side) can be opened, the rear doors are fixed and do not open.

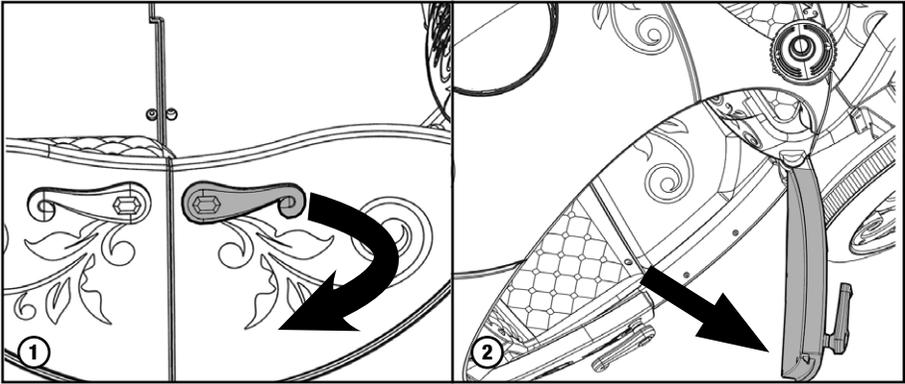

## USING THE LANTERN

To turn on the light, press the button on the bottom of the lantern. To turn off the light, press the button again.

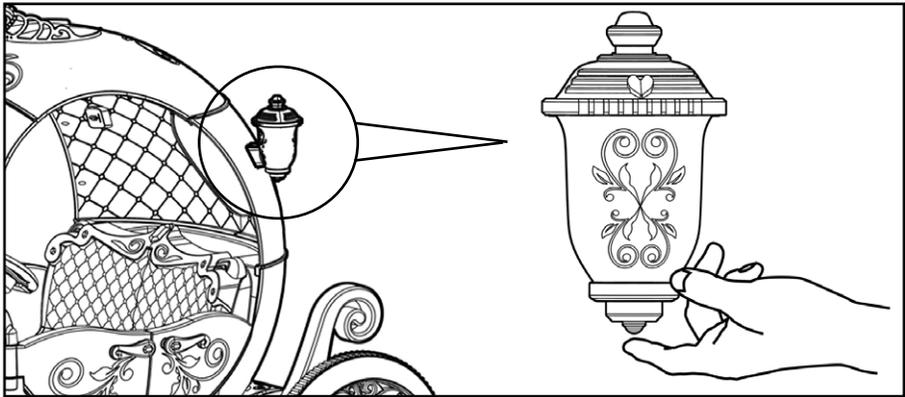

### NOTE:

- If you forget to turn off the lantern, the lantern will automatically turn off in 30 minutes.
- Replace the batteries when the light is dim or does not work.

## IMPORTANT

- Always stop ride-on toy when changing the direction to avoid damage to the gears and motor.
- This ride-on toy has an adjustable seat belt; instruct children on how to fasten the seat belt before using.
- Do not let any child touch the wheels or be near them when the car is moving.
- To avoid accidents, inspect the ride-on toy before riding to ensure that it is in proper working order and safe to ride.
- This toy has no brake; to stop, remove foot from the foot pedal.
- Check all the screws, cap nuts and protective coverings regularly and tighten as required. Check plastic parts on a regular basis for cracks or broken pieces.
- Your new battery must be charged for at least 18 hours before you use it in your ride-on toy for the first time.
- Do not wash the ride-on toy with water; clean it with a cloth.

## SAFETY PRECAUTIONS

- The child must have adult supervision at all times.
- Do not ride on the road, footpaths, near pools, or bodies of water.
- Do not allow children under the recommended age to ride the ride-on toy; refer to the age grading.
- Do not allow riders over the recommended weight rating or under the age grading to use the ride-on toy.
- To stop the ride-on toy, you must take your foot off the pedal.
- Charging should only be done by an adult.
- An adult must teach the child how to operate the ride-on toy.
- Do not ride on hills or slopes, in sand or on other soft, wet, or slippery surfaces.
- Do not use a different size battery. Use only original or recommended replacement batteries.
- The ride-on toy is designed to carry only a maximum weight of 130 lb at a time. Never allow more than two riders or over-load the ride-on toy.
- This product should be assembled and checked by adults before use.

** WARNING: This ride-on has no brake; to stop take foot off foot pedal. Do not park or ride on any slopes or steep inclines.**

# DETAILED MAINTENANCE AND REPAIR

F

 
**⚠ WARNING:** Disconnect power supply before conducting any maintenance procedures.




Phillips Screwdriver  
(not included)



17 mm Socket Wrench  
(Included)




Flat head Screwdriver  
(not included)

 

Needle-Nose Pliers  
(not included)

## HOW TO REPLACE FRONT WHEEL

1. Remove the axle cap by sliding a flat head screwdriver along the edge of the cap and carefully pry the cap open.
2. Use needle nose pliers to remove the split pin in the hole of the front axle end.
3. Remove the M10 locknut with a 17 mm socket wrench.
4. Remove the  $\varnothing 12$  washer.
5. Remove the wheel, then replace with a new wheel.
6. Remount the  $\varnothing 12$  washer, M10 locknut and split pin, and securely tighten the wheel.
7. Reinsert the axle cap.

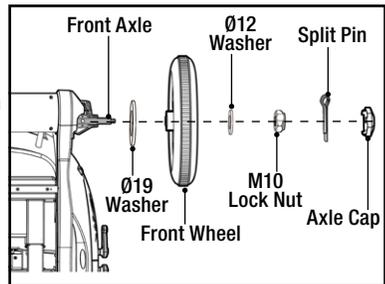


**NOTE:** Do not over-tighten.

**IMPORTANT:** Check wheel gap (see page 10).


## HOW TO REPLACE REAR WHEEL AND GEAR BOX

1. Remove the axle cap by sliding a flat head screwdriver along the edge of the cap and carefully pry the cap open.
2. Use needle nose pliers to remove the split pin in the hole of the rear axle end.
3. Remove the M10 locknut with a 17 mm socket wrench.
4. Remove the  $\text{\O}12$  washer.
5. Remove the rear wheel and replace with new a wheel.
  - **If you need to replace the gear box, proceed to the next step before putting on the new wheel.**
6. Unplug the power connector that is connected to the gear box.
7. Remove the four 4x12 round head screws and the gear box cover.
8. Remove the gear box.
9. Remount new gear box and rear wheel (see Rear Wheel Assembly steps on page 9).

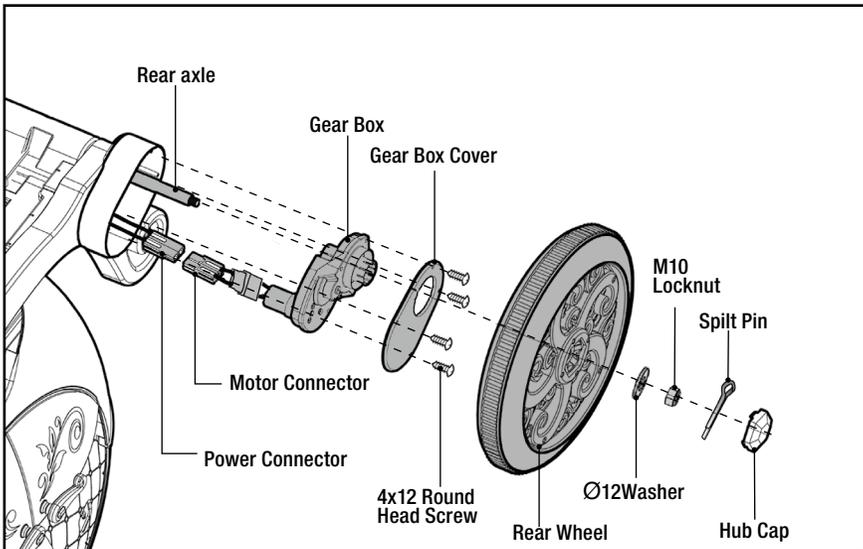


## HOW TO REPLACE THE FOOT PEDAL

1. Use a flat head screwdriver to gently pry the LEFT side of foot pedal.
2. Gently remove the foot pedal.
3. Disconnect the old foot pedal from the pedal switch socket.
4. Replace and reconnect the new foot pedal to the pedal switch socket to ensure they are connected in the correct position (see Figure 3) and then reinsert the foot pedal into the foot pedal compartment until it snaps into place.

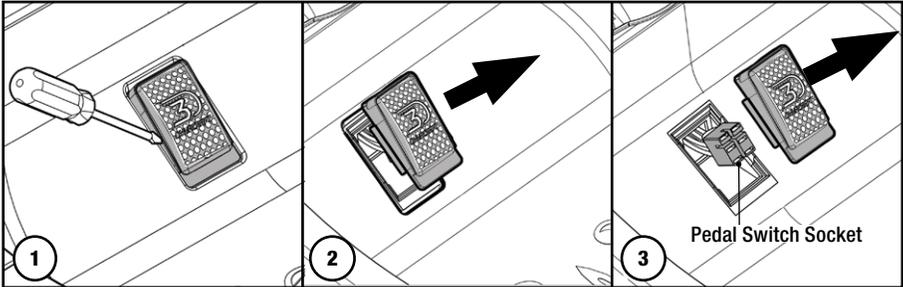


## HOW TO REPLACE THE BATTERY

1. Unscrew the screws on the battery box cover with a screwdriver and remove the battery box cover by lifting up.
2. Use a screwdriver to remove the four screws and the battery cover.
3. Unplug the battery connector (which is connected to the battery).
4. Carefully lift the dead battery out and replace it with a new one.
5. Replace the battery cover and secure it with the screws. Plug the control module connector into the battery connector and replace the battery box cover.

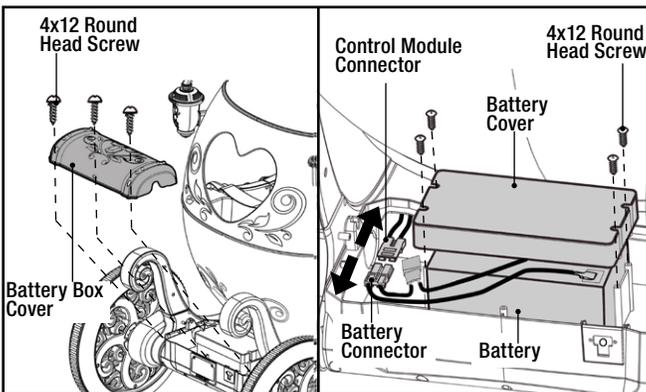

## HOW TO REPLACE FORWARD-REVERSE SHIFT LEVER

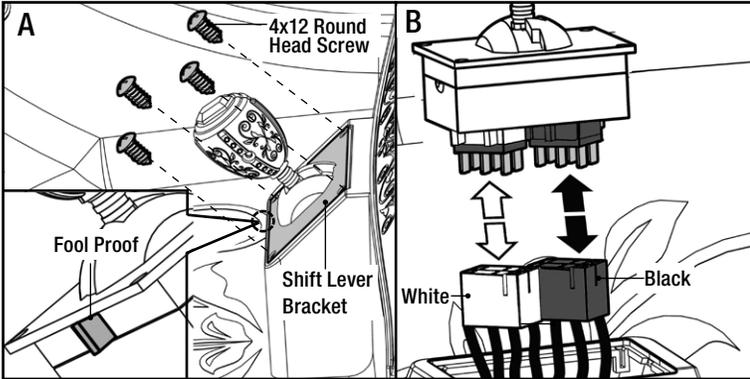


1. Unscrew the four 4x12 screws on the shift lever bracket with a screwdriver and remove the Forward-Reverse Shift Lever Assembly. (Diagram A)
2. Unplug the switch sockets from the Forward-Reverse switches. (Diagram B)
3. Replace a new Forward-Reverse Shift Lever Assembly, reconnect switch sockets with the Forward-Reverse switches, and replace the four 4x12 screws.

**NOTE: Ensure the black switch socket plugs into the black switch and the white switch socket plugs into the white switch. Failure to properly connect the plugs will result in the forward and backward directions being reversed.**

## BATTERY CARE AND DISPOSAL

Do not store the battery in temperatures above 75° F (23.5° C) or below 32° F (0°C).

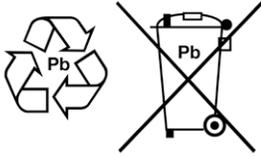

THIS PRODUCT CONTAINS SEALED LEAD ACID BATTERIES WHICH MUST BE RECYCLED IN ACCORDANCE TO YOUR LOCAL AND STATE LAWS. PLEASE CAREFULLY READ AND UNDERSTAND THE FOLLOWING DISPOSAL INSTRUCTIONS:

**DISPOSAL:** This product contains sealed lead acid batteries which must be disposed of or recycled in an environmentally safe manner. Do not dispose of the batteries in your household trash. Do not dispose of the batteries in a fire, as the battery may explode or leak. The incineration, disposal in landfill and/or placing sealed lead acid batteries with household trash is prohibited by law in most areas. Return exhausted batteries to a state or federal approved lead acid battery recycler or check with your local retailer of vehicle batteries. If you live in Florida, Minnesota or various other states, it is prohibited by law to throw away lead-acid batteries in the municipal waste stream. Check local laws for proper handling and recycling of lead-acid batteries.

### **⚠ WARNING:**

- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not store the battery in temperatures above 75° F (23.5° C) or below 32° F (0°C).
- If a battery leak develops, avoid contact with the leaking acid and place the battery in a plastic bag. See instructions above for proper disposal. If acid comes into contact with skin or eyes, flush with cool water for at least 15 minutes and contact a physician.
- If acid is internally ingested, give water, milk of magnesia or egg whites immediately. Never give emetics or induce vomiting. Call a physician.

### **CARE**

- Leaving the battery in a discharged condition will ruin it.
- Always remove an exhausted battery from the ride-on toy. Battery leakage and corrosion can damage the ride-on toy.
- Do not store the battery in temperatures above 75° F (23.5° C) or below 32° F (0°C).
- Use only a 24V 7AH battery. Remember to charge the new battery for at least 18 hours before first use.
- Prevent the battery from moving freely inside the battery compartment. Always use the battery retainer to secure the battery in the battery compartment.
- Examine the battery, charger and their connectors for excessive wear or damage each time you charge the battery. If damage is detected, do not use the charger or the battery until you have replaced the worn or damaged part.

## MAINTAINING YOUR RIDE-ON TOY

Occasionally use a lightweight oil to lubricate moving parts such as wheels and the steering linkages.

Park the ride-on toy indoors or cover it with a tarp to protect it from wet weather.

Keep the ride-on toy away from sources of heat, such as stoves and heaters. Plastic parts may melt.

**ADULTS ONLY:** Recharge the battery after each use. Recharge the battery at least once a month when the ride-on toy is not being used.

**DO NOT** wash the ride-on toy with a hose. **DO NOT** wash the ride-on toy with soap and water.

**DO NOT** drive the ride-on toy in rainy or snowy weather. Water will damage the motor, electrical system, and battery.

**DO NOT** store the ride-on toy, outside in the rain or exposed to the elements. The ride-on toy should be stored inside or covered to protect it from exposure to the elements.

Clean the ride-on toy with a soft, dry cloth. To restore shine to plastic parts, use a non wax furniture polish. **DO NOT** use car wax. **DO NOT** use abrasive cleaners, or cleaners that contain ammonia or isopropyl alcohol.

**DO NOT** drive the ride-on toy in loose dirt, sand or fine gravel, which could damage moving parts, motors or the electric system.

**⚠ WARNING:** Charge the battery before storing your ride-on toy, otherwise the battery will be damaged.

## ABOUT FUSES

Your ride-on toy is equipped with a safety thermal fuse. The fuse is a self-resetting safety device which automatically “trips” and shuts down operation of the ride-on toy if the ride-on toy is overloaded or the operating conditions are too severe. Once a fuse has “tripped,” **do not continuously push on the foot pedal**. The fuse will automatically reset itself after approximately 2 minutes and allow the ride-on toy to resume normal operations. To avoid repeated automatic shut-downs, do not overload the ride-on toy by exceeding the 130 lb (59 kg) maximum weight capacity or by towing anything behind the ride-on toy. Avoid severe driving conditions, such as driving up slopes or running into fixed objects, which can cause the wheels to stop spinning while power is still being supplied to the motor.

# TROUBLE SHOOTING GUIDE

G

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
<b>Ride-on toy does not run</b>	Undercharged battery	<p>Charge the battery. A new battery should have been charged for at least 18 hours before using the ride-on toy for the first time. After first-time use, recharge the battery for at least 12 hours after each use. Never charge the battery longer than 30 hours.</p> <p>Check all connectors. Make sure the battery connector is tightly plugged into the control module connector, and that the charger is plugged into the wall outlet.</p> <p>Make sure that there is power flow to the wall outlet.</p>
	Tripped thermal fuse	<p>The thermal fuse may “trip” and shut down operation if the ride-on toy is overloaded or the driving conditions are too severe. Once a fuse has “tripped”, remove your foot from the pedal and wait approximately 2 minutes before operating the ride-on toy again. To avoid repeated automatic shutdowns, do not overload the ride-on toy by exceeding the 130 lb maximum weight capacity or by towing anything behind the ride-on toy. Do not drive up hills or run into fixed objects, which can cause the wheels to stop spinning while power is still being supplied to the motor.</p>
	Electrical switch damage	<p>The electrical switches can become corroded due to exposure to water or moisture, or can jam due to loose dirt, sand or gravel.</p>
	Dead battery	<p>Check all wires and connectors. Make sure the battery connector is tightly plugged into the control module connector and that there are no loose wires around the motor.</p> <p>If your battery is old or if you have not followed Battery Care instructions, your battery may be dead. Replace only with an original 24V 7AH battery. Do not use non-original substitute parts.</p>
	Motor damage	<p>Please contact our Customer Service Team. <a href="http://dynacraftwheels.com/contact">dynacraftwheels.com/contact</a></p>

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
<b>Ride-on toy was running but suddenly stopped</b>	Loose wires or connectors	Check all wires and connectors. Make sure the battery connector is tightly plugged into the control module connector, and that there are no loose wires around the motor.
	Tripped thermal fuse	The thermal fuse may “trip” and shut down operation if the ride-on toy is overloaded or the driving conditions too severe. Once a fuse has “tripped”, remove your foot from the pedal and wait approximately 2 minutes before operating the ride-on toy again. To avoid repeated automatic shutdowns, do not overload the ride-on toy by exceeding the 130 lb maximum weight capacity or by towing anything behind the ride-on toy. Do not drive up hills or run into fixed objects, which can cause the wheels to stop spinning while power is still being supplied to the motor.
<b>Short run time (Less than 15 minutes per charge)</b>	Undercharged battery	Charge the battery. A new battery should have been charged for at least 18 hours before using the ride-on toy for the first time. After first-time use, recharge the battery for at least 12 hours after each use. Never charge the battery longer than 30 hours.  Check all wires and connectors. Make sure the battery connector is tightly plugged into the control module connector, and that the charger is plugged into the wall.  Make sure that there is power flow to the wall outlet.
	Overcharged battery	Do not charge the battery longer than 30 hours. If you suspect that your battery is damaged as a result of overcharging, change with one new original 24V 7AH battery. Do not use non-original substitute parts.
	Battery is old and will not accept full charge	Even with proper care, a rechargeable battery does not last forever. Average battery life is 1 to 3 years depending on ride-on toy use and use conditions. Replace only with an original 24V 7AH battery. Do not use non-original substitute parts.
	Motor damage	Please contact our Customer Service Team. <a href="http://dynacraftwheels.com/contact">dynacraftwheels.com/contact</a>
	Tripped thermal fuse	The thermal fuse may “trip” and shut down operation if the ride-on toy is overloaded or the driving conditions are too severe. Once a fuse has “tripped”, remove your foot from the pedal and wait approximately 2 minutes before operating the ride-on toy again. To avoid repeated automatic shutdowns, do not overload the ride-on toy by exceeding the 130 lb maximum weight capacity or by towing anything behind the ride-on toy. Do not drive up hills or run into fixed objects, which can cause the wheels to stop spinning while power is still being supplied to the motor.

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
<b>Ride-on toy runs sluggishly</b>	Undercharged battery	Charge the battery. A new battery should have been charged for at least 18 hours before using the ride-on toy for the first time. After first-time use, recharge the battery for at least 12 hours after each use. Never charge the battery longer than 30 hours. Check all connectors.  Make sure the battery connector is tightly plugged into the control module connector, and that the charger is plugged into the wall outlet.  Make sure that there is power flow to the wall outlet.
	Battery needs charging	Be sure to charge the battery after each use.
	Ride-on toy is overloaded	Make sure you do not overload the ride-on toy by allowing more than two riders at one time, exceeding the 130 lb. maximum weight capacity, or by towing objects behind the ride-on toy. If the ride-on toy is overloaded, the thermal fuse may “trip”, and automatically shut down operation of the ride-on toy for approximately 2 minutes. Correct the condition that lead to the overload and adjust the driving conditions to prevent repeated automatic shutdowns.
	Driving conditions too stressful	Use only on level ground.
<b>Sometimes the ride-on toy doesn't run, but other times it does</b>	Loose wire or connector	Check all wires around the motors and all connectors to make sure they are tight.
<b>The battery's thermal fuse constantly "trips", but the ride-on toy is not overloaded and the driving conditions are not severe</b>	Damaged battery	Replace with new battery. Replace only with an original 24V 7AH battery. Do not use non-original substitute parts.
<b>Charger gets warm during use</b>	It is normal for some chargers to get warm during use and is not reason for concern	No action required.  If your charger does not get warm during use, it does not mean that it is not working properly.
	Some chargers do not get warm during use	
<b>Battery makes a sizzling or gurgling noise when charging</b>	It is normal for some batteries to make noise and swell slightly while charging and is not reason for concern	No action required.  If your battery does not make noise or swell slightly while charging, it does not mean that it is not working properly.

# LIMITED WARRANTY

This Limited Warranty (“Warranty”) extends only to the original retail purchaser, who must provide proof of purchase to validate any claim. This Warranty is not transferrable to anyone else and is the only warranty for your Dynacraft product, to the extent permitted by law. No other express or implied warranty is given. Part or model specifications are subject to change without notice. By purchasing and using your new ride-on toy you agree to be bound by the terms of this Warranty as set out below.

**What does this Limited Warranty cover?** This Warranty covers all parts of the electric ride-on toy to be free from defects in workmanship and materials. This Warranty is only effective if: the electric ride-on toy is used under normal conditions for its intended purposes, by a person that properly fits and is capable of controlling the vehicle; and the electric ride-on toy receives all necessary maintenance and adjustments.

**What is not covered by this Limited Warranty?** This Warranty does not include labor and transportation charges. You, the original purchaser will be responsible for labor or transportation charges associated with the repair or replacement of any parts found to be eligible for warranty coverage. This Warranty does not cover any damage caused by crash, collision, misuse, abuse, neglect, improper assembly, improper maintenance, lack of maintenance, alteration, or any similar damage to the ride-on toy.

This Warranty will be void if the electric ride-on toy is ever: installed with a motor or modified in any other way; rented or used for commercial purposes; or used in a manner contrary to the instructions in the Owner’s Manual included with this product. **Dynacraft will not be liable for incidental or consequential loss or damage, due directly or indirectly from use of this product.**

**For how long does this Limited Warranty last?** The ride-on toy, with the exception of the battery and cosmetic parts as described below, is warranted against defective materials or workmanship for a period of **one year** from the original date of purchase.

The **battery** is warranted against defective materials or workmanship for a period of **six months** from the original date of purchase.

Parts and accessories considered to be **cosmetic** and not essential for the operation of this electric ride-on toy are warranted against defective materials or workmanship for a period of **30 days** from the original date of purchase. An original receipt confirming the original date of purchase is required to validate your warranty.

Parts and accessories considered cosmetic include, but are not limited to: mirrors; doors; fenders; stickers/decals; decorations/accessories; and fur coverings (for plush animal electric ride on toys).

**What will Dynacraft do to honor this Limited Warranty?** Dynacraft will replace any component or battery confirmed to be defective and eligible for warranty replacement with the same or a functionally equivalent part. **You, the original purchaser will be responsible for any and all labor or transportation charges connected with the replacement or repair of the ride-on toy or any covered parts.**

**How do you make a claim under this Limited Warranty?** Warranty claims should be submitted via Dynacraft’s online portal at [dynacraftwheels.com/contact](http://dynacraftwheels.com/contact) or via email at [service@dynacraftwheels.com](mailto:service@dynacraftwheels.com). Please have your proof of purchase available before contacting to validate your claim.

**DO NOT RETURN THIS ITEM TO THE STORE  
CONTACT DYNACRAFT CUSTOMER SERVICE FOR ASSISTANCE**

**[dyncraftwheels.com/contact](https://dyncraftwheels.com/contact)**  
or 1-800-551-0032 8AM–5 PM ET

Please have the following information available:

**Model Number**

Example: 8000-00

**Production Date**

Example: MM.DD.YYYY

**Serial Number**

Example: DA000000000000

This information is required to help us handle your request effectively.



***DYNACRAFT***<sup>®</sup>

---

**Dyncraft BSC, Inc.**  
1501 Crossgate Road  
Port Wentworth, GA 31407  
Call Toll Free 1-800-551-0032  
Monday – Friday 8AM to 5PM EST  
**[dyncraftwheels.com](https://dyncraftwheels.com)**  
©2019 All rights reserved

2019 Printed in China

**BM122**