


ASSEMBLY INSTRUCTION


END TABLE

A Glass

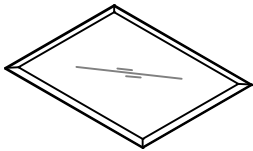


1pc

B Top Frame

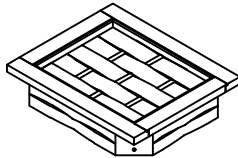

1pc

C Bottom Panel

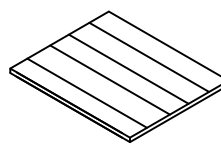

1pc

D Leg



4pcs

E Bolt
Ø1/4"x1/2"



4pcs

F Bolt
Ø1/4"x2-1/2"



8pcs

G Flat Washer
Ø1/4"x16mm



12pcs

H Lock Washer
Ø1/4"x11mm




12pcs

I Allen Key
M4




1pc

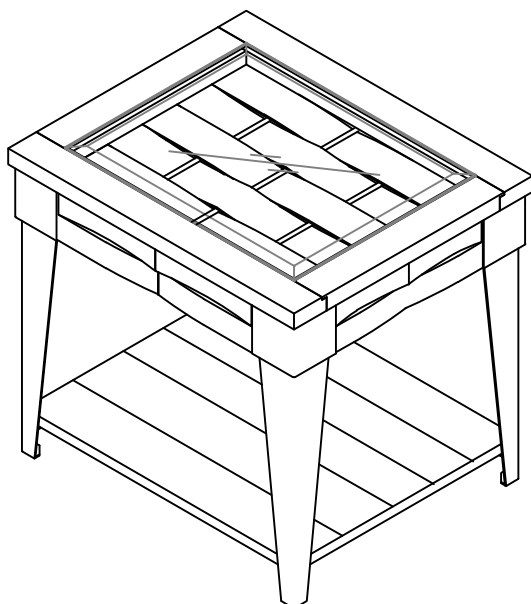


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Assemble Leg (D) to Top Frame (B), using Bolt (F), Lock Washer (H) and Flat Washer (G) by Allen Key (I) as below shown.

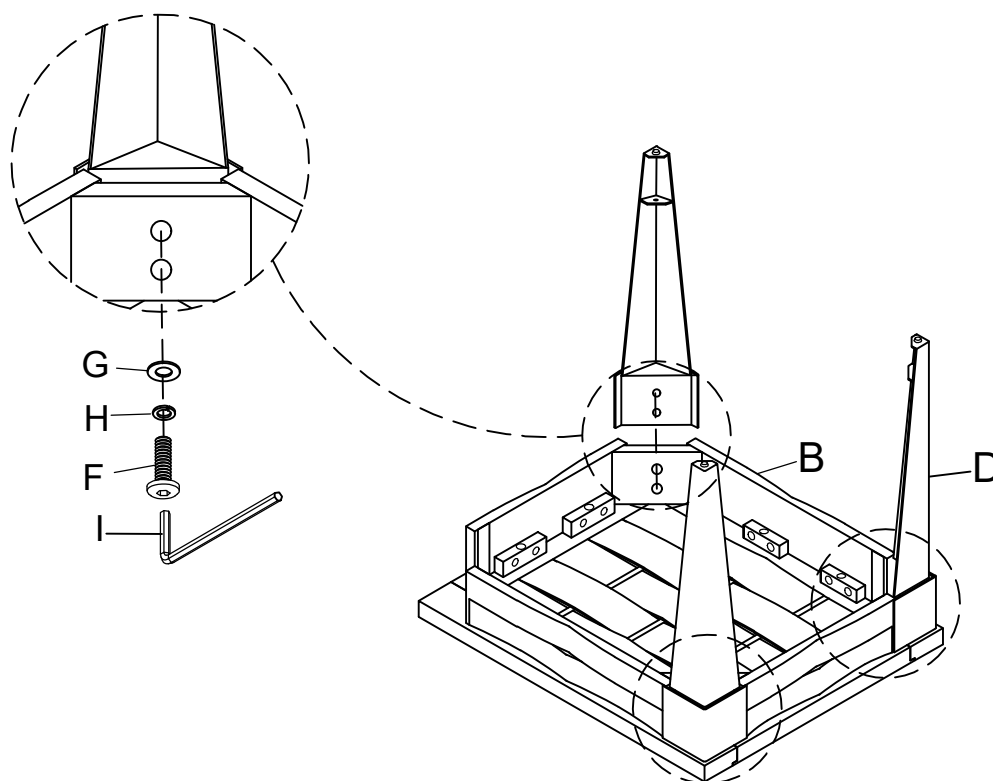

- 2** First, assemble Bottom Panel (C) to Leg (D), using Bolt (E), Lock Washer (H) and Flat Washer (G) by Allen Key (I). Second, assemble the last Leg (D) to Top Frame (B) & Bottom Panel (C), using Bolt (F), Bolt (E), Lock Washer (H) and Flat Washer (G) by Allen Key (I) as below shown.

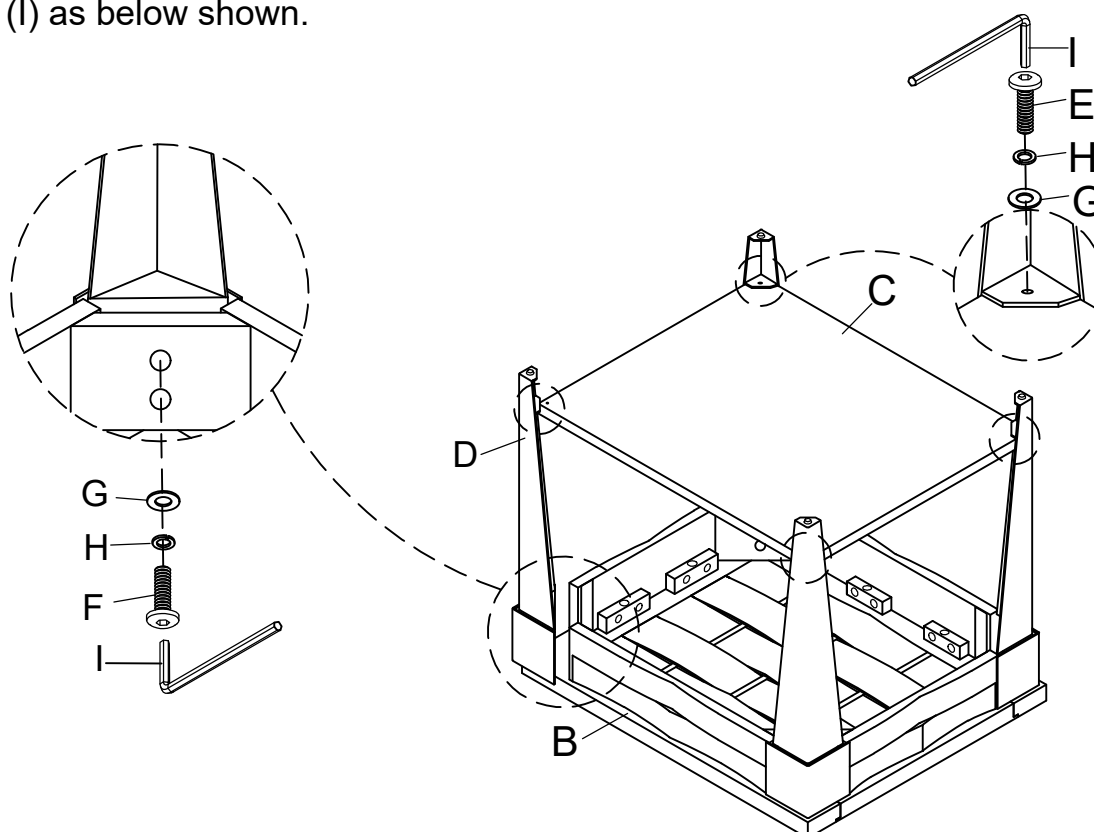

3 Put Glass (A) onto Top Frame (B) as below shown.



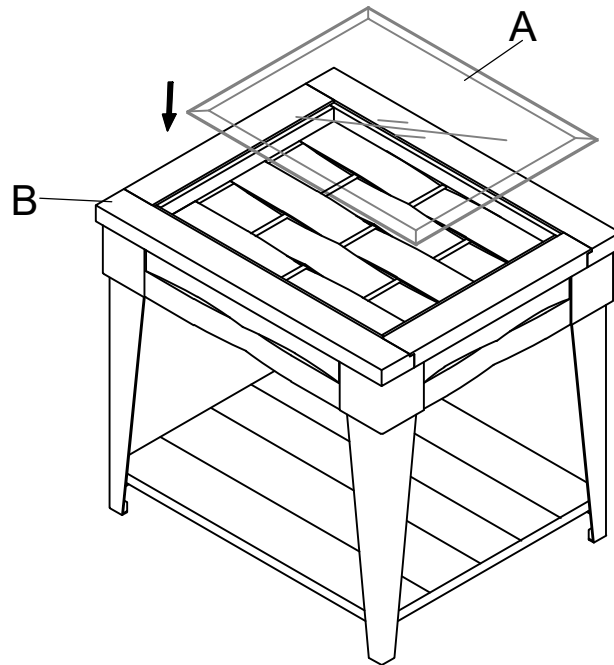








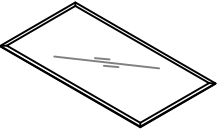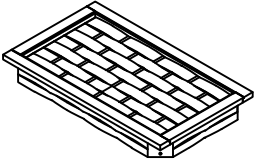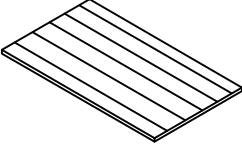



Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION


COCKTAIL TABLE

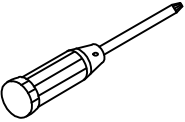A Glass	B Top Frame	C Bottom Panel	D Leg
			
1pc	1pc	1pc	4pcs
E Bolt Ø1/4"x1/2"	F Bolt Ø1/4"x2-1/2"	G Flat Washer Ø1/4"x16mm	H Lock Washer Ø1/4"x11mm
			
4pcs	8pcs	12pcs	12pcs
I Allen Key M4	J Caster	K Screw M4x5/8"	L Screwdriver (Not Provided)
			
1pc	4pcs	16pcs	1pc

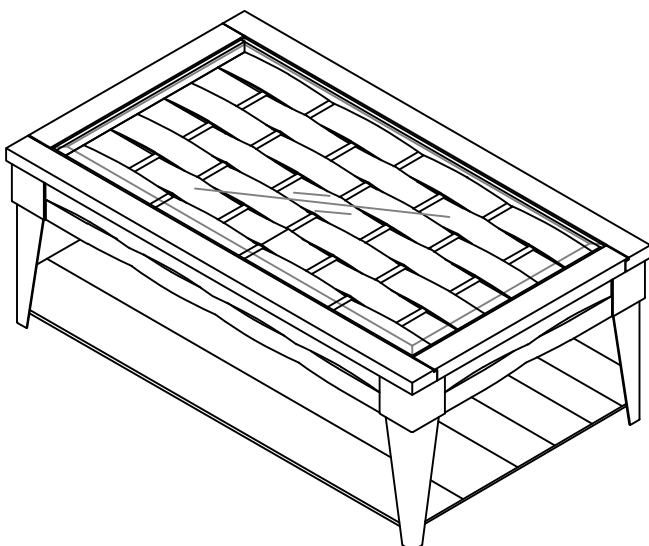


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Assemble Leg (D) to Top Frame (B), using Bolt (F), Lock Washer (H) and Flat Washer (G) by Allen Key (I) as below shown.

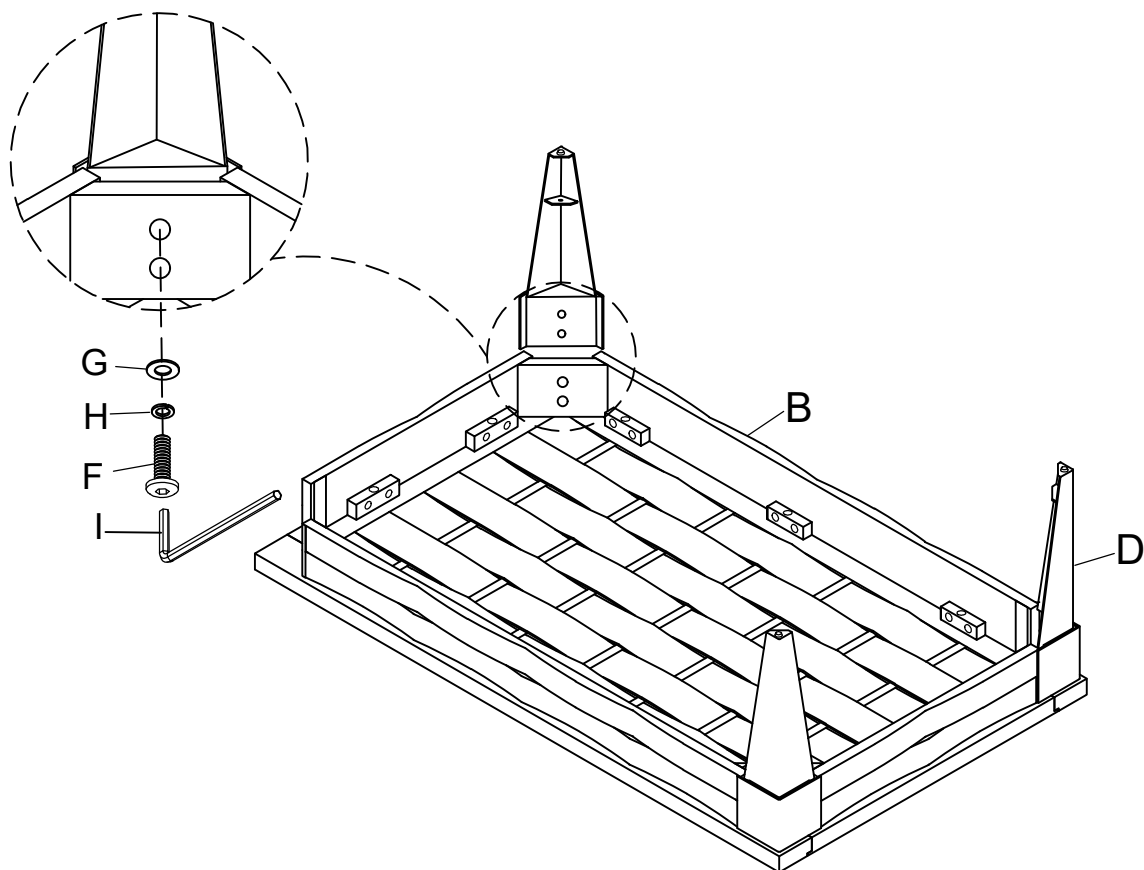


- 2** First, assemble Bottom Panel (C) to Leg (D), using Bolt (E), Lock Washer (H) and Flat Washer (G) by Allen Key (I). Second, assemble the last Leg (D) to Top Frame (B) & Bottom Panel (C), using Bolt (F), Bolt (E), Lock Washer (H) and Flat Washer (G) by Allen Key (I) as below shown.

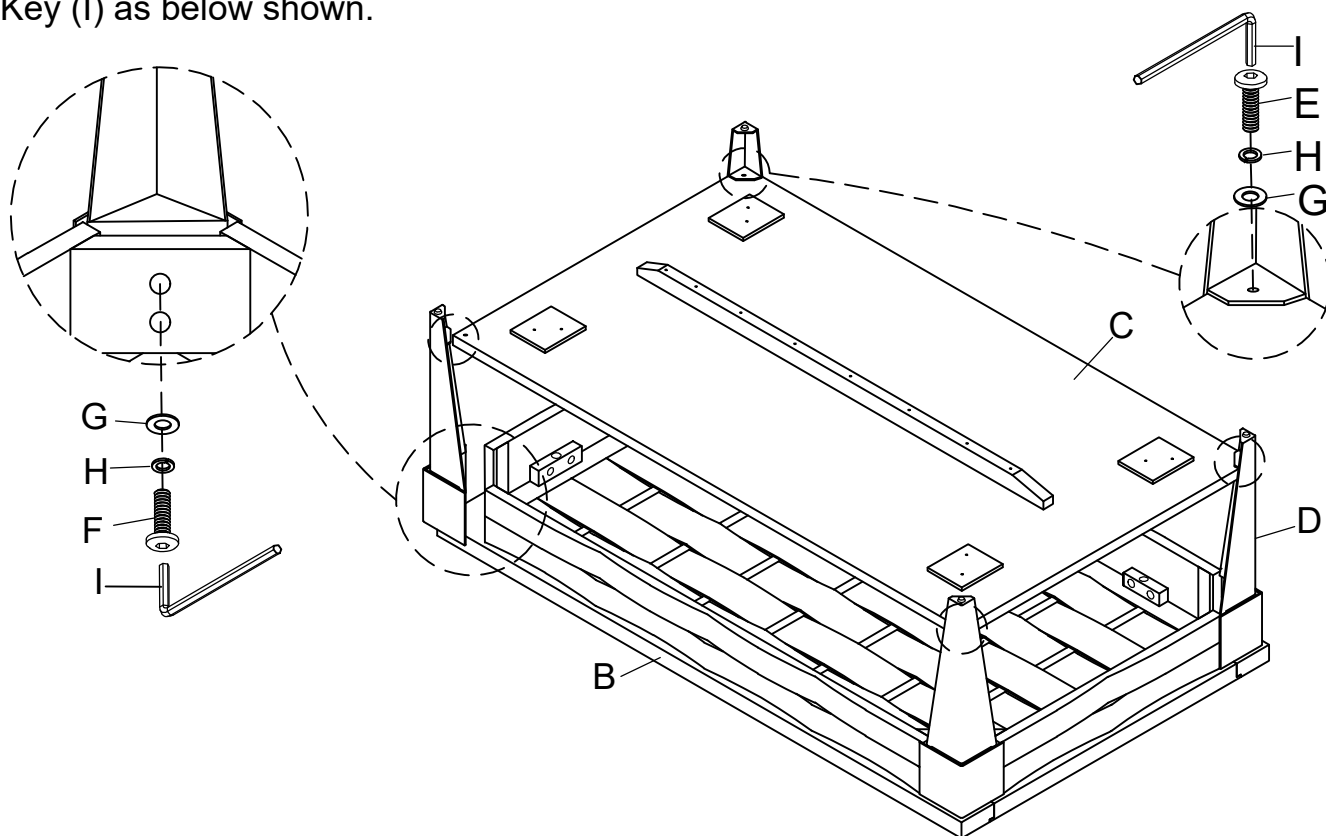

- 3** Assemble Caster (J) to Bottom Panel (C), using Screw (K) by Screwdriver (L) as below shown.

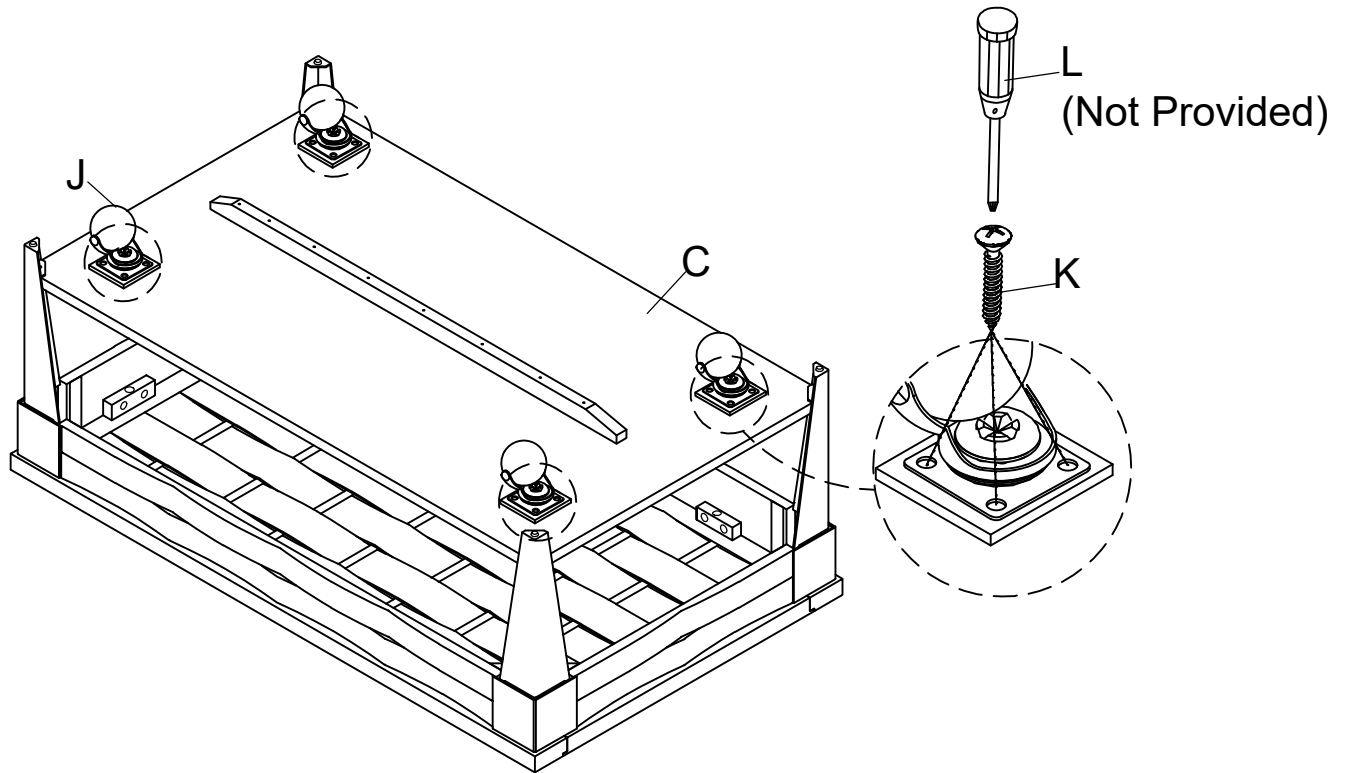

- 4** Put Glass (A) onto Top Frame (B) as below shown.

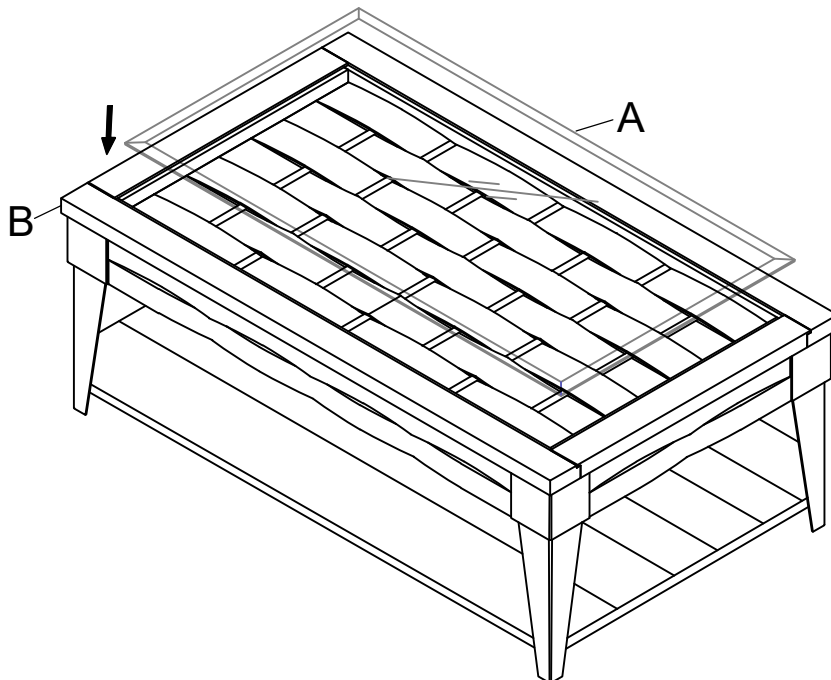

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.