

## SMART APP SINEWAVE UPS SERIES

PR750RT2UC / PR1000RT2UC / PR1500RT2UC


PR2000RT2UC / PR2200RT2UC / PR3000RT2UC

PR750RTXL2UC / PR1000RTXL2UC / PR1500RTXL2UC

PR2000RTXL2UC / PR2200RTXL2UC / PR2200RTXL2UACN

PR3000RTXL2UC / PR3000RTXL2UCN

## USER MANUAL

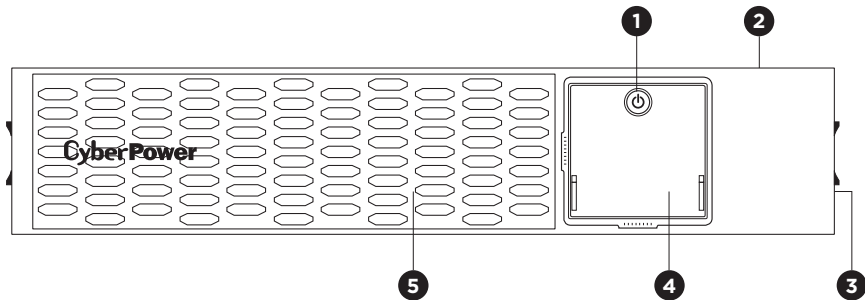

### FEATURES - FRONT PANEL

1. Power Switch
2. Toolless Battery Access Door (behind faceplate)
3. Front Panel Access Tabs (behind faceplate)
4. LCD Module
5. Faceplate

---

## PRODUCT REGISTRATION

Thank you for purchasing a CyberPower product. Please take a few minutes to register your product at [www.cyberpowersystems.com/registration](http://www.cyberpowersystems.com/registration). Registration certifies your product's warranty, confirms your ownership in the event of a product loss or theft and entitles you to free technical support. Register your product now to receive the benefits of CyberPower ownership.

---

## IMPORTANT SAFETY WARNINGS (SAVE THESE INSTRUCTIONS)

This manual contains important instructions that should be followed during installation and maintenance of the UPS and batteries. Please read and follow all instructions thoroughly before and during the installation and operation of the product.

**CAUTION!** The UPS must be connected to a grounded AC power outlet with fuse or circuit breaker protection. DO NOT plug the UPS into an outlet that is not grounded. If you need to de-energize this equipment, turn off and unplug the UPS.

**CAUTION!** The battery can energize hazardous live parts inside even when the AC input power is disconnected.

**CAUTION!** To prevent the risk of fire or electric shock, install in a temperature and humidity controlled indoor area, free of conductive contaminants. Please see specifications for acceptable temperature and humidity range.

**CAUTION!** For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

**CAUTION!** To reduce the risk of electric shock, do not remove the cover, except to service the battery. There are no serviceable parts inside, except for the battery.

**CAUTION!** To avoid electrical shock, turn off the unit and unplug it from the AC power source before servicing the battery or installing a computer component.

**CAUTION!** When installing the equipment, ensure that the sum of the leakage current of the UPS and the connected equipment does not exceed 3.5mA.

**CAUTION!** Do not unplug the unit from AC Power during operation, as this will invalidate the protective ground insulation.

**CAUTION!** To reduce the risk of fire, connect only to a circuit provided with 20 amperes maximum branch circuit overcurrent protection in accordance with the National Electric Code, ANSI/NFPA 70. (PR750RT2UC/ PR1000RT2UC/PR1500RT2UC/ PR2000RT2UC/ PR750RTXL2UC/ PR1000RTXL2UC/ PR1500RTXL2UC/ PR2000RTXL2UC)

**CAUTION!** To reduce the risk of fire, connect only to a circuit provided with 30 amperes maximum branch circuit overcurrent protection in accordance with the National Electric Code, ANSI/NFPA 70. (PR2200RT2UC/PR3000RT2UC/ PR2200RTXL2UC/ PR2200RTXL2UACN/ PR3000RTXL2UC/ PR3000RTXL2UCN)

**CAUTION! DO NOT USE FOR MEDICAL OR LIFE SUPPORT EQUIPMENT!** DO NOT use in any circumstance that would affect operation or safety of any life support equipment, with any medical applications, or patient care.

**CAUTION! DO NOT USE WITH OR NEAR AQUARIUMS!** To reduce the risk of fire, do not use with or near aquariums. Condensation from the aquarium can come in contact with metal electrical contacts and cause the machine to short out.

**CAUTION! DO NOT INSTALL THE UPS WHERE IT WOULD BE EXPOSED TO DIRECT SUNLIGHT OR NEAR A STRONG HEAT SOURCE!**

**CAUTION! DO NOT BLOCK OFF VENTILATION OPENINGS AROUND THE HOUSING!**


**CAUTION! DO NOT USE THE UPS ON ANY TRANSPORTATION!** To reduce the risk of fire or electric shock, do not use the unit on any transportation such as airplanes or ships. The effect of shock or vibration caused during transit and the damp environment can cause the unit to short out.

**CAUTION!** Dispose of or recycle the UPS after the end of its life in accordance with local regulations.


**CAUTION!** EPO function is provided in UPS. EPO remote switch which is Push-Back button is installed computer room outside by a phone line, and not connected any other equipment.

# BASIC CONFIGURATION


PR750RT2UC / PR1000RT2UC / PR1500RT2UC

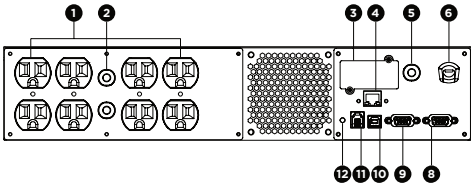


PR2000RT2UC

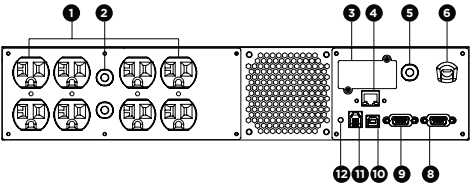


PR2200RT2UC

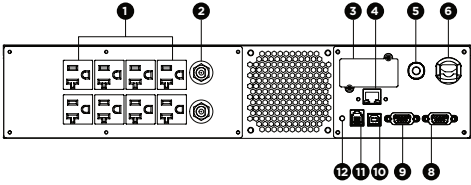


PR3000RT2UC

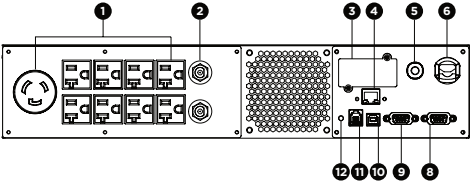

PR750RTXL2UC / PR1000RTXL2UC

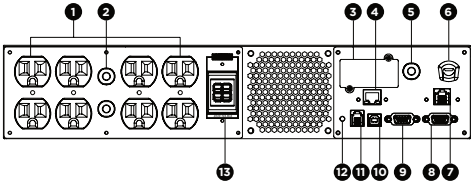

PR1500RTXL2UC

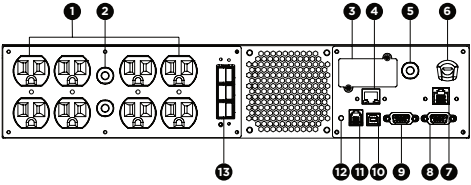


## Features - Back Panel


- |  |   |
|--|---|
| <ol style="list-style-type: none"><li>1. Battery Backed and Surge Protected Outlet</li><li>2. Output Circuit Breaker</li><li>3. SNMP/HTTP Network Slot</li><li>4. Cloud Monitoring (Ethernet Port)</li><li>5. Input Circuit Breaker</li><li>6. AC Inlet</li><li>7. BM Port - Connection port for built-in battery management module on extended battery module</li></ol> | <ol style="list-style-type: none"><li>8. Dry Contact</li><li>9. Serial Port</li><li>10. USB Port</li><li>11. EPO/ROO Port</li><li>12. TVSS Screw</li><li>13. Extended Battery Module Connector Socket</li></ol> |
|--|---|

# BASIC CONFIGURATION - CONTINUED


PR2000RTLXL2UC

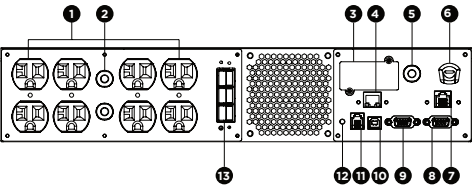

PR2200RTLXL2UC/PR2200RTLXL2UACN

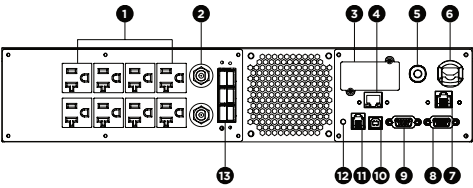

PR3000RTLXL2UC/PR3000RTLXL2UCN

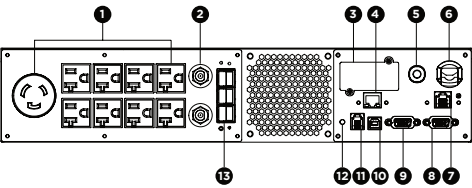

## INSTALLING YOUR UPS SYSTEM

### UNPACKING

Inspect the UPS upon receipt.  
The box should contain the following:

- (a) UPS unit
- (b) Faceplate
- (c) Rail Kit CP2RAIL02, includes:
  - 14 x M5 Pan Head Screws
  - 8 x Plastic WashersNote: Available for PR3000RTLXL2UC/  
PR1500RTLXL2UC/PR2000RTLXL2UC/  
PR2200RTLXL2UC/ PR2200RTLXL2UACN/  
PR3000RTLXL2UC/ PR3000RTLXL2UCN.
- (d) Management cables
  - 1 x USB Cable, 1 x EPO Cable
- (e) User's Manual
- (f) Mechanical Accessory, includes:
  - 2 x Rack-Mount Brackets CPEAR04
  - 2 x Rack-Mount Handles
  - 1 x Tower Baseplate
  - 12 x Dust Covers
  - 4 x M5 Truss Head Screws
  - 8 x M5 Flat Head Screws
  - 4 x M4 Flat Head Screws
  - 4 x Rubber Feet
  - 4 x M4 Round Head Screws

### OVERVIEW

The CyberPower Smart App Sinewave Uninterruptible Power Supply PR750RT2UC/ PR1000RT2UC/ PR1500RT2UC/ PR2000RT2UC/ PR2200RT2UC/ PR3000RT2UC/ PR750RTLXL2UC/ PR1000RTLXL2UC/ PR1500RTLXL2UC/ PR2000RTLXL2UC/ PR2200RTLXL2UC/ PR2200RTLXL2UACN/ PR3000RTLXL2UC/ PR3000RTLXL2UCN features 2430 Joules of surge protection, provides battery backup during power outages and is Active PFC compatible for safeguarding mission-critical servers, telecom equipment, VoIP and internetworking hardware that require seamless sine wave power. Its full Automatic Voltage Regulation (AVR) boost/buck technology delivers a consistent and clean AC power, protecting connected equipment and preventing costly business interruptions. This UPS is GreenPower UPS™ Bypass circuitry patented to save on energy costs by reducing energy consumption and heat buildup.


-continued

# INSTALLING YOUR UPS SYSTEM

The UPS unit incorporates microprocessor-based full digital control and includes PowerPanel® Business software providing the user unsurpassed flexibility and control. An optional SNMP/HTTP Remote Management adapter (RMCARD) supports remote management and control of the machine through a standard web browser.

## AUTOMATIC VOLTAGE REGULATOR

The incoming utility power may be damaging to important data and hardware, but with Automatic Voltage Regulation, the computer will not experience damaging voltage levels. The AVR automatically increases low or decreases high voltage to a safe and consistent output voltage.

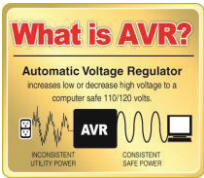

## DETERMINE THE POWER REQUIREMENTS OF YOUR EQUIPMENT

1. Ensure that the equipment plugged into the UPS does not exceed the UPS unit's rated capacity. If the rated capacities of the unit are exceeded, an overload condition may occur and cause the UPS unit to shut down or the circuit breaker to trip.
2. There are many factors that can affect the amount of power that your electronic equipment will require. For optimal system performance keep the load below 80% of the unit's rated capacity.

## INSTALLATION

The product is designed for tower installation and rack installation for 2-post rack and 4-post rack. Read and follow the procedures thoroughly before and during your installation of the product.

The installation videos are available online. Scan the QR code below for detailed information.


### Preparation

**CAUTION!** It is strongly recommended to have an additional person assist this installation process if the product is heavy.

**CAUTION!** It is strongly recommended that the 2-post rack be bolted to the floor prior to the installation of the product.


1. Remove all equipment connected to the product.
2. Make sure the product is disconnected from AC power source.
3. Remove internal batteries to reduce weight of the unit before the installation. Refer to BATTERY REPLACEMENT section for instructions.

# SYSTEM FUNCTION BLOCK DIAGRAM

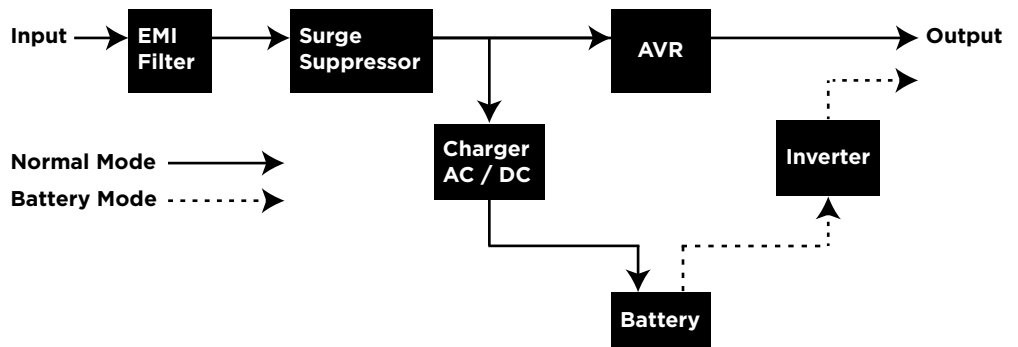


## INSTALLING YOUR UPS SYSTEM - CONTINUED

### Rack Installation for 2-Post Rack

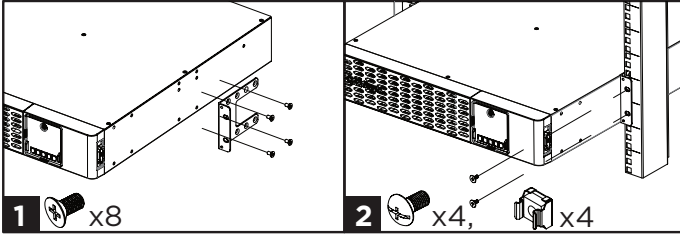

1. Attach the brackets with provided M5 flat head screws.
2. Affix the product to the rack with suitable M5/M6 screws and cage nuts. (M5 trust head screws are provided with the product in the mechanical accessory box.)


### Rack Installation for 4-Post Rack

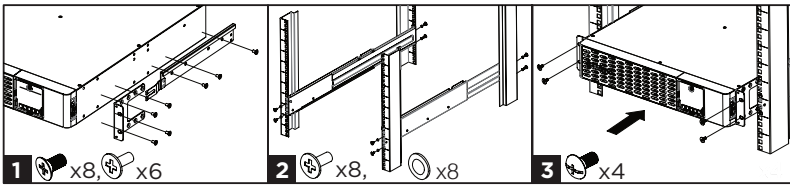

1. Use the provided M5 flat head screws to attach the brackets and provided M5 pan head screws for hanging brackets.
2. Screw the hanging rails to the rack with provided M5 pan head screws and plastic washers.
3. Lift the product upon the hanging rails and slide the unit into the rack. Affix the product to the rack with provided M5 truss head screws. If handles are needed, affix them to the brackets with M4 flat head screws.

Note: The Rail Kit is included for selected models. See UNPACKING section. For other models, it is also available for purchase. Part number CP2RAIL02.

### Tower Installation

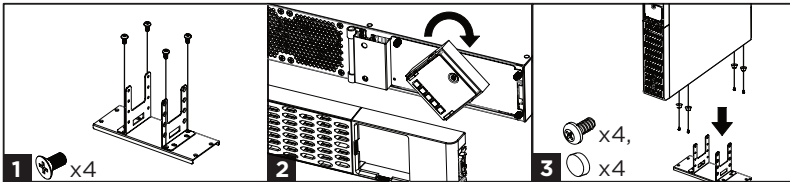

1. Attach the brackets to the baseplate with the provided M4 flat head screws.
2. Remove the faceplate and rotate the LCD module, then re-install the faceplate.
3. Screw the rubber feet with provided M4 round head screws and then put the UPS onto the assembled tower stand. You can also put the dust covers in the screw holes on the top side of the UPS to prevent dust from falling into the unit.

---

## BASIC OPERATION

### Normal Use

1. Properly install the UPS.
2. Connect equipment to the outlets on the rear panel of UPS.
3. Plug the UPS into a 2-pole, 3-wire grounded receptacle/wall outlet.
4. Press the power switch on LCD module once. The display screen will light up and show "UPS On/Off" on the first line. Use the Up/Down button to select "On" or "Delay On" and then press the Enter button to turn on the UPS. The display screen will show CyberPower in the first line and the UPS model in the second line. Then the Online or On Battery Indicator on the LCD module lights up, indicating the UPS is operating from utility or battery.
5. To turn off the UPS, press the power switch on LCD module once. The display screen will light up and show "UPS On/Off" on the first line. Use the Up/Down button to select "Off" or "Delay Off" and then press the Enter button to turn off the UPS. The display screen will show "Goodbye" and all the indicators will be off.

**IMPORTANT! For first time usage, plug your UPS into an AC outlet to disable cold start protection. Otherwise, your UPS will not turn on.**

**IMPORTANT! Do not use an adapter, line conditioner, or other surge protection devices between the wall outlet and the UPS. Use of such a device may impede proper operation of the UPS.**

Be aware of the following statements:

- A. Your UPS may be used immediately upon receipt. However, charging the battery for at least 12 hours is recommended to ensure the battery reaches its maximum charge. Charge loss may occur during shipping and storage. To recharge the battery, simply leave the unit plugged into an AC outlet. The unit will charge in either the on or off state.
- B. To maintain optimal battery charge, leave the UPS plugged into an AC outlet at all times.
- C. DO NOT plug a laser printer, copier, space heater, vacuum, paper shredder, pumps or other large electrical device to the UPS. The power demands of these devices will possibly overload and damage your UPS.
- D. Always plug the UPS into a 2-pole, 3-wire grounded receptacle/ wall outlet. Make sure the wall branch outlet is protected by a fuse or circuit breaker and does not service equipment with large electrical demands, e.g. air conditioner, refrigerator, copier, etc. Avoid using extension cords.
- E. The UPS may be used with maximum 10 extended battery modules. (PR750RTXL2UC/ PR1000RTXL2UC/ PR1500RTXL2UC/ PR2000RTXL2UC/ PR2200RTXL2UC/ PR2200RTXL2UACN/ PR3000RTXL2UC/ PR3000RTXL2UCN)
- F. To prevent the risk of electric shock, follow the steps to ground the UPS:
  - (a) Connect a ground wire to the TVSS screw on the rear panel of UPS.
  - (b) Connect another side of the ground wire to the ground.
- G. If your UPS freezes, you can do a hard reboot as below steps.
  - (a) Press and hold the power switch on the LCD module for around 15-20 seconds; the UPS will be forcibly shut down. All indicators, display screen, and output will be off immediately.
  - (b) After an abnormal shutdown, the UPS restarts itself when it is powered by utility. If the UPS does not restart automatically, slightly press the power switch on LCD module once to wake up the UPS to perform the auto-restart function.

When there is no utility, you need to follow below procedures to turn on the UPS. Slightly

---

## BASIC OPERATION - CONTINUED

press the power switch on LCD module once. The display screen will light up and show “UPS On/Off” on the first line. Use the Up/Down button to select “On” or “Delay On” and then press the Enter button to turn on the UPS. The display screen will show CyberPower in the first line and the UPS model in the second line. Then the On Battery Indicator on the LCD module lights up, indicating the UPS is operating from battery.

Note: When the UPS is off, pressing and holding the power switch for around 15-20 seconds cannot turn on the UPS even though the display screen will light up for a few seconds. Follow above steps to correctly turn on the product.

---

## CLEANING AND MAINTENANCE

**CAUTION!** To reduce the risk of electric shock, do not remove the cover except to service the battery. There are no user-serviceable parts inside except for the battery. For battery replacement, please refer to BATTERY REPLACEMENT section.

**CAUTION!** Turn off the unit and unplug it from the AC power source before cleaning.

**CAUTION!** Never immerse the unit in water or other liquids. Only use a soft, slightly damp cloth to wipe the surface of the unit. Do not use a spray directly to clean or disinfect the unit.

To store the product for an extended period, cover it and store with the battery fully charged. While in storage, recharge the battery every three months to ensure battery life.

---

## OPERATION AND STORAGE ENVIRONMENT

To prevent risk of fire or electric shock, install or place the unit in a temperature and humidity controlled indoor area, free of conductive contaminants.

|           |                   |                               |
|-----------|-------------------|-------------------------------|
| Operation | Temperature       | 32°F - 104°F / 0°C - 40°C     |
|           | Relative Humidity | 0% - 95% Non-condensing       |
|           | Elevation         | 0 - 9,843 ft. / 0 - 3,000 m   |
| Storage   | Temperature       | 5°F - 113°F / -15°C - 45°C    |
|           | Relative Humidity | 0% - 95% Non-condensing       |
|           | Elevation         | 0 - 49,213 ft. / 0 - 15,000 m |



# NETWORK OPERATION

## Local Monitoring

Connect either the USB cable or Serial cable to the corresponding port on the UPS and on the computer with PowerPanel Business software installed. PowerPanel Business software is available on our website. Please go to [www.cyberpowersystems.com/products/software/power-panel-business](http://www.cyberpowersystems.com/products/software/power-panel-business) for the free download. Note: USB and Serial port cannot be used simultaneously. Serial port will be disabled if the USB port is used.


## Remote Monitoring

This product is equipped with a SNMP/HTTP network slot. If you would like to control the UPS from a remote location, especially under a private network, a CyberPower Remote Management Card (RMCARD) is required. For more information, visit [www.cyberpowersystems.com](http://www.cyberpowersystems.com).

## Cloud Monitoring


This product features an Ethernet port for Cloud Connection, which makes it easy to monitor CyberPower UPS systems from anywhere. Follow below steps to get your UPS on Cloud.

1. Hardware installation: Connect the Cloud Monitoring (Ethernet Port) on the UPS rear panel to a wall jack or network switch using a suitable Ethernet cable.

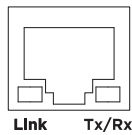

| LED Indicators |             | Conditions   |
|----------------|-------------|--|
| Link           | Off         | The UPS is not connected to the network              |
|                | On (Yellow) | The UPS is connected to the network.                 |
| Tx / Rx        | Off         | The Cloud Monitoring (Ethernet Port) is not powered. |
|                | On (Green)  | The Cloud Monitoring (Ethernet Port) is powered.     |
|                | Flashing    | Receiving or transmitting data packet.               |

2. Application installation: Install PowerPanel Cloud App on your smartphone and then launch the application. PowerPanel Cloud App is available for download on the Apple App Store or Google Play.

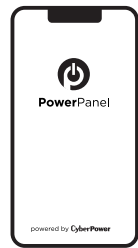


iOS



Android




3. Sign up and log in.

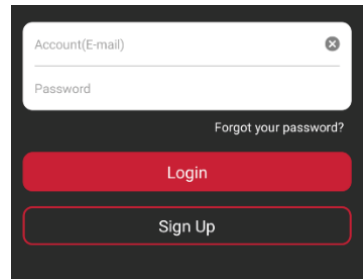


# NETWORK OPERATION - CONTINUED

- 4. Add a device in the PowerPanel Cloud App.
  - (a) Click “+” in the upper right corner of the homepage.

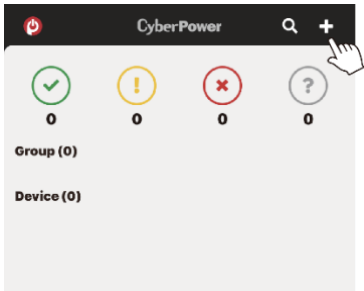

- (b) Locate the “Add Device by QR Code” to add your Cloud UPS.
  - (c) Scan the QR Code on the top side of the UPS. If the QR Code scan was successful, click “Add” and name the device you are monitoring.
  - (d) After the setup is completed, you will see your device on the homepage.

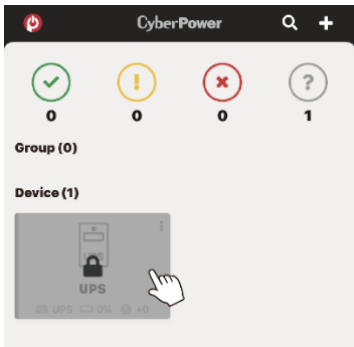

- (e) Wait till the UPS is successfully configured.




- 5. Start monitoring your UPS!

In addition to the Mobile App, you can access the PowerPanel Cloud account via a web browser: <https://powerpanel.cyberpower.com>. For more information, please refer to the PowerPanel Cloud User’s Manual.

# LCD OPERATION GUIDE

## Display Interface

- 1. Power Switch/Power On Indicator
- 2. Online Indicator
- 3. Fault/Warning Indicator
- 4. On Battery Indicator
- 5. Battery Fault Indicator
- 6. Display Screen
- 7. Menu Button
- 8. Esc Button
- 9. Up Button
- 10. Down Button
- 11. Enter Button

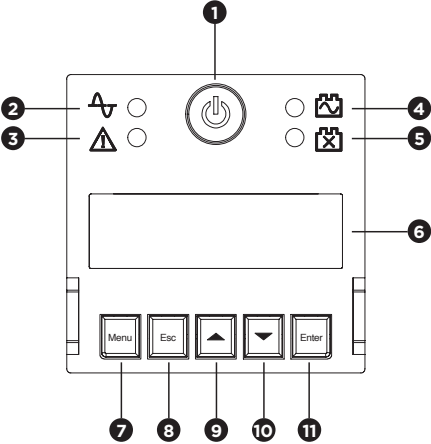

## Basic Operation

Press Up/Down Button to scroll through the UPS status. Press Esc button to go back to top.

| Menu   | Item                       |                     |                 |
|--------|----------------------------|---------------------|-----------------|
| Status | Operation Mode             | Estimated Runtime   | NCL Status      |
|        | Input Voltage Information  | Battery Information | UPS Temperature |
|        | Output Voltage Information | Load Information    | Date and Time   |

## LCD Setting Guide

Press Menu Button to enter Setup Menu and use Up/Down Button to scroll through menus. Press Enter Button to go into the selected menu and use the Up/Down Button and Enter Button to select the setting item and to complete the setting. Esc Button is pressed to exit the submenu and go back to previous page.

| Menu           | Item                       |                                    |  |
|----------------|----------------------------|------------------------------------|--|
| Basic Setup    | Utility Quality            | Sensitivity                        | Extended Battery Module Quantity (Select models) |
| Ambient Setup  | ECO Mode<br>LED Brightness | LCD Hibernation<br>Cycling Display | Audible Alarm                                    |
| Outlet Control | UPS Configuration          | NCL Configuration                  |  |
| Test           | Self Test                  | Alarm Test                         |  |
| Logs           | Event 1-10                 |                                    |  |

LCD OPERATION GUIDE - CONTINUED

| Menu           | Item                     |                      |                                      |
|----------------|--------------------------|----------------------|--------------------------------------|
| About          | UPS Model Name           | UPS Firmware Version | BM Status<br>UPS Battery Information |
|                | UPS Serial Number        | IP Address           |                                      |
|                | Last Battery Change Date | MAC ID               |                                      |
|                | Next Battery Change Date | Service Port number  |                                      |
| Advanced Setup | Output Voltage           | Schedule Test        | Subnet Mask                          |
|                | Minimum Output Voltage   | Date and Time        | Gateway                              |
|                | Maximum Output Voltage   | Power Meter Rest     | Wiring Fault                         |
|                | Low Battery Threshold    | IP Access            | Firmware Update*                     |
|                | Battery Change Date      | IP Address           | Back to Default                      |
|                |                          |                      | * Only displayed in standby mode     |

Menu / Basic Setup

In order to better supply power to the connected equipment, it is recommended to check settings in this menu before you start using your UPS.

| Item   | Default | Option                 | Description   |
|--|---------|------------------------|---|
| Utility Quality                                  | Normal  | Good<br>Normal<br>Poor | Select the voltage quality of the input utility power.<br><br>If Good is selected, the UPS will be more sensitive to power quality and go to battery mode more often to supply the cleanest power to connected devices.<br><br>If Poor is selected, the UPS will tolerate more power fluctuations and go to battery mode less often.                          |
|  |         | Customized             | “Customized” shows up when Maximum/Minimum Output Voltage has been adjusted in Advanced Setup Menu or through software.   |
| Sensitivity                                      | Medium  | High<br>Medium<br>Low  | Select the sensitivity level to power events for connected equipment.<br><br>If the connected equipment is highly sensitive to power events, select High; the UPS will go to battery mode more often to provide the cleanest power.<br><br>If the connected equipment can tolerate more power events, select Low; the UPS will go to battery mode less often. |
| Extended Battery Module Quantity (Select models) | 0       | 0-10<br>Auto-sensing   | If Auto-sensing is selected, the UPS will change the numbers automatically when the BM cable, provided with the Extended Battery Module, is correctly connected.  |

# LCD OPERATION GUIDE - CONTINUED

## Menu / Ambient Setup

The settings in this menu affect the UPS display, alarm, and noise. Customize your UPS to meet your needs.

| Item            | Default          | Option  | Description  |
|-----------------|------------------|---|--|
| ECO Mode        | Active           | Active<br>Inactive  | When Active is selected, the UPS will change related setup functions in this menu automatically to work under low energy consumption.  |
|                 |                  | Active - Customized<br>Inactive -Customized                       | You can also set the functions in this menu independently and then go back to Eco Mode to have a check. If Active is displayed, the UPS works under low energy consumption.  |
| LED Brightness  | Dim              | Bright<br>Normal<br>Dim<br>Only Power On                          | The LED brightness can be set in accordance with the ambient lights or different usage scenario.<br><br>If Only Power On is selected, all LED indicators will be off except Power On Indicator.  |
| LCD Hibernation | After one minute | Never<br>After 1 minute<br>After 5 minutes<br>After 10 minutes    | After this amount of time with no activity, the display screen will shut off to save energy.   |
| Cycling Display | Never            | Never<br>After 10 seconds<br>After 20 seconds<br>After 30 seconds | After this amount of time with no activity, UPS will start cycling the status information on display screen.   |
| Audible Alarm   | Quiet            | Normal<br>Quiet<br>Mute on Battery<br>Off                         | Normal contains fault and warning alarms and all reminding alarms of battery operation including switching to battery power, working under battery mode, reaching Low Battery Threshold, soon running out of battery, and Low Battery Shutdown.<br><br>If Quiet is selected, the UPS will emit fault and warning alarms and reminding alarm indicating the UPS reaches Low Battery Threshold.<br><br>If Mute On Battery is selected, only fault and warning alarm will sound.<br><br>All alarms are disabled if Off is selected. |

# LCD OPERATION GUIDE - CONTINUED

## Menu / Outlet Control

Use this menu to configure UPS outlet performance. Outlets are divided into Critical (CL) and Non-Critical (NCL) outlets. Connect the mission critical devices into Critical outlets and nonessential equipment into NCL outlets. If equipment needs to be shut down or reboot in a specific order, plug the equipment into separate outlet groups.

Enter the submenu “Config UPS” to configure the total output of the UPS, including CL and NCL outlets. Enter “Config NCL” if you want to have additional settings for NCL outlets, for example, cut off the power provision to the nonessential equipment during a blackout to reserve runtime for mission critical devices.

Please note that settings configured in the “Config UPS” submenu take precedence over those in “Config NCL” for the same function. For instance, if “Uptime on Battery” is set to “Enable: 300 seconds” in the “Config UPS” submenu and “Enable: 600 seconds” in the “Config NCL” submenu, the UPS will cut off all power output, including both CL and NCL outlets, after running on battery mode for 300 seconds.

## Submenu / Config UPS

| Item                      | Default    | Option                            | Description   |
|---------------------------|------------|-----------------------------------|---|
| Delay Turn On             | 4 seconds  | 0-600 seconds                     | The amount of time that the outlets will wait before actual startup.  |
| Delay Turn Off            | 4 seconds  | 0-600 seconds                     | The amount of time that the outlets will wait before actual shutdown.   |
| Reboot Duration           | 12 seconds | 4-300 seconds                     | The amount of time that the outlets will remain off before the UPS restarts itself.   |
| Minimum Restored Capacity | 0%         | 0-100%                            | It is the criteria for UPS to perform auto-restart as utility is restored. If battery capacity is higher than this setting, the auto-restart will be performed; otherwise, the UPS will keep charging the battery until battery capacity reaches that level.                                |
| Uptime on Battery         | Disable    | Enable: 5-1800 seconds<br>Disable | Set the maximum runtime on battery mode. The UPS will shut down after the amount of time spent in battery mode has reached this setting. Make sure the estimated runtime is larger than this setting; otherwise, the UPS will still stop supplying power when it is running out of battery. |
| Reserved Runtime          | Disable    | Enable: 0-1800 seconds<br>Disable | When the UPS is in battery mode, it will cut off output power when the remaining runtime reaches the level.   |

# LCD OPERATION GUIDE - CONTINUED

## Submenu / Config NCL

| Item                      | Default    | Option   | Description  |
|---------------------------|------------|--|--|
| NCL Switch                | On         | On<br>Delay On<br>Off<br>Delay Off<br>Reboot<br>Delay Reboot | This is the main switch for NCL outlet groups.   |
| Delay Turn On             | 4 seconds  | 0-600 seconds  | The amount of time that the NCL outlets will wait before actual startup. This setting only applies to "NCL Switch."  |
| Delay Turn Off            | 4 seconds  | 0-600 seconds  | The amount of time that the NCL outlets will remain off before the UPS restarts the NCL output. This setting only applies to "NCL Switch."   |
| Reboot Duration           | 12 seconds | 4-300 seconds  | The amount of time that the NCL outlets will remain off before the UPS restarts the NCL output. This setting only applies to "NCL Switch."   |
| Minimum Restored Capacity | 0%         | 0-100%   | It is the criteria for UPS to turn on the off NCL outlets as utility is restored. If battery capacity is higher than this setting, the NCL outlets will be turned on.  |
| Uptime on Battery         | Disable    | Enable: 5-1800 seconds<br>Disable                            | Set the maximum runtime on battery mode for NCL outlets. The UPS will cut off NCL output after the amount of time spent in battery mode has reached this setting. Make sure the estimated runtime is larger than this setting; otherwise, the UPS will still stop supplying power when it is running out of battery. |
| Reserved Runtime          | Disable    | Enable: 5-1800 seconds<br>Disable                            | When the UPS is in battery mode, it will cut off NCL output power when the remaining runtime reaches the level.  |
| Off on Overload           | Disable    | Enable<br>Disable  | NCL outlets will be turned off when the UPS is overloaded in battery mode if the item is enabled. NCL outlets will turn on automatically as utility is restored.   |
| Off on Battery Capacity   | 0%         | 0-100%   | In battery mode, NCL outlets will be turned off when the battery capacity reaches the setting value to save energy for equipment connected to CL outlets. NCL outlets will turn on automatically as utility is restored.   |
| Power Failure Delay Off   | Never Off  | 0-7200 seconds<br>Never Off                                  | The amount of time that the NCL outlets will provide power in battery mode if power failure event has been triggered. After the amount of time, the NCL outlets will be turned off. NCL outlets will turn on automatically as utility is restored.   |
| Battery to Line Delay On  | 0 seconds  | 0-7200 seconds   | The amount of time that the off NCL outlets will wait to be turned on while switching from battery mode to line mode.  |

# LCD OPERATION GUIDE - CONTINUED

## Menu / Test

This menu provides basic tests for users to check the current performance of the UPS.

| Item       | Default    | Option                        | Description  |
|------------|------------|-------------------------------|--|
| Self Test  | No         | Yes<br>No                     | Select Yes to order the UPS to quickly test the backup function by entering to battery mode, checking if it works. The test takes around 10 seconds.                   |
| Alarm Test | Short Test | Short Test<br>Continuous Test | This item tests the alarm's audible warning and LED indicators' functionalities. Short test lasts 5 seconds. In continuous testing, press any button to stop the test. |

## Menu / Logs

All kinds of events are recorded and the UPS will show the last 10 events in this menu. Events are categorized into four sorts and shown in a capital letter in a single event log on the display screen: (F) Fault, (W) Warning, (S) Shutdown, and no letter for a normal transfer event.

## Menu / Advanced Setup

This menu contains more adjustable and detailed items for UPS advanced usage. Read the item descriptions below thoroughly before you change the settings.

| Item                   | Default  | Option   | Description  |
|------------------------|--|--|--|
| Output Voltage         | 120V<br><small>Select models and regions</small>     | 100V<br>110V<br>120V<br>127V   | Select the AC output voltage on battery mode.  |
| Minimum Output Voltage | 100V: 89V<br>110V: 97V<br>120V: 102V<br>127V: 111V   | 100V: 86-92V<br>110V: 97-106V<br>120V: 97-106V<br>127V: 108-114V     | Set the value lower if the utility voltage is usually low to avoid unnecessary battery usage.<br><br>Make sure the connected equipment can work under the voltage condition.   |
| Maximum Output Voltage | 100V: 111V<br>110V: 128V<br>120V: 131V<br>127V: 143V | 100V: 108-114V<br>110V: 127-136V<br>120V: 127-136V<br>127V: 140-146V | Set the value higher if the utility voltage is usually high to avoid unnecessary battery usage.<br><br>Make sure the connected equipment can work under the voltage condition. |
| Low Battery Threshold  | 300 seconds  | 0-1800 seconds   | The UPS will emit an audible alarm indicating that the remaining runtime is reaching its threshold.  |
|                        | 35%  | 20-65%   | The UPS will emit an audible alarm indicating that the remaining battery capacity is reaching its threshold.   |
| Battery Change Date    | ---/----   | Month/Year   | Optional setup information for users to record the installation date of battery pack. Reset the data when replacing new battery pack.  |



LCD OPERATION GUIDE - CONTINUED

| Item   | Default             | Option   | Description  |
|--|---------------------|--|--|
| Schedule Test - On Startup                                       | No                  | Yes<br>No  | If Yes is selected, the UPS will perform a Self Test every time on startup.  |
| Schedule Test - Frequency  | Never               | Never<br>Every 1 week<br>Every 2 weeks<br>Every 3 weeks<br>Every 4 weeks | Select the amount of time that the UPS will perform Self Test periodically after startup.  |
| Date and Time  | ----/--/--<br>--:-- | Year/Month/Day<br>Hour:Minute  | Set the Date and Time for use in data/event logs.  |
| Power Meter Reset  | No                  | Yes<br>No  | Select Yes to reset the value of Load Energy in Status Menu.   |
| IP Access  | DHCP                | DHCP<br>Manual IP Setup  | Select the way to access the IP/Subnet Mask/ Gateway. This shows "No Web Device" when no RMCARD is installed.  |
| IP Address   | Auto-sensing        | Auto-sensing<br>Manual Key-in  | Change the IP Access setting to manual IP Setup and then this item can be adjusted manually. This shows "No Web Device" when no RMCARD is installed. |
| Subnet Mask  | Auto-sensing        | Auto-sensing<br>Manual Key-in  | Change the IP Access setting to manual IP Setup and then this item can be adjusted manually. This shows "No Web Device" when no RMCARD is installed. |
| Gateway  | Auto-sensing        | Auto-sensing<br>Manual Key-in  | Change the IP Access setting to manual IP Setup and then this item can be adjusted manually. This shows "No Web Device" when no RMCARD is installed. |
| Wiring Fault   | Disable             | Enable<br>Disable  | Select Enable to perform auto checking of utility wiring and ground.   |
| Firmware Update<br><small>Only displayed in Standby Mode</small> | No                  | Yes<br>No  | Select Yes to update the firmware of UPS in Standby Mode.  |
| Back to Default  | No                  | Yes<br>No  | Select Yes to restore the UPS factory default settings.  |













## LCD OPERATION GUIDE - CONTINUED

### Fault Warning Display and Alarm

The following table shows the fault and warning indications of the UPS. The warning message cycles when the UPS is still turned on. Refer to the error code below and take necessary measures.

After the UPS shuts down or is turned off manually, the error message could disappear but the event records can be found in the Log Menu. To safely check the logs, press the power switch once and then press the Esc button to enter another operation mode - Standby Mode. Press Menu button and go to Log Menu to do a check.

Note: When the UPS is in Standby Mode, it does not have output. All indicators will not illuminate and only the display screen lights up when the UPS is operated. To leave the Standby Mode, refer to BASIC OPERATION section to turn on the UPS. Or you can disconnect the UPS from the AC power source, wait for a minute, and then UPS will completely become off.

| Display Screen Line 1 | Display Screen Line 2   | LED Indicator  | Alarm  |
|-----------------------|---|--|--|
| UPS Fault!            | E01-Overcharge: Contact CyberPower for repair.                                  |                 | Beeps once every 2 seconds*                            |
| UPS Fault!            | E03-No Charge: Contact CyberPower for repair.                                   |                 |  |
| UPS Off!              | E20-Output Short: Connected equipment may have problems, remove them and check. |                 | Beeps for 3 seconds                                    |
| UPS Off!              | E21-Output Short: Connected equipment may have problems, remove them and check. |                 | Beeps for 3 seconds                                    |
| Warning! UPS Off!     | E22-Overload: Unplug at least one connected device.                             |                 | Constant alarm*  |
| Warning!              | E23-Over Temp: Turn off the unit and check ventilation.                         |                 | Beeps once every 2 seconds*                            |
| Warning!              | E24-Over Temp: Turn off the unit and check ventilation.                         |                 | Beeps once every 2 seconds*                            |
| UPS Off!              | E25-EPO: Check the EPO connector status.  |  |  |
| Warning!              | E27-Fan Fail (FR): Contact CyberPower for repair.                               |               |  |
| Warning!              | E27-Fan Fail (FL): Contact CyberPower for repair.                               |               |  |
| Warning!              | E29-Fan Fail (B): Contact CyberPower for repair.                                |               |  |
| Warning!              | Battery Disconnected: Check battery wiring and condition.                       | <br>(Flashes) | Beeps once every 2 seconds for a period of 30 seconds* |
| Warning!              | Battery Defect: Check battery wiring and condition.                             | <br>(Flashes) | Beeps once every 2 seconds for a period of 30 seconds* |
| Warning!              | Service Battery: Batteries have reached recommended maintenance period.         |  |  |
| Warning!              | Wiring Fault: Check utility wiring and ground.                                  |  |  |

\* Press any button to cancel the alarm.


## EPO AND ROO CONFIGURATION

The Emergency Power Off (EPO) port is a safety feature that can be used to immediately shut down the UPS and cut off its power supply to connected equipment. It is necessary to manually press the power switch on the LCD module to restart the UPS and reapply power to connected equipment.

The Remote On/Off (ROO) shares the same port with EPO and those two functions can be used at the same time. ROO is a remote power control function which allows users not only to power on but also power off the UPS from a remote location.

### Installation

1. Verify the UPS is off and unplugged.
2. The EPO/ROO interface is an IEC 60950 safety extra low voltage (SELV) circuit. Follow the appropriate circuit diagram below to wire the provided EPO cable to your EPO/ROO configuration. Connect isolated dry contacts and use **ONLY** latching switch.

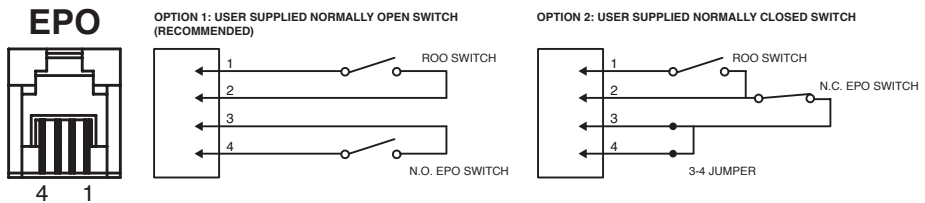

3. After wiring, make sure the external EPO/ROO switch is not activated to enable UPS output.
4. Plug the UPS into an AC outlet and turn the UPS on via power switch on the LCD module.
5. Activate the external EPO/ROO switch to test the function. Check the status change of UPS from its LCD module.
6. For EPO user: De-activate the external EPO switch and restart the UPS via power switch on the LCD model.

For ROO user: Press the external ROO switch again to restart the UPS.

### Restriction on ROO

- A. ROO can only turn on the UPS when utility is available.
- B. ROO becomes inactive if the UPS is shut down due to Fault, Low Battery, or EPO; it is necessary to manually press the power switch on the LCD module to restart the UPS and reapply power to connected equipment.
- C. ROO is active only when UPS power status is the same as ROO circuit.\* If they are different, manually adjust the external ROO switch to synchronize current UPS status.

For instance, the UPS is turned off via power switch on the LCD module; however, the ROO switch stays in “on” position, which means the contact is closed. Users have to manually press the external ROO switch to “off” position, making contact open, to reactivate the ROO, verifying the power status shown on LCD module and ROO switch is on the same page. And then users can press the external ROO switch again to turn on the UPS.

\*Power switch on the LCD module, software and external ROO switch can all turn on/off the UPS.


# DRY CONTACT

This UPS offers users the solution for UPS status monitoring via two output relays. Refer to Network Operation in this manual, verifying the UPS is connected to a computer with PowerPanel Business software installed or is equipped with RMCARD. Follow below circuit to wire your dry contact port and choose your preferred monitoring status via those interfaces. UPS status which can be monitored by dry contact is listed below:

| UPS Status     | UPS Conditions   |
|----------------|--|
| Power Failure* | UPS detects utility failure  |
| Battery Low*   | Battery capacity is lower than threshold.  |
| Summary Alarm  | UPS exits alarms due to Inverter Fault, Output Short, Over Temperature, Overload, Battery Overcharge, Low Battery, Battery Disconnected, and Battery Defect. |
| UPS Fail       | UPS has malfunctioned due to Inverter Fault, DC Power Fault, and Over Temperature.   |


\*Default settings of relay contacts are Power Failure and Battery Low (Normally Open).

## Internal Circuit

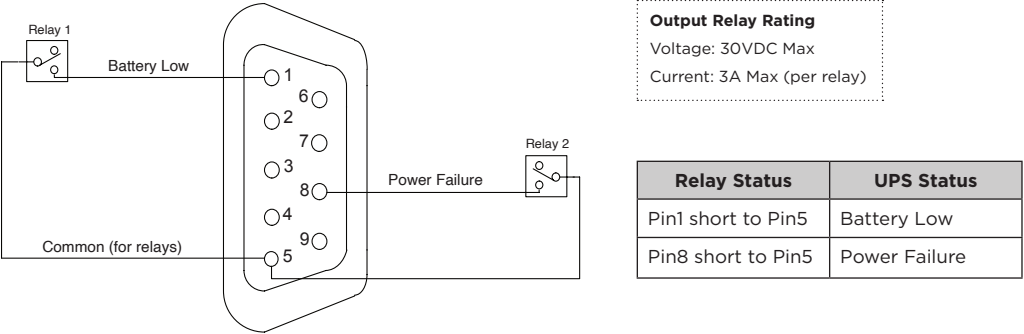

## Example Application

Supply 12VDC to the Common contact and connect LEDs to the DB9 port Pin1 and Pin8. When UPS detects utility failure or when UPS battery capacity is lower than threshold, the connected LEDs will illuminate.

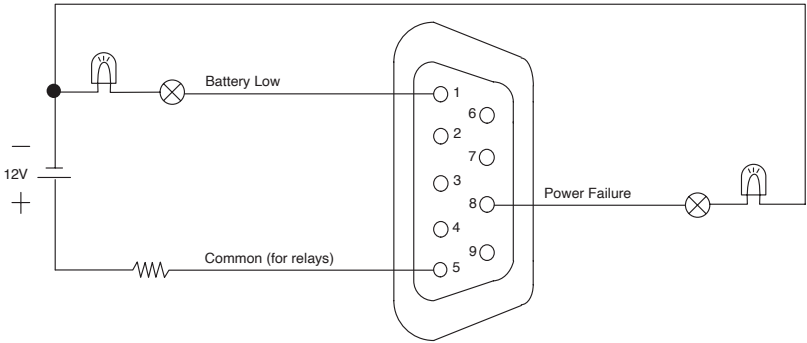

## BATTERY REPLACEMENT

Read and follow the important safety instructions before servicing the batteries. Visit the CyberPower official website [www.cyberpowersystems.com](http://www.cyberpowersystems.com) or contact your dealer for more information on replacement batteries. The battery replacement video is available online. Scan the QR code below for detailed information.

### **CAUTION! RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.**

When replacing batteries, replace with the same number of the following battery: CyberPower RB1250X4 for PR750RT2UC, CyberPower RB1270X4H for PR1000RT2UC/ PR750RTL2UC/ PR1000RTL2UC, CyberPower RB1290X4J for PR1500RT2UC/PR2000RT2UC/ PR2200RT2UC/ PR3000RT2UC/ PR1500RTL2UC/ PR2000RTL2UC/ PR2200RTL2UC/PR3000RTL2UC/ PR3000RTL2UCN, CyberPower RB1260X8 for PR2200RTL2UACN.

**CAUTION!** Risk of Energy Hazard, 12V, maximum 6 Ampere-hour battery. (PR750RT2UC)

**CAUTION!** Risk of Energy Hazard, 12V, maximum 9 Ampere-hour battery. (PR1000RT2UC/ PR1500RT2UC/ PR2000RT2UC/ PR2200RT2UC/ PR3000RT2UC/ PR750RTL2UC/ PR1000RTL2UC/ PR1500RTL2UC/ PR2000RTL2UC/ PR2200RTL2UC/ PR3000RTL2UC/ PR3000RTL2UCN)

**CAUTION!** The used batteries are considered hazardous waste and must be disposed through recycling. Most retailers that sell

lead-acid batteries collect used batteries for recycling, as required by local regulations. Do not dispose of batteries in a fire. The batteries may explode. Dispose of the batteries according to the local regulations.

**CAUTION!** Do not open or mutilate batteries. Released material is harmful to the skin and eyes. It may be toxic.

**CAUTION!** Do not replace batteries while the UPS is in battery mode.


**CAUTION!** When the battery pack is disconnected, the loads connected to the UPS are not protected from power failure.

**CAUTION!** Do not use a damaged or deformed battery pack.

### **Take the following precautions before replacing the battery:**

1. Remove watches, rings, or other metal objects.
2. Use tools with insulated handles.
3. Wear rubber gloves and boots.
4. Do not lay tools or metal parts on top of batteries.
5. Determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground. **CONTACT WITH ANY PART OF A GROUNDED BATTERY CAN RESULT IN ELECTRICAL SHOCK.** The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).

### **Battery Replacement Procedure**

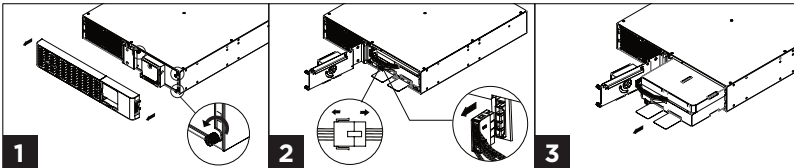

1. Remove faceplate and unscrew the thumbscrews on battery cover and then open the battery cover. Note: Thumbscrews are designed fixed on the battery cover, do not remove them from the metal cover.
2. Disconnect the battery and battery management module connector.
3. Insert the new battery pack. Assemble the connectors, thumbscrews and faceplate.  
Recharge the unit for at least 12 hours to ensure the UPS performs expected runtime.

**Reminder:** Battery Change Date is optional setup information for users to record the installation date of battery pack. It can be adjusted through LCD module in Advanced Setup Menu or through software.

TECHNICAL SPECIFICATIONS

| MODEL                           | PR750RT2UC  | PR1000RT2UC          | PR1500RT2UC          | PR2000RT2UC          | PR2200RT2UC  | PR3000RT2UC  |
|---------------------------------|---|----------------------|----------------------|----------------------|--|--|
| GENERAL                         |   |                      |                      |                      |  |  |
| UPS Topology                    | Line-Interactive  |                      |                      |                      |  |  |
| Energy Saving                   | GreenPower UPS Bypass Technology  |                      |                      |                      |  |  |
| INPUT                           |   |                      |                      |                      |  |  |
| Nominal Input Voltage           | 100/110/120/125V  |                      |                      |                      | 100/110/120V   |  |
| Input Frequency                 | 50-60Hz +/- 3Hz (Auto-sensing)  |                      |                      |                      |  |  |
| Plug Type                       | NEMA 5-15P  |                      |                      | NEMA 5-20P           | NEMA 5-30P   |  |
| Power Cord Length               | 10 ft. (3.0 m)  |                      |                      |                      |  |  |
| OUTPUT                          |   |                      |                      |                      |  |  |
| Power Capacity                  | 750VA<br>750W   | 1000VA<br>1000W      | 1500VA<br>1500W *    | 2000VA<br>2000W *    | 2200VA<br>2200W *  | 3000VA<br>3000W *                                      |
| On Battery Output Voltage       | 100/110/120/125V +/- 5%   |                      |                      |                      | 100/110/120V +/- 5%  |  |
| On Battery Output Frequency     | 50 Hz - 60 Hz +/- 1%  |                      |                      |                      |  |  |
| On Battery Output Waveform      | Sine Wave   |                      |                      |                      |  |  |
| BATTERY                         |   |                      |                      |                      |  |  |
| Battery Type                    | Sealed Maintenance Free Lead Acid Battery                               |                      |                      |                      |  |  |
| Replaceable Battery Pack        | 1 x RB1250X4  | 1 x RB1270X4H        | 1 x RB1290X4J        |                      |  |  |
| Typical Recharge Time           | 3 hours (Recover to 90% after full load discharge)d                     |                      |                      |                      |  |  |
| PHYSICAL                        |   |                      |                      |                      |  |  |
| Dimensions (Width/Height/Depth) | 2U Rack<br>171 x 3.4 x 16.2 in. / 433 x 86.5 x 412 mm                   |                      |                      |                      |  | 2U Rack<br>171 x 3.4 x 16.7 in.<br>433 x 86.5 x 500 mm |
| Weight (lb/kg)                  | 43.2 lbs.<br>19.6 kg  | 50.1 lbs.<br>22.7 kg | 55.8 lbs.<br>25.3 kg | 59.8 lbs.<br>27.1 kg | 59.8 lbs.<br>27.12 kg  | 79.6 lbs.<br>34.7 kg                                   |
| SAFETY                          |   |                      |                      |                      |  |  |
| Conformance Approvals           | UL1778 / CSA C22.2 No 107.3 / FCC Class B<br>VCCI Class B / ENERGY STAR |                      |                      |                      | UL1778 / CSA C22.2 No 107.3<br>FCC Class A / VCCI Class A<br>ENERGY STAR |  |
| Environmental                   | RoHS Compliant  |                      |                      |                      |  |  |

\*Refer below de-rating information for 100/110V systems:  
PR1500RT2UC: 1200VA/1200W@100V, 1350VA/1350W@110V; PR2000RT2UC: 1600VA/1600W@100V, 1800VA/1800W@110V;  
PR3000RT2UC: 2400VA/2400W@100V, 2700VA/2700W@110V.

TECHNICAL SPECIFICATIONS - CONTINUED

| MODEL                                  | PR750RTXL2UC  | PR1000RTXL2UC      | PR1500RTXL2UC   | PR2000RTXL2UC        | PR2200RTXL2UC<br>PR2200RTXL2UACN   | PR3000RTXL2UC<br>PR3000RTXL2UCN                        |
|--|---|--------------------|---|----------------------|--|--|
| GENERAL                                |   |                    |   |                      |  |  |
| UPS Topology                           | Line-Interactive  |                    |   |                      |  |  |
| Energy Saving                          | GreenPower UPS Bypass Technology  |                    |   |                      |  |  |
| INPUT                                  |   |                    |   |                      |  |  |
| Nominal Input Voltage                  | 100/110/120/125V  |                    |   |                      | 100/110/120V   |  |
| Input Frequency                        | 50-60Hz +/- 3Hz (Auto-sensing)  |                    |   |                      |  |  |
| Plug Type                              | NEMA 5-15P  |                    |   | NEMA 5-20P           | NEMA 5-30P   |  |
| Power Cord Length                      | 10 ft. (3.0 m)  |                    |   |                      |  |  |
| OUTPUT                                 |   |                    |   |                      |  |  |
| Power Capacity                         | 750VA<br>750W   | 1000VA<br>1000W    | 1500VA<br>1500W *                                     | 2000VA<br>2000W *    | 2200VA<br>2200W *  | 3000VA<br>3000W *                                      |
| On Battery Output Voltage              | 100/110/120/125V +/- 5%   |                    |   |                      | 100/110/120V +/- 5%  |  |
| On Battery Output Frequency            | 50 Hz - 60 Hz +/- 1%  |                    |   |                      |  |  |
| On Battery Output Waveform             | Sine Wave   |                    |   |                      |  |  |
| BATTERY                                |   |                    |   |                      |  |  |
| Battery Type                           | Sealed Maintenance Free Lead Acid Battery                               |                    |   |                      |  |  |
| Replaceable Battery Pack               | 1 x RB1270X4H   |                    | 1 x RB1290X4J   |                      | 1 x RB1290X4J<br>1 x RB1260X8  | 1 x RB1290X4J  |
| Typical Recharge Time                  | 3 hours (Recover to 90% after full load discharge)d                     |                    |   |                      |  |  |
| Extended Battery Module                | BP48VP2U01  |                    | BP48VP2U02  |                      |  |  |
| PHYSICAL                               |   |                    |   |                      |  |  |
| Dimensions<br>(Width/Height/<br>Depth) | 2U Rack<br>171 x 3.4 x 16.2 in.<br>433 x 86.5 x 412 mm                  |                    | 2U Rack<br>171 x 3.4 x 19.7 in. / 433 x 86.5 x 500 mm |                      | 2U Rack<br>171 x 3.4 x 19.7 in.<br>433 x 86.5 x 500 mm                   | 2U Rack<br>171 x 3.4 x 19.7 in.<br>433 x 86.5 x 500 mm |
|  |   |                    |   |                      | 2U Rack<br>171 x 3.4 x 24.8 in.<br>433 x 86.5 x 630 mm                   |  |
| Weight (lb/kg)                         | 53.1 lbs.<br>24.1 kg  | 55.3 lbs<br>25.1kg | 67.7 lbs.<br>30.7 kg                                  | 74.5 lbs.<br>33.8 kg | 79.6 lbs.<br>36.1 kg   | 75.4 lbs.<br>34.2 kg                                   |
|  |   |                    |   |                      | 93 lbs.<br>42.2 kg   |  |
| SAFETY                                 |   |                    |   |                      |  |  |
| Conformance Approvals                  | UL1778 / CSA C22.2 No 107.3 / FCC Class B<br>VCCI Class B / ENERGY STAR |                    |   |                      | UL1778 / CSA C22.2 No 107.3<br>FCC Class A / VCCI Class A<br>ENERGY STAR |  |
| Environmental                          | RoHS Compliant  |                    |   |                      |  |  |

\*Refer below de-rating information for 100/110V systems:  
PR1500RTXL2UC: 1200VA/1200W@100V, 1350VA/1350W@110V; PR2000RTXL2UC: 1600VA/1600W@100V, 1800VA/1800W@110V;  
PR3000RTXL2UC/ PR3000RTXL2UCN: 2400VA/2400W@100V, 2700VA/2700W@110V.

# TROUBLESHOOTING

| Problem                                  | Possible Cause   | Solution  |
|--|--|---|
| UPS does not provide power to equipment. | Circuit breaker has tripped due to an overload.  | Turn the UPS off and unplug at least one piece of equipment. Wait 10 seconds, reset the circuit breaker, and then turn the UPS on.  |
|  | Batteries are discharged.  | Recharge the UPS for at least 3 hours.  |
|  | UPS has been damaged by a surge or spike.  | Contact CyberPower Systems at: <a href="http://cyberpowersystems.com">cyberpowersystems.com</a> for repair.   |
|  | Non-critical outlets have turned off automatically due to an overload in battery mode. | NCL outlets will be turned on automatically as utility is restored. To avoid recurring, check “Off on Overload” setting in Outlet Control Menu and disable the function.  |
| UPS does not perform expected runtime.   | Batteries are not fully charged.   | Recharge the batteries by leaving the UPS plugged in.   |
|  | Batteries are degraded.  | Contact CyberPower Systems at: <a href="http://cyberpowersystems.com">cyberpowersystems.com</a> for replacement batteries.  |
|  | UPS does not recognize the correct quantity of Extended Battery Modules.               | Adjust the setting of Extended Battery Module Quantity on your UPS to correct numbers via LCD module, PowerPanel Business software or RMCARD interface (if installed).  |
| UPS cannot be turned on.                 | UPS is not connected to an AC outlet.  | The unit must be connected to a 100 – 120V or 100 – 125V outlet. (See TECHNICAL SPECIFICATIONS section)   |
|  | Batteries are worn out.  | Contact CyberPower Systems at: <a href="http://cyberpowersystems.com">cyberpowersystems.com</a> for replacement batteries.  |
|  | Mechanical problem.  | Contact CyberPower Systems at: <a href="http://cyberpowersystems.com">cyberpowersystems.com</a> for repair.   |
|  | Part of hard reboot process has been performed.  | Long press of the power switch to forcibly shut down the UPS when it freezes. When the UPS is off, long press of the power switch to light up the display screen for a few seconds. This does not turn on the UPS. Refer to BASIC OPERATION section to correctly turn on the UPS. |
| PowerPanel Business is inactive.         | The USB/serial cable is not connected.   | Connect the cable to your UPS and computer. Use the cable that came with the unit if your own communication cable does not work.  |
|  | The serial cable or USB cable is connected to the wrong or defected port.              | Try another port on the computer.   |



**TROUBLESHOOTING - CONTINUED**

| Problem  | Possible Cause   | Solution   |
|--|--|--|
| “Service Battery” message appears on display screen.       | The Battery Replacement Date has reached the recommended maintenance period. | Perform a runtime estimation via PowerPanel Business software to verify battery capacity is sufficient and acceptable.   |
|  |  | If batteries have been recently replaced, reset the Battery Replacement Date using PowerPanel Business software or RMCARD interface; you can also reset the Battery Change Date in Advanced Setup Menu through LCD module.   |
| “Fault” or “Error” message is appearing on display screen. | An internal malfunction may have occurred.                                   | Please refer to Fault Warning Display and Alarm in the LCD OPERATION GUIDE section. If the fault persists, take note and contact CyberPower for repair.  |
| UPS cannot work properly while attached to a generator.    | The size of generator is not suitable for current load.                      | The continuous generator capacity rating must be at least twice the total load, including the UPS and all other devices attached to the generator; otherwise, the generator may not be able to hold the voltage and frequency within the input tolerance of the UPS, causing the UPS switching from utility to battery mode back and forth. Reduce the connected load or upgrade the generator.  |
|  | The UPS is too sensitive to power events.                                    | <p>The quality and stability of the generator power may not be as good as your local utility. The frequent blackouts and waveform distortions could lead the UPS to consider the input power inappropriate and will switch to battery mode to provide clean power to attached load, draining the battery. Refer to LCD OPERATION GUIDE section to desensitize the UPS via LCD module, PowerPanel Business software or RMCARD interface (if installed).</p> <p>Note: Lowering the sensitivity setting makes the UPS tolerate more power events, but it also increases the transfer time of the UPS. Some sensitive equipment cannot accept extended transfer time. Test to check if there is a load drop when the UPS is switching to battery mode.</p> |
| Fans keep on rotating when UPS was turned off.             | The internal temperature is excessively high.                                | This is a normal function for dissipating excess heat. When the UPS is turned off, it monitors the internal temperature and keeps the fans running for a maximum of 30 minutes to assist in reducing the temperature if it's too high.   |

# CYBERPOWER GREENPOWER UPS™ TECHNOLOGY

## Advanced Energy-Saving Patented Bypass Technology

CyberPower's patented GreenPower UPS™ with Bypass Technology reduces UPS energy costs by up to 75% compared to conventional UPS models. Even when utility power is normal, conventional UPS models constantly pass power through a transformer. By contrast, under normal conditions the advanced circuitry of a GreenPower UPS™ bypasses the transformer. As a result, the power efficiency is significantly increased while decreasing waste heat, using less energy, and reducing energy costs. When an abnormal power condition occurs, the GreenPower UPS™ automatically runs power through its transformer to regulate voltage and provide "safe" power. Since utility power is normal over 88% of the time, the GreenPower UPS™ operates primarily in its efficient bypass mode. The GreenPower UPS™ is also manufactured in accordance with the Restriction on Hazardous Substances (RoHS) directive making it one of the most environmentally-friendly on the market today.



## FCC COMPLIANCE STATEMENT

(PR750RT2UC/ PR1000RT2UC/ PR1500RT2UC/ PR2000RT2UC/ PR750RTL2UC/  
PR1000RTL2UC/ PR1500RTL2UC/ PR2000RTL2UC)

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Important: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Canadian Compliance Statement** (PR750RT2UC/ PR1000RT2UC/ PR1500RT2UC/  
PR2000RT2UC/ PR750RTL2UC/ PR1000RTL2UC/ PR1500RTL2UC/ PR2000RTL2UC/)  
CAN ICES-003 (B) / NMB-003 (B)

**VCCI Compliance Statement** (PR750RT2UC/ PR1000RT2UC/ PR1500RT2UC/  
PR2000RT2UC/ PR750RTL2UC/ PR1000RTL2UC/ PR1500RTL2UC/ PR2000RTL2UC)  
VCCI-B

(PR2200RT2UC/ PR3000RT2UC/ PR2200RTL2UC/  
PR2200RTL2UC/ PR3000RTL2UC/ PR3000RTL2UCN)

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Important: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Canadian Compliance Statement** (PR2200RT2UC/ PR3000RT2UC/ PR2200RTL2UC/  
PR2200RTL2UCN/ PR3000RTL2UC/ PR3000RTL2UCN)  
CAN ICES-003 (A) / NMB-003 (A)

**VCCI Compliance Statement** (PR2200RT2UC/ PR3000RT2UC/ PR2200RTL2UC/  
PR2200RTL2UC/ PR3000RTL2UC/ PR3000RTL2UCN) VCCI-A



## LIMITED WARRANTY AND CONNECTED EQUIPMENT GUARANTEE

Please visit [www.CyberPowerSystems.com](http://www.CyberPowerSystems.com) for a copy of the Limited Warranty and Connected Equipment Guarantee.

### Where Can I Get More Information?

The application of the United Nations Convention of Contracts for the International Sale of Goods is expressly excluded. CyberPower is the warrantor under this Limited Warranty. For further information please feel free to contact CyberPower at: Cyber Power Systems (USA), Inc. 4241 12th Ave E., STE 400, Shakopee, MN 55379; call us at (877) 297-6937; or submit a web ticket online at [cyberpowersystems.com/support](http://cyberpowersystems.com/support).

### Disposal

Cyber Power Systems (USA), Inc. encourages environmentally sound methods for disposal and recycling of its UPS products. Please dispose and/or recycle your UPS and batteries in accordance to the local regulations of your state.



The Waste Electrical and Electronic Equipment (WEEE) Directive aims to contribute to sustainable production and consumption by contributing to the efficient use of resources and the retrieval of secondary raw materials through re-use, recycling, and other forms of recovery. The symbol on this product and/or its packaging indicates that the product must be disposed of separately from ordinary household wastes at its end of life. Contact your related WEEE management authority, local office, or your household waste disposal service about information on the recycling drop off site.

This product contains non-spillable lead acid batteries. The used batteries are considered hazardous waste and must be disposed through recycling. Do not dispose of used batteries with your ordinary household wastes. Dispose of the batteries according to local regulations. Note: Most retailers that sell lead-acid batteries collect used batteries for recycling, as required by local regulations.

**WARNING:** This product can expose you to chemicals including bisphenol A (BPA) and styrene, which is known to the State of California to cause reproductive harm and cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).