

SALTER®

SINCE 1760

1300 W Stand Mixer

Elegantly designed for
all kitchens



Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in

water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any attachments other than those supplied.

Do not use any damaged attachments.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not cover the air vents during use, as this may cause the appliance to overheat.

Do not use broken or loose attachments.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.

Always place the appliance on a flat, stable surface at a height that is comfortable for the user.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Care and Maintenance

STEP 1: Switch off and unplug the mixer from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the stand mixer main unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the attachments and the mixing bowl in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the stand mixer main unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the mixer, as this could cause damage.

The mixer is not suitable for use in a dishwasher.

NOTE: The stand mixer should be cleaned after each use. The stand mixer and accessories are not suitable for use in a dishwasher.

Description of Parts



- 1. Stand Mixer main unit
- 2. Stand mixer head
- 3. Mixing bowl
- 4. Attachment shaft
- 5. Tilt release lever
- 6. Speed control dial

- 7. Flat beater
- 8. Dough hook
- 9. Whisk
- 10. Splash guard
- 11. Non-slip feet

Instructions for Use

Before First Use

Before using the stand mixer for the first time, clean it following the instructions in the section entitled 'Care and Maintenance'.

NOTE: When using the stand mixer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the stand mixer.

Assembling and Using the stand mixer

STEP 1: Before connecting the stand mixer to the mains power supply, place the stand mixer onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Position one hand on top of the stand mixer and use the other hand to turn the tilt release lever in a clockwise direction.

STEP 3: Measure out the ingredients to be mixed and place them into the mixing bowl. Place the mixing bowl onto the stand mixer main unit and rotate it in a clockwise direction until it locks into position.

STEP 4: Carefully attach the splash guard.

STEP 5: Select the required mixing tool:

Flat beater – perfect for making cakes, biscuits, pastry, icing, filling and mashed potato.

Whisk – designed to whisk eggs, cream, batter, low-fat sponges, meringues, cheesecakes, mousses and soufflés.

Dough hook – ideal for yeast mixtures such as bread, pizza bases and doughnuts. Lock the mixing tool into place by pushing it onto the attachment shaft so the pins on the shaft align with the recesses on the mixing tool. Push the mixing tool upwards and twist in an anticlockwise direction until secure.

STEP 6: Use one hand to turn the tilt release lever in a clockwise direction and the other to push the stand mixer head downwards until it locks in the closed position.

STEP 7: Plug in and switch on the stand mixer at the mains power supply.

STEP 8: To begin mixing, rotate the speed control dial in a clockwise direction, until the desired speed setting is selected.

STEP 9: If necessary, stop the stand mixer by rotating the speed control dial to position '0' and scrape any mixture from the sides of the mixing bowl with a wooden or silicone spatula. Resume mixing by rotating the speed control dial to the desired speed setting.

STEP 10: Once mixing is complete, turn off the stand mixer by sliding the speed control dial to position '0'.

STEP 11: Switch off and unplug the stand mixer from the mains power supply.

STEP 12: Place one hand on top of the stand mixer and use the other to turn the tilt release lever in a clockwise direction.

STEP 13: To remove the mixing tool, rotate it in a clockwise direction and gently pull away from the attachment shaft.

STEP 14: To remove the mixing bowl, rotate it in an anticlockwise direction and carefully lift up and away from the stand mixer main unit.

 
NOTE: Check that the mixing bowl and mixing tool are securely fitted before use; do not attempt to remove them until the stand mixer has stopped moving.

Do not overfill the mixing bowl.


It is recommended to always begin mixing on a low speed setting before gradually increasing to a high speed setting; this should prevent the ingredients from splattering.

WARNING: Never operate the stand mixer whilst the stand mixer head is raised.


Do not operate the stand mixer when the mixing bowl is empty.

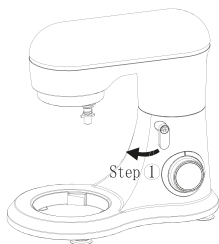


PG1

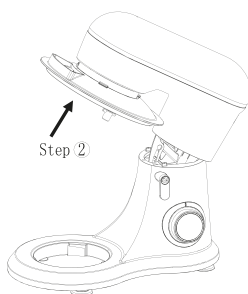 


PG2

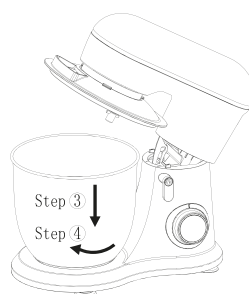 

PG3

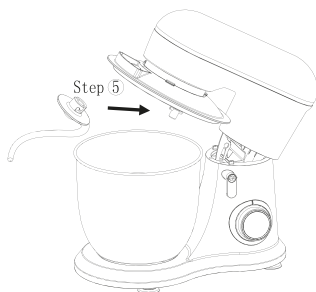 

PG4


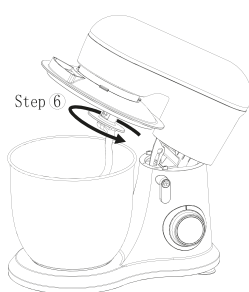 



PG5



PG6

  Speed Setting Guide

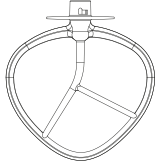Attachment	Speed Setting Range	Recommended Mixture	Recommended Method & Timings
Dough hook 	1-5	585 g dry ingredients and 315 g wet ingredients	Speed settings 1-2 for 30 seconds, followed by speed settings 3-4 for 2-4 minutes to form a cluster.
Flat beater 	2-6	400 g dry ingredients and 500 g wet ingredients	Speed setting 2 for 20 seconds, followed by speed setting 6 for 2 minutes 40 seconds.
Whisk 	6-10	Min. 3 egg whites	Speed setting 6-8 for max. 3 minutes.

WARNING: To avoid overworking the motor and to prolong the life of the stand mixer, always follow the timings displayed in the Speed Setting Guide and rest for at least 10 mins in between uses.

Storage

Check that the stand mixer is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the stand mixer; wrap it loosely to avoid causing damage.

Troubleshooting

Problem	Solution
The stand mixer is not working.	Check that the stand mixer is plugged in and switched on at the mains power supply. Switch off and unplug the stand mixer before checking whether all parts are correctly assembled.
It is not clear which speed setting to use.	Follow the instructions in the section entitled 'Speed Setting Guide'.
Egg whites are not whipping.	Make sure that the bowl and whisk are completely clean and dry before use; even the smallest amount of fat can affect whipping performance.
Bread dough will not combine.	Additional liquid may need to be added to the mixture. Do not use a high speed setting to knead bread dough.
The mixture curdles after adding egg.	Add eggs one at a time and beat well. Check that the eggs are at room temperature.
Sugar is still visible after creaming the mixture.	Continue to cream the mixture until the sugar has completely dissolved or try caster sugar.
There are lumps in the batter or dough.	Sift ingredients such as flour and sugar before mixing.

Specifications

Product code: EK5511

Operates from 220-240 V ~ 50-60 Hz

Output: 1300 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

 
The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

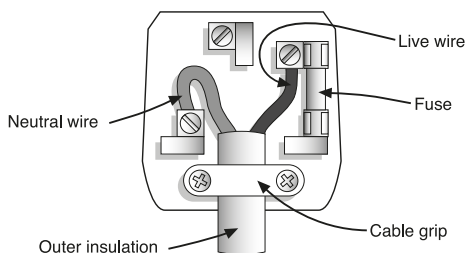

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.salter.com**.

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

To be eligible for the extended guarantee,
go to **guarantee.upgs.com/salter** and register
your product within 30 days of purchase.



SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**



Made in China.

©Salter trademark. All rights reserved.

