 




BEST CHOICE
PRODUCTS

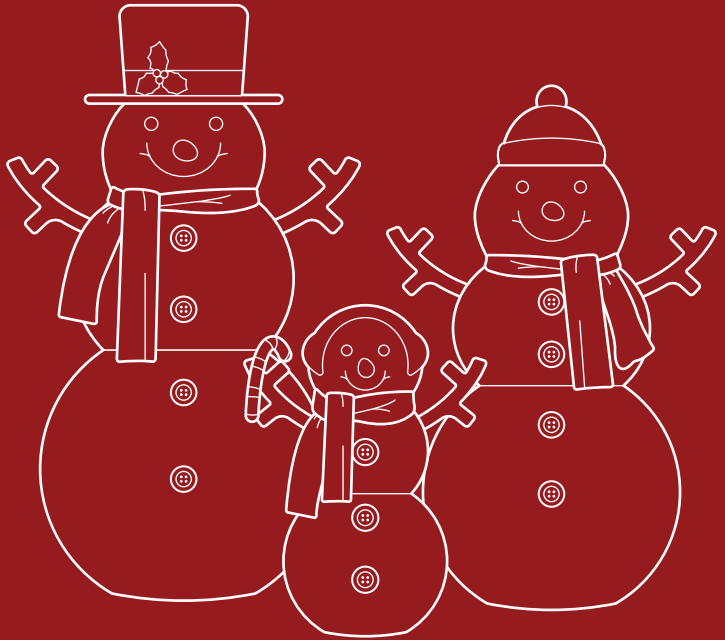

INSTRUCTION MANUAL

3-Piece Lighted 2D
Snowman Family

! NOTICE

Please retain these instructions for future reference.



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This set includes three figures: one dad, one mom, and one child. Each figure uses uniquely sized parts.
- Do not attempt to mix the three figure assemblies.
- This product is intended for residential use only.

 
! WARNING

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the snowman figures.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.
- Replace burned-out bulbs immediately. Make sure to purchase bulbs of the same rated voltage and wattage.

HARDWARE

1

U-STAKES



12 PCS

2

BUTTERFLY
SCREW/NUT



10 SETS

3

COTTER PINS

 


12 PCS

PARTS

A

TOP HAT

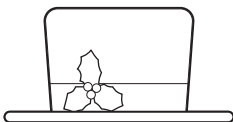

1 PC

B

 
DAD FACE/UPPER
BODY



1 PC











C

DAD LOWER BODY

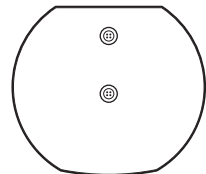

1 PC

          
PARTS

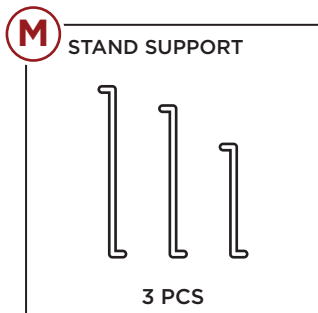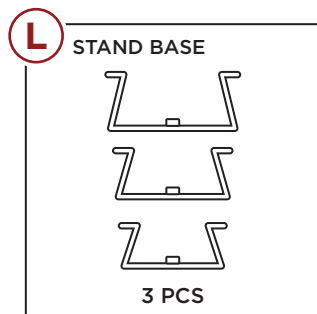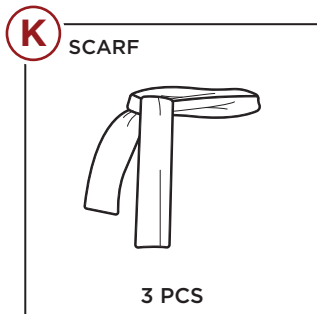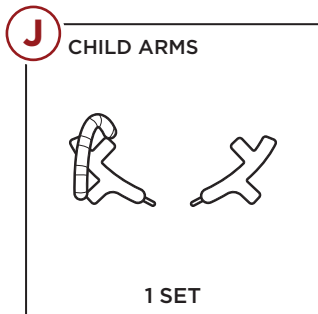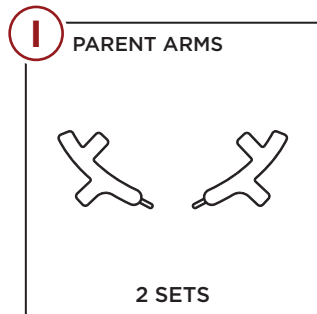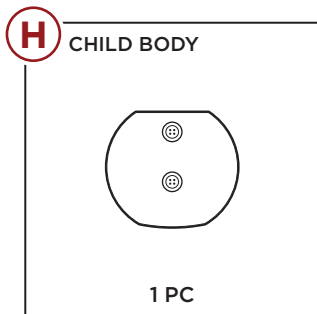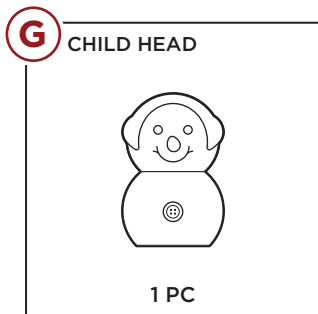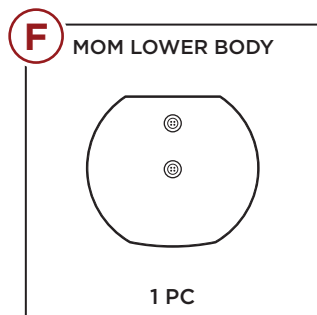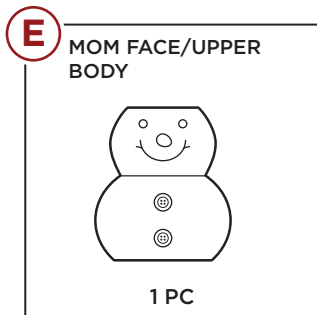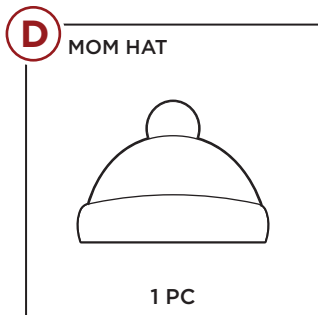

PRODUCT ASSEMBLY


1

 Attach **part A top hat** to the **part B dad face/upper body** and secure with two **part 2 butterfly screw sets**.

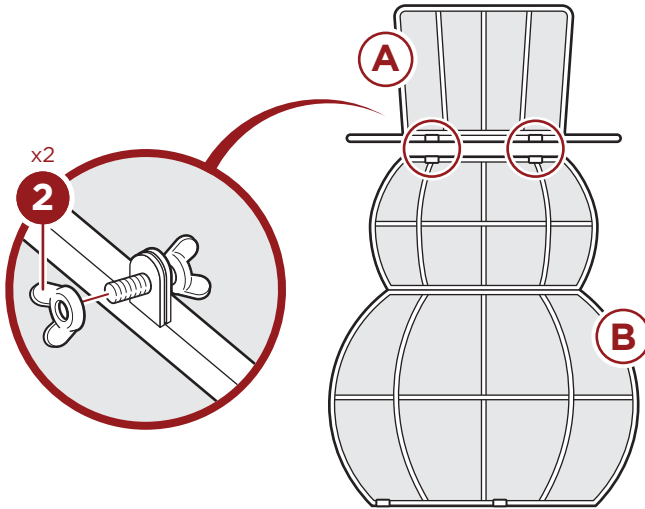

2

 
Attach **part C dad lower body** to the **part 2 dad face/upper body** and secure with two **part 2 butterfly screw sets**.

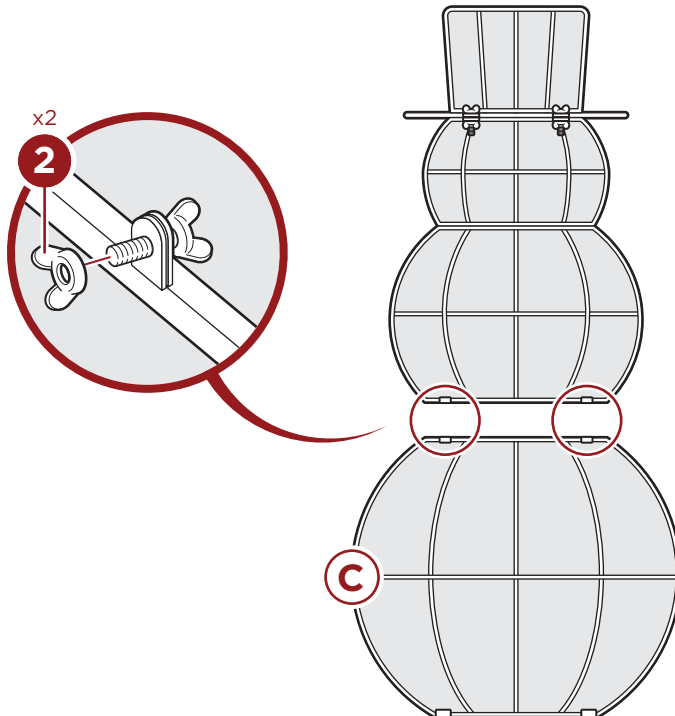

PRODUCT ASSEMBLY


3

 Attach the largest **part L stand base** to the **part C dad lower body**. Insert the largest **part M stand support** into the **part B upper body** and **part L stand base** and secure with two **part 3 cotter pins**.

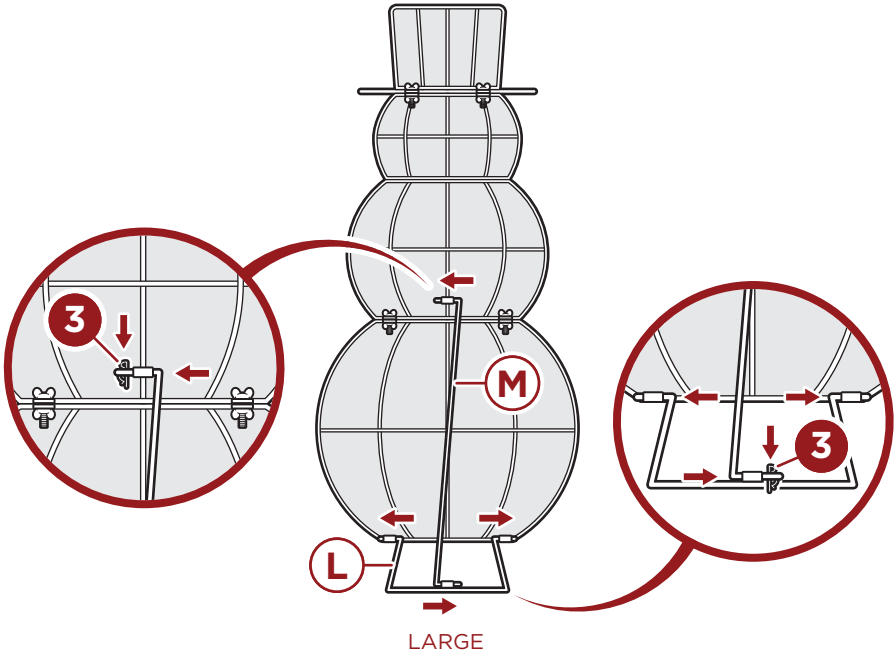

4

 
Insert one set of **part I parent arms** into the **part B dad face/upper body** and secure with two **part 3 cotter pins**.

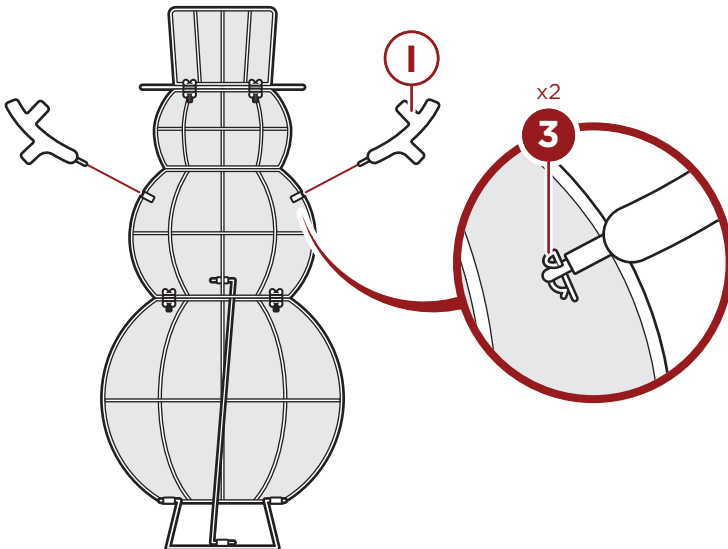

PRODUCT ASSEMBLY

5

 
Repeat **steps 1-4** to assemble the snowman mom figure. Use the medium-sized **part L stand base** and **part M stand support**.

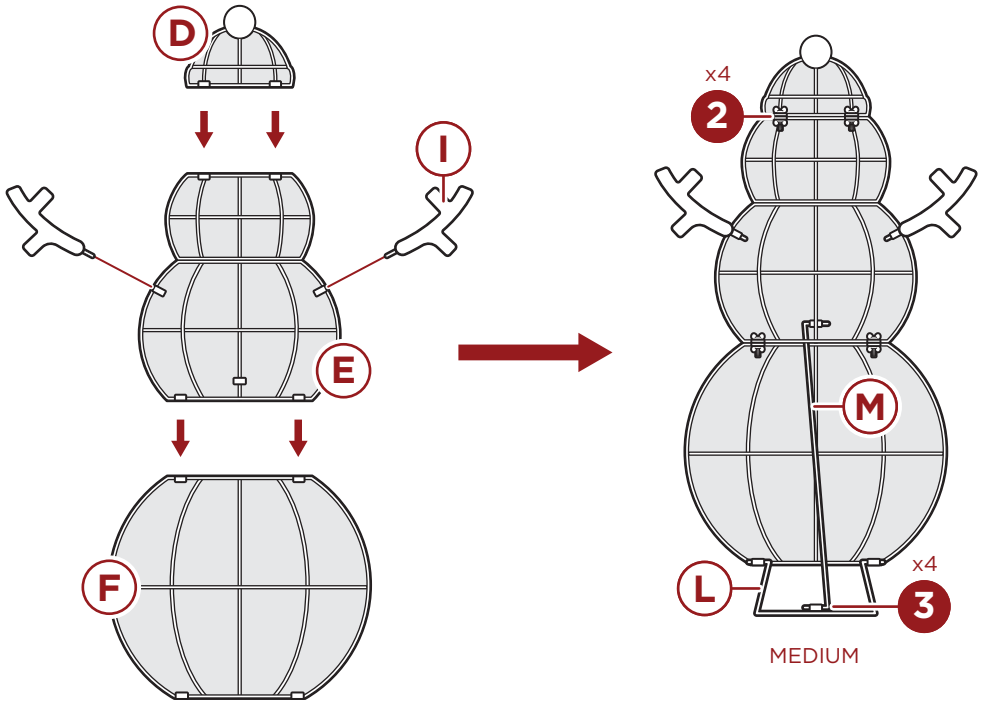

6

Repeat **steps 2-4** to assemble the snowman child. Use the small-sized **part L stand base** and **part M stand support**.

 
NOTE: This figure has no hat to attach to the head section.

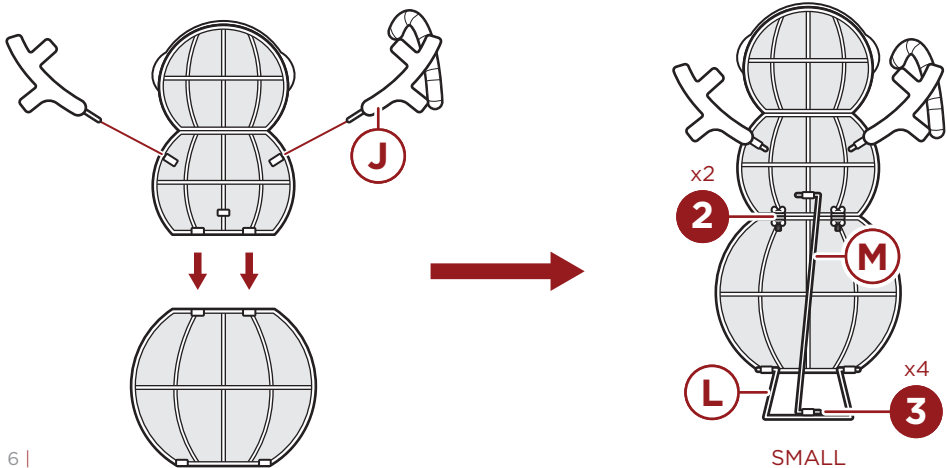

PRODUCT ASSEMBLY


7

 Secure the assembled figures to the ground with twelve **part 1 U-stakes**, four stakes per snowman.

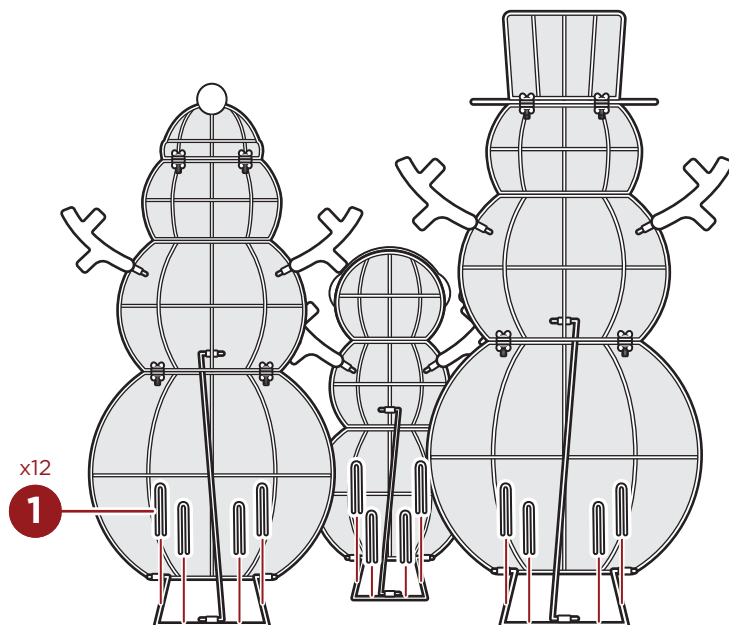

8

 Wrap one **part K scarf** around each assembled figure's neck as desired. Plug each snowman into power source to turn on lights.

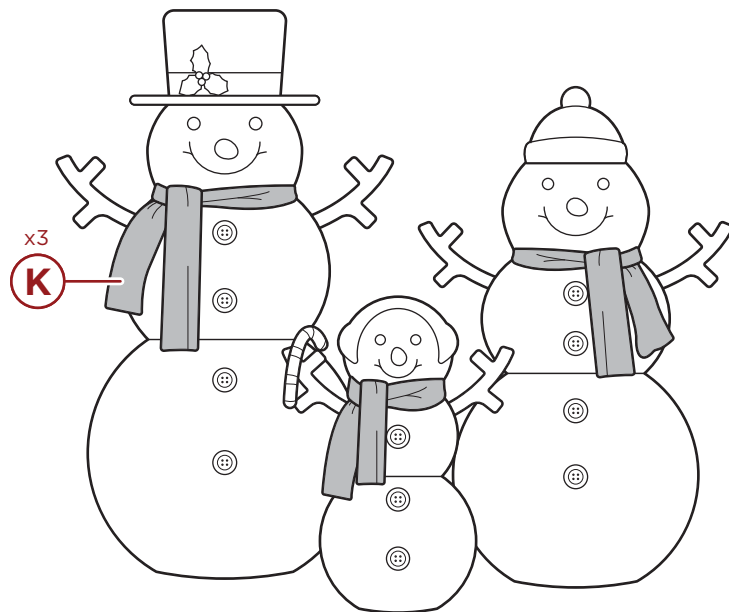



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledged by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Tustin, CA 92780

 


WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.



BEST CHOICE
PRODUCTS

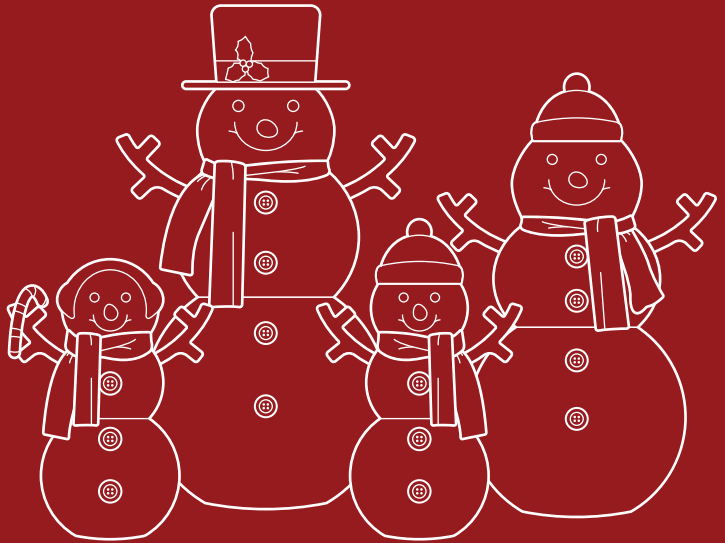

INSTRUCTION MANUAL

4-Piece Lighted 2D
Snowman Family

! NOTICE

Please retain these instructions for future reference.



1 PERSON
ASSEMBLY



UP TO 40 MIN.
ASSEMBLY

 
- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This set includes four figures: one dad, one mom, and two children. Each figure uses uniquely sized parts. Do not attempt to mix the four figure assemblies.
- This product is intended for residential use only.

! WARNING

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the snowman figures.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.
- Replace burned-out bulbs immediately. Make sure to purchase bulbs of the same rated voltage and wattage.

HARDWARE

1 U-STAKES



16 PCS

2 BUTTERFLY SCREW/NUT



14 SETS

 
3 COTTER PINS



16 PCS

PARTS

A TOP HAT

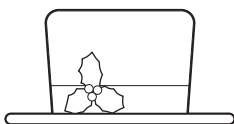


1 PC

B DAD FACE/UPPER BODY














1 PC

 C DAD LOWER BODY

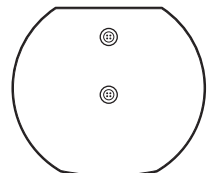

1 PC

           
PARTS

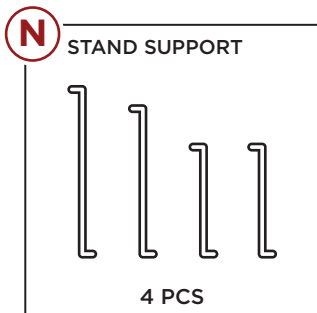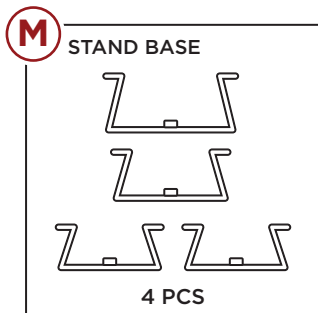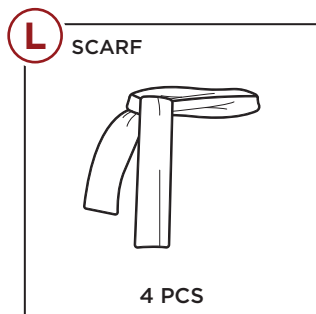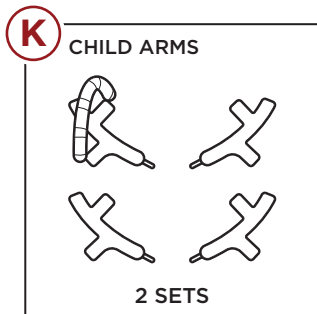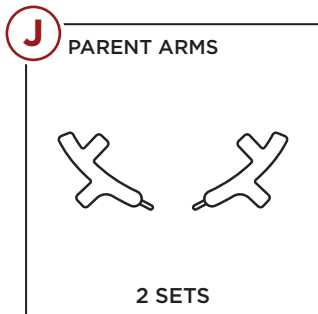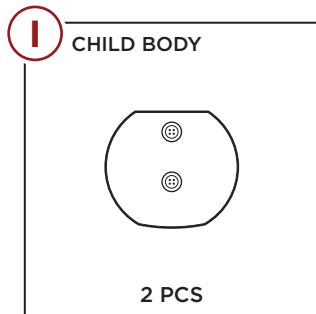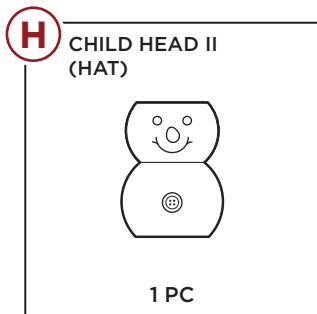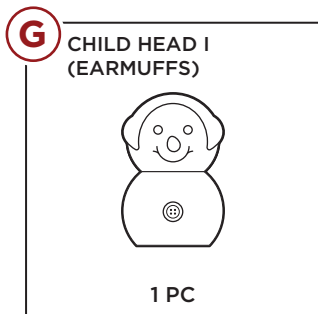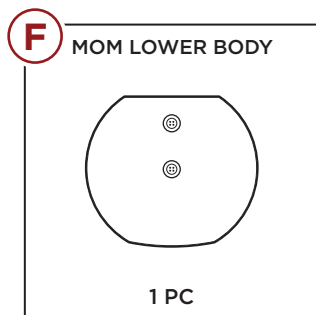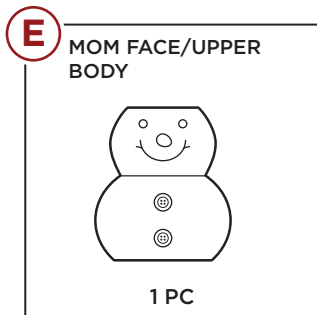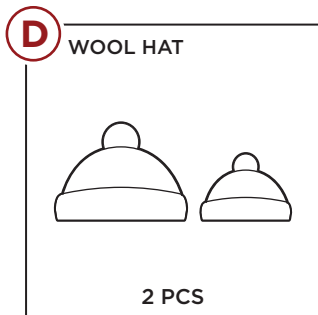

PRODUCT ASSEMBLY


1

 Attach **part A top hat** to the **part B dad face/upper body** and secure with two **part 2 butterfly screw sets**.

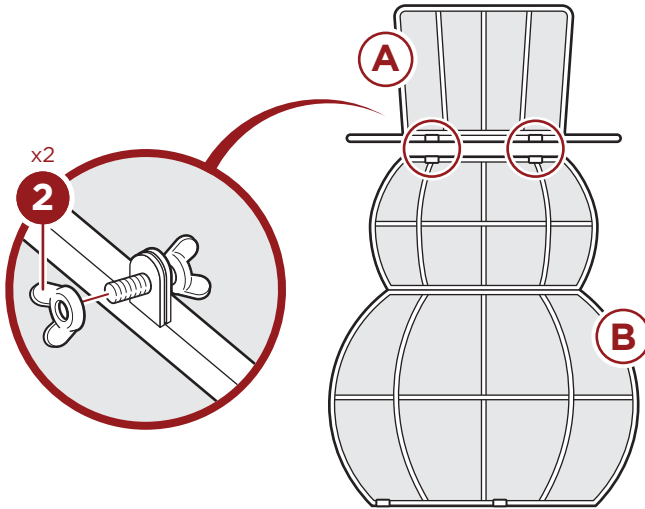

2

 
Attach **part C dad lower body** to the **part 2 dad face/upper body** and secure with two **part 2 butterfly screw sets**.

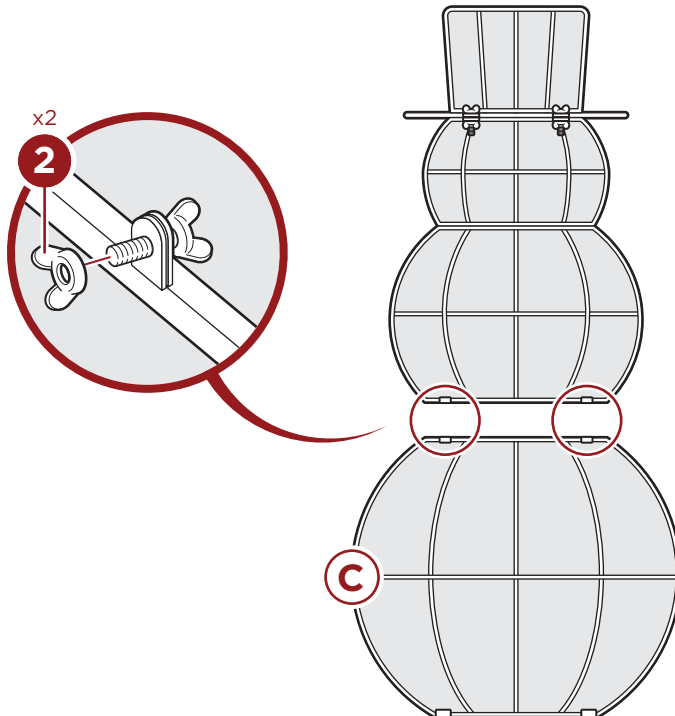

PRODUCT ASSEMBLY


3

 Attach the largest **part M stand base** to the **part C dad lower body**. Insert the largest **part N stand support** into the **part B upper body** and **part L stand base** and secure with two **part 3 cotter pins**.

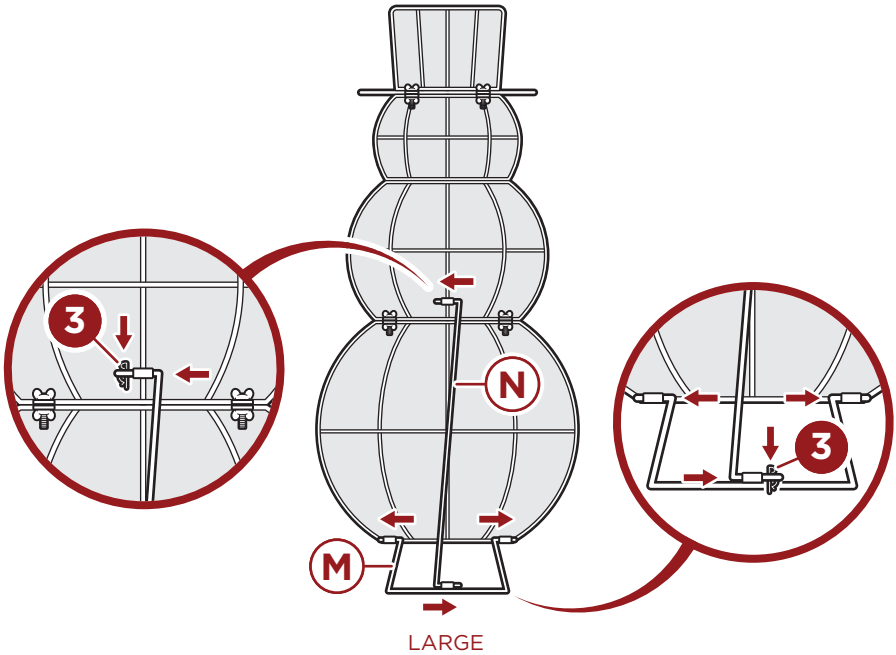

4

 
Insert one set of **part J parent arms** into the **part B dad face/upper body** and secure with two **part 3 cotter pins**.

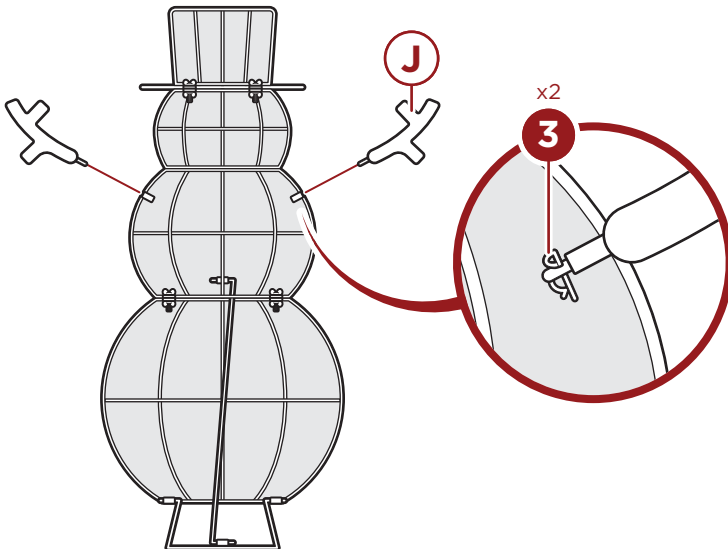

PRODUCT ASSEMBLY

5

 
Repeat **steps 1-4** to assemble the snowman mom figure. Use the medium-sized **part M stand base**, **part N stand support**, and **part D wool hat**.

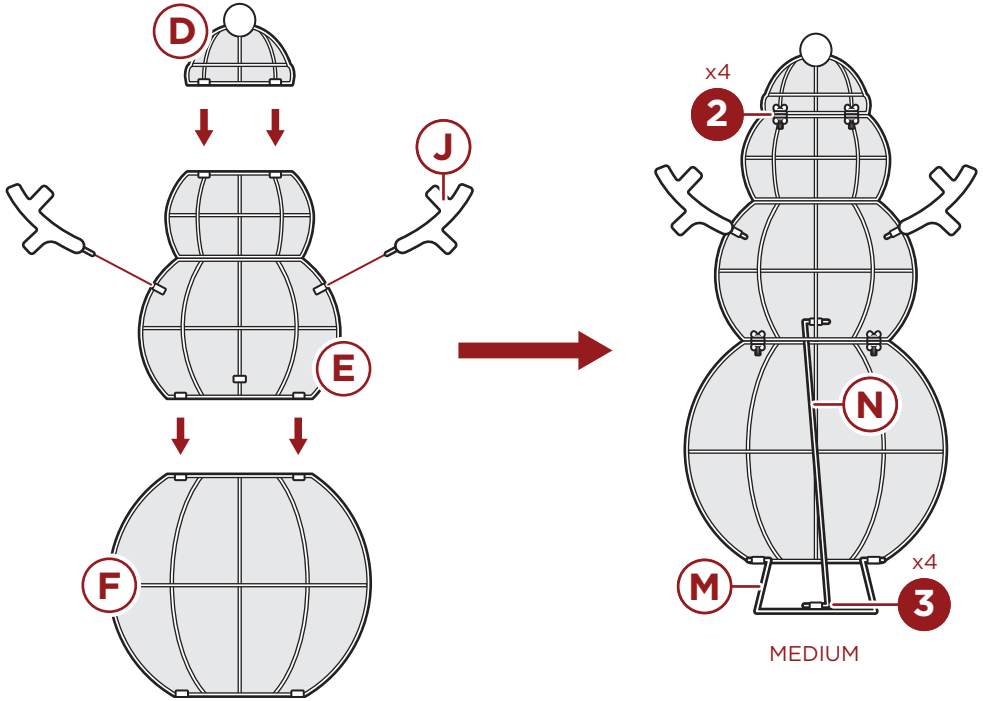

6

Repeat **steps 1-4** to assemble the snowman children. Use the small-sized **part M stand bases**, **part N stand supports**, and **part D wool hat**.

 
NOTE: One figure has no hat to attach to their head section.

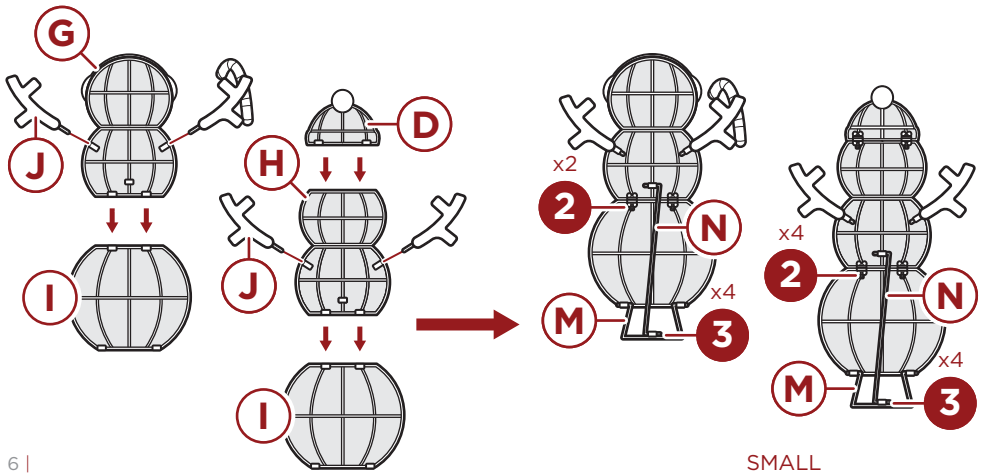

PRODUCT ASSEMBLY

7

 
Secure the assembled figures to the ground with sixteen **part 1 U-stakes**, four stakes per snowman.

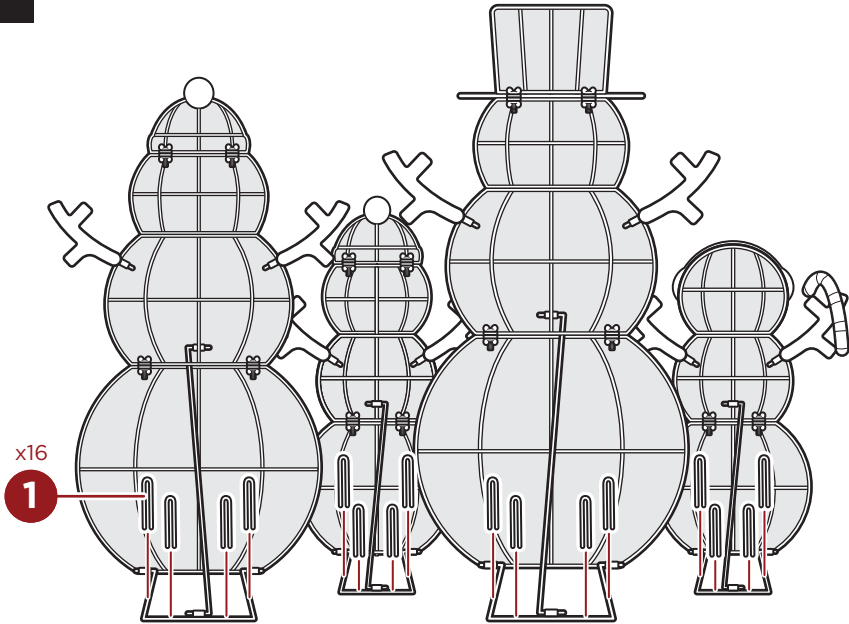

8

Wrap one **part L scarf** around each assembled figure's neck as desired.

 Plug each snowman into power source to turn on lights.

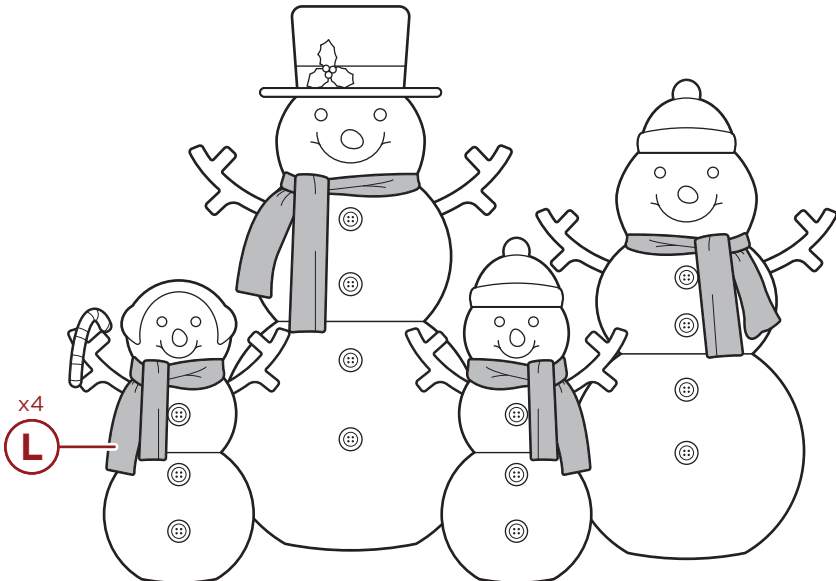



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledged by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Tustin, CA 92780

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.