 




bestchoiceproducts

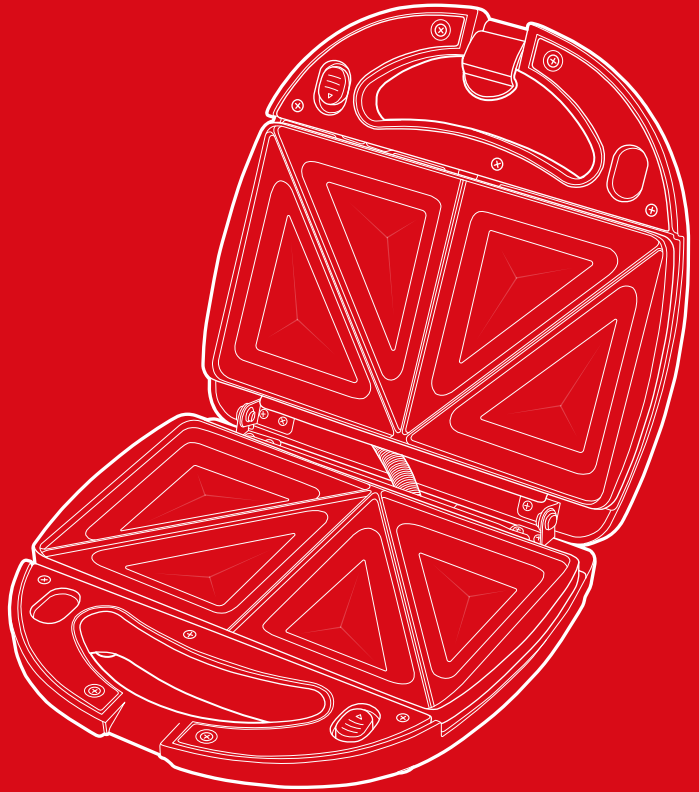

INSTRUCTION MANUAL

Sandwich Maker
with Waffle Iron & Grill

NOTICE

 
Please retain these instructions for future reference.

- This appliance is intended for indoor use only.
- This appliance is intended for household use only.
- This device is not intended to be used by individuals (including children) who have restricted physical, sensory, or mental abilities, or insufficient knowledge and experience, unless supervised by an individual who is responsible for their safety or have received instructions on how to use the device.
- This appliance may be used by children 8 years old and older and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance and understand the hazards involved.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

WARNING

- Do not let children under 8 years old use this appliance.
- Do not let children play with this appliance.
- Close supervision is necessary when appliance is used by or near children.
- Do not touch hot surfaces. Use handles and knobs to operate this appliance.
- Do not immerse cord or plug in water or any other liquid.
- Do not let the cord hang over the edge of table or countertop, or touch hot surfaces such as a stove.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not operate the device with an external timer or a separate remote control system.


DIAGRAM

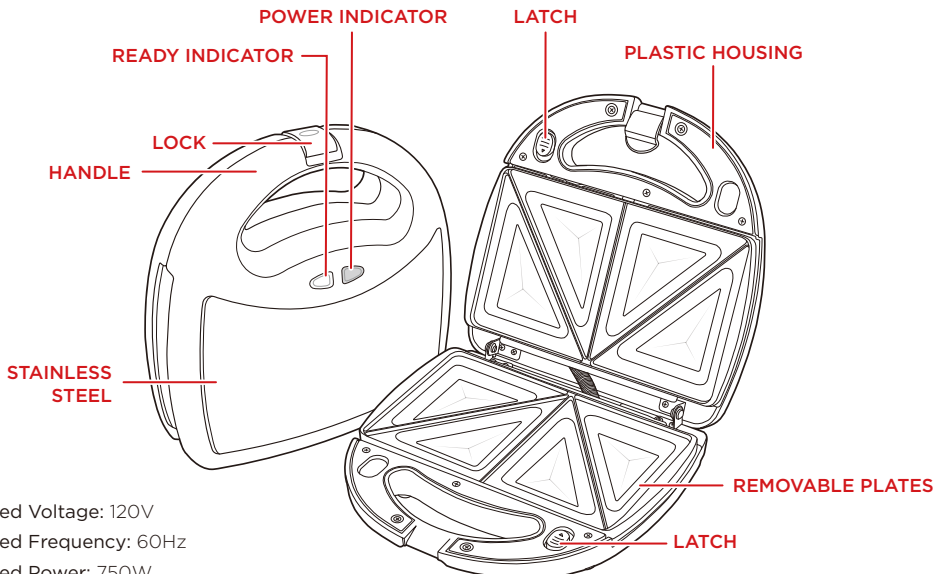


Rated Voltage: 120V
Rated Frequency: 60Hz
Rated Power: 750W

OPERATING INSTRUCTIONS

 
SANDWICH PLATE

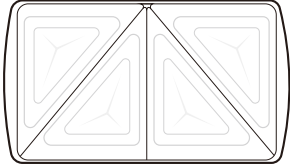

GRILL PLATE

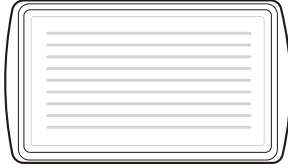 

WAFFLE IRON

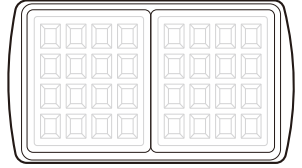 

1. Choose the appropriate cooking plate for your needs: the sandwich plate, grill, or waffle iron.
2. Plug the appliance into the wall outlet. The power and ready indicator lights will illuminate during preheating. After 3 to 5 minutes, the surface will reach cooking temperature (approximately 392°F) and the green ready indicator light will turn off.
3. Place the food onto the cooking surface. The ready indicator light will switch on and off several times during cooking to maintain a constant temperature.
NOTE: If toasting a sandwich, place one slice of bread on the bottom cooking plate greased side down, add sandwich ingredients, and then place the other slice of bread greased side up.
4. Close the appliance and lock the handle.
5. Open the appliance after 3 to 5 minutes and check the toasting or cooking progress. Cooking time will vary depending on the ingredients.
6. When finished, remove the plug from the wall outlet.

USAGE NOTES

 
- The first time using this appliance there may be slight smoke or a mild smell. This is normal and harmless.
- Never touch the plates during operation because the metal plates become very hot.
- Never forcefully close the appliance as this could damage the lock. If too much food is inserted into the appliance and it cannot close, remove food in order to close and lock the appliance.
- Never use a metal fork or knife to remove food as this would damage the non-stick coating of the cooking surface. Use heat-resistant wood or plastic utensils only.
- Before removing the cooking plate, make sure that the appliance is unplugged and the plate is completely cool.
- Do not force the plates into the slots without releasing the latches.
- Always unplug the appliance from the wall outlet when not in use.

CLEANING

- Before cleaning, allow appliance to completely cool.
- Use a soft, damp cloth and mild detergent to clean the cooking surface.
- Do not use an abrasive cleaner.
- Do not clean with a wire brush or other abrasive objects.
- Clean the appliance every time after use.

INSERTING/REMOVING PLATES

bcp

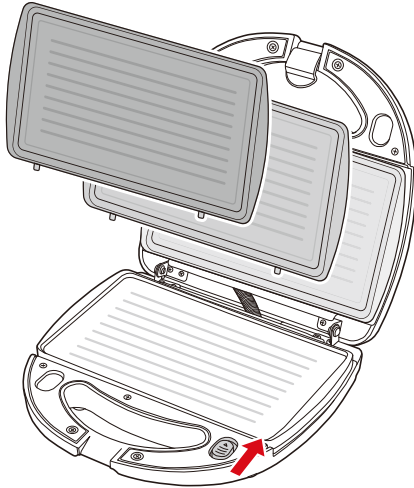

INSERT PLATES:

Insert the top and bottom cooking plates into the main unit and slide them into place.

Push and release the latches on the top and bottom to lock the plates.

REMOVE PLATES:

To remove the plates, push back the latches on the top and bottom.

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

CONTACT US; WE'RE HERE 7 DAYS A WEEK TO HELP YOU!



bestchoiceproducts.com



customerservice@bestchoiceproducts.com



844.948.8400



LEARN MORE!

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.