




BEST CHOICE
PRODUCTS

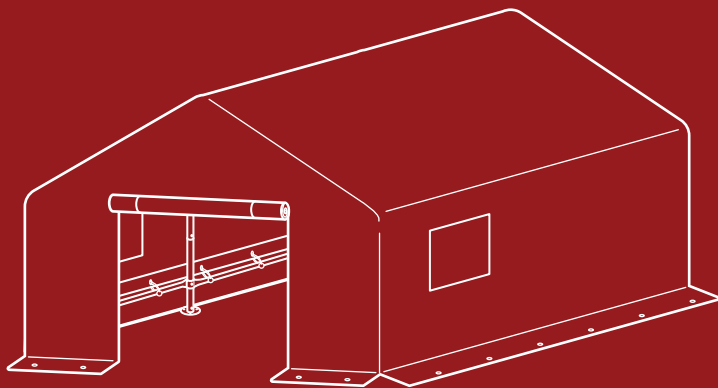

INSTRUCTION MANUAL

Outdoor Fabric Storage Shed



This product is difficult
to move once assembled,
build this product in its
intended location on
your property.

bestchoiceproducts.com

! NOTICE

Please retain these instructions for future reference.

- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all rods, knobs, or clips are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- Do not attempt to drive ground stakes into stone, brick, concrete or other hard surfaces.
- Do not attempt to lift or relocate this product unless all contents has been removed.
- This product is intended for residential use only.

TOOLS REQUIRED



WRENCH
(PROVIDED)



ALLEN WRENCH
(PROVIDED)



RUBBER Mallet
(RECOMMENDED)



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

HARDWARE

1

M6 x 40mm
BOLT



6 PCS

2

M6 x 45mm
BOLT



6 PCS

3

M6 NUT




12 PCS

PARTS

A


ROOF SUPPORT

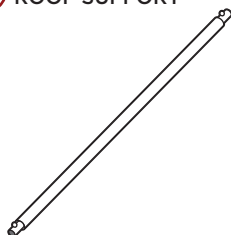

6 PCS

B

FRAME SUPPORT

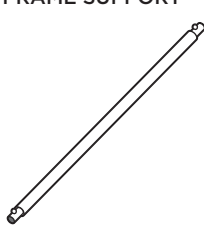

6 PCS

C

UPPER LEG SUPPORT




6 PCS

PARTS

D


LOWER LEG SUPPORT

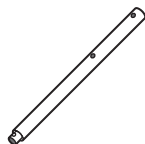

6 PCS

E

BOTTOM SUPPORT
BEAMS

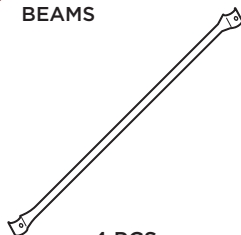

4 PCS

F

 
FRONT/BACK ROOF
RECEIVER



2 PCS

G

CENTRAL ROOF
RECEIVER



1 PC

H

CORNER RECEIVER



4 PCS

I


CENTRAL SIDE
RECEIVER



2 PCS

J


FOOT CAP

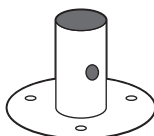

6 PCS

K

GROUND STAKE

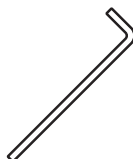

50 PCS

L

 
ELASTIC LOOPS



12 PCS

M

CANOPY



1 PC

N

ACCESSORY HOOKS




6 PCS

PRODUCT ASSEMBLY

1


Attach two **part F front/back roof receivers** to two **part B frame supports**.
Connect the free end of the two **part B frame supports** to the **part G central roof receiver**.

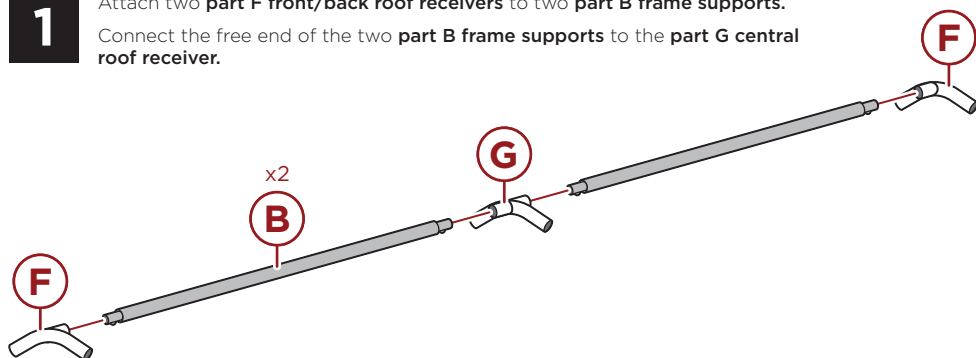

2

Insert two **part A roof supports** each into the **part F front/back roof receiver**, two supports per receiver.


Insert two **part A roof supports** into the **part G central roof receiver**.

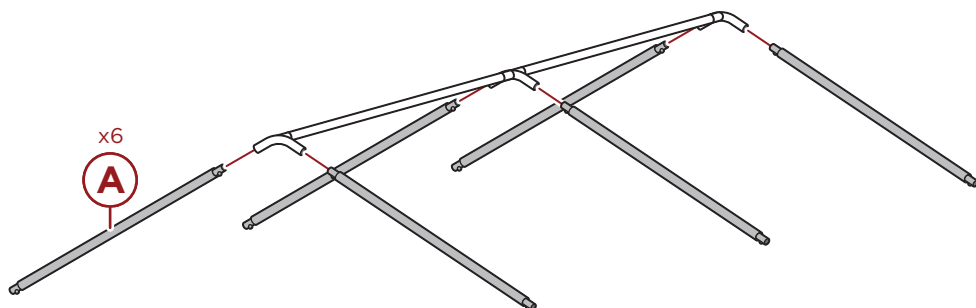

3

Attach one **part H corner receiver** to each **part A roof support** on the opposing ends of the roof assembly.


Attach one **part I central side receiver** to each **part A roof support** in the center of the roof assembly.

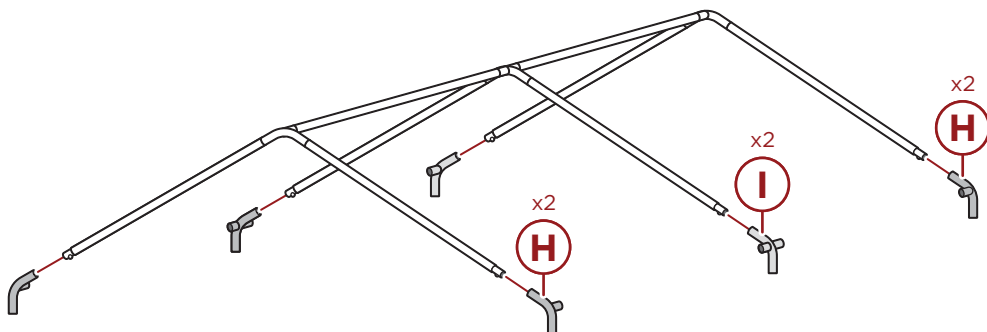

PRODUCT ASSEMBLY


4

Attach four **part B** frame supports to the **part H** and **part I** receivers.

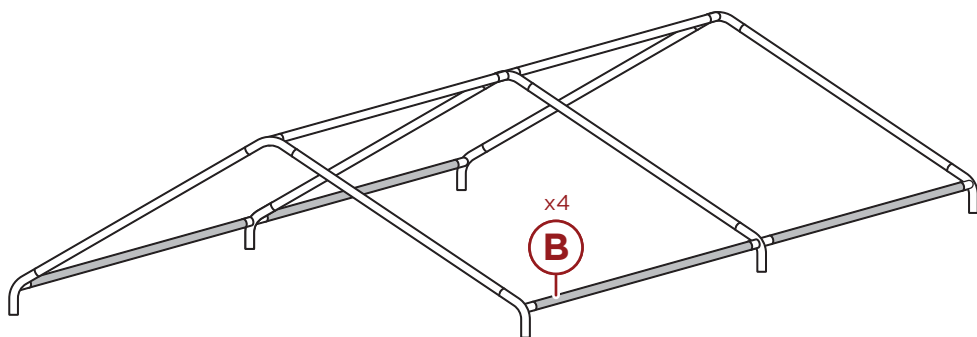

5


Insert one **part C** upper leg support into each **part H** and **part I** receiver, six leg supports total.

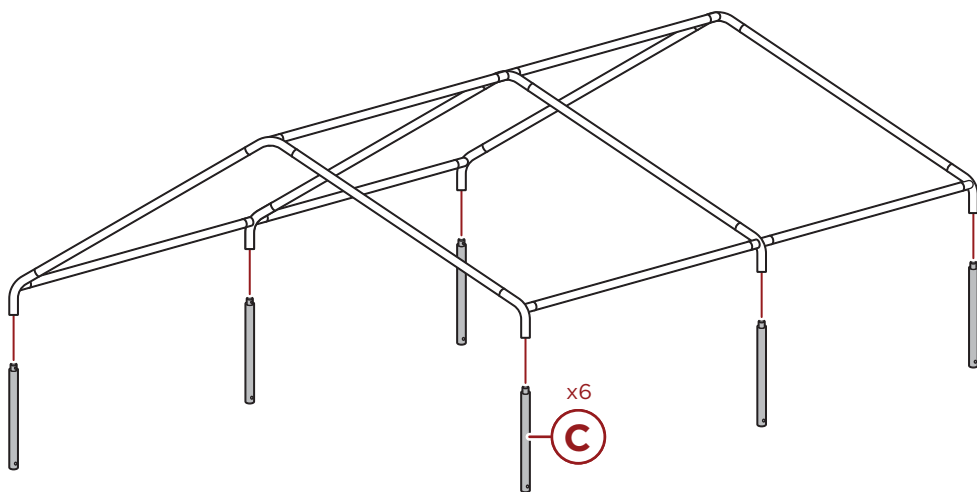

PRODUCT ASSEMBLY


6

Drape the **part M canopy** over the roof assembly.

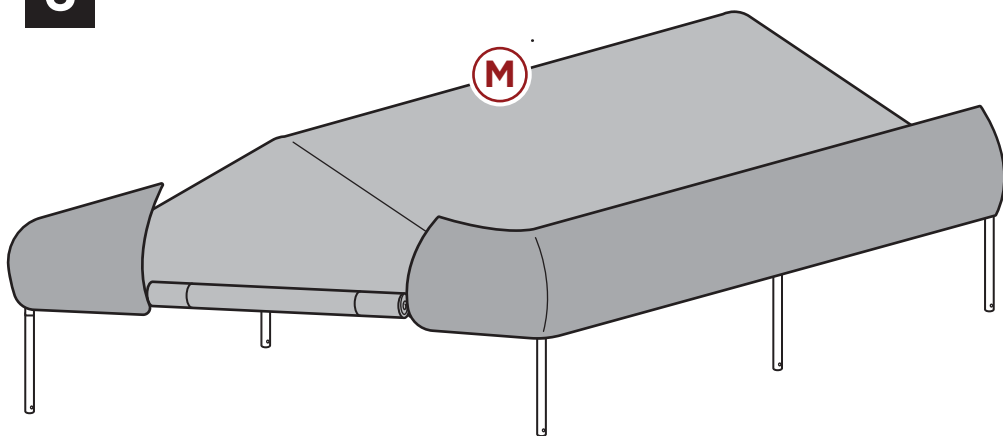

7

Attach one **part D lower leg support** to each **part C upper leg support**, six leg supports total.

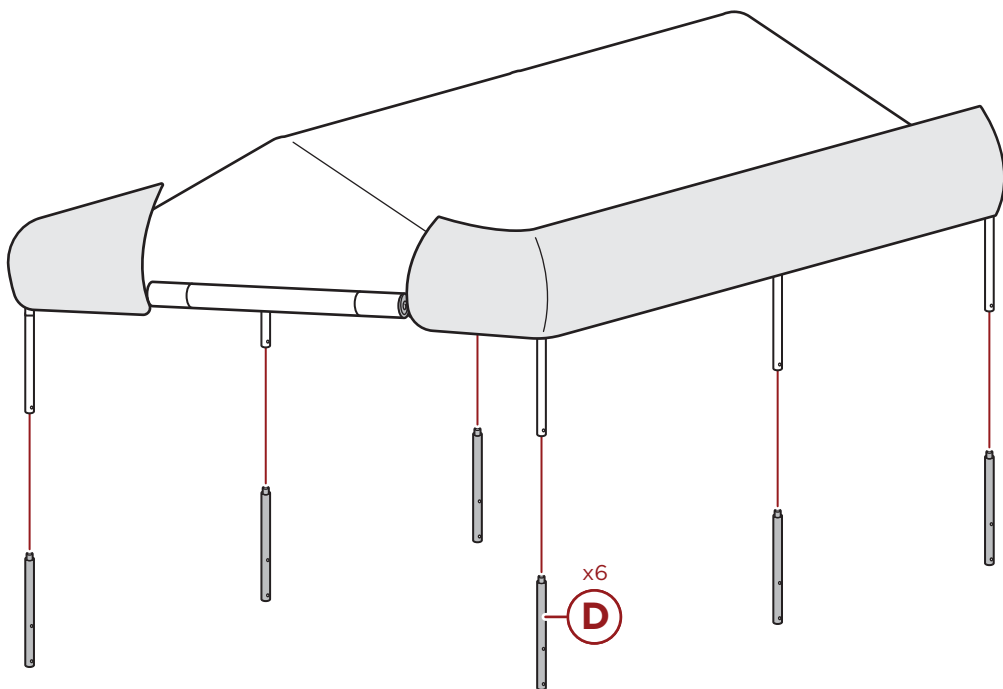


PRODUCT ASSEMBLY

8

Attach four **part E bottom support beams** to the four **part D lower leg supports** in the corners of the assembly with four **part 2 bolts** and four **part 3 nuts**.

Secure the **part E bottom support beams** in to the **part D lower leg supports** in the center of the assembly with two **part 2 bolts** and two **part 3 nuts**.

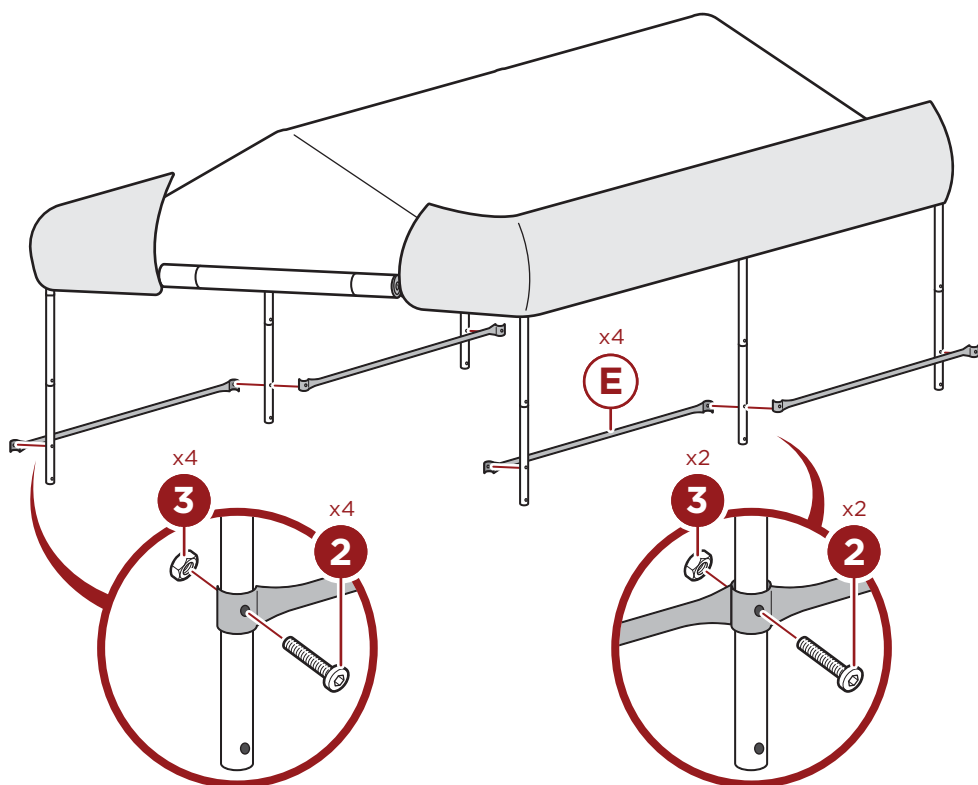

PRODUCT ASSEMBLY


9

Place on **part J foot cap** onto the bottom of each **part D lower leg support**, six foot caps total.

Attach each foot cap to the **part D lower leg supports** with one **part 1 bolt** and one **part 3 nut**, six nuts and six bolts total.

Secure each foot cap to the ground with three **part K ground stakes**, eighteen stakes total.


NOTE: It is recommended to use a rubber mallet when driving stakes to prevent personal injury or property damage.

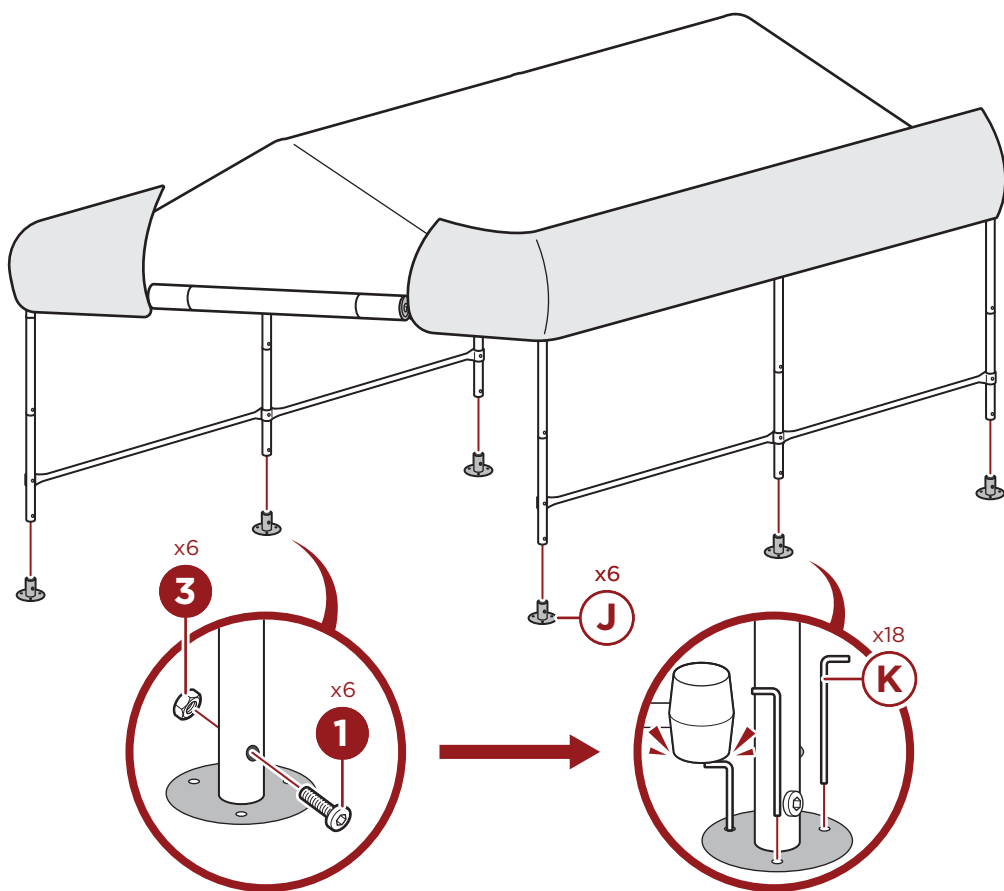

PRODUCT ASSEMBLY

10

Draw the canopy over the frame assembly until it sits evenly on all sides, then use twelve **part L** elastic loops to attach the **part M** canopy to the **part E** bottom support beams.

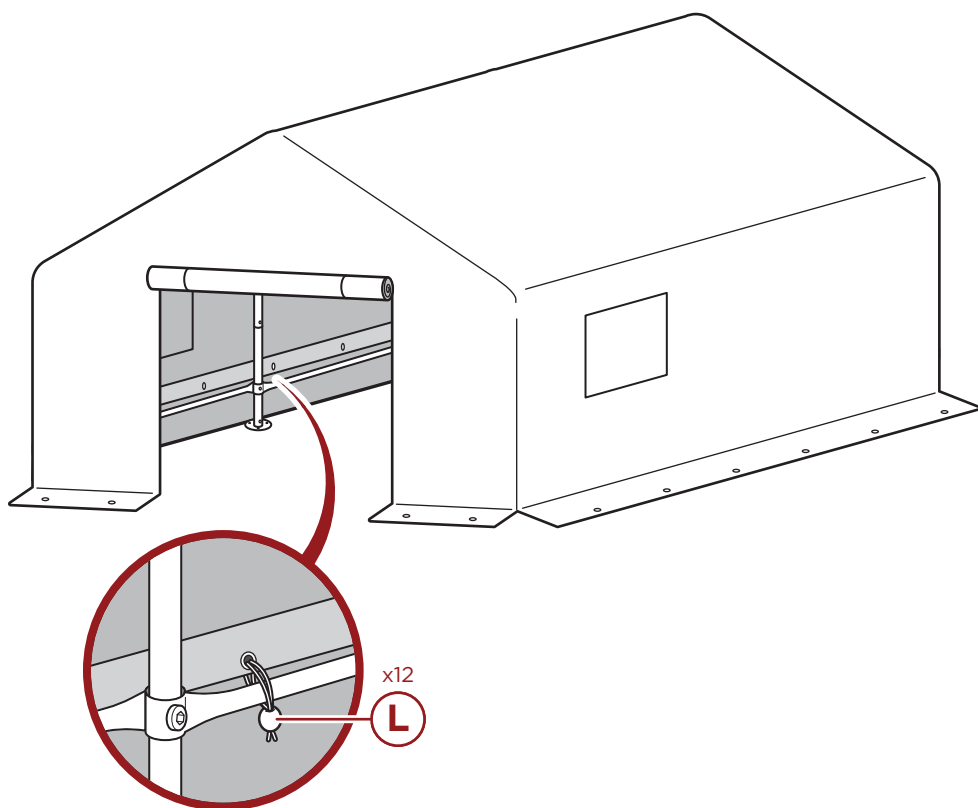


PRODUCT ASSEMBLY

11

Drive the remaining twenty **part K ground stakes** into the pre-fabricated holes on the bottom of the **part M canopy** to complete assembly.

Hang the **part N accessory hooks** on the **part B frame supports** as desired.

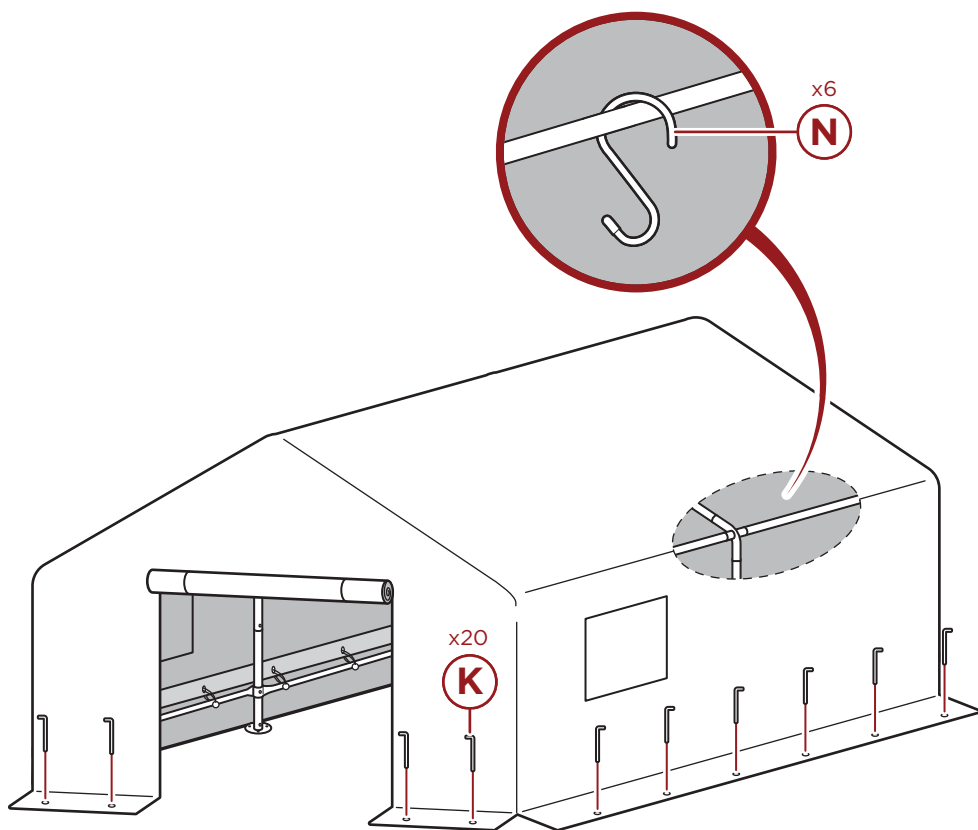



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.