### 88 5180 182

**Computer Desk** 

0

3

0

0

0


#### IMPORTANT

**home**styles<sup>®</sup>

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

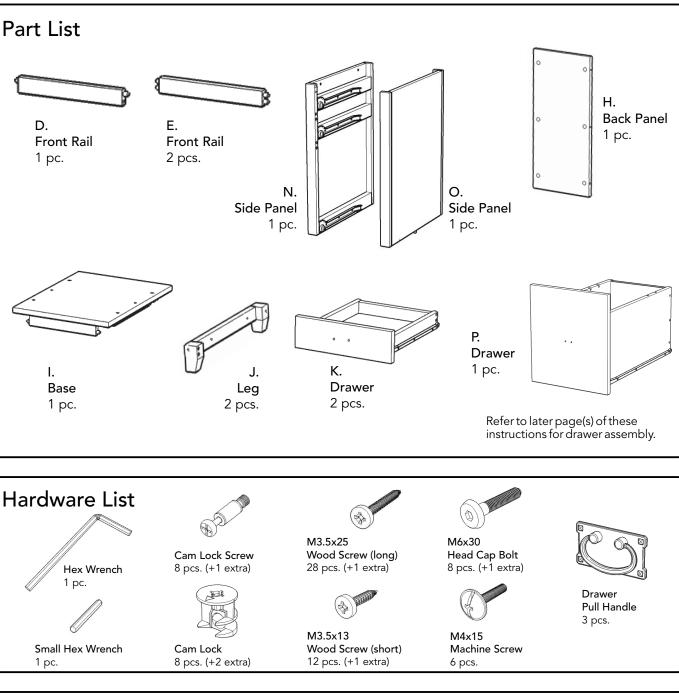

## For assembly also need cartons 88 5180 181, 88 5180 183.

Tool(s) required for assembly: Phillips screwdriver


Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

#### **Right Unit**

#### Assembly Instructions 2/6


#### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

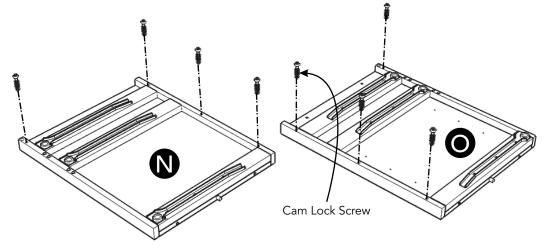

#### STEP 1

Insert Cam Lock Screws into pre-drilled holes of Side Panels (N) and (O). (See Figure 1)

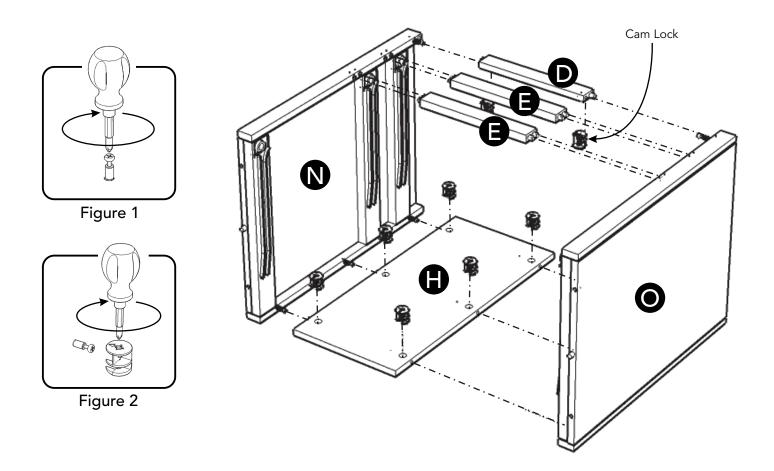

#### STEP 2


Attach Front Rails (D), (E) and Back Panel (H) to Side Panel (N) with Cam Locks. (See Figure 2) Attach Side Panel (O) to unit with Cam Locks.

### Assembly Instructions 3/6

#### STEP 3


Attach Base (I) to unit with Head Cap Bolts. (See Figure 3)


Attach Legs (J) to unit with Head Cap Bolts.

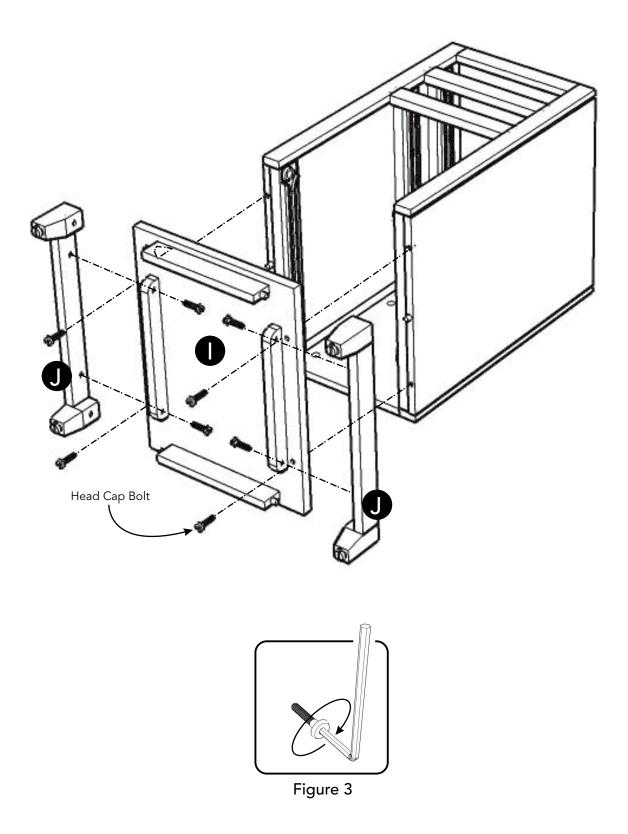

#### Assembly Instructions 4/6

#### Drawer (K)

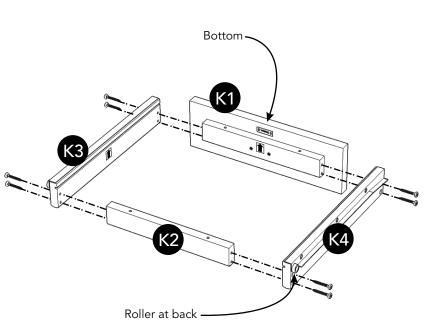

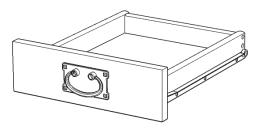

#### STEP 4


Attach Drawer Front (K1) and Drawer Back (K2) to Drawer Side (K3) with Wood Screws (long).


Attach Drawer Side (K4) to unit with Wood Screws (long).

#### STEP 5

Slide Drawer Bottom (K5) into the grooves of Drawer Sides (K3) and (K4) until it meets Drawer Front (K1).


Attach Drawer Bottom (K5) to unit with Wood Screws (short).

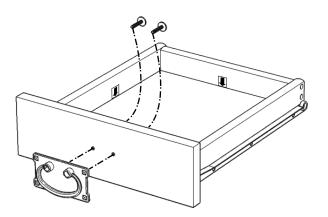

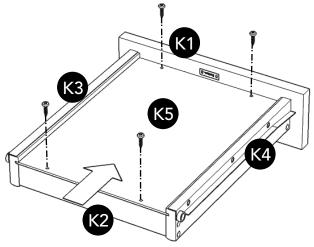



#### STEP 6

Attach Drawer Pull Handle with Machine Screws.

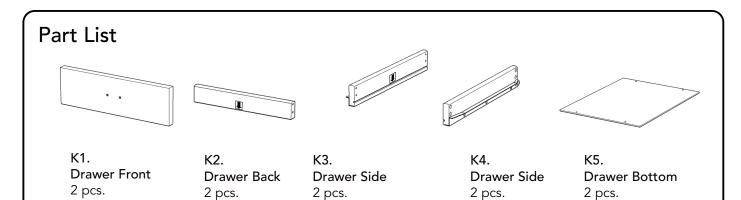

#### Assembly Instructions 5/6

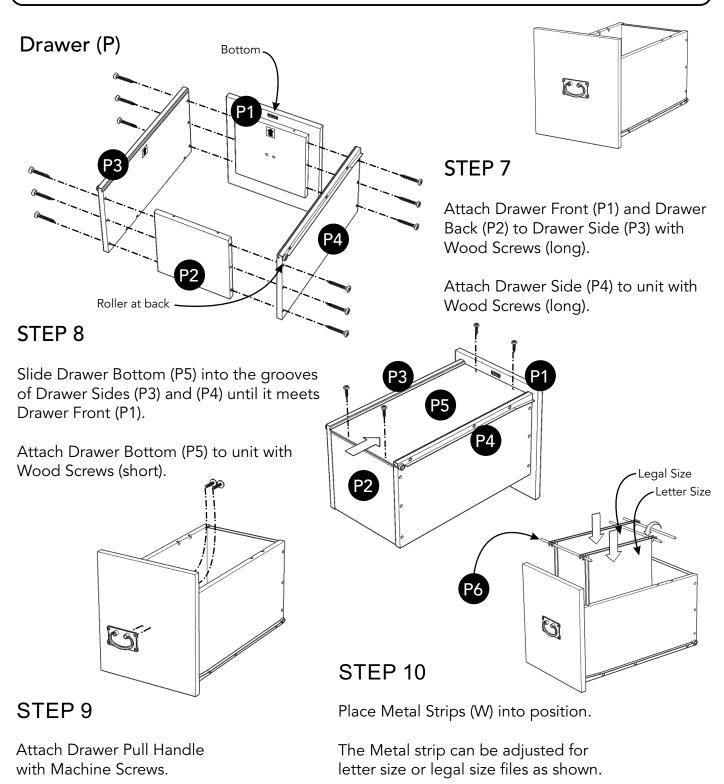


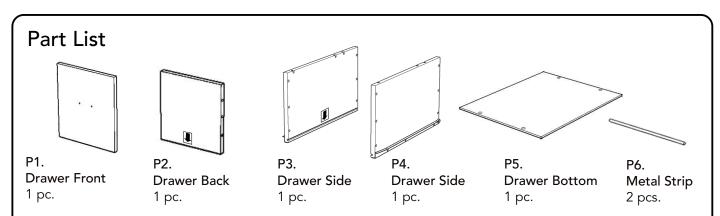

### STEP 11

Turn unit to its' upright position.

Slide Drawers (K) and (P) into place.

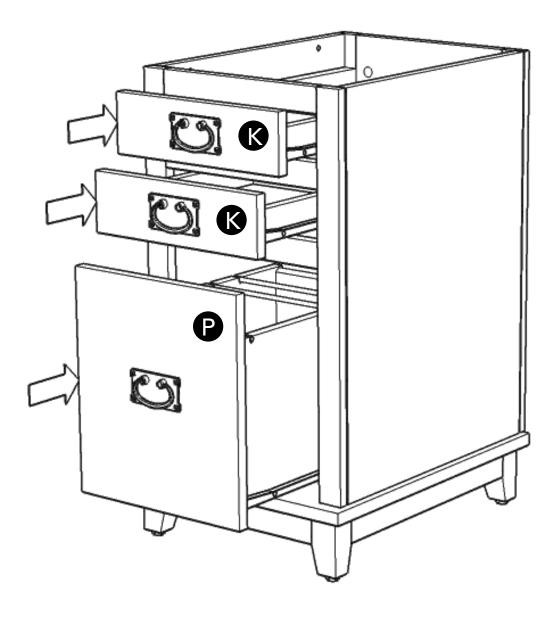

# CARE INSTRUCTIONS

# NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

# NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at: www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319