



BEST CHOICE
PRODUCTS



INSTRUCTION MANUAL

5ft Pop-Up Penguin

! NOTICE

Please retain these instructions for future reference.

- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.



1 PERSON
ASSEMBLY



UP TO 25 MIN.
ASSEMBLY

! WARNING

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the figures.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.

HARDWARE

1

U-STAKE



4 PCS

2

COTTER PIN



2 PCS

3

ZIP TIES



3 PCS

PARTS

A

PENGUIN BODY



1 PC

B


TOP POLE



1 PC

C

BOTTOM INNER POLE

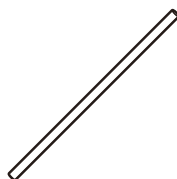

1 PC

D


WINGS



1 SET

E

CANDY CANE

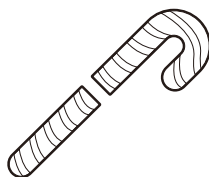

1 SET

F


SCARF



1 PC

G

POWER ADAPTER

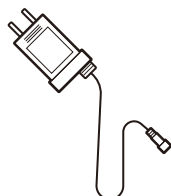


1 SET

PRODUCT ASSEMBLY

1

Locate the **part A penguin body** and turn it upside down with the penguin's head on the ground.



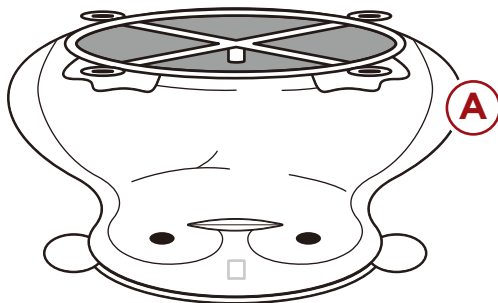


2

Attach **part B top pole** to **part C bottom pole**.

Insert the connected **part B** and **C** through the bottom opening of the **part A penguin body**.

Insert the **part B top** of the pole into the opening in the penguin's hat, then thread the opposite end of the **part C bottom pole** through the metal insert at the bottom of the penguin body.

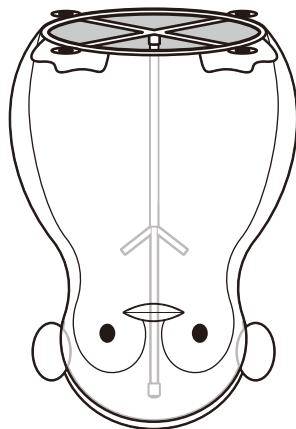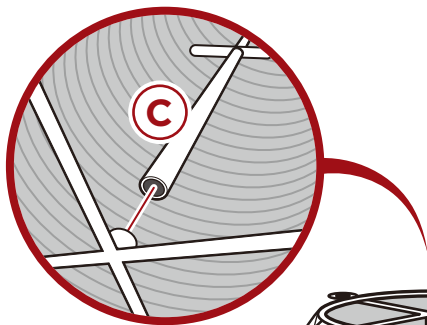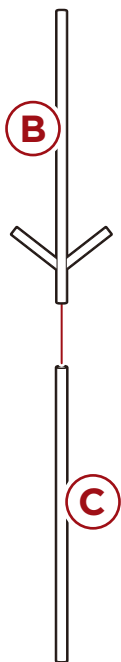


PRODUCT ASSEMBLY

3

Locate the openings on either side of the **part A penguin body** and insert the **part D wings**.
Connect the wings to the branches of the **part B top pole**.


NOTE: If the light plugs on the wings are not connected to the body, connect them before proceeding.

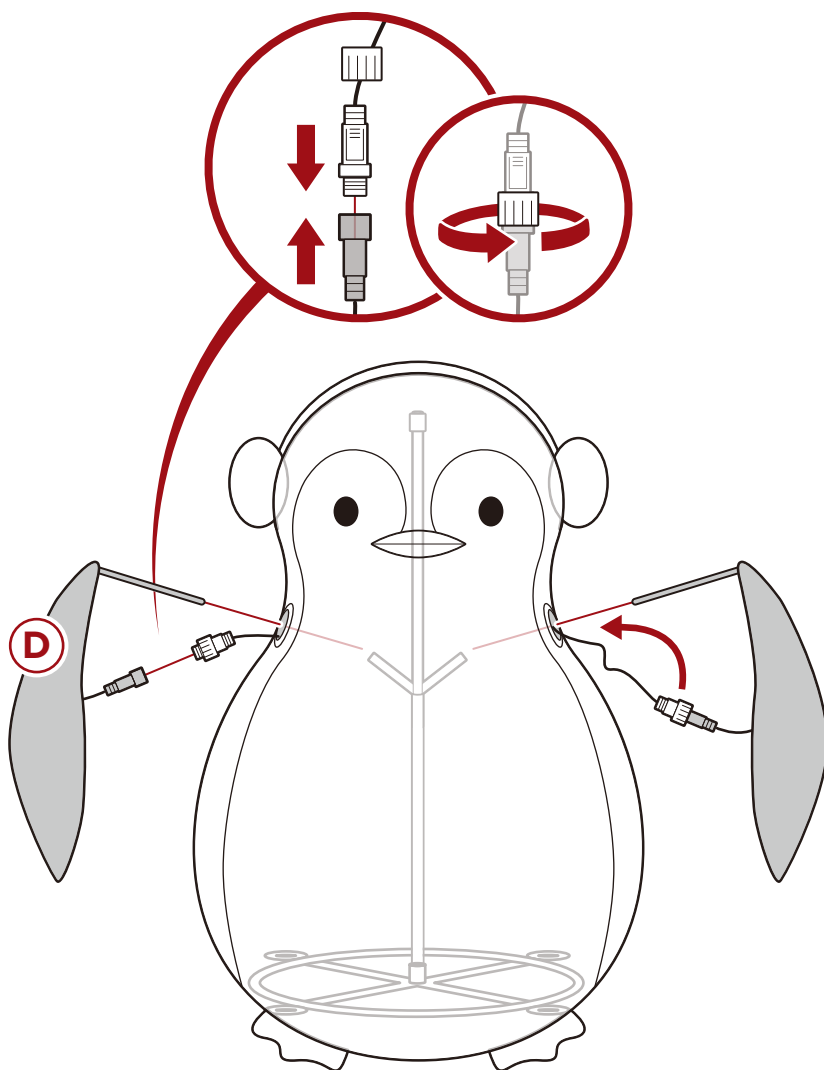

PRODUCT ASSEMBLY


4

Assemble **part E candy cane** with one **part 3 zip tie**.

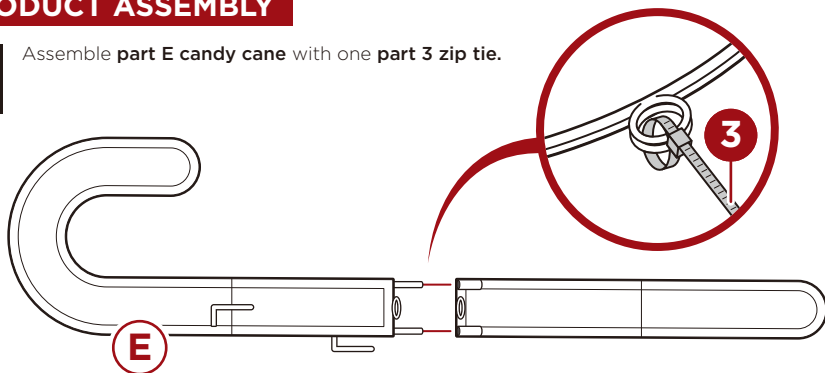

5


Insert the assembled **part E candy cane** into the designated holes on the **part D wing**, then secure with two **part 2 cotter pins**.

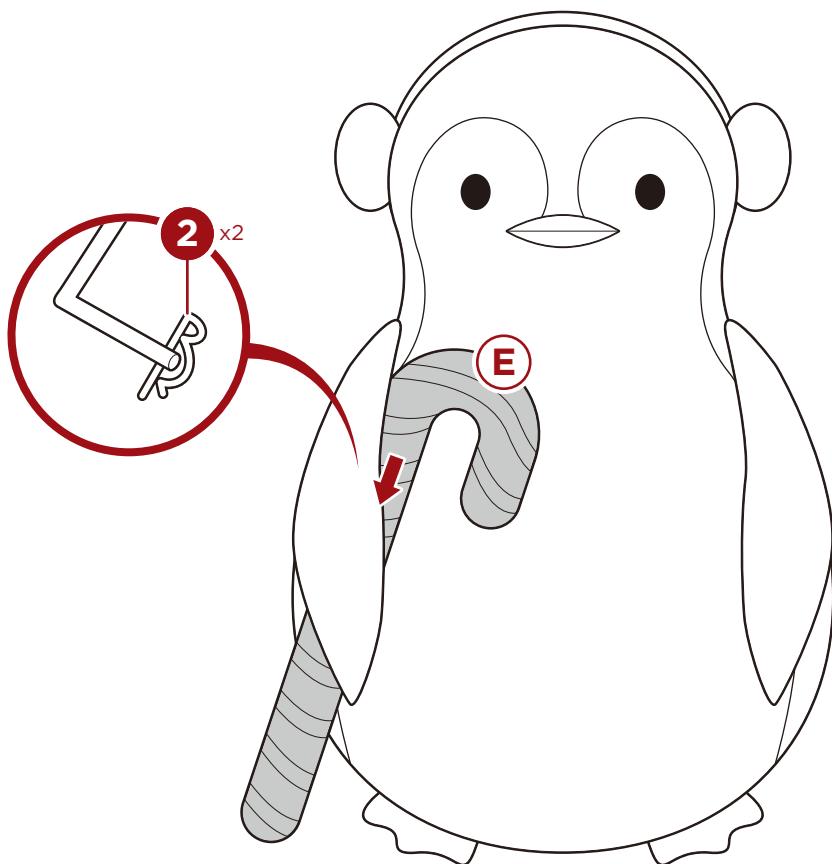

PRODUCT ASSEMBLY

6


Wrap the **part F scarf** around the penguin's neck.

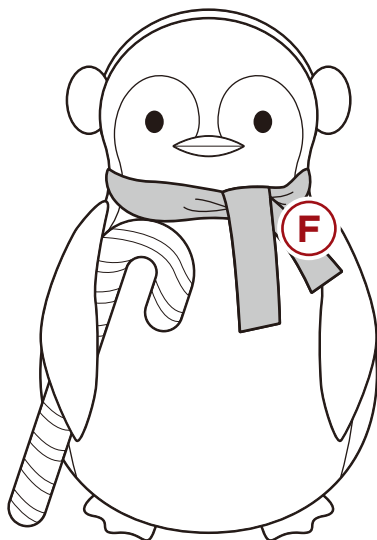

7

Secure the penguin figures to the ground with four **part 1 stakes**.

Plug the **part G power adapter** into a wall outlet to turn on the lights.

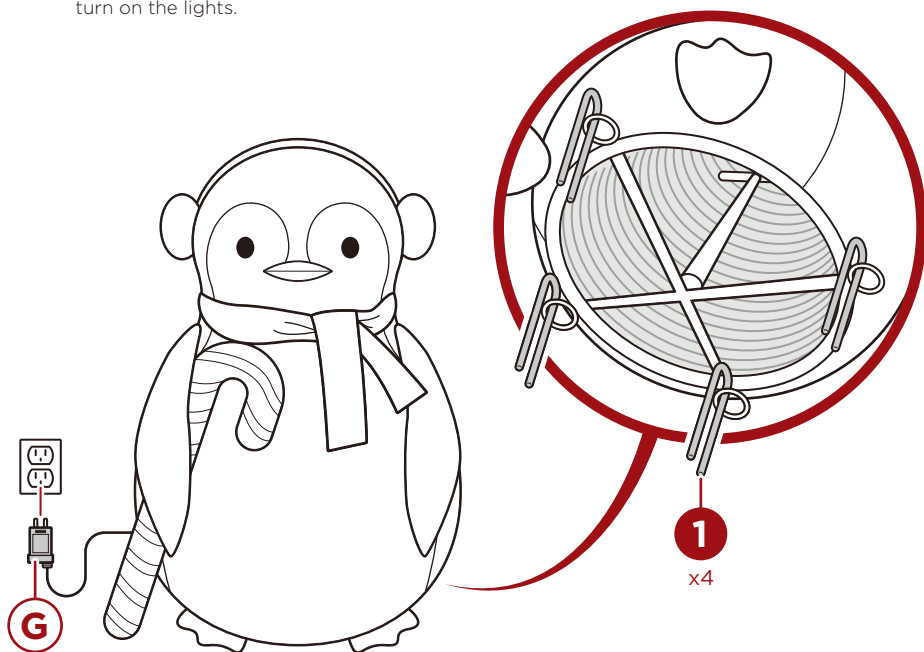



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.