



bestchoiceproducts

Standing
ANIMATRONIC WITCH



SOUND
ACTIVATED




TOUCH
ACTIVATED



INDOOR/
COVERED PORCH

bestchoiceproducts.com

SKY5813

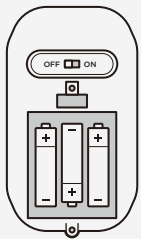

BUTTON

BATTERY BOX INSTALLMENT

1. Locate the battery box in the back of the animatronic
2. Unscrew the battery cover and insert 3 AA batteries

BATTERY BOX FUNCTION

AUTOMATIC MODE: Turn the switch ON to activate touch sensor

MANUAL MODE. Turn the switch OFF. Press the button to activate the animatronic



Questions about your product? Visit our help center via the QR code or link below and search for your product.

[bestchoiceproducts.com/pages/help](https://www.bestchoiceproducts.com/pages/help)

SKY5813




REQUIRES

- #0 or #1 Mini Screwdriver (Not Included)
- 3 AA Batteries (Not Included)

STAND ASSEMBLY

1. Insert poles into connectors to build stand
2. Slide four legs into base connector
3. Attach figure to top of stand

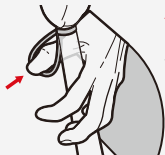

ATTACHING BROOM

Loop the elastic around the witch's thumb