
 





 







# ASSEMBLY INSTRUCTION


## SETTEE

<b>A</b> Seat  1PC	<b>B</b> Bottom Frame  1PC	<b>C</b> Front Leg  2PCS	<b>D</b> Rear Leg  2PCS
<b>E</b> Bolt-Small 1/4"X1-1/2"  6PCS	<b>F</b> Lock Washer 1/4"  6PCS	<b>G</b> Flat Washer 1/4"X16mm  6PCS	<b>H</b> Allen Key 4mm  1PC
<b>I</b> Bolt-Big 5/16"X2-1/2"  8PCS	<b>J</b> Lock Washer 5/16"  8PCS	<b>K</b> Flat Washer 5/16"X19mm  8PCS	<b>L</b> Allen Key 5mm  1PC

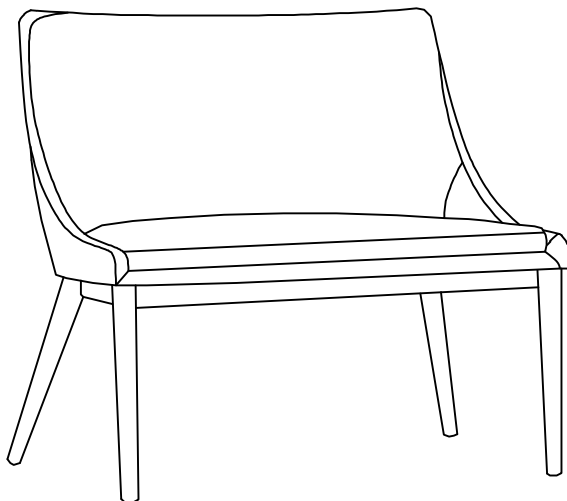


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**1** Attach Front Leg (C) and Rear Leg (D) to Bottom Frame (B) with Allen key (L), Bolt-Big (I), Lock Washer (J), and Flat Washer (K).

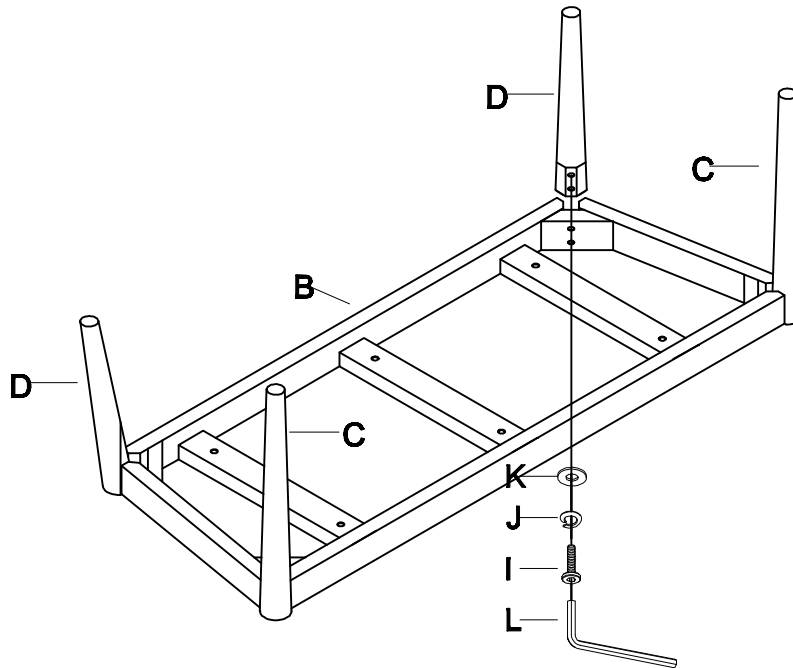

**2** Attach Bottom Frame (B) to Seat (A) with Allen Key (H), Bolt-Small (E), Lock Washer (F), and Flat Washer (G).

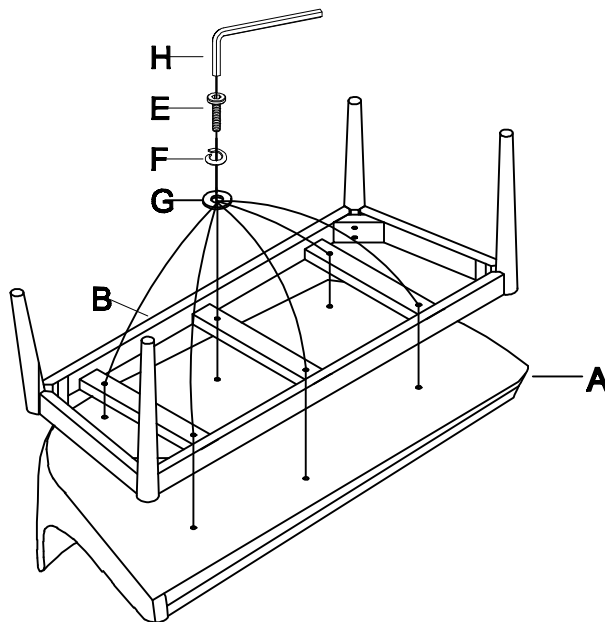

#### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.