


KITCHEN HELPER®

Jr. Kitchen Helper Step-up

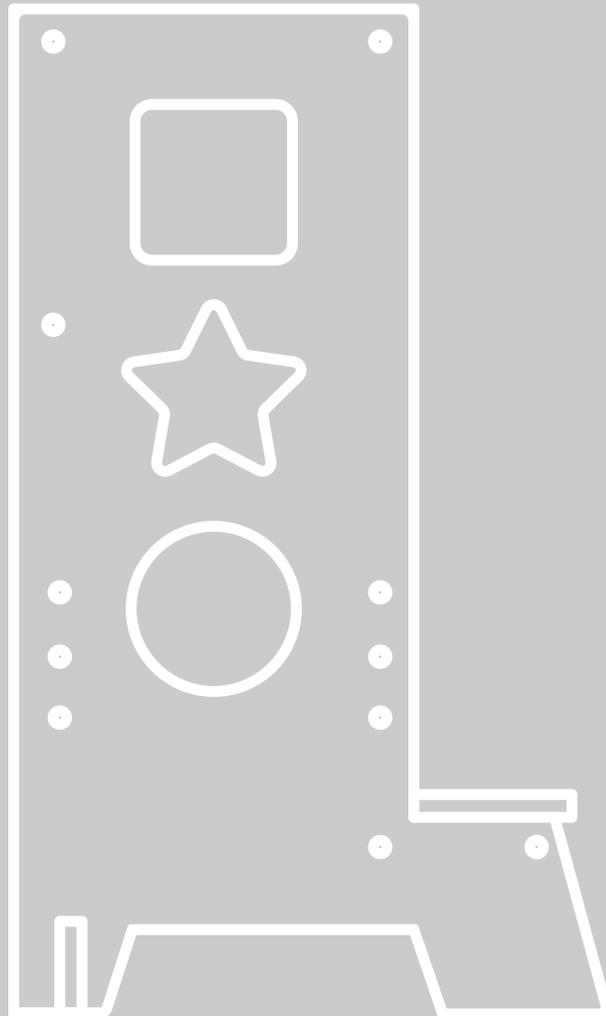



guide  craft

Instruction Manual



Jr. Kitchen Helper Step-up

Assembly Instructions

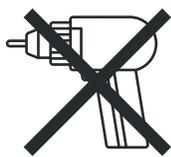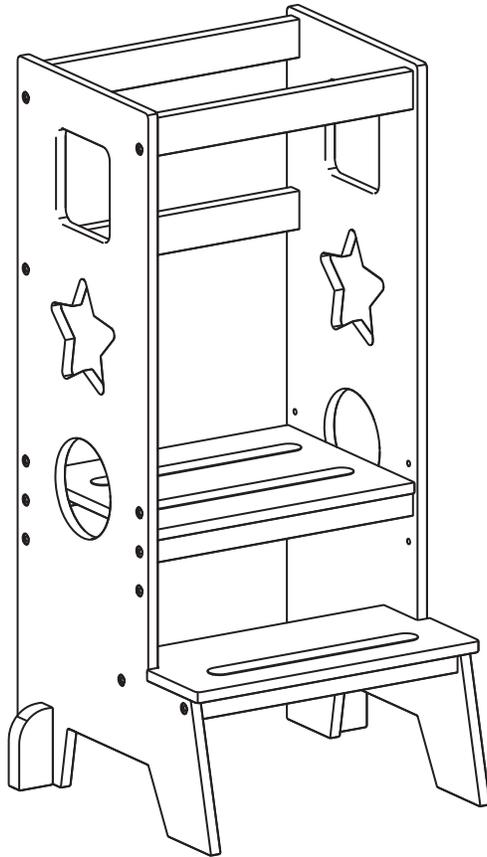



**Do Not
Over Tighten**

**Do Not
Use Power Tools**




Required for assembly.



Jr. Kitchen Helper Step-up
Parts and Hardware

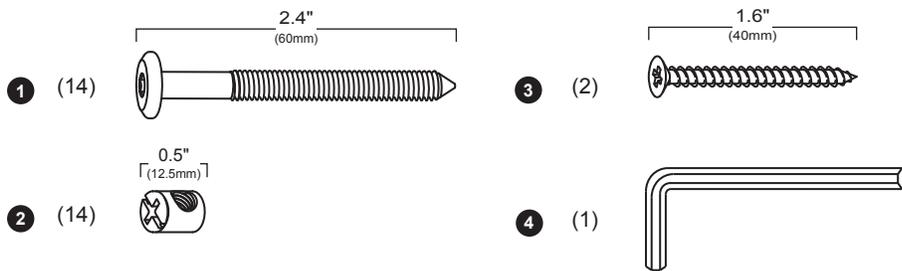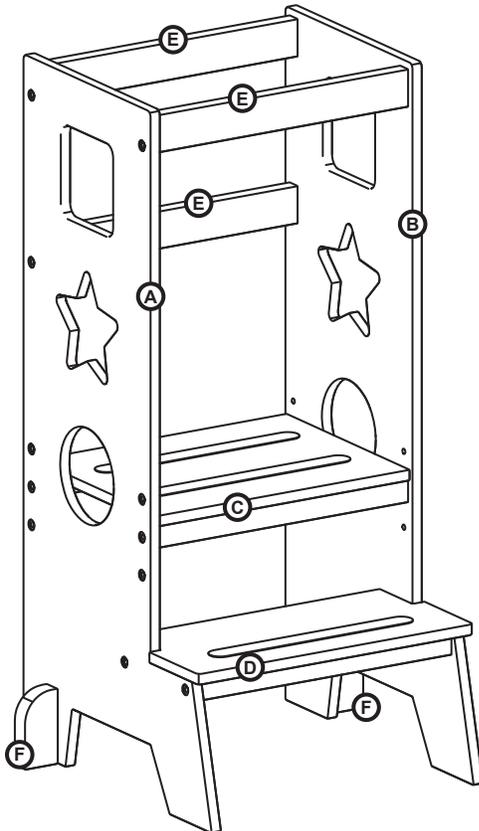


Jr. Kitchen Helper Step-up Platform Height Selection

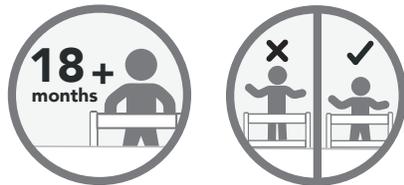


The Jr. Kitchen Helper Step-up is designed to be used at three different heights based on the age and height of a child. Once a child's waist is above the top of the Jr. Kitchen Helper Step-Up, please adjust the platform (part ©) to a lower position. This product is not intended to be used with children under the age of 18 months.

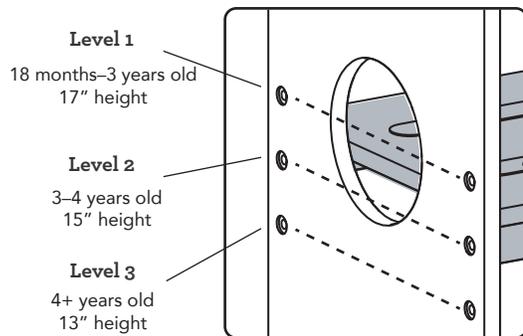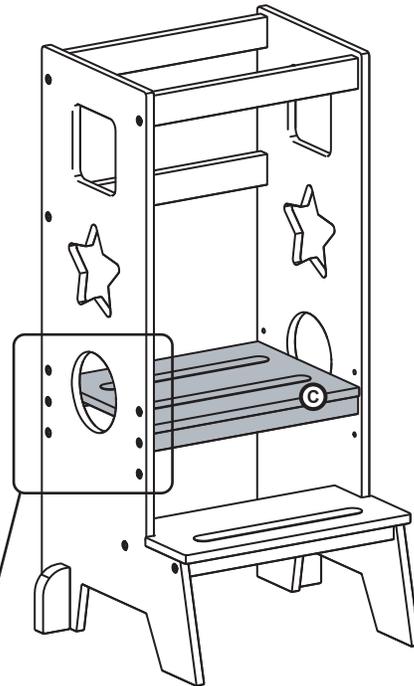


Step 1

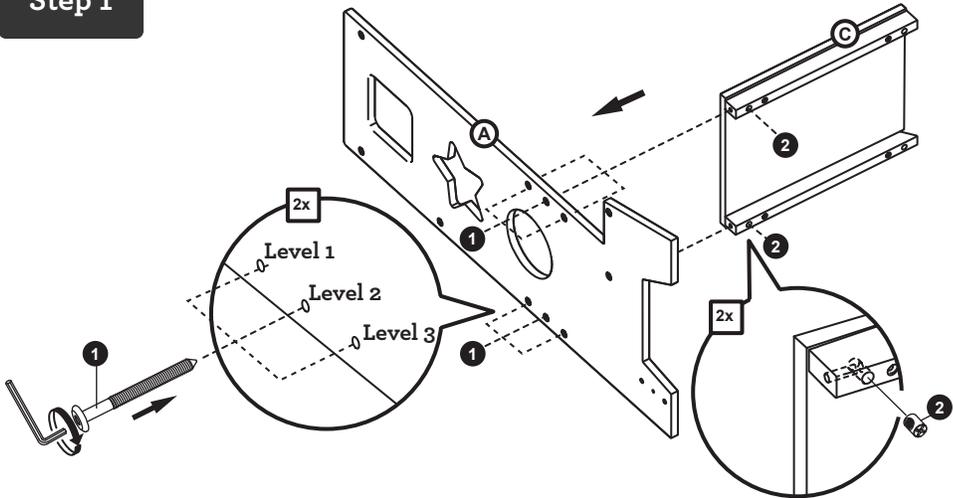


Step 2

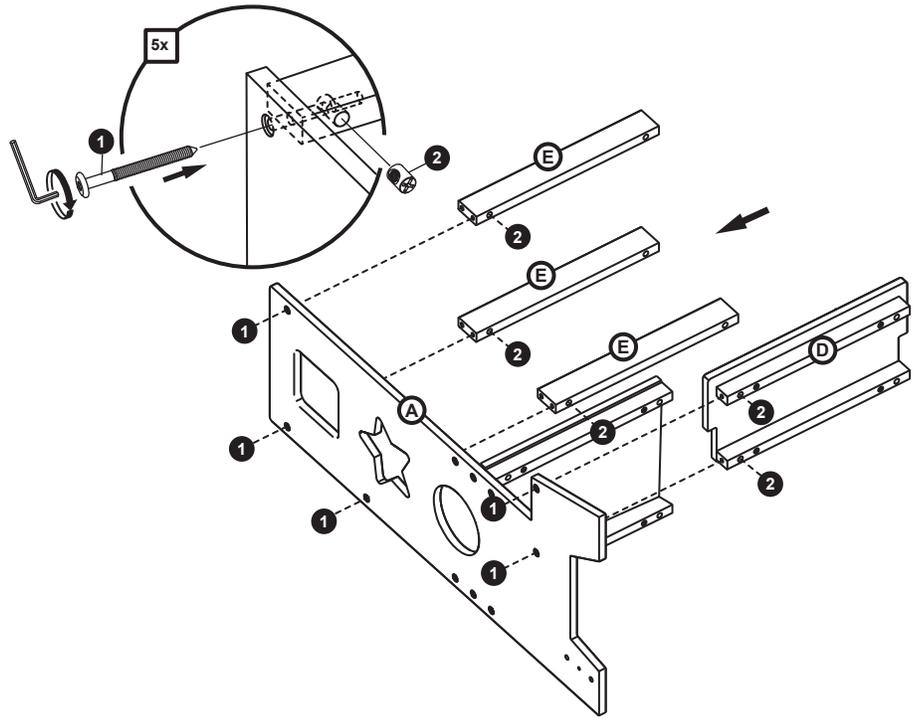

Step 3

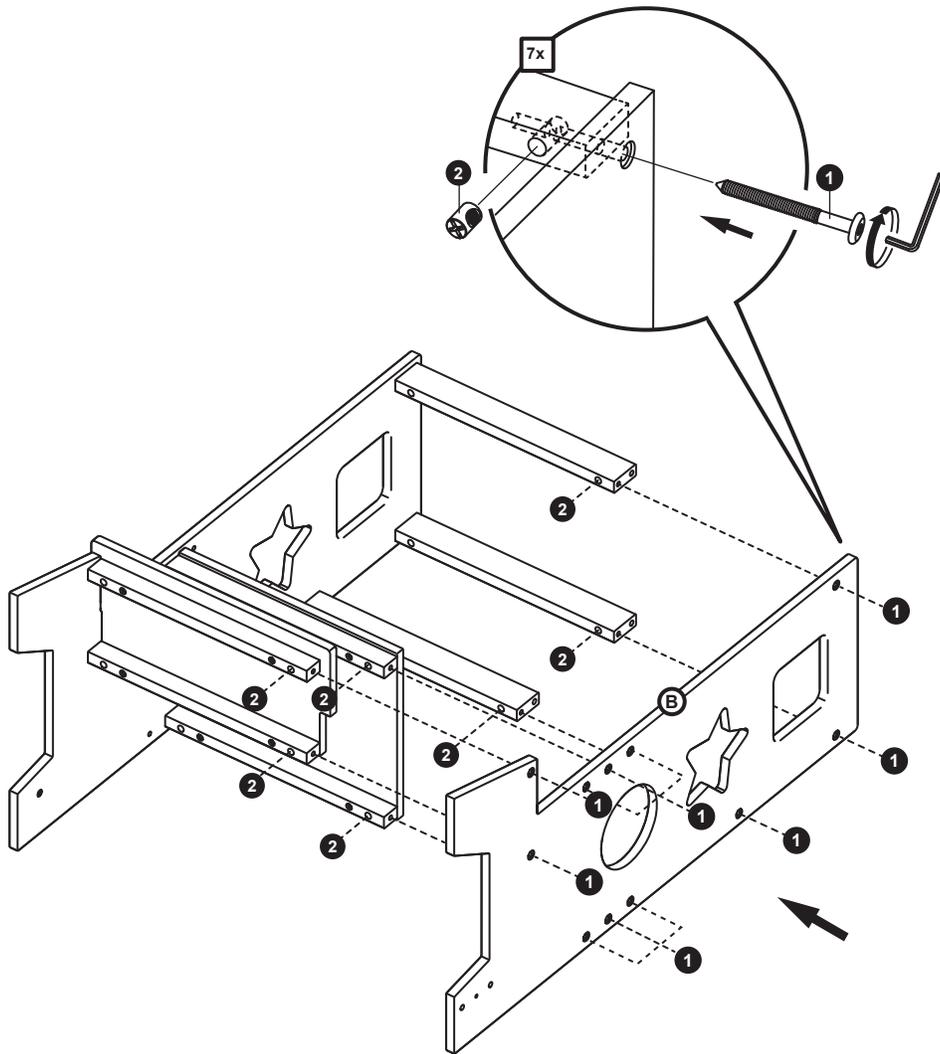


Step 4

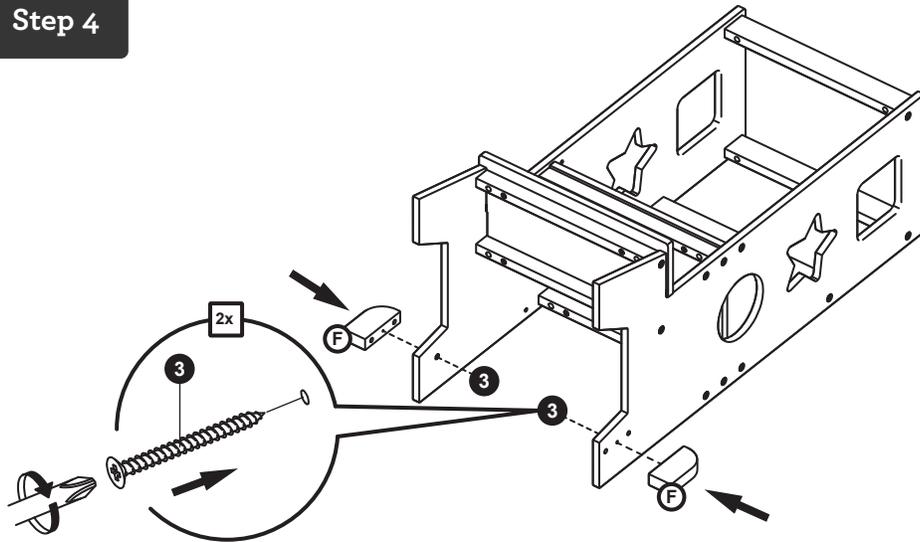

Done!


Notice : As your child grows, the platform height must be adjusted.

Level 1

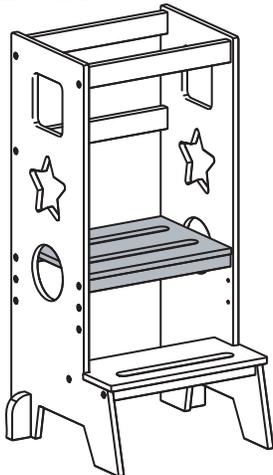


18 months–3 years old
17" height

Level 2

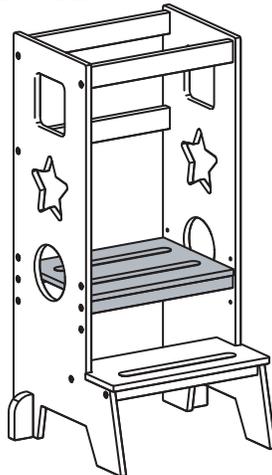

3–4 years old
15" height


Level 3

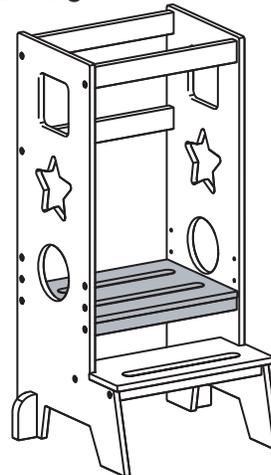

4+ years old
13" height

Jr. Kitchen Helper Step-up

Additional Information

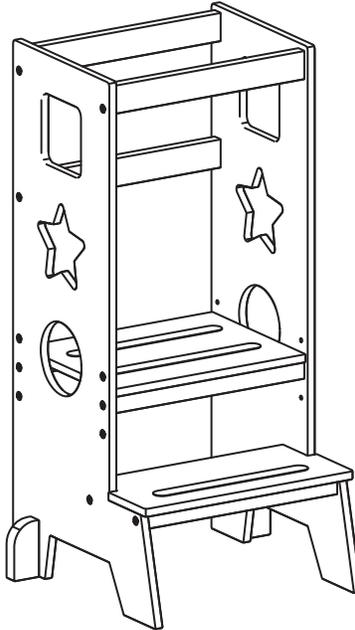

Customer Service

For parts, please contact your dealer. Reference your item name and number and order number.

Five Year Limited Warranty

Your product is warranted to be free from defects in material and craftsmanship for a period of five (5) years. This warranty does not apply to damage caused by abuse, misuse, improper care or altered product. This warranty is provided to the original purchaser with proof of purchase, and is non-transferable.

The manufacturer's liability under this warranty is limited to the repair or replacement of the defective product, at

the manufacturer's sole option. This express, limited warranty is granted in lieu of all other warranties, including implied warranties of merchantability and fitness for a particular purpose

Cleaning Instructions/Maintenance

To clean your product, use mild soap and water on a damp cloth. Do not use window cleaners or cleaning abrasives as they will scratch the surface and could damage the protective coating.

Keep supplied hardware and tools with your product for future reference. Periodically check your product and tighten hardware if necessary.

KITCHEN HELPER®


Jr. Kitchen Helper Step-up

Safety Instructions

Guidecraft's Jr. Kitchen Helper Step-up is designed, manufactured and tested with strict adherence to child safety standards. **Please read, retain and follow all safety instructions.**



Watch children closely
Never leave a child unattended on the Kitchen Helper. Adult supervision required at all times. Failure to attend to children may result in injury or death.

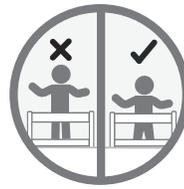

Ensure correct platform height
The top crossbar of the Kitchen Helper should be above the child's waist. If not, change the platform to the lower settings.



Slippery when wet
Keep non-skid platform dry at all times. Risk of falling when platform is wet.



Not a climbing structure
The Kitchen Helper is for providing a counter-height experience for children to safely and securely be in the kitchen alongside adults.



Careful positioning
Products in the kitchen not for use by children should be kept out of reach.

 


Ensure appropriate age and weight
Intended for children age 18 months+;
Safely supports up to 125 lbs/56 kg



Check hardware
Inspect all screws and bolts periodically to ensure they are securely fastened.





guide  craft[®]