



Hockey Table

Model # G03509





We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-866-556-2758

FAX: 1-866-873-3531

tablehockey@escaladesports.com

Or write to:

Escalade Sports

Customer Service Department

P.O. Box 889

Evansville, IN 47706

Please visit our Web site at:

www.escaladesports.com


Please have your date code when inquiring about parts.

When contacting Escalade Sports please provide your model number, serial number (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.

Your Model Number **G03509**

Date Code: **G03509HG08**

IMPORTANT! READ THIS MANUAL ALL THE WAY THROUGH BEFORE BEGINNING TO PUT YOUR GAME TABLE TOGETHER! THEN READ EACH STEP BEFORE STARTING THAT STEP.

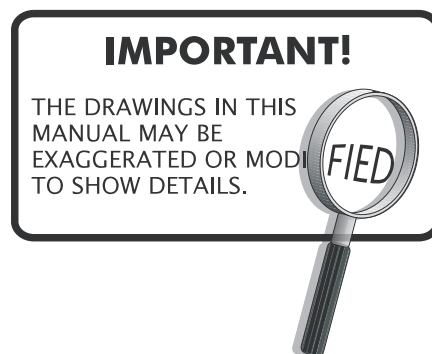

TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS GAME TABLE

Tools Required:

Wrench T1- Included with the table
Philips Screwdriver
Furniture Polish and Cloth

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your hockey table.


1. When installing parts that have more than one bolt, start **ALL** the bolts in that part by hand before tightening anything.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.




WARNING:

READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO ADULTS ARE NEEDED TO PUT THIS GAME TABLE TOGETHER.


PARTS IDENTIFIER
(Not TO Scale)

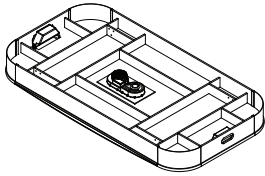


P1-Main Frame
1 piece

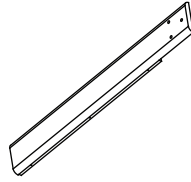


P2- Right Leg
2 pieces

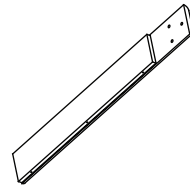


P3- Left Leg
2 pieces

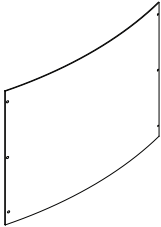

P4-Outside Leg Panel(Curved)
2 pieces

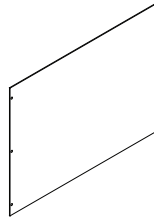


P5-Inside Leg Panel(Flat)
2 pieces

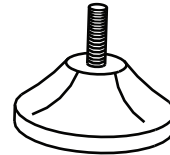

P6-Leg Leveler
4 pieces


Hardware IDENTIFIER
(Not TO Scale)

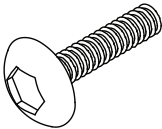

H1-M8X30mm Bolt
12 pieces



 H2- Leg Washer
12 pieces




H3- 3.5X30mm Washer Head Screw
24 pieces



T1-Allen Wrench
1 piece

ACCESSORIES
(Not TO Scale)

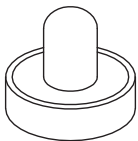


A1-Red Striker
4 pieces



A2-Striker Felt Pad
4 pieces



 A3-Red Puck
4 pieces



A4-Adapter
1 Piece



WARNING: Choking Hazard --Table contains small balls and/or small parts. Not for children under 6 years.

1. Find a clean level place to assemble your table. We recommend using the box top to protect parts during assembly. With the help of another adult, place the Main Cabinet P1 face down.

2. Attach P2 Right Legs and P3 Left Legs to inside corners of main frame as shown in Figure 1. Use H1 Bolts with H2 Flat Washers. Tighten all hardware with T1 Wrench.

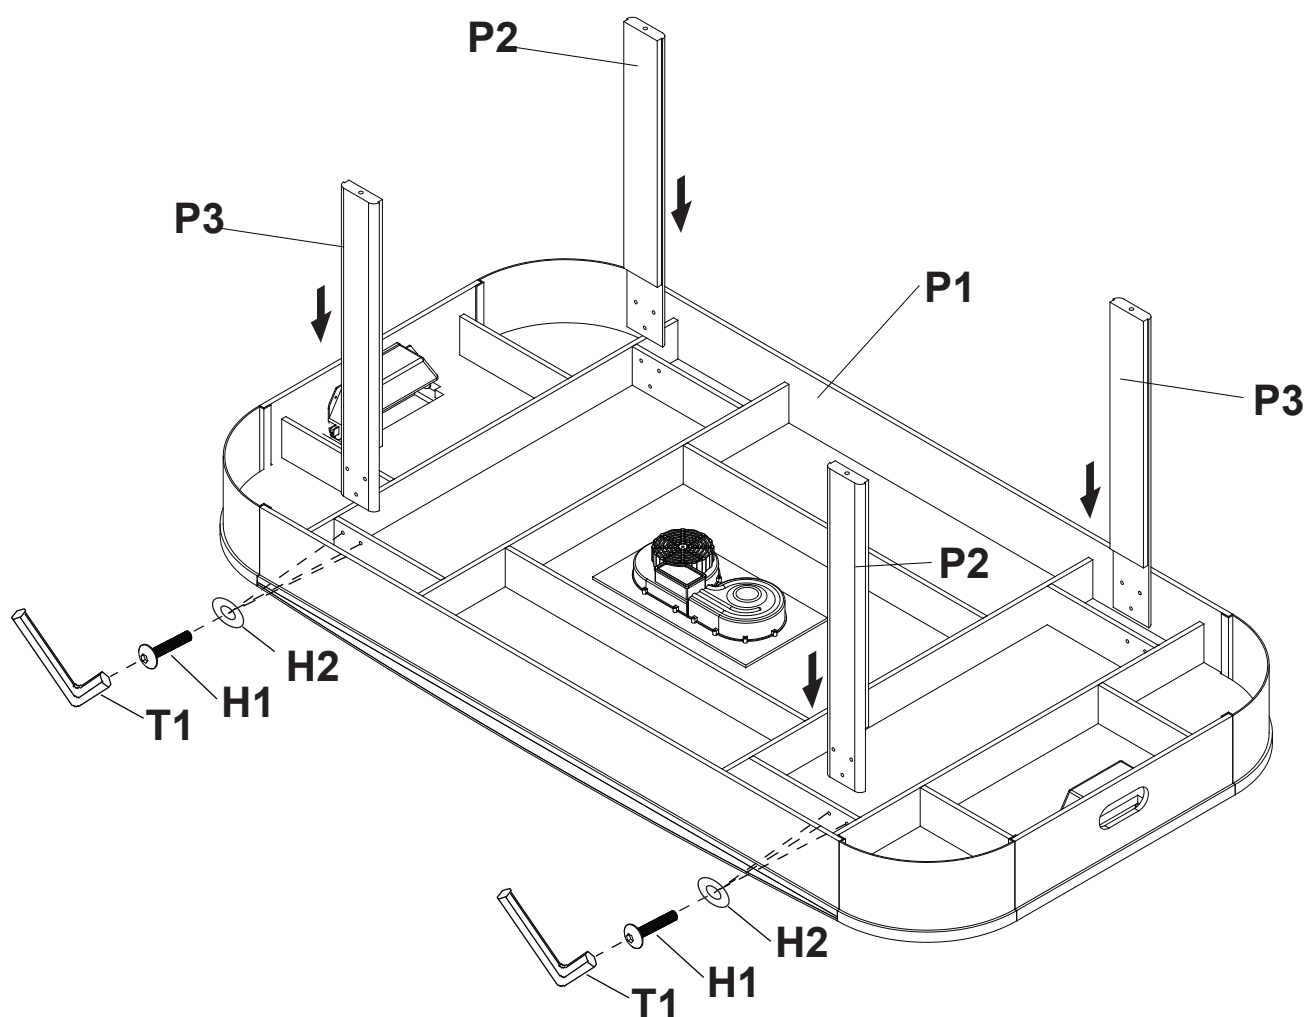


Figure 1

⚠ WARNING:

THIS SETP REQUIRES TWO OR MORE ADULTS.

VERY CAREFULLY TURE THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.

3. Attach P5 Inside Panel (flat) to legs as shown using H3 Screws, Align holes in panel with pilot holes in leg. Attach P4 Outside Leg Panel (curved) to legs as shown using H3 Screws. Align holes in panel with pilot holes in leg. Install P6 Leg Levelers as shown.

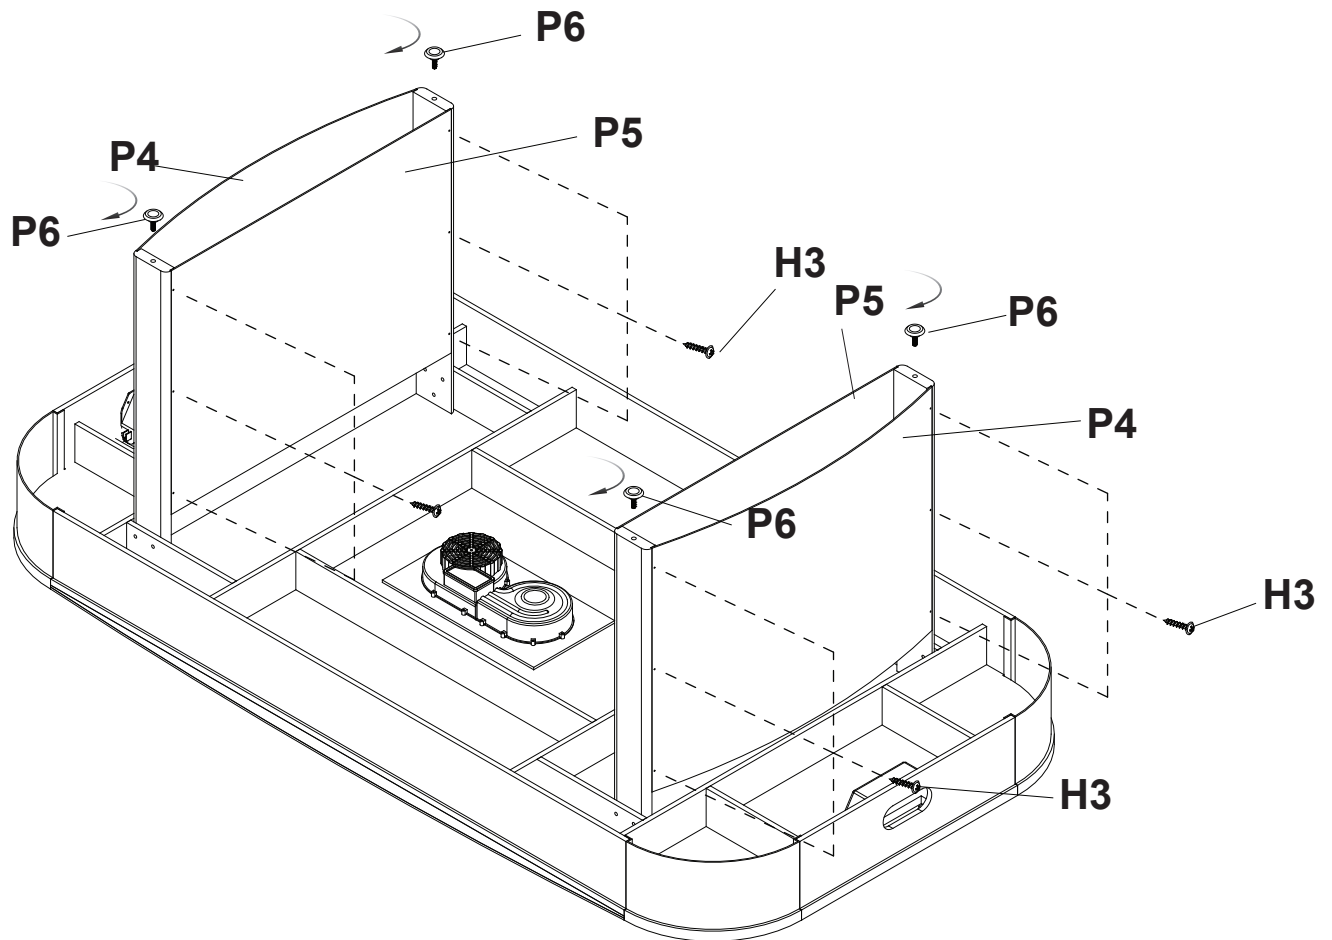


Figure 2

4. Peel the backing off the felt pad **A2** and attach to striker **A1** as shown in Figure 3.


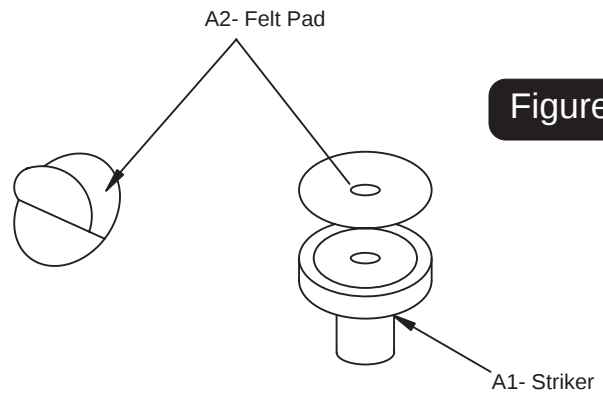


Figure 3

Congratulations! You have now assembled your hockey table. Please note the care and Use instructions below to ensure many years of trouble free use of your game table.

Operation of the game

1. Plug the blower motor and the adapter into the outlet box under the table.

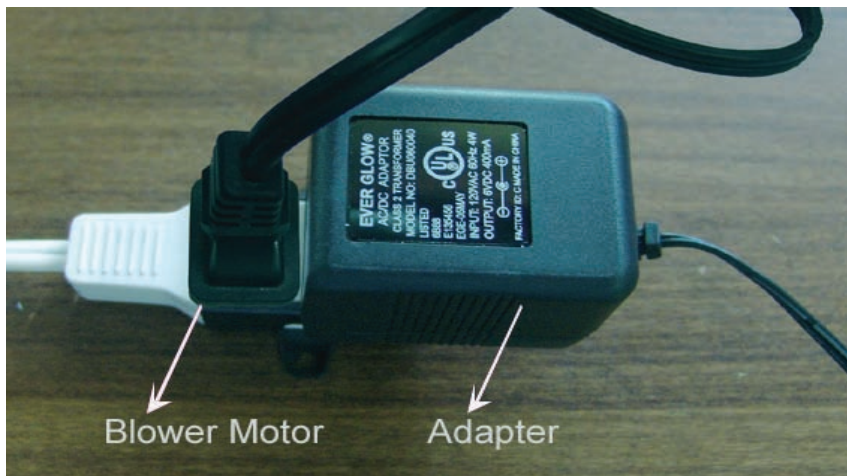

2. Plug the cord coming out of the control box into a suitable 120V household outlet.
NOTE: Place cord in nearest outlet to minimize trip hazard.
Never set object on cord.
3. From the control box, turn the main power on to activate the blower motor.
4. Turn the scoring power on to activate the electronic scoring. Use the select button to choose your time limit on the game. Press the reset button twice to start the electronics.

CARE AND USE OF YOUR TABLE

1. With blower motor running, apply spray furniture polish to a clean cloth and wipe down the playfield to make the pucks slide faster on the table.
2. You may use spray furniture polish to clean all exterior surfaces of your game table.
3. Use only a suitable 120v AC household outlet.
4. This product is intended for Indoor use only.
5. DO NOT operate the motor if the cord is damaged in any way.
6. DO NOT sit, climb or lean on the table.
7. DO NOT drag the table when moving it. This will damage the leg.

TABLE HOCKEY RULES

The Object the Game

To score a predetermined number of points or to score the most points in a given amount of time.

To Play

Flip a coin to determine who will begin play. Play begins when the puck is placed on the playing surface. Players must hit the puck with the striker and attempt to shoot it into their opponent's goal. One point is awarded when a puck is shot into the opponent's goal.

Sometimes pucks can fly off the table. If this occurs, players may take turns placing the puck back on the table.

PRODUCT PARTS LIST

Model # G03509

Part #	Key #	Description	Qty.
03509HGH1	H1	M8X30mm Bolt	12
03509HGH2	H2	M8 Leg Washer	12
03509HGH3	H3	3.5X30mm Washer Head Screw	24
03509HGT1	T1	Allen Wrench	1
03509HGP1	P1	Main Frame	1
03509HGP2	P2	Right Leg	2
03509HGP3	P3	Left Leg	2
03509HGP4	P4	Outside Leg Panel (curved)	2
03509HGP5	P5	P5 - Inside Leg Panel (flat)	2
03509HGP6	P6	Leg Leveler	4
03509HGA1	A1	Red Striker	4
03509HGA2	A2	Striker Felt Pad	4
03509HGA3	A3	Red Puck	4
03509HGA4	A4	Adapter	1
03509HGC1	C1	Wires & Sensors	1
03509HGC2	C2	Main Electronic Unit/Control Panel	1
03509HGC3	C3	Electronic Display	1
03509HGC4	C4	Blower Motor	1
03509HGK1	K1	Hardware Kit	1
03509HGM1	M1	Manual	1

90 DAY LIMITED WARRANTY

This customer warranty extends to the original owner, on the purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original owner, for a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original owner, this product to be free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY REPLACEMENT: During the above 90 day warranty period, ESCALADESPORTS shall provide replacement components or replace with a comparable product at our choosing. If product is defective under normal use and proper care, please contact our Customer Service Dept.

1-866-556-2759 / Customer Service Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Customer Service Dept.

Or E-mail us at:

Customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such replacement of in-warranty Products.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.



Ask for our full line of exciting brands and sporting goods

Products at a sporting goods retailer near you

Table Tennis Tables

Pool Tables

Basketball

Darts

Hockey Tables

Soccer Tables

Multi-Game Tables

ESCALADE[®]
S P O R T S

Customer Service Department

866.556.2758

Toll Free Fax 866.873.3531

tablehockey@escaladesports.com

G03509HG08