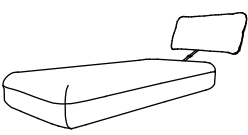
 
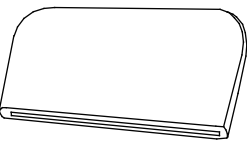
 
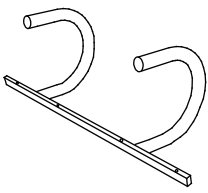
 


ITEM NAME/NOM D'ITEM: APERTO CHAISE LOUNGE



ITEM# /NO. ITEM: 704123

PARTS LIST/LISTE DES PIÈCES


(1)	(3)	(5)	(6)
 x1	 short x2	 x1	A.  M6x15mm x26 B.  M6x40mm x4 C.  M6x45mm x4
(2)	(4)		
 long x4	 x1		D.  Ø16x1.0mm x10 E.  M6 x6 F.  4mm x1 G.  connector x1

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE


Do not FULLY TIGHTEN the screws or nuts for any step until all are

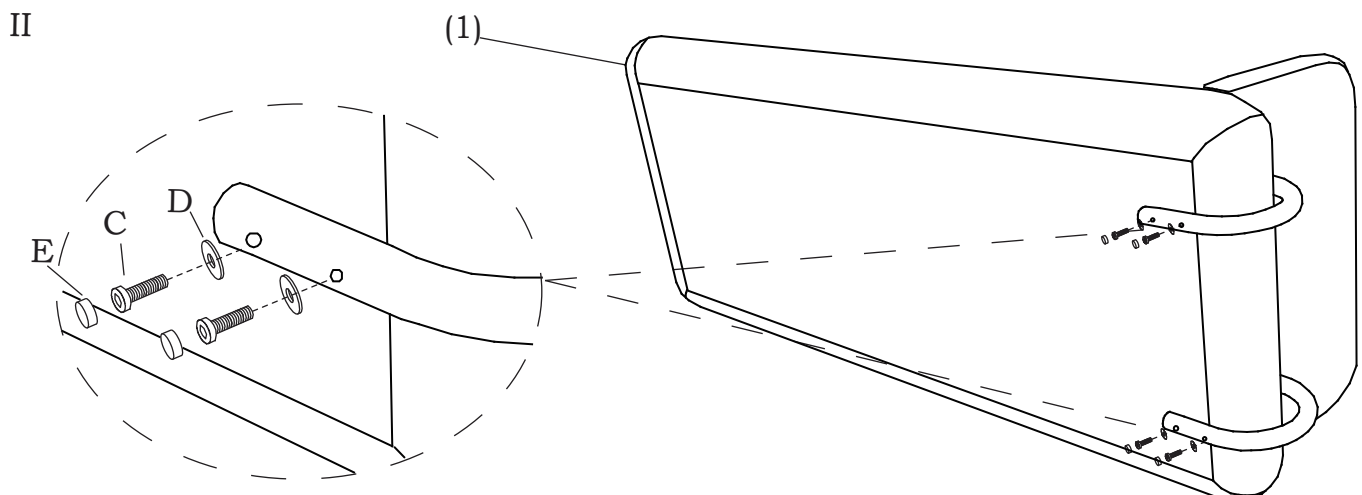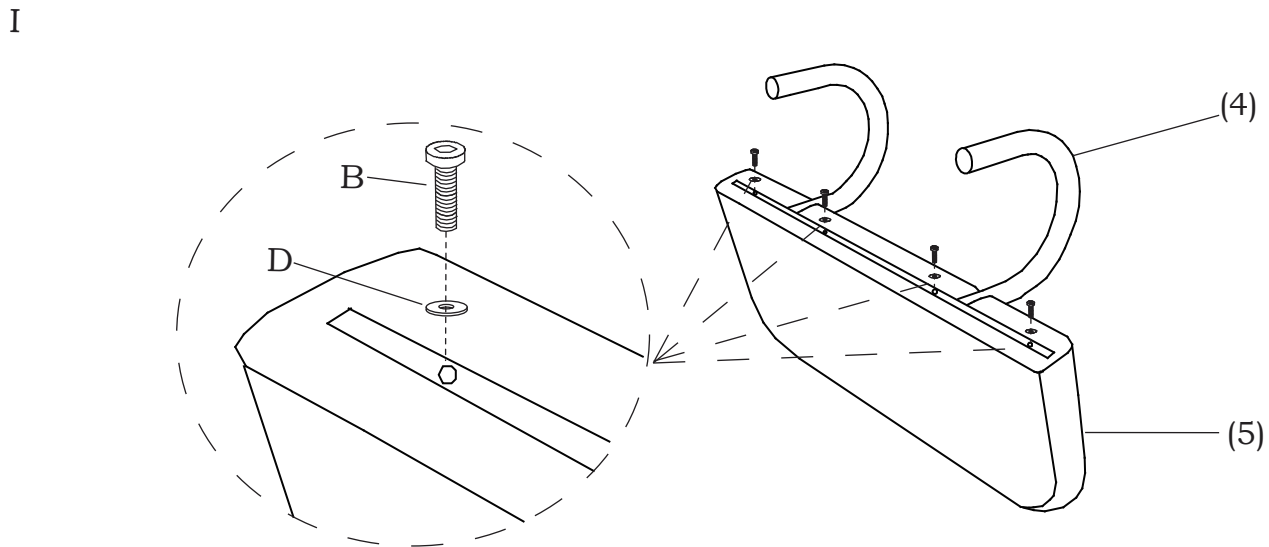

III

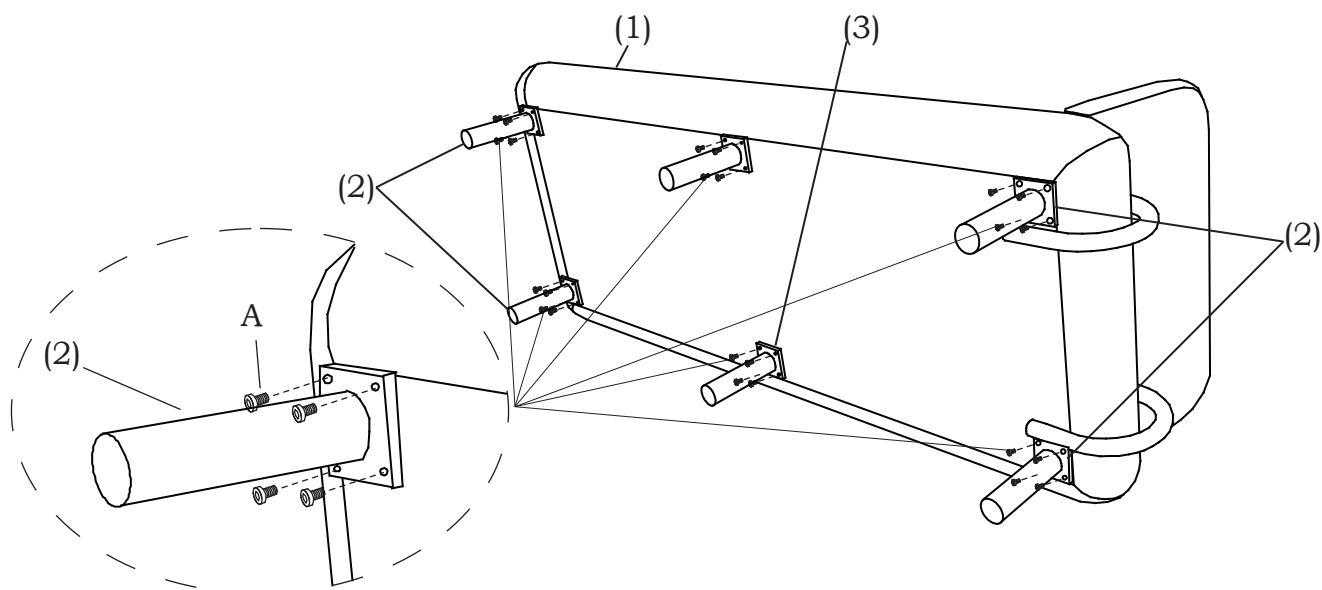


IV

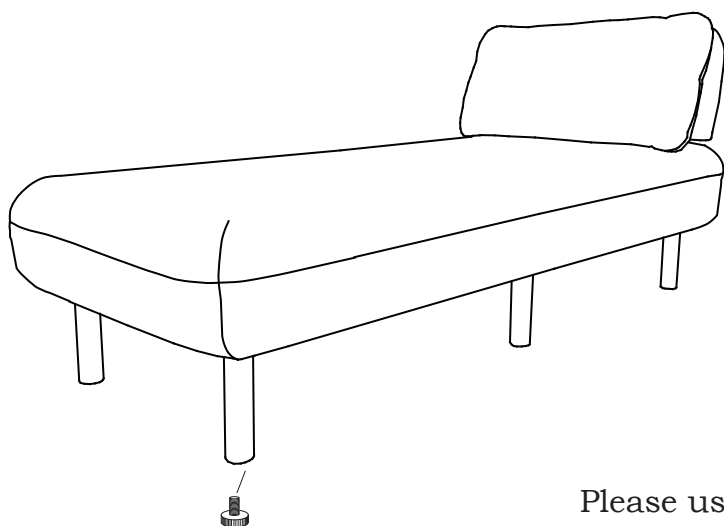

Please use the attached adjustable footglides to level the chaise lounge on an uneven surface.

V

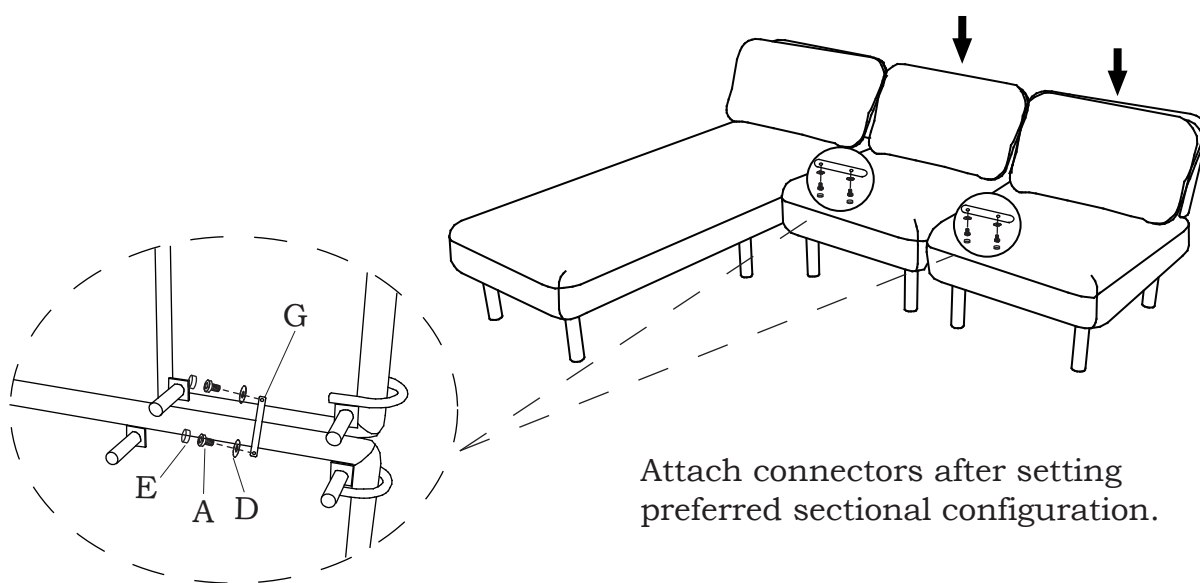

Attach connectors after setting preferred sectional configuration.

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico : (866)798-6663

AI-V1-J007-241121