 
 


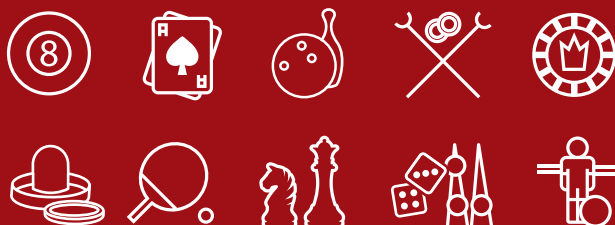

BEST CHOICE  
PRODUCTS

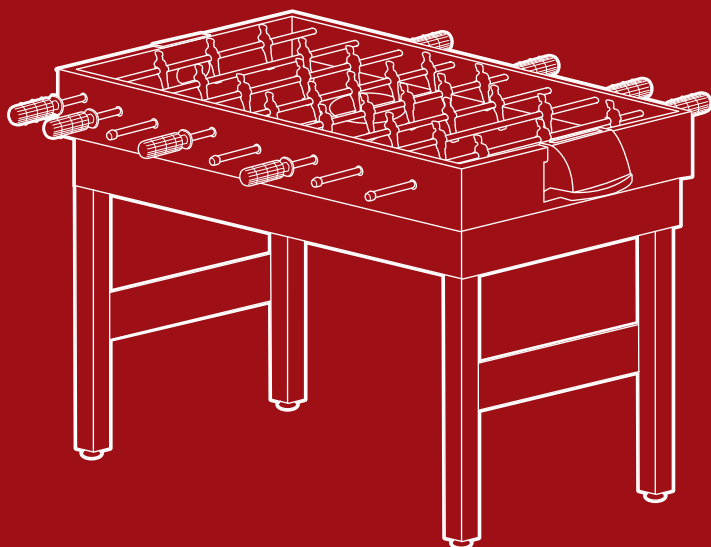

# INSTRUCTION MANUAL

---

## 10-in-1 Multi-Game Table



Fasten screws loosely during assembly. Do not firmly tighten screws until item is fully assembled.

[bestchoiceproducts.com](http://bestchoiceproducts.com)



## WARNING

**CHOKING HAZARD** - Toy contains a small ball. Not for children under 3 years old.



## WARNING

**CHOKING HAZARD** - Small parts. Not for children under 3 years old.



## WARNING

**ADULT ASSEMBLY REQUIRED**

## ! NOTICE

Please retain these instructions for future reference.

- Please read all instructions before attempting to install or assemble this item. Assembly should be done by adults only.
- This product contains small parts for assembly. Keep small children and pets away during assembly.
- Do not stand on or use any part of this set as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Be aware that some parts are heavy and have sharp edges.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

## TOOLS REQUIRED



ALLEN WRENCH  
(PROVIDED)



DRILL  
(RECOMMENDED)



WRENCH



PHILLIPS  
SCREWDRIVER



3 YEARS  
OLD AND UP



2 PERSON  
ASSEMBLY



UP TO 1 HOUR  
ASSEMBLY

## HARDWARE

### 1 M3.5 X 12MM SCREW



16 PCS

### 2 M3.5 X 35MM SCREW



12 PCS

### 3 M6 X 30MM SCREW



16 PCS

### 4 M4 X 20MM BOLT



26 PCS

### 5 M6 WASHER



16 PCS

### 6 RUBBER BUMPER



16 PCS

### 7 M4 NUT



26 PCS

### 8 END CAP



8 PCS

### 9 HANDLE



8 PCS

### 10 FOOT

 


4 PCS

## PARTS

**A**


SIDE PANEL



2 PCS

**B**

 
END PANEL

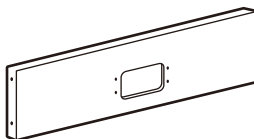

2 PCS

**C**

 
SOCCER PLAYFIELD

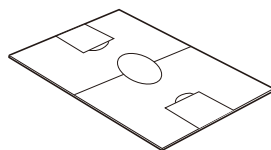

1 PC

**D**

 
BOTTOM SUPPORT

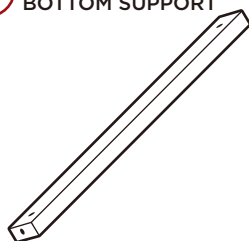

2 PCS

**E**

 
GOAL BOX

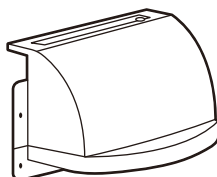

2 PCS

**F**

 
3-HOLE ROD

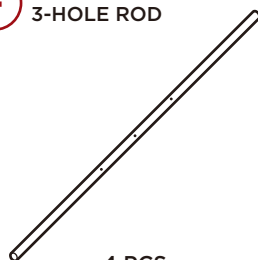

4 PCS

**G**

 
2-HOLE ROD

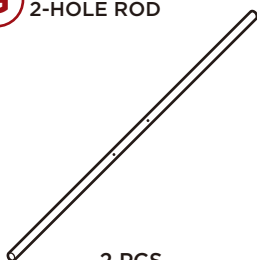

2 PCS

**H**

 5-HOLE ROD

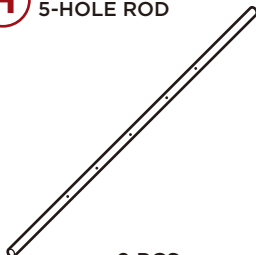

2 PCS

**I**

AWAY PLAYER



13 PCS

**J**

 
HOME PLAYER



13 PCS

**K**


BILLIARDS TABLE



1 PC

**L**

 TABLE LEGS (L/R)

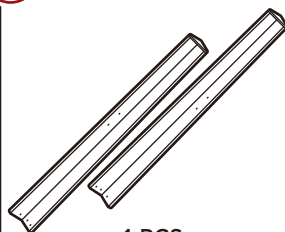


4 PCS

## PARTS

**M**

 
TABLE SUPPORT

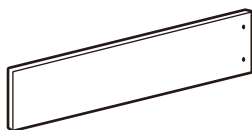

2 PCS

**N**

 
HOCKEY/TABLE  
TENNIS PLAYFIELD



1 PC

**O**

 
MULTI-GAME BOARD



1 PC

**P**

 
SAFETY LOCK

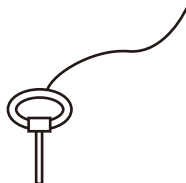

2 PCS

## ACCESSORIES

 PLAYING CARDS



1 DECK

SOCCER BALL



 
2 PCS

BILLIARD BALLS



1 SET

CUE STICK

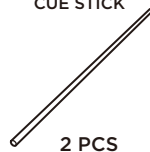

2 PCS

CHALK



2 PCS

TRIANGLE



1 PC

HOCKEY PUSHER



2 PCS

FELT PAD



2 PCS

HOCKEY PUCK



2 PCS

CHESS



1 SET

CHECKERS



1 SET

BACKGAMMON



1 SET

BOWLING



1 SET

SHUFFLEBOARD  
PUCKS




1 SET

TABLE TENNIS  
PADDLE & BALLS



1 SET

 TABLE TENNIS NET



1 SET

BRUSH




1 PC

## PRODUCT ASSEMBLY

 
1

Position two **part A** side panels. Attach a **part B** end panel and two **part D** bottom supports with eight **part 2** screws.

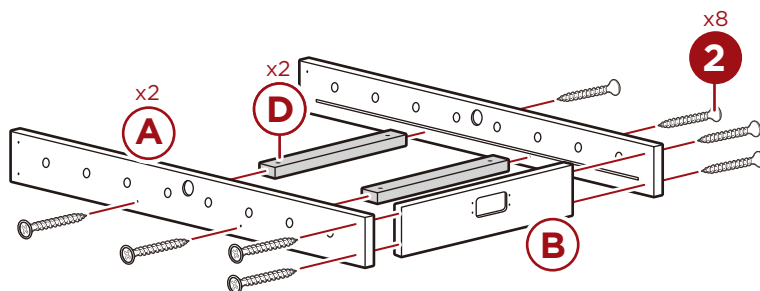

2

 
Slide **part C** soccer playfield into the designated slots.

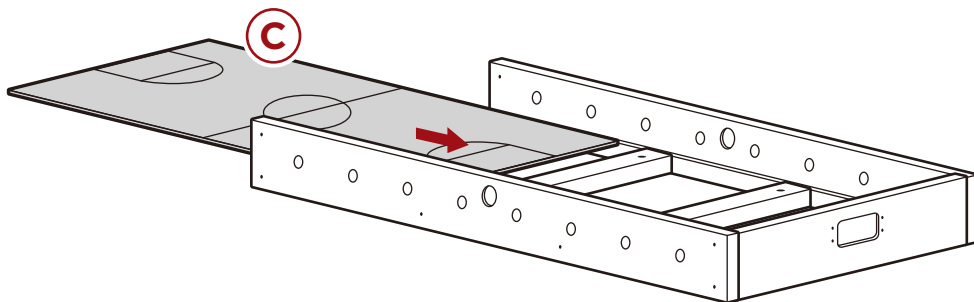

3

Attach another **part B** end panel with four **part 2** screws.

 
Attach two **part E** goal boxes with eight **part 1** screws.

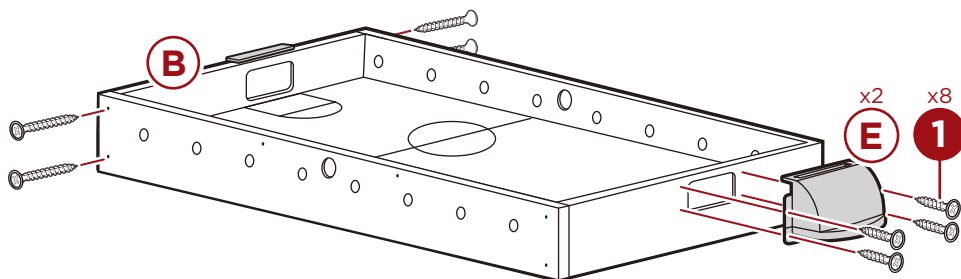

## PRODUCT ASSEMBLY

4


 
Slide the appropriate number of **part I** and **J** away/home players onto the **part F**, **G**, and **H** rods. Slide two **part 6** rubber bumpers onto each rod, one bumper on each side.

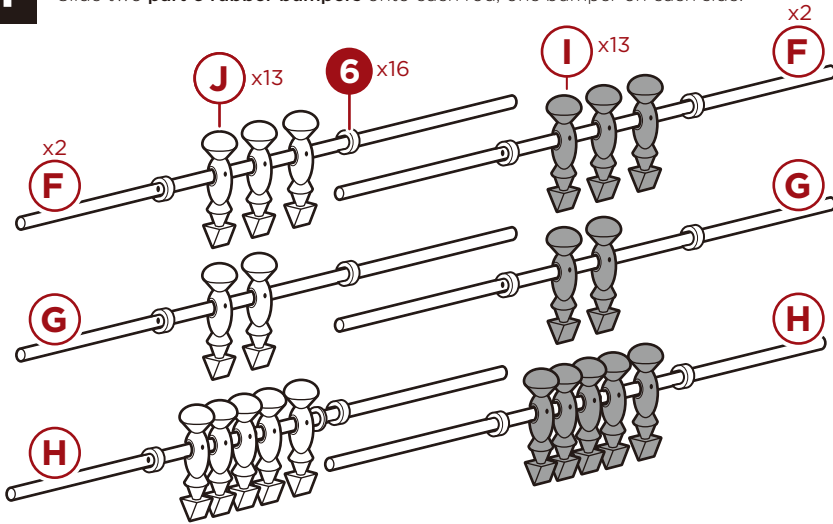


5

Slide one end of a rod into the designated hole, then slide the other end into the opposite hole. Repeat for all rods.

  Secure players with twenty-six **part 4** bolts and twenty-six **part 7** nuts, one bolt/nut per player.

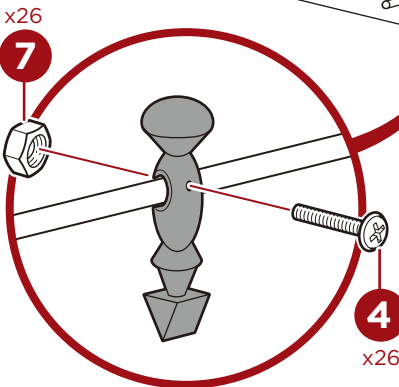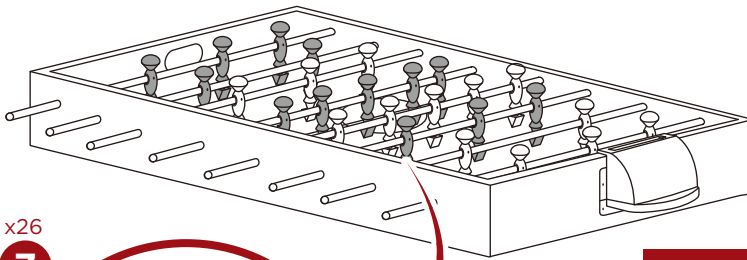

 Confirm that the rods are arranged correctly.

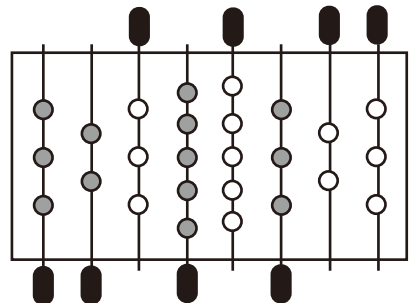




## PRODUCT ASSEMBLY

6

 Slide eight **part 9 handles** and eight **part 8 end caps** onto the rods, a handle and end cap per rod.

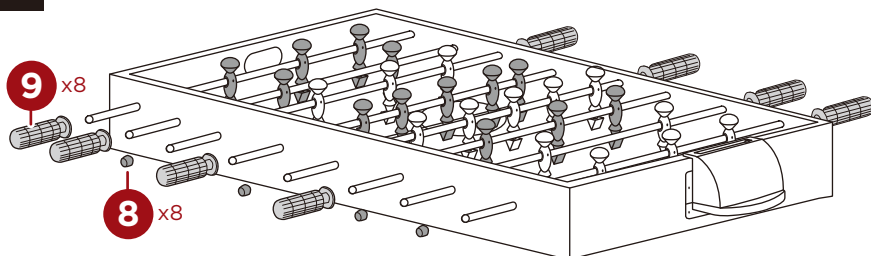


7

Flip the **part K billiards table** upside down. Attach four **part L table legs (L/R)** with sixteen **part 3 screws** and sixteen **part 5 washers**, three screws/washers per leg.

**NOTE:** Make sure screw holes on table legs align with the billiards table.

 Attach two **part M table supports** with eight **part 1 screws**. Screw in four **part 10 feet**.

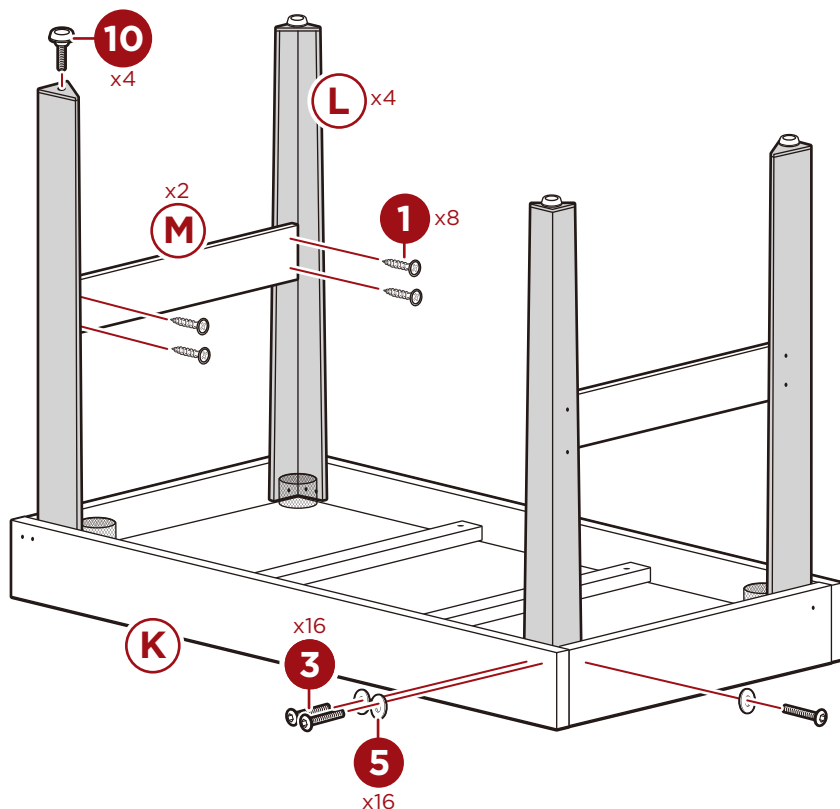


## PLAYING GAMES

Rearrange the game table depending on the game you would like to play.

- Billiards
- Foosball
- Table hockey
- Table tennis
- Chess
- Checkers
- Backgammon
- Shuffleboard
- Bowling
- Cards

### Foosball:

 Place the foosball table onto the frame of the billiards table and lock it with two part P safety locks, one on each side.

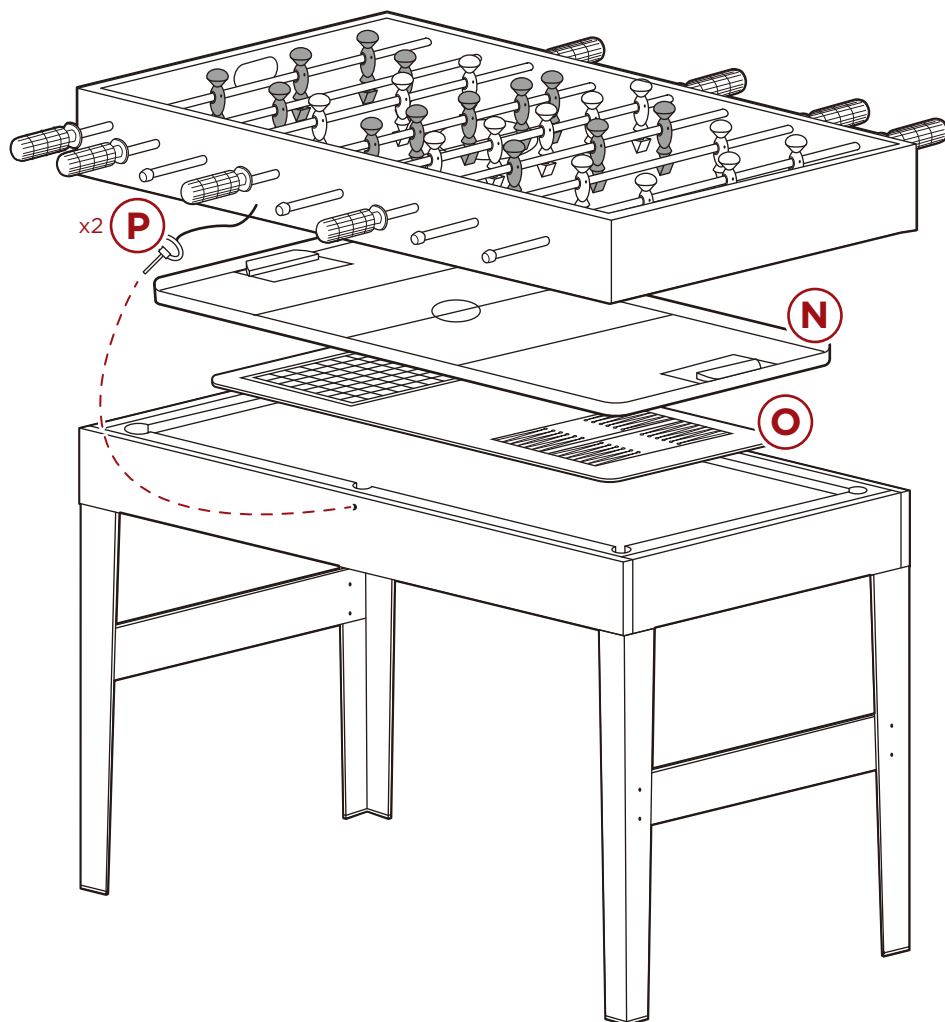


## PLAYING GAMES

### Multi-game board/hockey:


Place the part O multi-game board and part N hockey/table tennis playfield on the billiards table.

 - Adhere the felt pads to the hockey pushers.

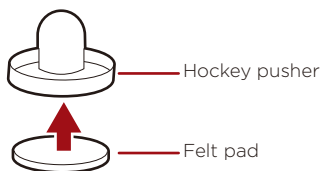

### Table Tennis:

 Flip part N to the table tennis playfield and place it on the billiards table. Insert the table tennis net into the designated holes.

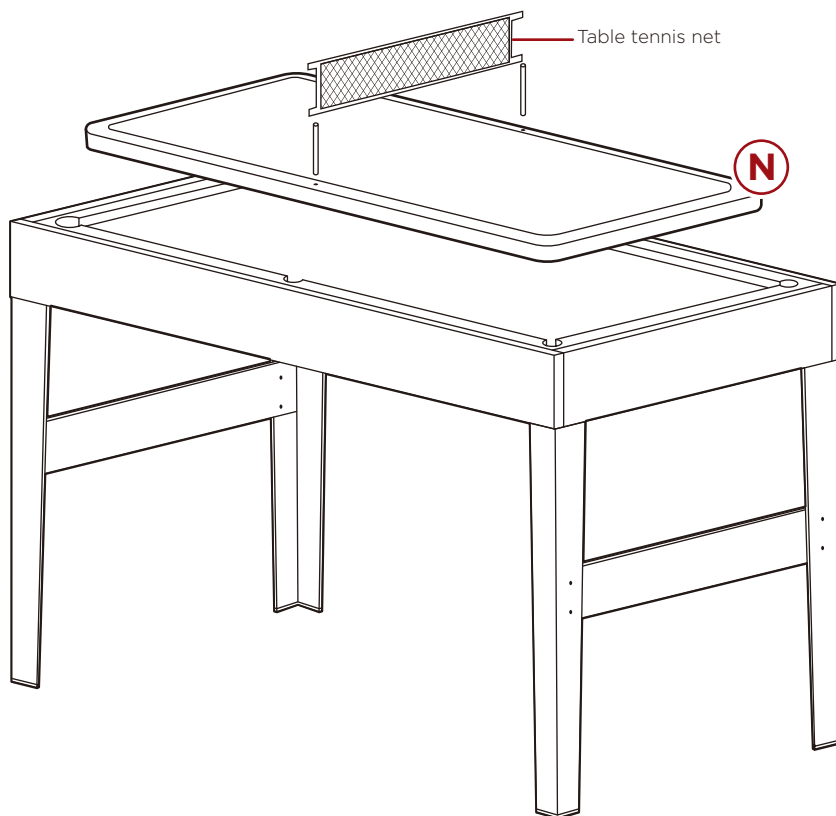



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.