


Quick start guide

22 L hot water urn

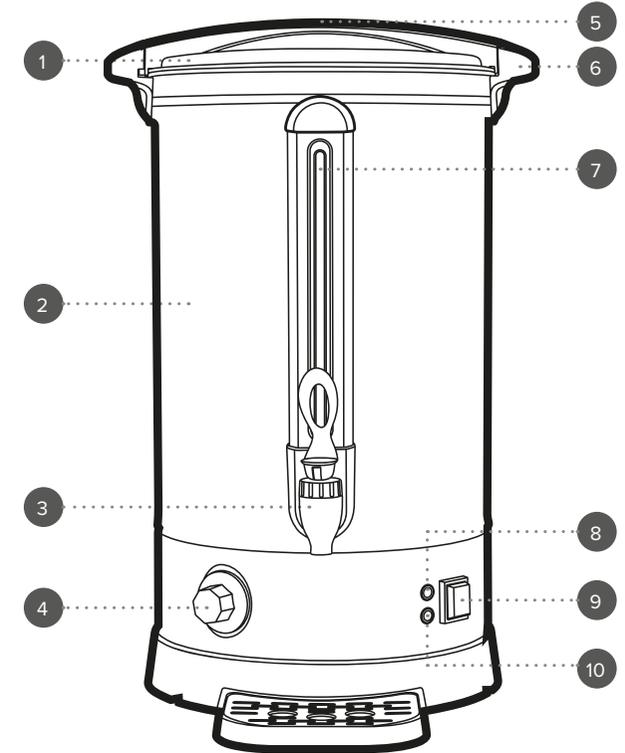

1. Lid
2. Urn housing
3. Tap
4. Temperature control dial
5. Cool-touch handles
6. Carry handles
7. Max. fill mark
8. Heating indicator light
9. On/Off switch
10. Keep warm indicator light



To register for your extended guarantee, scan the QR code or visit guarantee.uppic.com/salter and register your product within 30 days of purchase. For any further queries, visit www.salter.com.



up, open the lid using heatproof gloves. Be sure to keep a safe distance away from the urn, as steam may be released. Top up the urn as required, replace the lid and wait for the water to heat up to the selected temperature.

STEP 10: To turn off the urn, rotate the temperature control dial in an anticlockwise direction to the 'Off' position.

STEP 11: Switch off and unplug the urn from the mains power supply and allow to cool. This may take some time if there is still hot liquid inside. Once cool, empty the urn and store safely.



NOTE: Never place the urn on a surface that cannot easily support its weight. The urn should not be used without the lid. Other liquids cannot be heated in urn.



CAUTION: Never move the urn while it contains hot liquid.

The urn gets very hot during use; always use heat-resistant gloves to avoid injury, and do not touch any part of the urn other than the cool-touch handles or tap.



WARNING: Exercise caution while heating liquid; the urn may emit steam. Temperatures above 90 °C may cause liquid to boil over if left unmonitored. Never leave water to boil at high temperatures for long periods of time unattended and decrease the temperature setting if any boiling over is observed. Setting the urn to 110 °C will not cause liquid to boil faster.

Storage

Check that the urn is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the urn; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6228

Input: 220–240 V ~ 50–60 Hz

Output: 2500 W



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. ROI.

MADE IN CHINA.

©Salter trademark. All rights reserved.
CD270324/MD000000/V1

SALTER
1760

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not use the appliance for anything other than its intended use.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

Dos and don'ts

DO:

Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.

DON'T:

Use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Use the appliance if the water level is above the max. fill mark or below the min. fill mark.

Use attachments if they are loose, damaged or broken.

Boil-dry sensor

The urn is equipped with a boil-dry sensor. If the urn is accidentally turned on whilst empty, the boil-dry sensor will activate causing the power to switch off. Do not try to use the urn during this time; once it has cooled down, it will resume its normal function.

Care and maintenance

STEP 1: Wipe the urn housing with a damp cloth and dry thoroughly.

STEP 2: Clean the interior with warm, soapy water, then rinse and dry thoroughly.

STEP 3: Before boiling any liquids for drinking, always boil clean water for approx. 30 minutes to remove any residual odours or materials from manufacturing following the instructions in the section entitled 'Using the urn'. Discard this water and clean the urn before use. Never use harsh or abrasive cleaning detergents or scourers to clean the urn or its accessories, as this could damage the surface.



NOTE: The urn should be cleaned after every use.

Removing limescale

STEP 1: Fill the urn with 2 litres of cold water.

STEP 2: Add a commercial descaling agent to the urn, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the urn.



If the urn switches off before it has boiled or a white deposit is noticed on the inside of the urn, it needs to be descaled.

Instructions for use Before first use

Before connecting to the mains power supply, clean the urn following the instructions in the section entitled 'Care and maintenance'.



NOTE: When using the urn for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the urn.

Using the urn

STEP 1: Remove the lid by twisting and lifting it away from the urn housing.

STEP 2: Place the urn in the location where it will be used and check that it is level and stable. The urn should not be moved once full.

STEP 3: Fill the urn with water until it reaches the desired level. Do not exceed the max. fill mark. Replace the lid by twisting it into place.

STEP 4: Plug in and switch on the urn at the mains power supply. The keep warm indicator light will illuminate.

STEP 5: Select a temperature setting by rotating the temperature control dial in a clockwise direction. The heating indicator light will illuminate whilst the urn is heating up. Depending on the volume of liquid and the selected temperature setting, it may take 45–60 minutes for the urn to fully heat up.

STEP 6: Once the desired temperature is reached, the heating indicator light will turn off and the keep warm light will illuminate again.

STEP 7: To dispense water, use the tap at the bottom of the urn. Press and hold the tap downwards to dispense water. For continuous pouring, flip the tap downwards. Once the desired amount of water is dispensed, return the tap to neutral position.

STEP 8: To reheat the urn, turn the thermostat to a higher temperature. The heating indicator light will turn on again and boil until it reaches the desired temperature.

STEP 9: During use, the water level may become too low. This can be monitored using the fill gauge. If the urn requires topping



Manchester
OL9 0DD
United Kingdom
www.upplc.com

ULTIMATE PRODUCTS
HOME OF BRANDS

Artworker: Sadie Stevenson
Date: 04/04/2024
Project Name: EEK241615 ULT EK6228
Type of Artwork: QSG
Size: A4 Leaflet
Software Used: Indesign CC
Typefaces: Proxima Nova

- Cyan
- Magenta
- Yellow
- Black
- PMS
- PMS
- PMS
- PMS

Artwork Version 1

Artwork Scale 1:1

©2024 Ultimate Products UK Ltd. All designs, images and artwork are the copyright of Ultimate Products UK Ltd. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of Ultimate Products UK Ltd. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY