 




OWNER'S MANUAL

30" OSCILLATING WALL-MOUNTED FAN

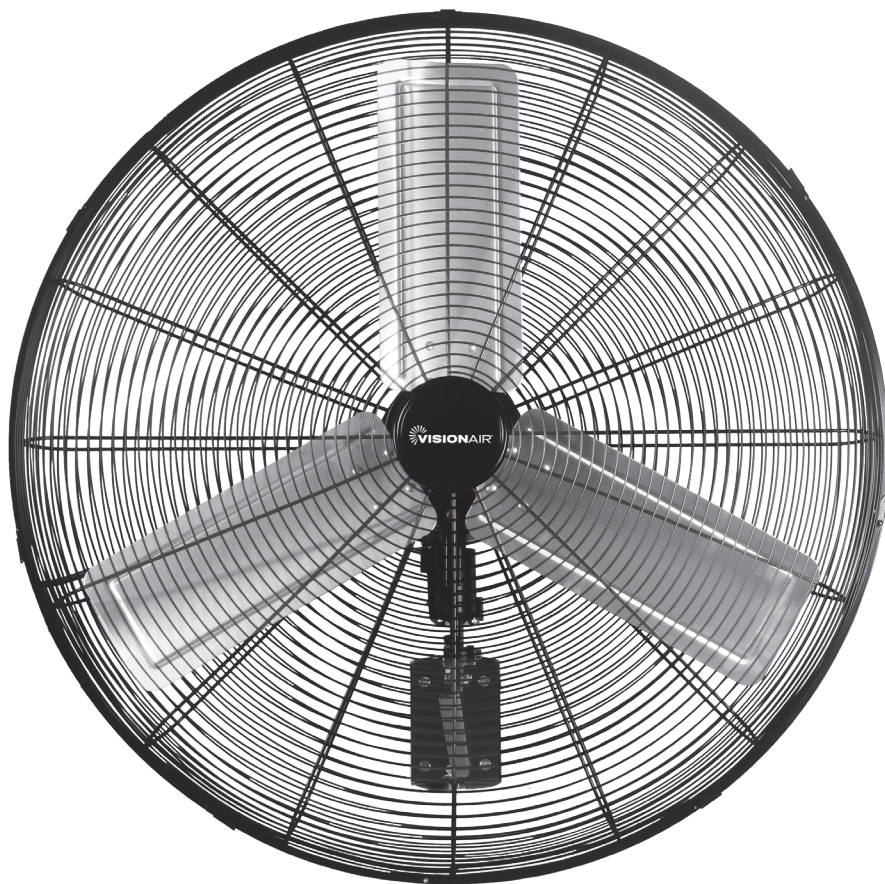

MODEL: 2VAFWLHVOC30

PRODUCT SPECIFICATIONS

Model No.	2VAFWLHVOC30
Rated Voltage	120V (60Hz)
Rated Power	200W
Fan Speeds	LOW/MED/HIGH
Fan Blade Diameter	30 Inch
Fan Weight	28.5 lbs

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

CONTENTS

Important Instructions4

Product Diagram4

Assembly Instructions.....5

Operation Instructions.....8

Storage and Maintenance..... 10

Troubleshooting 11

IMPORTANT NOTE:

Please read and save these instructions. Read through this owner’s manual carefully before using this product. Protect yourself and others by observing all safety information, warnings, and cautions. Failure to comply with instructions could result in personal injury and/or damage to property. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different. **SAVE THIS MANUAL FOR FUTURE REFERENCE.**

INSTRUCTIONS

IMPORTANT INSTRUCTIONS

PLEASE READ CAREFULLY- ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

1. Check that the mains voltage corresponds with the rating of the appliance before operating.
2. To protect against electric shock. Do not immerse cords plugs or appliances in water or any other liquid.
3. Do not leave any appliance unattended while it is operating.
4. Close supervision is necessary when any appliance is used by or near children or infirm persons.
5. Unplug from the outlet when not in use or before cleaning. Allow cooling before taking off any parts.
6. Do not operate the appliance with damaged power cords or plugs, and do not use a damaged appliance. If the power cord or appliance is damaged, it must be replaced by the manufacturer, service agent, or similarly qualified professional to avoid a hazard.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces
10. To disconnect-remove the plug from the outlet. Do not pull the plug out by the cord.
11. Do not use this product for anything other than its intended use. This appliance is for household use only.
12. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
13. Do not use the appliance without the protective grills.
14. Do not attempt to force the grill to make the fan turn or stop.
15. Never put objects into the grills when the appliance is connected to the mains.
16. It is not advisable to expose people, especially babies or older people, to a continuous cold air stream for a long time.

⚠ WARNING

 
This fan is a grounded unit. Do not remove, alter, or bypass the grounding prong on the plug.

Do not use adapters, extension cords, power strips, or any device that defeats the grounding connection.

It is the installer's responsibility to ensure that a properly grounded electrical outlet is available for use with this unit.


PRODUCT DIAGRAM

- A. Switch
- B. Fan Body
- C. Mounting Bracket

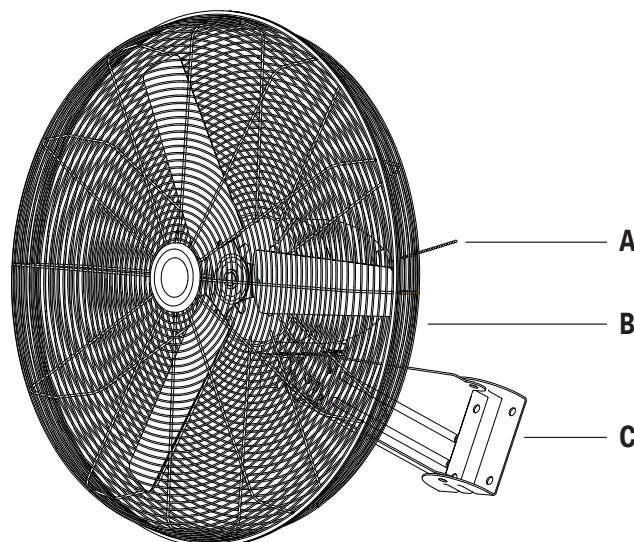

ASSEMBLY

 
IN THE BOX

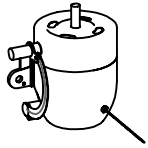


A: Fan Body × 1



 
B: Mounting Bracket × 1

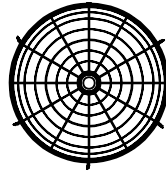

C: Front Grill × 1

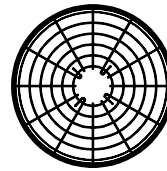 

D: Rear Grill × 1

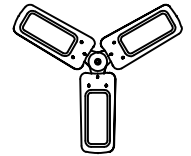 

E: Fan Blade × 1



F: Nut × 1



 
G: Bolt × 1



H: Screws × 4
(pre-installed on fan body)



I: Small Screw × 1
(pre-installed on fan body)

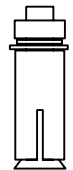

J: Wall Anchors × 4

ASSEMBLY INSTRUCTIONS

1. Mount the Bracket

 
- Use the wall anchors (J) to securely install the mounting bracket on a solid, level masonry wall.

NOTE: The installer is responsible for selecting the proper mounting method based on the wall surface. Please use hardware that is appropriate and safe for the chosen mounting surface.

- Screw (I) comes preassembled on the fan body. Remove it before mounting the fan body.
- Place the fan body onto the bracket and secure it using bolt (G) and nut (F) (May be pre-installed on the fan body).
- Reinsert screw (I) and tighten it to lock the fan body in place.



For details
instructional video
to install fan body for
Step 1 please scan here

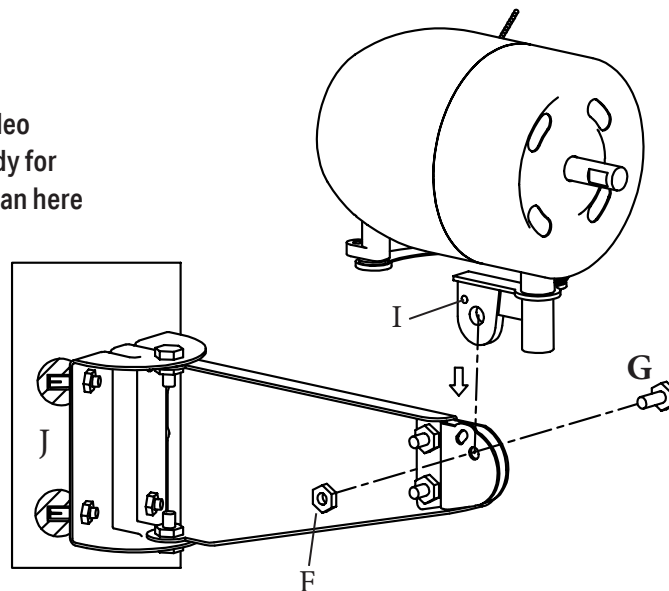


2. Adjust the Tilt (Optional)

- Loosen screw (I) and bolt (G) to adjust the fan body to your desired angle.
- Once positioned, re-tighten both screw (I) and bolt (G) to lock the fan in place.




 For details instructional video to adjust tilt for Step 2 please scan here

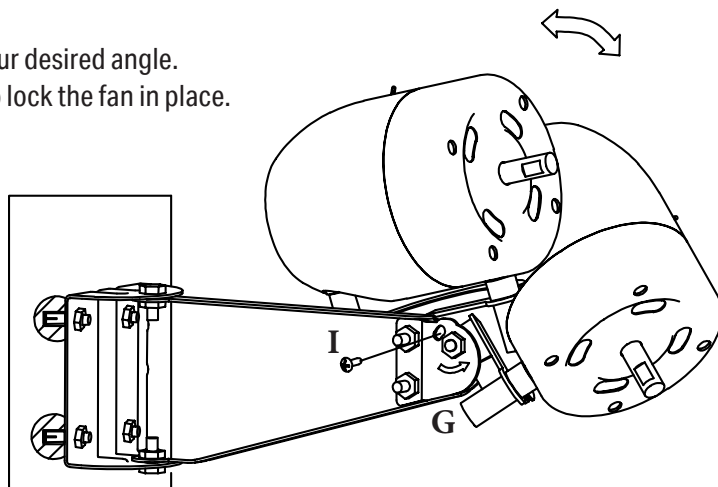



3. Attach the Rear Guard

 - Remove the 4 screws (H) from the fan body.
- Position the rear guard onto the fan body and reinsert the screws to secure it.

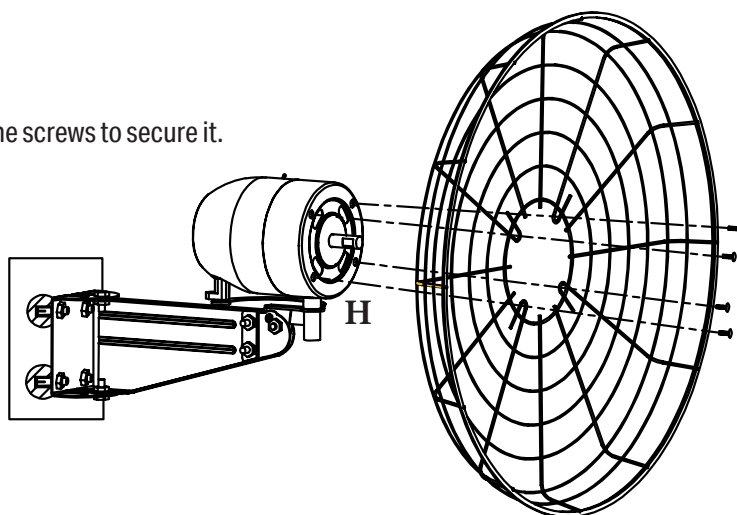

4. Install the Fan Blade

  - Slide the blade onto the motor shaft.
- Secure it by tightening screw on the blade onto the flat .

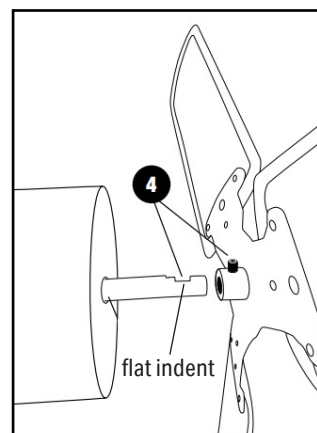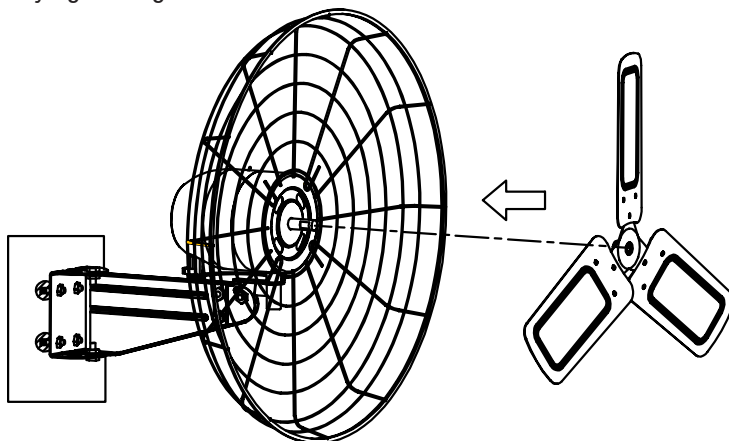


⚠ WARNING Please be vigilant that the fan blade is secured correctly and tightly on the flat indent of the shaft to prevent safety hazards and operational failure.

Slide the fan blade onto the shaft, the set screw needs to be facing inward and tightened on the flat indent of the shaft. Tighten the set screw with a Philips screwdriver.


5. Attach the Front Guard

 - Align the front guard with the rear guard and lock them together.

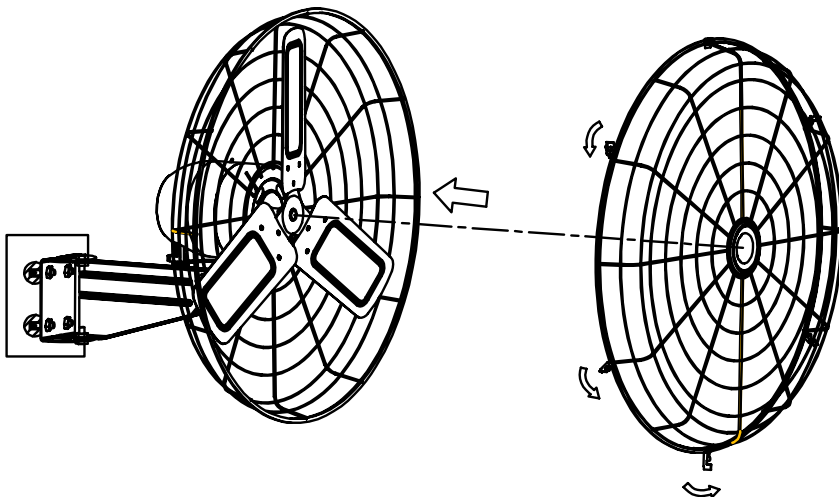

6. Finish Up

 - Assembly is now complete. Ensure all screws and bolts are fully tightened before use.

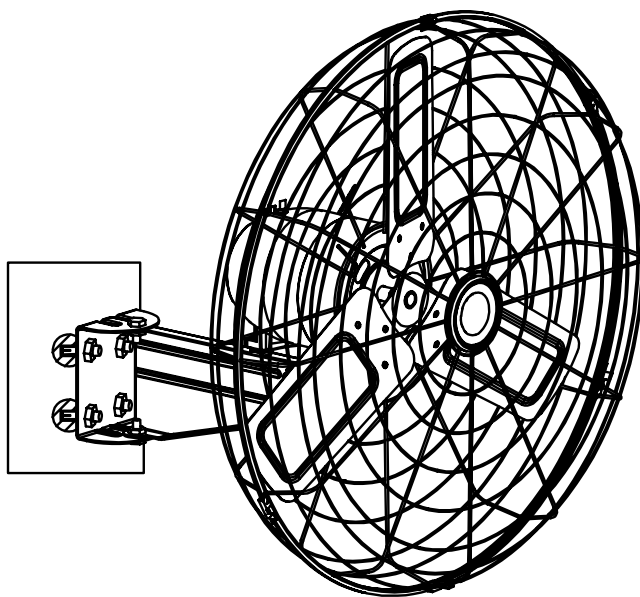

OPERATION

 
ADJUST THE TILT

Make sure the fan is turned off and unplugged before adjusting the tilt.

1. Loosen screw (I) and bolt (G) just enough to allow the fan body to move.
2. Tilt the fan to your desired angle.
3. Once positioned, re-tighten screw (I) and bolt (G) to securely lock the fan in place.




For details
instructional video
to adjust tilt please scan here

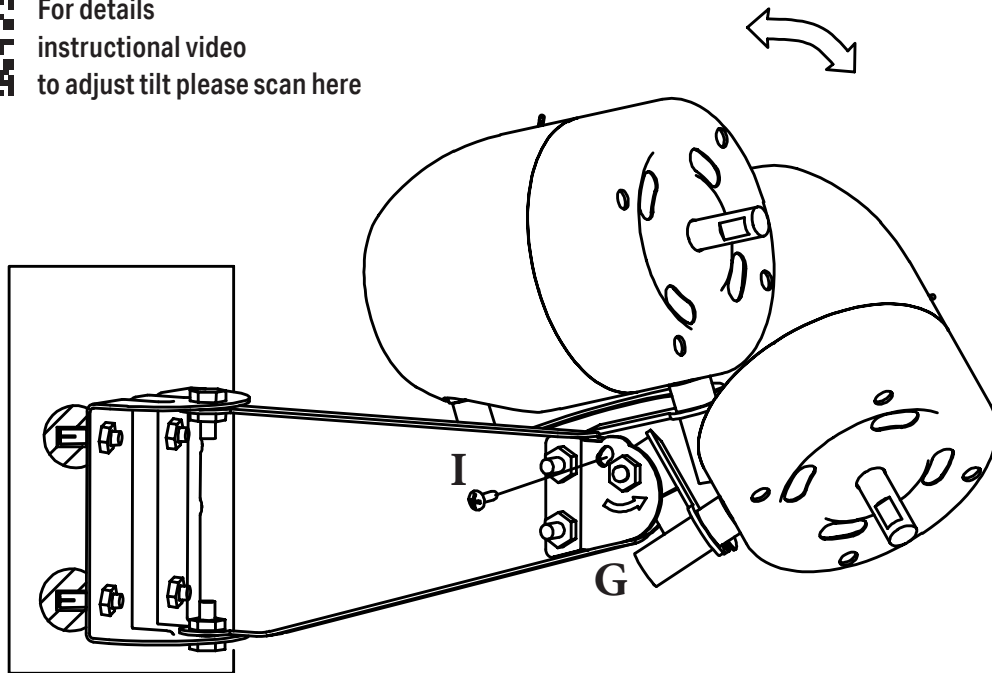

OPERATION INSTRUCTIONS

 1. Plug the power cord directly into a 120V AC wall outlet.
Do not use an extension cord, power strip, or adapter. Plug the fan directly into the wall for safe operation.
2. Use the "Speed" pull switch to turn the fan on or off and to select your desired speed setting.
(Low → Medium → High → Off → Low...)
3. Use the "Swing" pull switch to turn the oscillation function on or off.

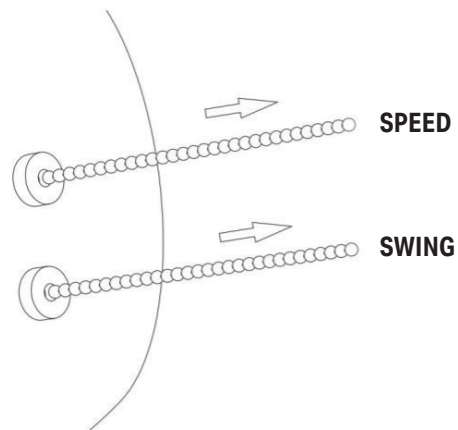

STORAGE & MAINTENANCE

STORAGE & MAINTENANCE GUIDELINES

1. Turn the control OFF and unplug the fan before cleaning.
2. Use only a soft damp cloth to clean the fan.
3. Do not place the fan in water and never allow water to drip into the Motor Housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. To clean the fan blade, remove the front grill and wipe the blade and grills.
6. Store the fan in its original box or cover the fan to protect it from dust.
7. Store it in a cool and dry place.

TROUBLESHOOTING

ISSUE	POSSIBLE CAUSE	RECOMMENDED SOLUTION
Fan not turning on	Power cord not plugged in securely	Ensure the power cord is fully inserted into a working outlet.
	Circuit breaker has tripped or fuse blown	1. Check your circuit breaker panel for a tripped breaker.
		2. Reset the breaker, or replace the fuse if blown.
	Fan switch not in the "On" position	Pull the "Speed" switch to turn the fan on.
	Faulty power outlet	Test the outlet with another device (e.g., a lamp) to ensure it's functioning. If the outlet is faulty, use another outlet.
	Motor issue	If the fan doesn't turn on after checking the power supply, unplug the fan and contact customer service.
Unusual noise during operation	Loose screws or parts	1. Turn off and unplug the fan.
		2. Inspect all screws on the housing and blades.
		3. Tighten any loose screws using a screwdriver.
	Fan blades are unbalanced	1. Turn off and unplug the fan.
		2. Inspect each blade for bends or damage.
		3. Remove any objects or debris obstructing the blades.
	Fan placed on an uneven surface	1. Ensure the fan is placed on a stable, level surface.
		2. If necessary, move the fan to a different location.
Fan vibrating excessively	Fan placed on an uneven surface	1. Ensure the fan is hung on a stable, level surface.
		2. If necessary, move the fan to a different location.
	Loose fan blade	1. Turn off and unplug the fan.
		2. Check if the fan blades are securely attached and tighten any loose screws.
Fan overheating	Dust or debris buildup in motor vents	1. Turn off and unplug the fan.
		2. Clean the motor vents using a soft brush to remove dust.
		3. Wipe down the fan blades and housing with a dry cloth.
	Prolonged use in a poorly ventilated space	1. Turn off the fan and allow it to cool down.
		2. Ensure it is operating in a well-ventilated area.
	Electrical issue	If the fan continues to overheat, unplug it and contact customer service for further assistance.
Reduced airflow	Dirty or obstructed fan blades	1. Turn off and unplug the fan.
		2. Clean the blades with a soft, dry cloth to remove dirt or debris.



4560 West 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com | www.visionairproducts.com