



INSTRUCTION MANUAL

Hanging Chaise Lounge Chair

SKY1831




As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

Always.

INOTICE


Please retain these instructions for future reference.

- Do not stand on or use any part of this product as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

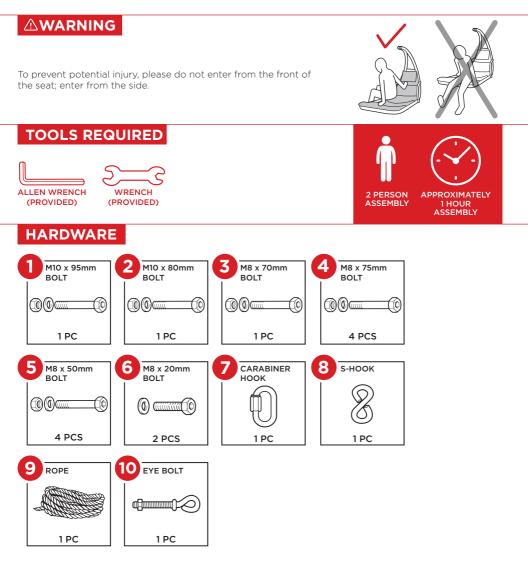

PARTS B С D CURVED BACK MIDDLE CURVED TOP CURVED SEAT FRAME PIPE LEG PIPE CURVED PIPE 1 PC 1 PC 1 PC 2 PCS Ε Η F G FRONT LEG SEAT FRAME SEAT FRAME SEAT FRAME SMALL CROSSBAR PIPE U-SHAPE PIPE A 0 61 $\overline{}$ 0 2 PCS 1 PC 2 PCS 1 PC L I K SEAT CANOPY FRAME ARMREST NUT CAP JE I 0 _@| M10 M8 1 PC 1 PC 2 PCS 3 PCS 7PCS N M O KNOB CANOPY CUSHION 1 PC 1 PC 2 PCS

PRODUCT ASSEMBLY

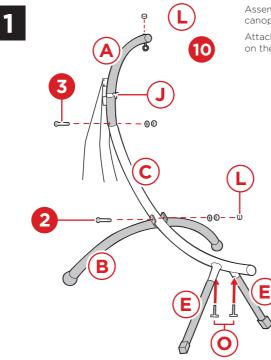


Assemble the outer frame. Slide on the part J canopy frame before connecting part A to part C.


Attach the Part E legs with the knobs provided on the legs.


2

Place part 8 between the two part D seat frame curved pipes and secure with the part 1 bolt set. Hook part 7 to part 8 as shown. Place a part L nut cap over the exposed nut.

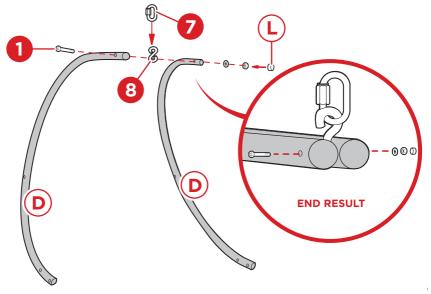

PRODUCT ASSEMBLY

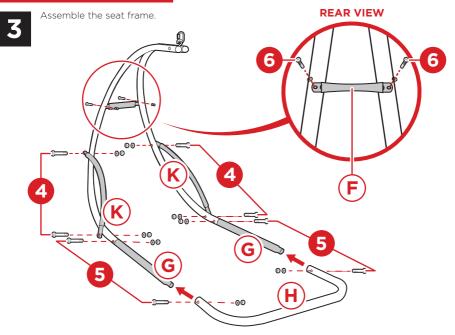


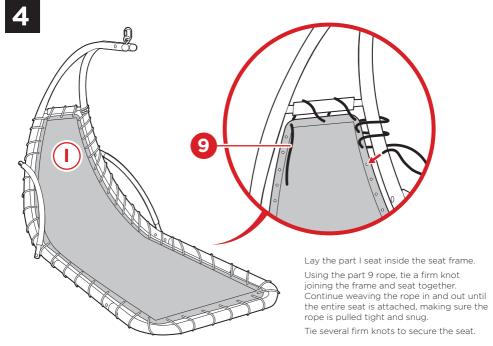

PRODUCT ASSEMBLY

5

Secure the part M canopy onto the part J canopy frame. Use the carabiner to hang the seat frame from theouter frame. Tie the part N cushion to the seat frame. Place a part L nut cap on every exposed nut.

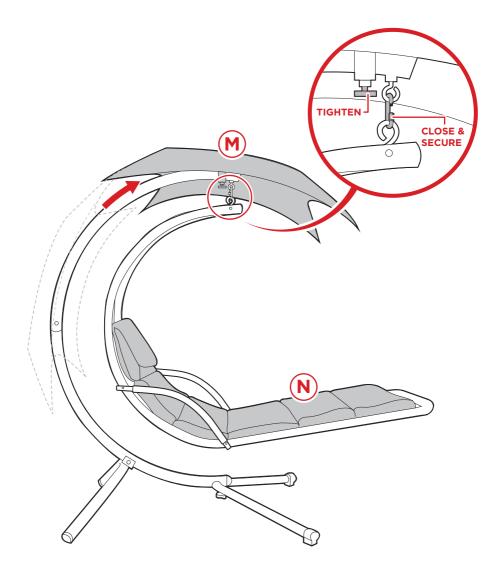



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com





Product Inquiry







PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.