


Nash Solid Wood Modern Farmhouse 65" Sideboard

SKU# WENAS11653

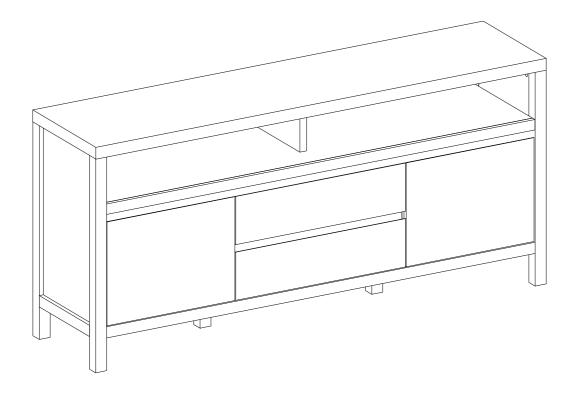

For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com



we Time to get started

Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly



People recommended for assembly

Make it a team effort! Grab a friend for quicker, easier assembly.



2 People Build

Tools Needed

Grab a Phillips head screwdriver to conquer this assembly



Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.



Glue is provided to secure wood dowels in place

When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.






Scan to get assembly tips and help!

₩ Parts List

Part Num	ber Description Qu	antity
1	Top Panel	1
2	Bottom Panel	1
3	Front Apron	1
4	Fixed Divider	1
5	Fixed Divider Front Rail	1
6	Fixed Divider Insert Rail	1
7	Left Side Panel	1
8	Right Side Panel	1
9	Lower Left Middle Divider Panel	1
10	Lower Right Middle Divider Panel	1
11	Upper Middle Divider Panel	1
12	Adjustable Shelf	2
13	Left Door Panel	1
14	Right Door Panel	1
15	Drawer Insert Rail	1
16	Drawer Left Side Panel	2
17	Drawer Right Side Panel	2
18	Drawer Back Panel	2
19	Drawer Bottom Panel	2
20	Base Cross Bar	2
21	Drawer Front Panel	2
22	Middle Foot	2
23	Back Panel	1

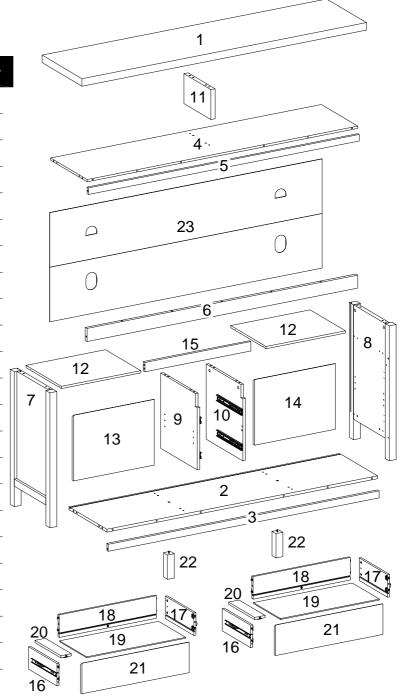

WE Hardware List


	Part	Size	Name	Quantity
А		8x30mm	Wooden dowel	28
В		6x35mm	Cam bolt	35
C		15x11mm	Cam lock	27
D		30mm	Sticker	35
E		6x30mm	Wooden dowel	14
F		15x9mm	Cam lock	8
G	@ <u></u> @	6x50mm	Bolt	6
Н		M4mm	Hex Key	1
J		35mm	Hinge	4
K	AIIIIIII &	3.5x14mm	Screw	24
L	D	8x5x16mm	Shelf support pin	8
М			Plastic wedge	14
N	4111111111	3x17mm	Screw	14

WE Hardware List


	Part	Size	Name	Quantity
Р	<=====================================	4x12mm	Screw	2
Q	<(3)	4x25mm	Screw	2
R	و ما الما الما الما الما الما الما الما		Plastic strap	2
S	III		Wall Anchor	2
Т			Glue tube	2

The hardware quantities listed above are required for proper assembly. Extra hardware pieces may be included.


Let's begin! Insert cam bolts (B) into the Top Panel (1) and tighten them with a screwdriver.

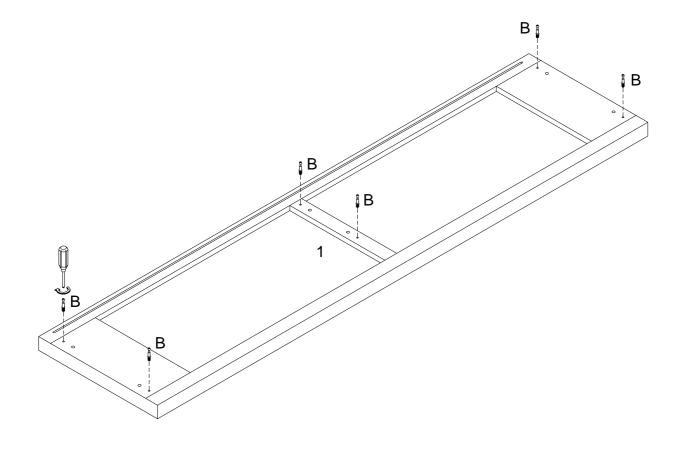


Place cam bolts (B) into the Front Apron (3) and tighten with a screwdriver. Then, insert wooden dowels (A) into the Bottom Panel (2).

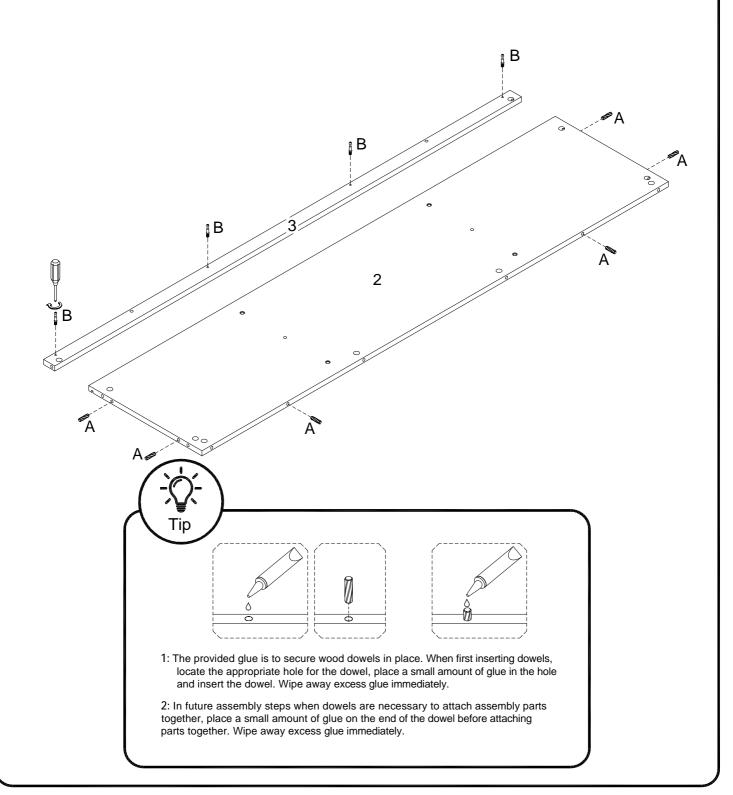


Repeat the process by inserting cam bolts (B) into the Fixed Divider Front Rail (5) and the Fixed Divider (4), then tighten with a screwdriver. Insert wooden dowels (A) into both the Fixed Divider Front Rail (5) and Fixed Divider Insert Rail (6). Next, insert wooden dowels (E) into the Fixed Divider (4).

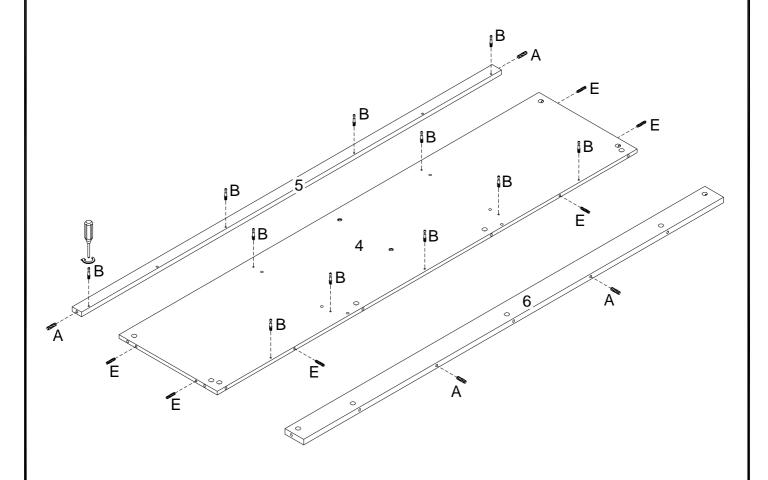


Insert wooden dowels (A) into the Drawer Insert Rail (15) and the Upper Middle Divider Panel (11).

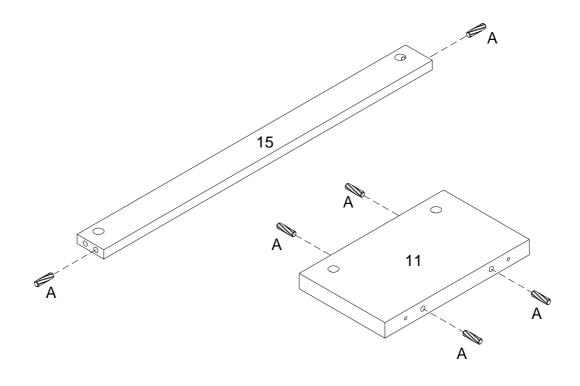


Place wooden dowels (A) into the Lower Left Middle Divider Panel (9) and Lower Right Middle Divider Panel (10). Insert cam bolts (B) into both panels and tighten with a screwdriver.

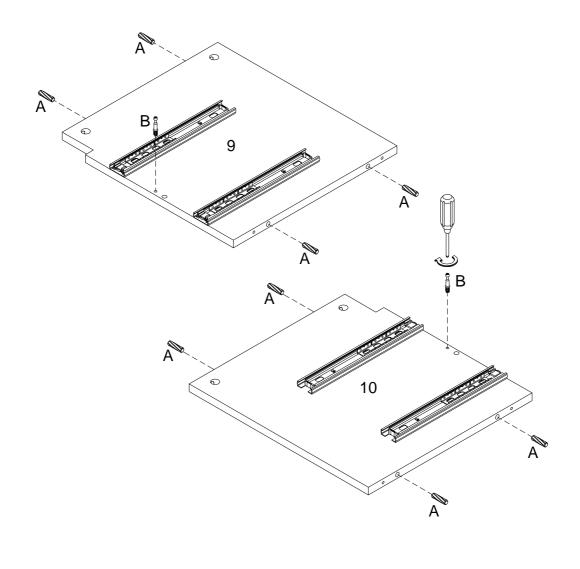


Insert cam bolts (B) into the Left Side Panel (7) and Right Side Panel (8), then place wooden dowels (A) into the top of each piece.

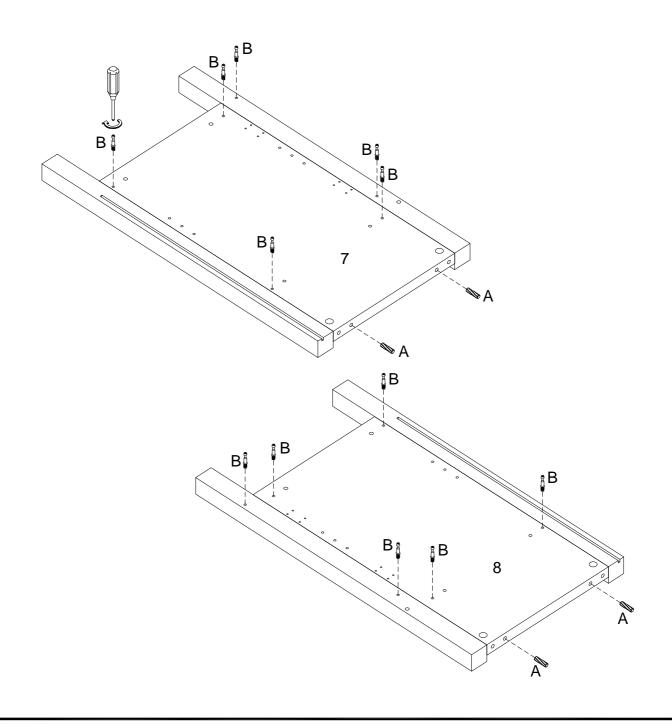

Attach the Drawer Insert Rail (15) to the Lower Left Middle Divider Panel (9) and Lower Right Middle Divider Panel (10) using cam bolts. Insert cam locks (C) into the Drawer Insert Rail (15) and tighten with a screwdriver to secure the assembly.

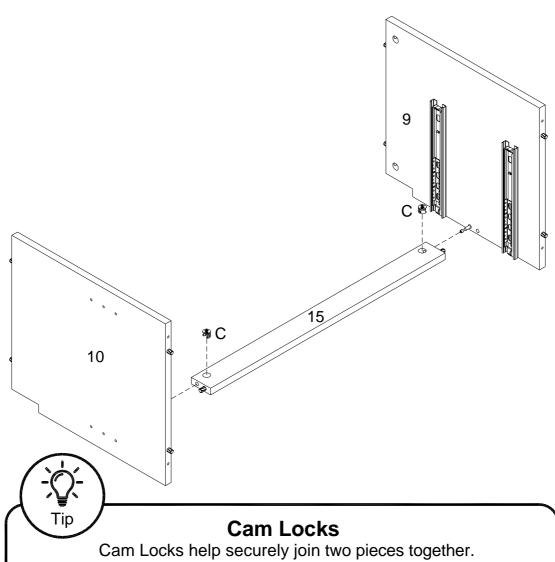

 
Cam Locks help securely join two pieces together.
Follow these easy steps.

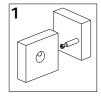

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!




 2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

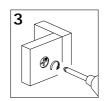


3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Connect the Fixed Divider Front Rail (5) to the Fixed Divider (4) with cam bolts. Insert cam locks (F) into the Fixed Divider (4) and tighten to secure.

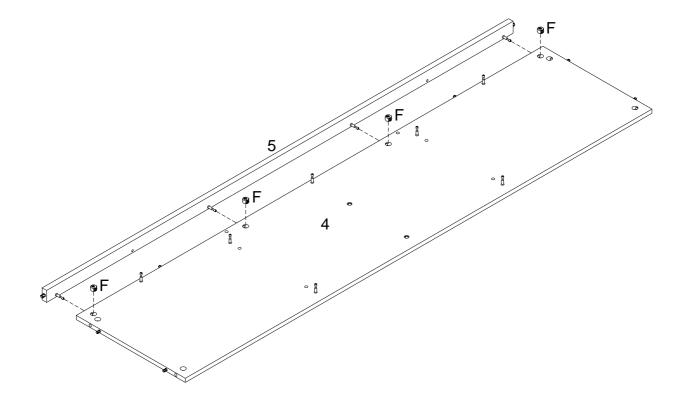


Attach the Fixed Divider Insert Rail (6) to the Fixed Divider (4) with cam bolts. Insert cam locks (C) and tighten with a screwdriver.

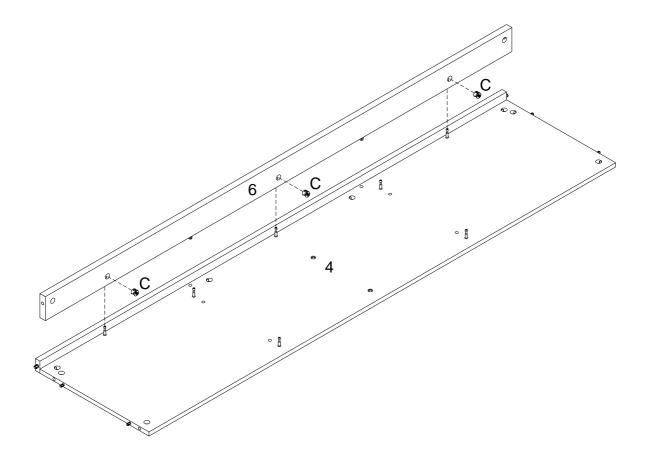


Secure the Upper Middle Divider Panel (11) to the Fixed Divider (4) using (G) bolts and tighten with the provided hex key (H).

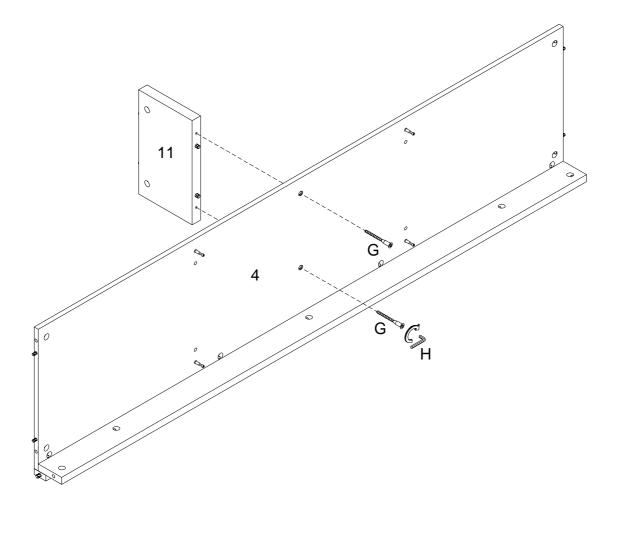


Attach the Lower Right Middle Divider Panel (10) and Lower Left Middle Divider Panel (9) to the other side of the Fixed Divider (4) using cam bolts. Insert cam locks (C) and tighten to secure.

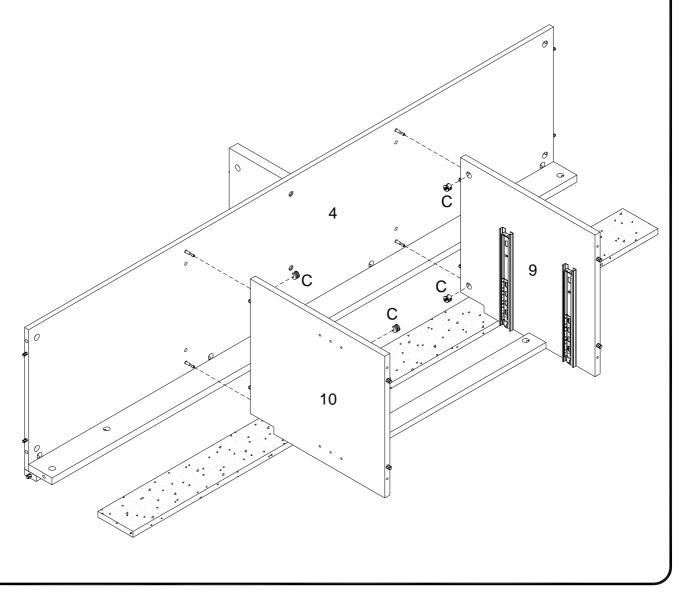


Connect the Front Apron (3) to the Bottom Panel (2) using cambolts. Insert cam locks (C) into the Bottom Panel (2) and tighten with a screwdriver.

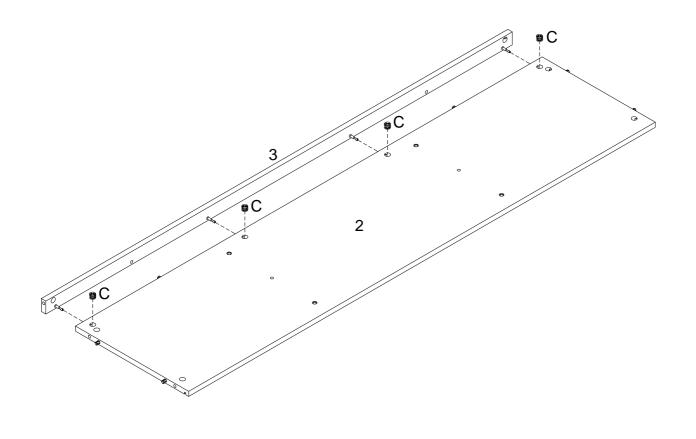


Attach the Bottom Panel (2) to the Lower Left and Right Middle Divider Panels (9 and 10). Use (G) bolts and tighten with the hex key (H).

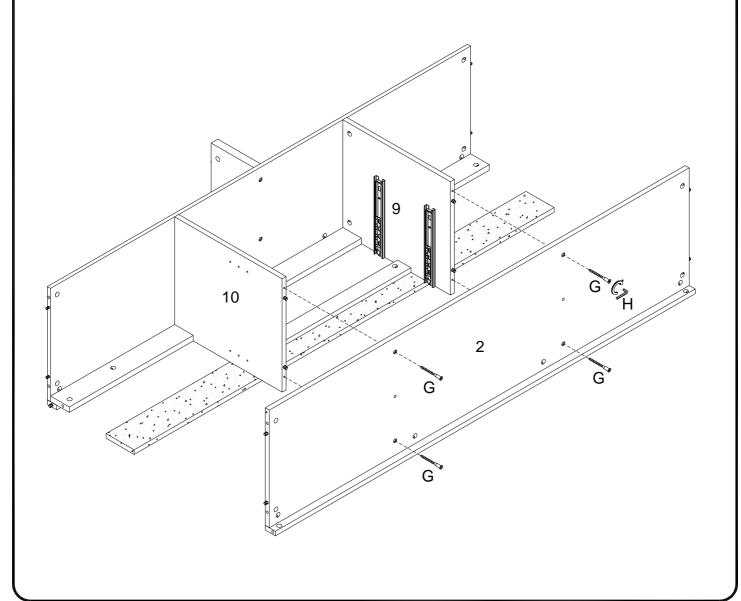


Connect the Right Side Panel (8) with cam bolts. Insert cam locks (C and F) and tighten with a screwdriver.

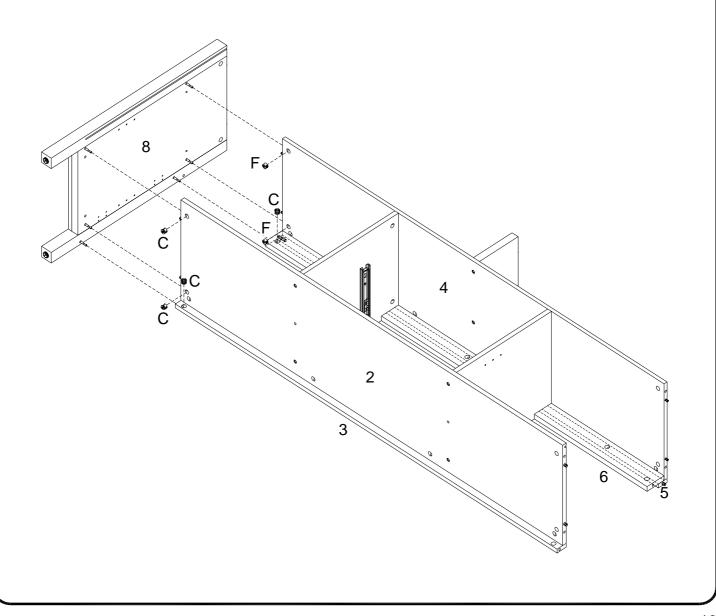


Repeat the previous step to attach the Left Side Panel (7) with cam bolts. Insert cam locks (C and F) and tighten.

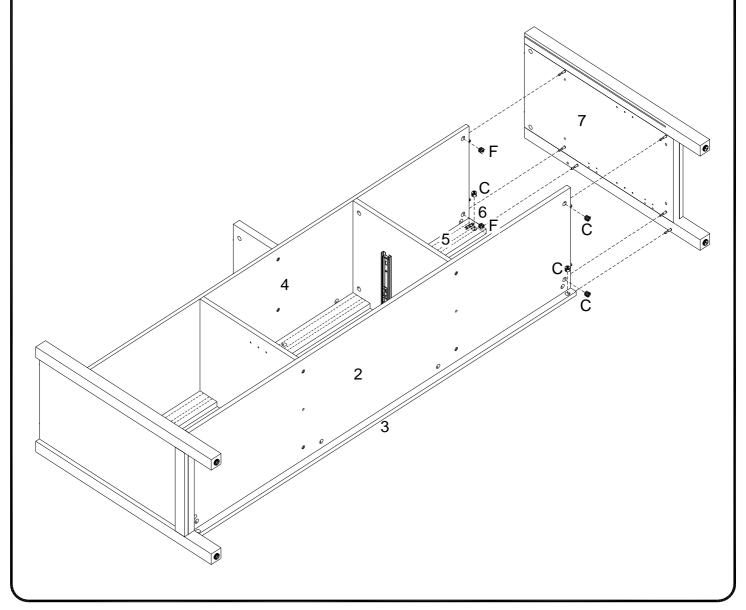


Screw the Middle Feet (22) into the bottom of the Bottom Panel (2).

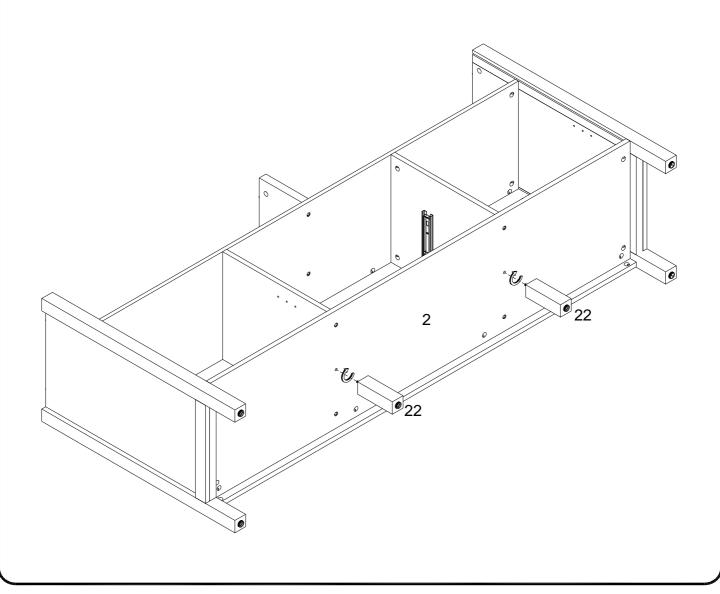


Unfold and slide the Back Panel (23) into place along the grooves.

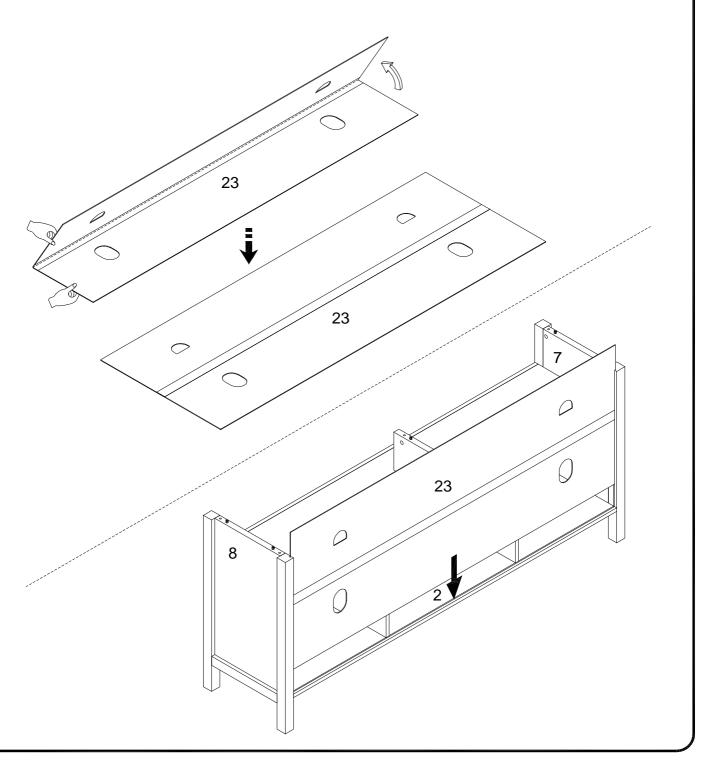


Attach the Top Panel (1) to the unit using cam locks (C) and tighten with a screwdriver.

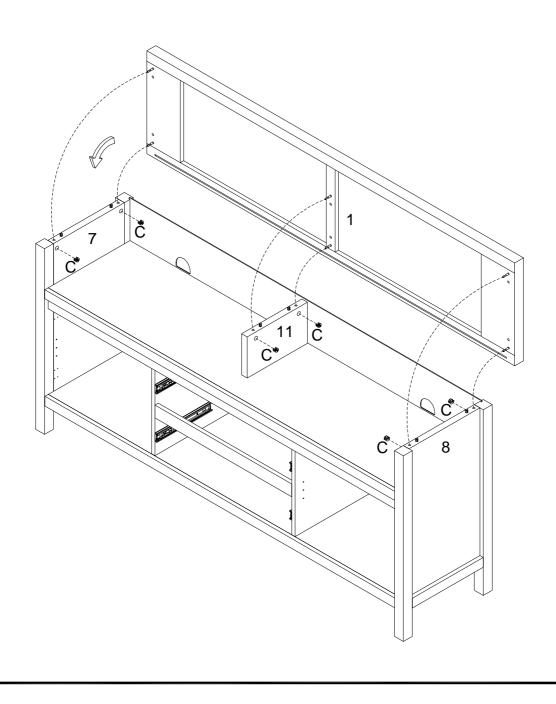


Evenly space plastic wedges (M) around the Back Panel (23) and secure them with (N) screws.

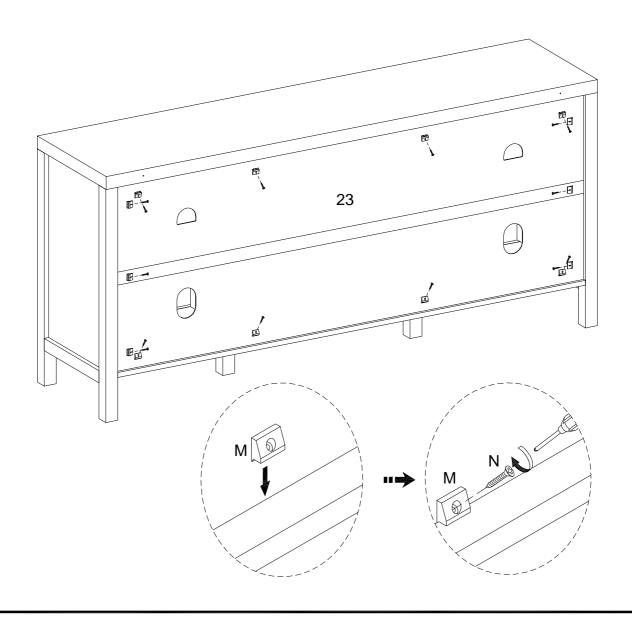


Cover each cam lock with stickers (D) for a polished look.

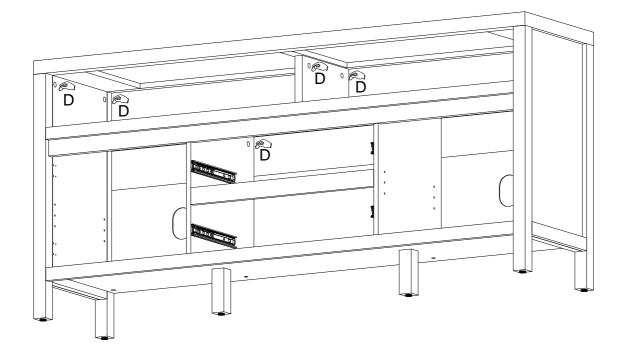


Insert shelf support pins (L) into the appropriate holes. Place the Adjustable Shelves (12) on the pins with the finished edge facing outward.

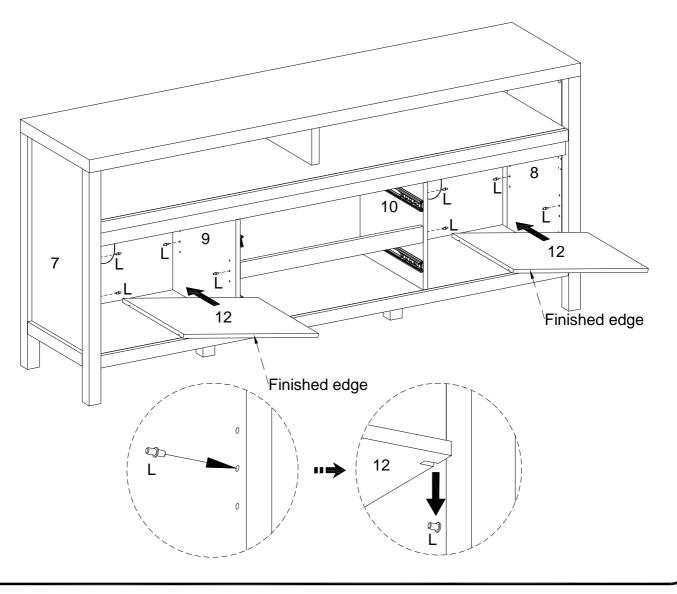


Attach hinges (J) to the Left Door Panel (13) and Right Door Panel (14) using (K) screws.

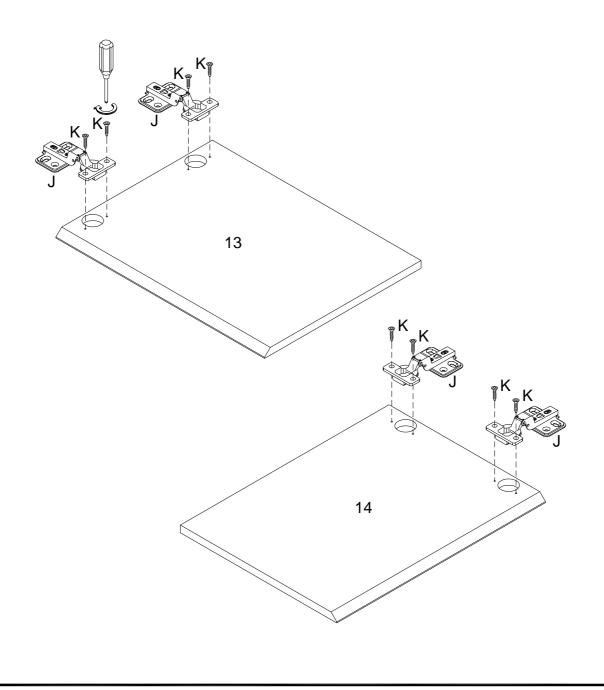


Secure the Left Door Panel (13) with (K) screws.

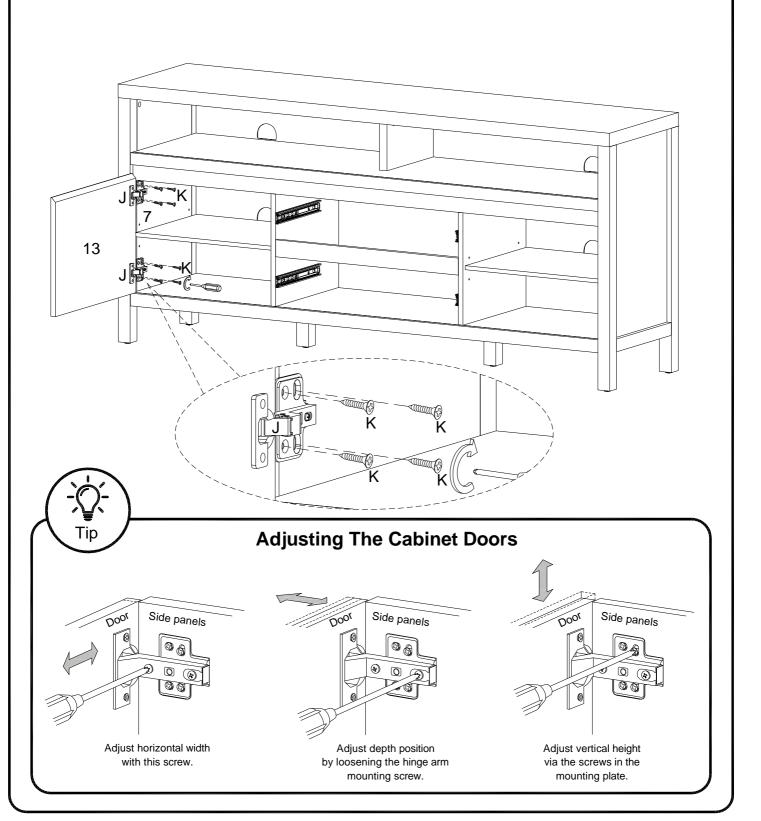


Secure the Right Door Panel (14) with (K) screws.

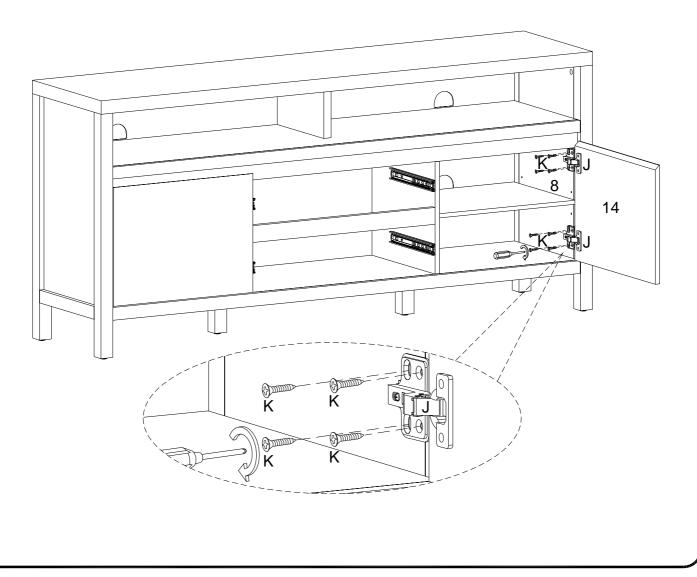


Insert wooden dowels (E) into the Drawer Back Panel (18), Drawer Left Side Panel (16), and Drawer Right Side Panel (17). Repeat for the second drawer.

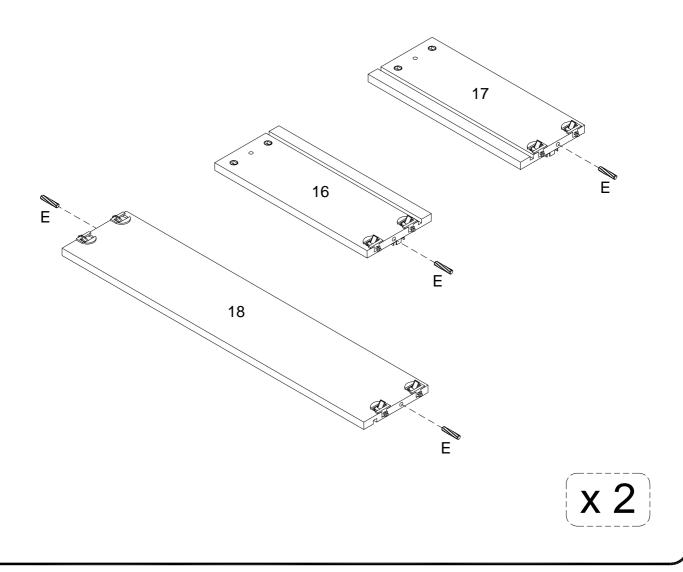


Insert the quick assembly drawer pin on the Drawer Back Panel (18) into the corresponding holes on the Drawer Side Panels (16 and 17). Flip the metal lever to lock them in place. Repeat for the second drawer.

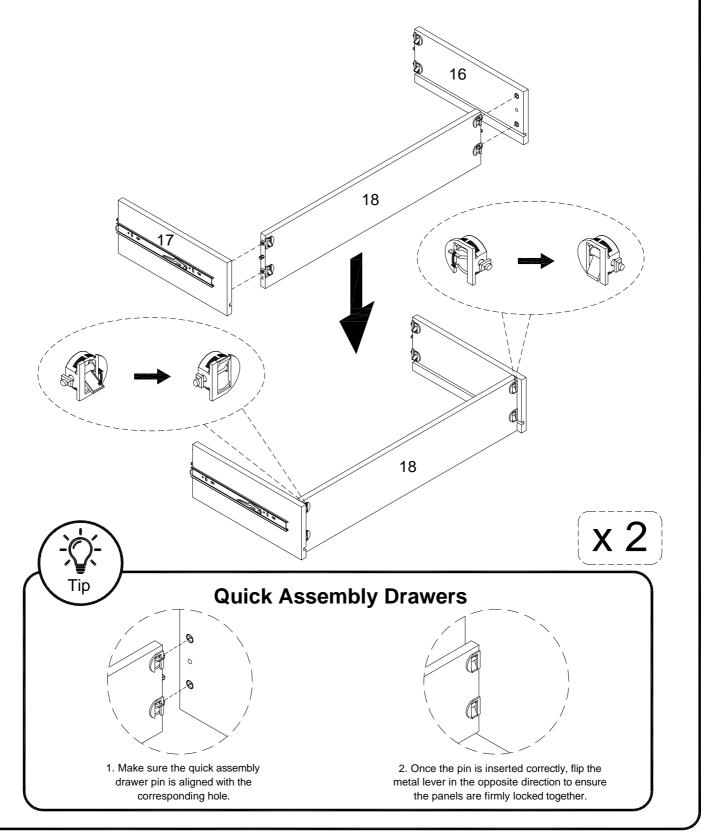

Secure both Base Cross Bars (20) to the Drawer Back Panels (18). Flip the lever to lock them in place.

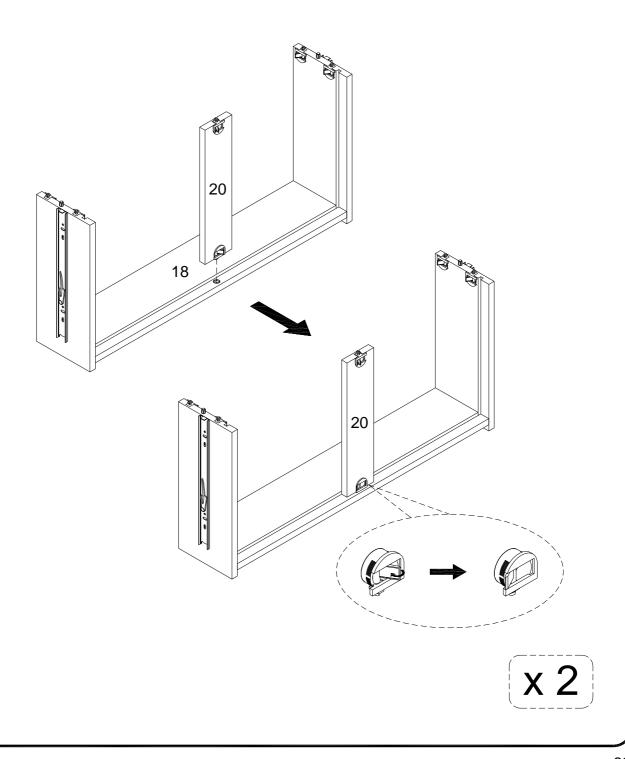


Insert the Drawer Bottom Panels (19) into the grooves on each drawer.

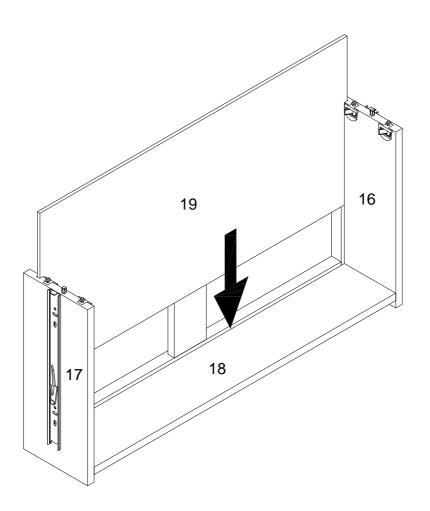


x 2


Attach the Drawer Front Panels (21) to the drawers.

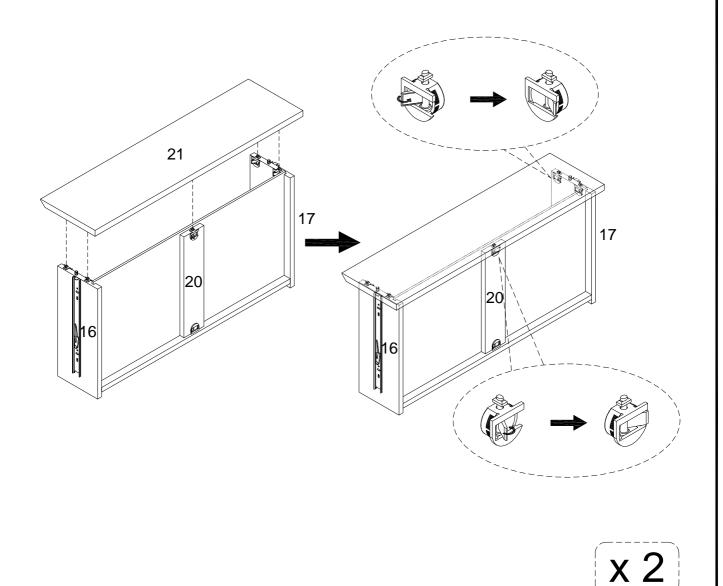


Slide both drawers into the unit.

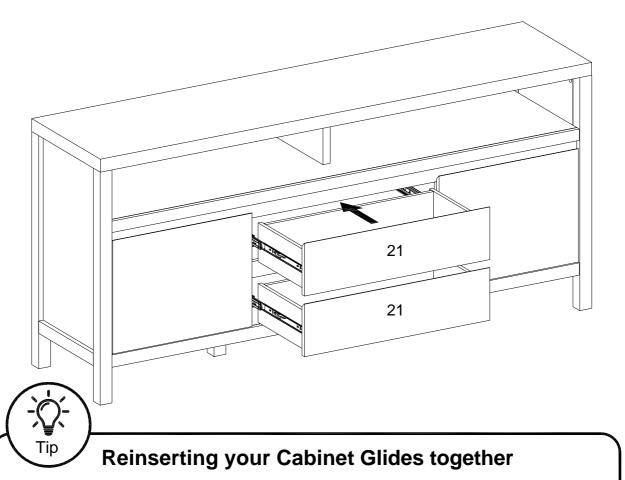


Line up the Drawer Member so it is inside the guides of the Cabinet Member. Once the connection is made, push the drawer into place entirely. It may not be a smooth glide on your first try, but will improve after it' fully inserted.

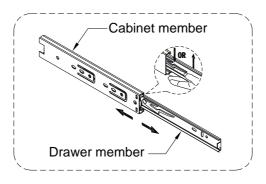


Adjust the feet to level the unit on the floor.

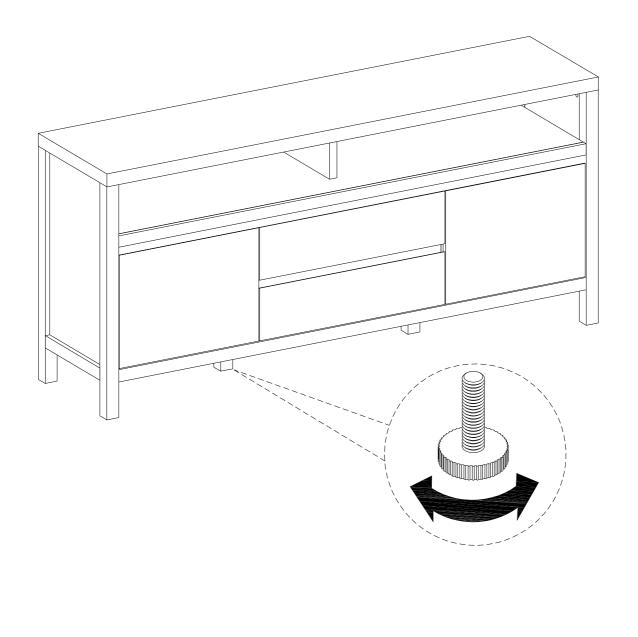

Secure the plastic strap (R) to the unit with (P) screws.

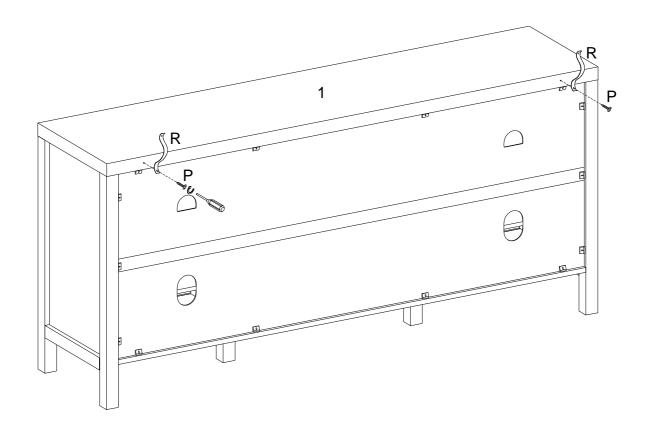


Attach the other end of the strap to the wall with the wall anchor (S) and (Q) screws.

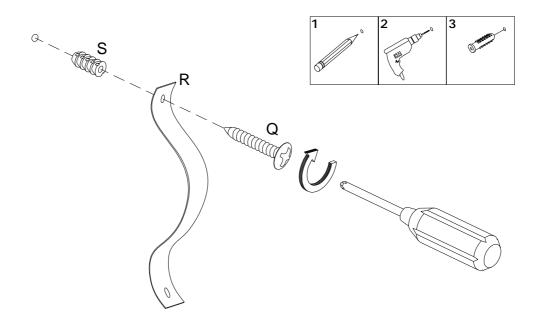

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

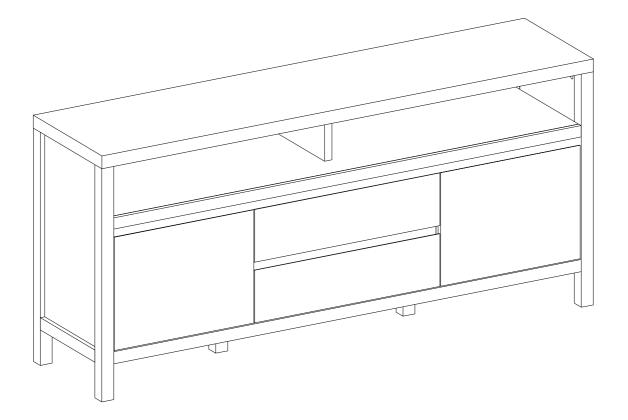

Congratulations on your new piece of furniture!

We would love to hear about it and see it.

Please leave us a review or post a picture with

#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at 801-433-3008

Email us at service@walkeredison.com

Visit our Customer Service website at

walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,



