



HD-26S



HD-36S



HD-48S

Heated Displays Instruction Manual

This manual contains important information regarding your unit.
Please read this manual thoroughly prior to equipment set-up, operation, and
maintenance. Failure to comply with regular maintenance guidelines outlined in this
manual may void the warranty.

IMPORTANT SAFEGUARDS

Please read all the instructions to familiarize yourself with all the parts and operations before use.



DO NOT touch hot surfaces.

- High temperature will cause scalding.
- Hot water and steam can severely burn skin.

DO NOT use machine with wet hands.

- This product is for **COMMERCIAL USE ONLY**.
- **DO NOT** use this unit for other than intended use.
- **DO NOT** operate unattended.
- Keep children and animals away from unit.
- **ALWAYS** use on a firm, dry and level surface, at least 12" from walls or any other obstruction.
- **DO NOT** immerse unit, cord or plug in liquid at any time.
- Keep cords, plugs, and other electrical components away from liquids to protect against electrical shock.
- **DO NOT** operate the unit outdoors.
- **DO NOT** operate the unit after it has malfunctioned or been damaged in any way.
- **DO NOT** use unit with a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner.
- **UNPLUG** the unit when not in use and before cleaning.
- **PROPER GROUNDING REQUIRED** Plug only into a 3-hole grounded electrical outlet.
- Check that your outlet and voltage are correct for the plug type before operating the unit.
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury.
- All repairs should be done by authorized professionals only.

General Safety

- **Hardwired Units:** A licensed and insured food service technician or electrician must install these units. If unit is not properly installed, void of warranty and damage may occur.
- **Read the Manual:** Thoroughly read and understand the manual before setting up, operating, or cleaning the unit.
- **Instruction and Training:** Ensure users are instructed and trained in the safe and correct operation of the unit to prevent accidents and ensure consistent results.
- **No Modifications:** Never modify the unit's settings, components, or features, or use such components or features in unintended ways outside of the manufacturer's specifications, as this may compromise safety and void warranties.
- **Wear Proper Apparel:** Always wear appropriate clothing. Avoid loose-fitting or hanging garments while operating the unit to prevent potential hazards.
- **Supervision Required:** This appliance is not intended for use by persons who lack experience and knowledge unless they are supervised or instructed in the safe use of the appliance by a person responsible for their safety.



Electrical Safety

Dedicated Circuit:

- For optimal performance and safety, the unit must be connected to a dedicated electrical circuit. Sharing a circuit with other appliances can lead to power fluctuations, potential tripping of the circuit breaker, and a reduced lifespan of the appliance.

GFCI Outlets:

- It is recommended to use the unit with a GFCI outlet. State and local regulations may require their use.

GFCI Troubleshooting:

- A GFCI receptacle protects against “ground faults” whenever an electrical product is plugged into the GFCI outlet by constantly monitoring the electricity for any loss of current. The heater element may absorb some moisture into its casing and insulation during shipment or during long periods of not being used. If the unit trips your GFCI upon first use, plug the unit into a non-GFCI outlet, set it to max temperature, and let it run for 30~60 minutes to dry out any moisture the element may have absorbed. After drying the element, plug the unit into the GFCI outlet; the unit should run without tripping the GFCI. If the unit still trips the GFCI, contact customer service.

Initial Setup

Inspect the Packaging:

- Examine the packaging for any signs of damage that may have occurred during shipping. If damage has occurred, please reach out to the manufacturer immediately.

Unboxing:

- Open the packaging with care. Use scissors or a box cutter to cut open the box, ensuring you do not damage the unit or its components.
- Remove the machine from its packaging.
- Ensure that all foam and plastic have been removed from both the inside and outside of the machine before use.

Installation

1. Clean any glue residue left over from the plastic or tape.
2. Place the unit in the desired position and level using the adjustable feet.
3. Install the doors:
 - Note the longer doors are for front or sloped side and the shorter doors are for the back or straight side.
 - The doors are fitted with the handles facing toward the outside of the unit by placing the top of the door into the top track and sliding the door up to clear and lower into the bottom track.
4. Install the shelves: Place the uprights into the provided slots making sure that the longer Tab is on top and the flat sides face inward. Place the shelf supports at the desired locations and position the shelf on these supports.
 - Note: The shelf supports and shelves can be positioned level or sloping forward for improved presentation.
5. Plug the unit into a properly grounded electrical supply matching the nameplate rating.
 - Damage to the unit can occur if incorrect power is supplied to unit.

Operating the unit

1. Set thermostat to the desired heat.
2. Place all foods in appropriate baking tins.
3. Preheat the unit for approximately 15 minutes, until the unit reaches set temperature. The pilot light will cycle on and off when the unit is at the set temperature.
4. Use the switch to operate the light.
5. If moisture is required, fill humidity pan with 20 ounces water and monitor water level.



WARNING: ELECTRICAL SHOCK HAZARD

DO NOT SPRAY OUTSIDE OF THE UNIT OR CONTROLS WITH LIQUID OR CLEANING PRODUCT. LIQUID COULD ENTER THE ELECTRICAL COMPARTMENT AND CAUSE A SHORT CIRCUIT OR ELECTRIC SHOCK.

Maintenance

Monthly Checks

Inspect for Wear

Regularly check all components for signs of wear, tear, or damage, and replace as necessary.

1. Turn off and disconnect the machine from the power source.
2. Inspect the plug and cord for any indications of excessive wear, which may encompass discoloration, burn marks, cuts, and tears.
3. Check the integrity of electrical cords and plug points.
4. Contact a service provider for recommended actions or replacement.

Professional Servicing

Annual Maintenance

Ensure that specialized features like electrical components and temperature controls are working correctly.

1. Schedule an annual service appointment with a certified technician who specializes in units.
2. The technician will perform a comprehensive inspection, checking electrical components.
3. Calibration tests may be performed to ensure optimal temperature.
4. Any worn-out or damaged parts will be replaced.
5. Obtain a detailed service report for your records, beneficial for both warranty claims and future troubleshooting.

Cleaning

 
1. Unplug unit and allow to cool completely before cleaning.
2. Do not immerse cord, plug or unit in water or any other liquid.
3. Use a damp cloth or sponge dipped in soapy water to clean the unit.
4. Wipe the unit dry and wait at least 30 minutes before using.

Specifications


Model	HD-26S	HD-36S	HD-48S
Unit Dimensions (in / mm)	26.6"x17.72"x24.76" (676×450×629 mm)	36.1"x19.5"x24.76" (916×495×629 mm)	47.24"x19.8"x32.6" (1200×503×828 mm)
Product Weight (lbs.)	75.9	101.3	149.6
Electrical	120V ~ 60Hz – 1500W (15A)	120V ~ 60Hz – 1500W (15A)	120V ~ 60Hz – 1500W (15A)
Plug Type	NEMA 5-15P	NEMA 5-15P	NEMA 5-15P
Cord Length (in.)	52"	52"	52"
Overall Maximum Temperature (°F)	190°	190°	190°
Overall Minimum Temperature (°F)	90°	90°	90°
Number of Racks	3	3	3
Control Type	Manual	Manual	Manual
Included Components	4 Legs, 3 Racks, 1 Tray, 4 Glass Pieces (Front, Back, Left, Right)	4 Legs, 3 Racks, 1 Tray, 4 Glass Pieces (Front, Back, Left, Right)	4 Legs, 3 Racks, 1 Tray, 4 Glass Pieces (Front, Back, Left, Right)

Product Drawings


HD-26S:

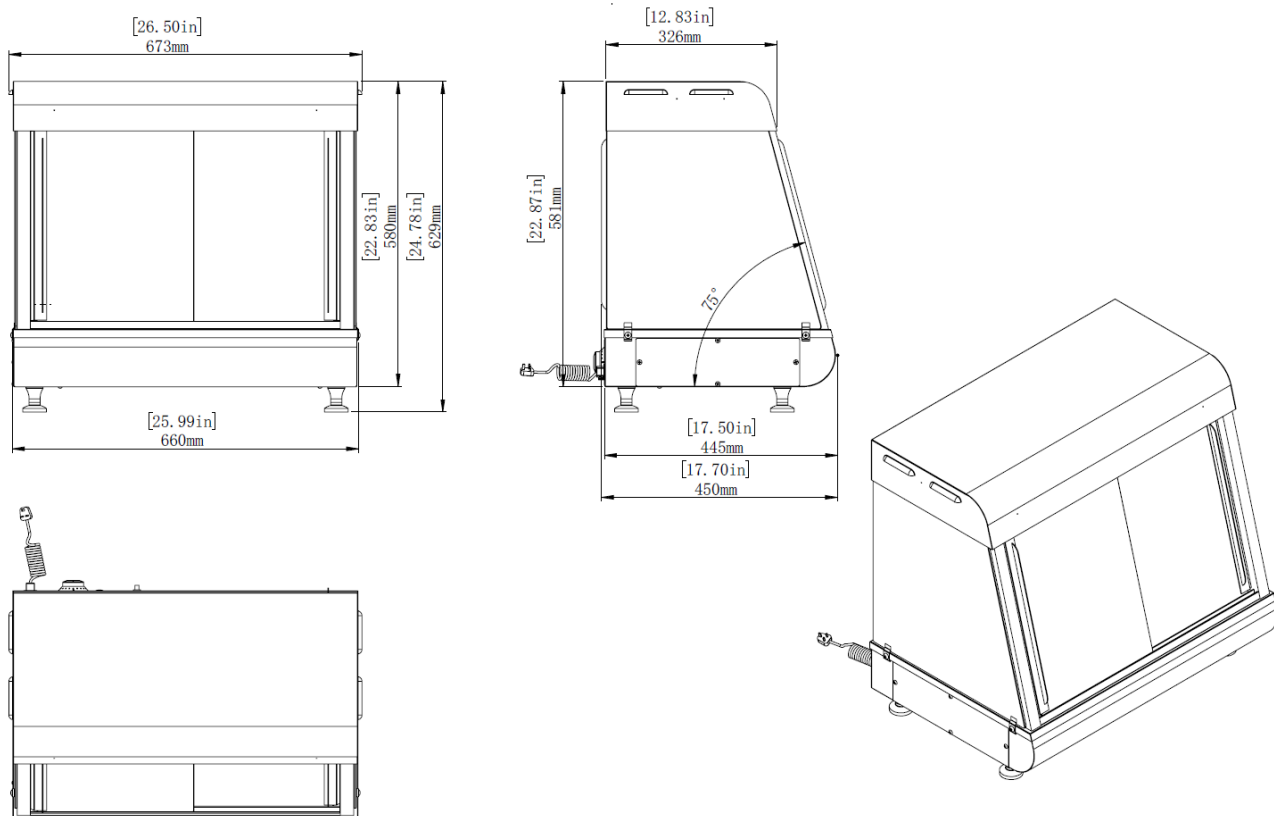

HD-36S:

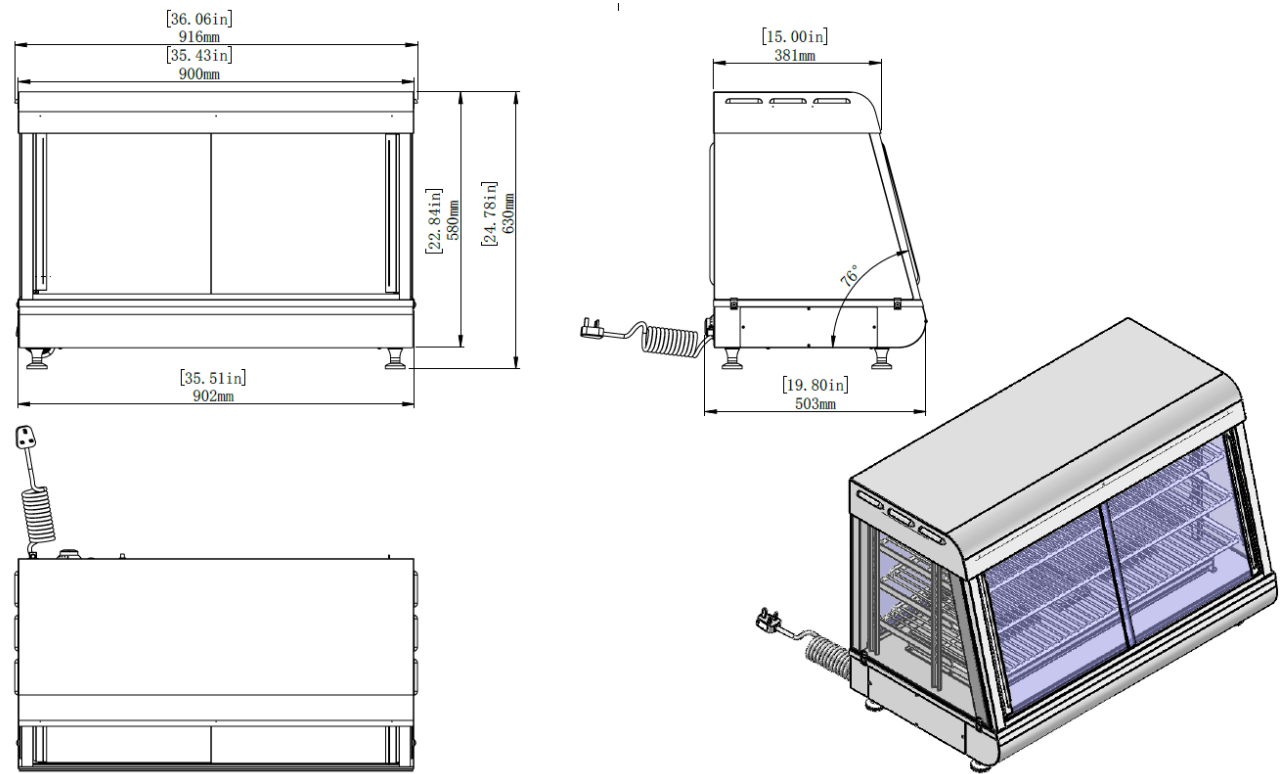 


HD-48S:

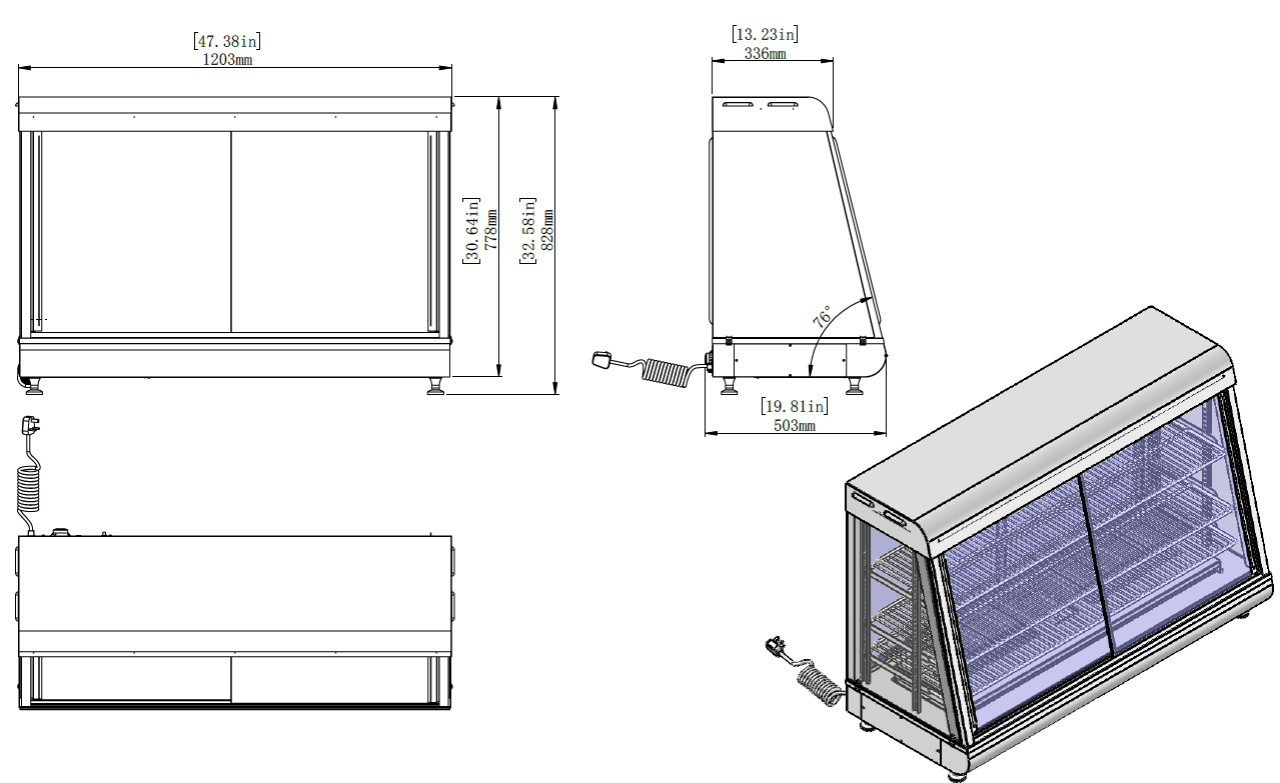 

Circuit Diagram

 HD-26S, HD-36D, HD-48S:

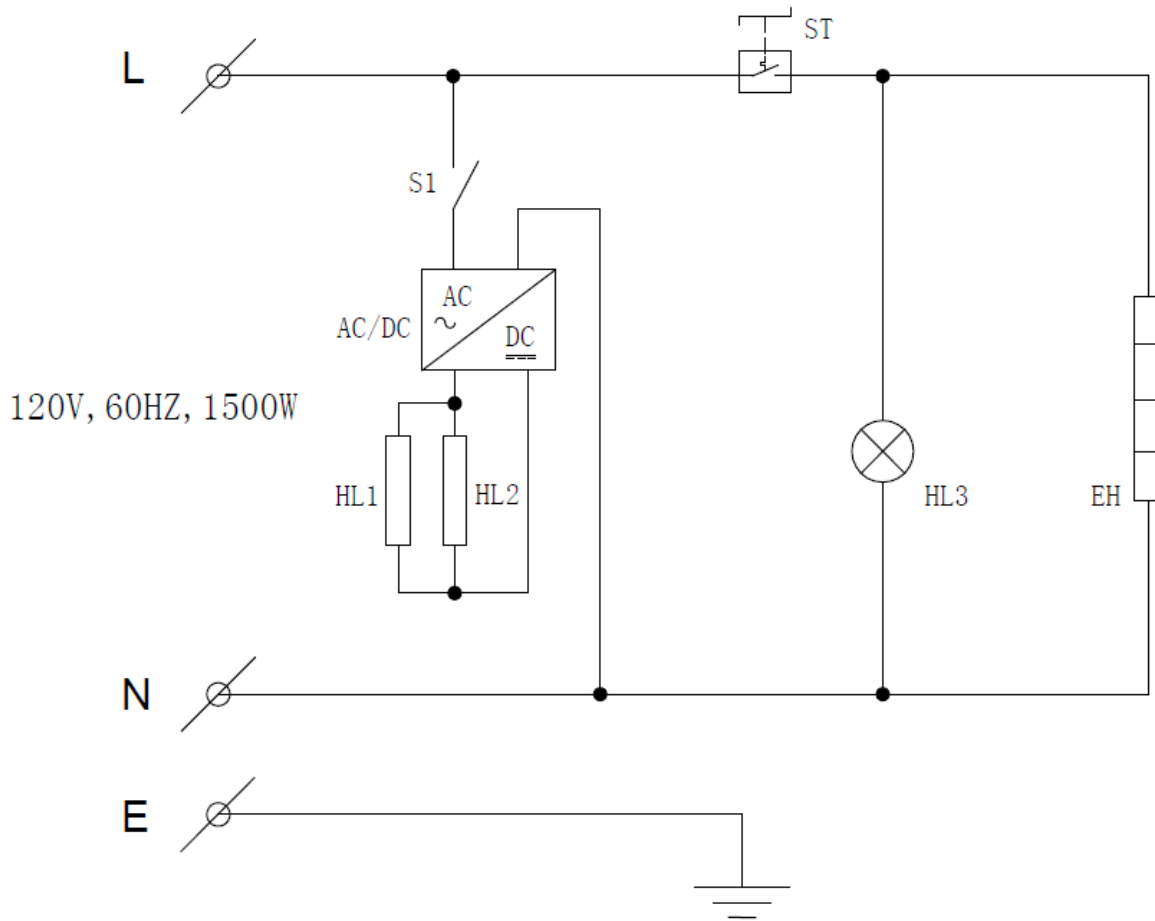

- S1: LED lamp switch
- ST: Thermostat
- HL1/HL2: Led lamp
- HL3: Heating indicator
- EH: Heating element
- AC/DC: Switch power



1 YEAR LIMITED WARRANTY

ONE (1) YEAR LIMITED WARRANTY ON PARTS AND APPROVED STRAIGHT-TIME LABOR

(subject to limitations below)

The Legacy Companies (the "Company") warrants this product (the "Product") will be free from defects in material and workmanship under normal use and service as specified by the Company for duration of:

- One (1) Year Limited Warranty on Parts and Approved Straight-Time Labor

This Limited Warranty is non-transferable.

During the Warranty Period, your exclusive remedy is repair or replacement without charge of the Product or any component found to be defective at the Company's discretion. If the Product or any component is no longer available, the Company will replace it with a similar one of equal or greater value.

The Warranty Period begins on the earliest of: (a) documented installation date; (b) date of purchase; or (c) date of shipment from the Company. In all cases, the Warranty Period shall not begin later than six (6) months after shipment.

The obligation of the Company under this warranty is limited to the repair or replacement, at the Company's sole discretion, of defective parts or assemblies that are reported during the Warranty Period and determined by the Company to be defective but excluding all labor charges (except as provided in the next paragraph).

The Company will cover approved straight-time labor only, performed during normal business hours, for covered defects reported within the applicable labor warranty period. Labor coverage excludes overtime, premium rates, travel exceeding one hundred (100) miles round-trip, multiple service trips, and access delays.

Costs expressly excluded from this warranty include, but are not limited to:

- Adjustments
- Cleaning and/or sanitizing
- Consumable/wearable items, such as gaskets, filters, light bulbs, legs, casters, hinges, non-stick cooking surfaces, etc.
- Labor to remove and/or install replacement equipment
- Disposal of defective equipment
 - Improper or inadequate utility connections, including but not limited to: Voltage outside of data plate specifications
 - Improper gas pressure
 - Improper gas supply
 - Water pressure outside of specified range
 - Poor water quality
 - Non-use or incorrect use of water filtration system
- External drain malfunction.
- Adverse operating conditions as set forth in the owner/user manual for the product.
- Non-authorized modification of the product.
- Improper installation of the product, including installation in a hostile environment
- Improper maintenance, abuse or misuse of the product.
- Causes beyond the reasonable control of the Company, including without limitation fires, freezing, floods and other natural disasters.
- Damage during transit.

No warranty shall apply to any product on which the model or serial number has been altered or removed. Adjustments or modifications to any equipment manufactured by the Company are not covered by this warranty.

This Warranty only extends to the original owner/end user and is not transferable or applicable to products sold through unauthorized channels.

This Warranty covers installations for Commercial use only. Installation or use in any residential or non-commercial setting voids all warranty coverage.

This warranty applies to the original installation location only.

IMPORTANT INSTALLATION NOTICE: Equipment installed outdoors or in mobile or non-permanent environments (including food trucks, trailers, RVs, or boats) is limited to a thirty (30) day warranty unless expressly approved in writing by the Company.

All warranty requests are to be made through the Company's Warranty and Technical Service team. All warranty requests shall include the product model and serial number, original installation date and/or Proof of Purchase, photo of the equipment serial number data plate and complete customer identification and location.

Replacement parts may be new or rebuilt at the Company's discretion and are warranted for the longer of ninety (90) days or the remaining original Warranty Period. Company and its agents are expressly permitted to specify rebuilt parts as suitable replacement parts. All replacement parts must be approved Company parts obtained through the Company or a Company approved parts distributor.

THIS WARRANTY IS IN LIEU OF ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, PERFORMANCE, OR OTHERWISE, WHICH ARE HEREBY EXCLUDED. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, FORESEEABLE, CONSEQUENTIAL, OR SPECIAL ARISING OUT OF OR IN CONNECTION WITH THIS PRODUCT INCLUDING DAMAGES ARISING FOR LOSS OF PROFIT, FOOD OR BEVERAGE SPOILAGE CLAIMS, OR OTHER COMMERCIAL LOSS.

You may have other legal rights depending upon where you live. Some States or Provinces do not allow limitations on warranties so the foregoing may not apply to you.