



bestchoiceproducts



INSTRUCTION MANUAL

Farmhouse Kitchen Set



bestchoiceproducts

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —



This item is intended to
be mounted to a wall
following assembly.

Do not attempt to use
this item otherwise as
it may result in
personal injury and
property damage.

bestchoiceproducts.com

⚠ WARNING
ADULT ASSEMBLY REQUIRED

⚠ WARNING
CHOKING HAZARD - Small parts.
Not for children under 3 years old.

! NOTICE Please retain these instructions for future reference.

- This product requires adult assembly and supervision when in use.
- This product is intended for indoor use only.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product contains small parts. May result in choking hazard for children under 3 years.
- To wipe down item, use a damp cloth. Then, wipe it down once more with a dry cloth.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



HAMMER
(NOT PROVIDED)



DRILL
(OPTIONAL)



3 YEARS
OLD AND UP











1 PERSON
ASSEMBLY




UP TO 60 MIN.
ASSEMBLY


HARDWARE

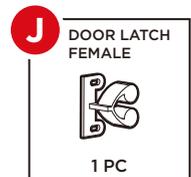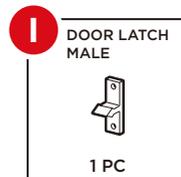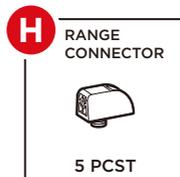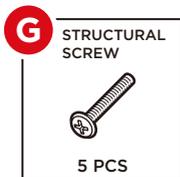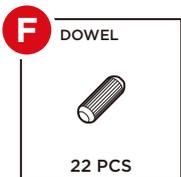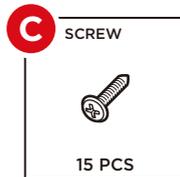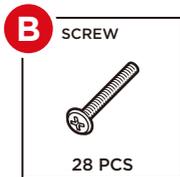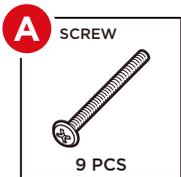













HARDWARE

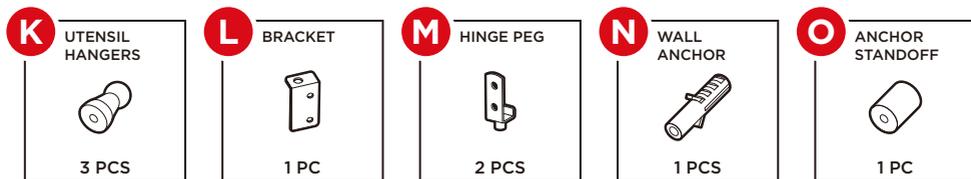








PARTS

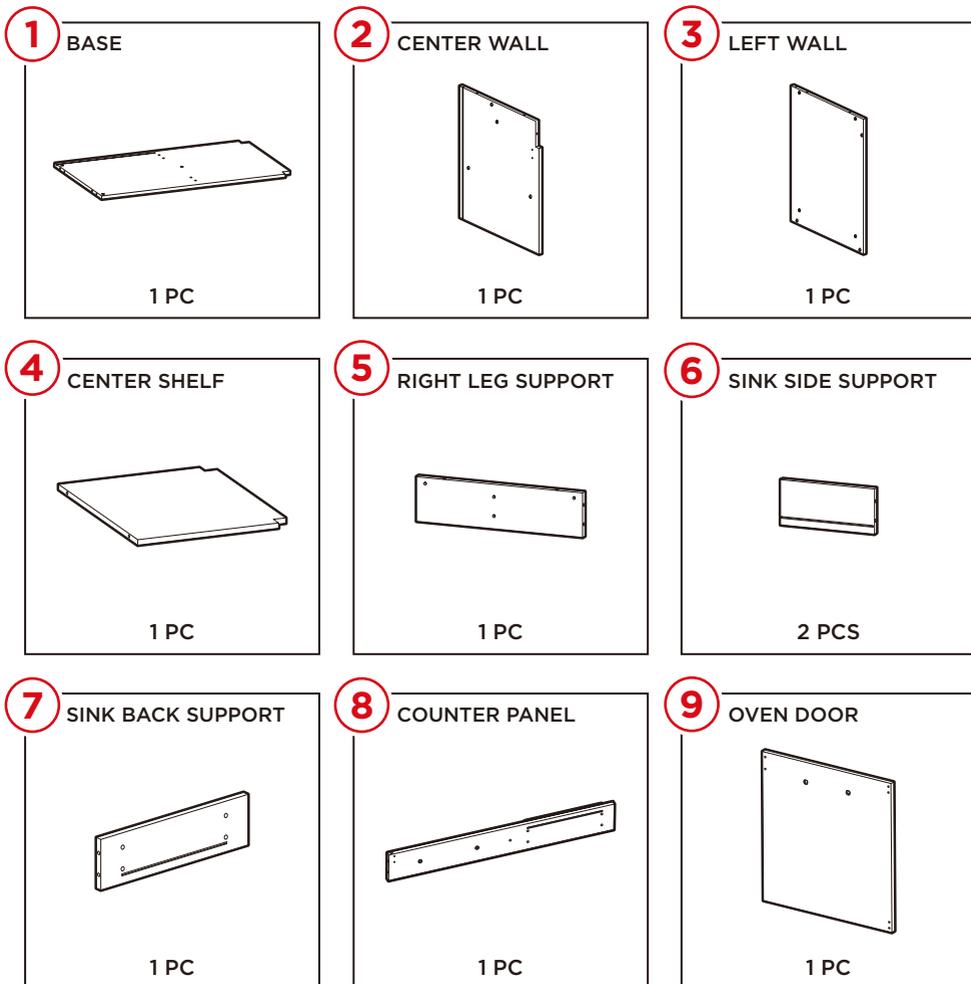

PARTS

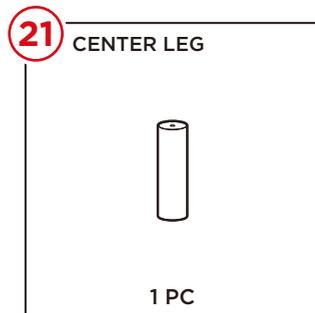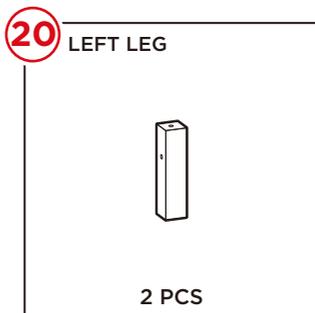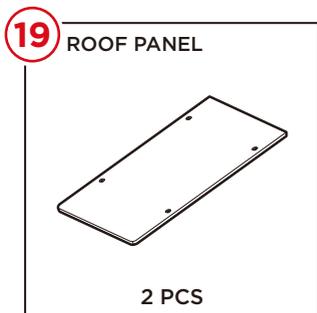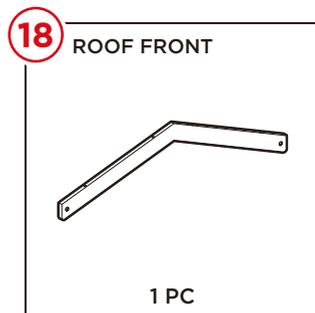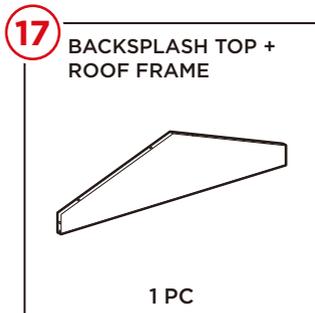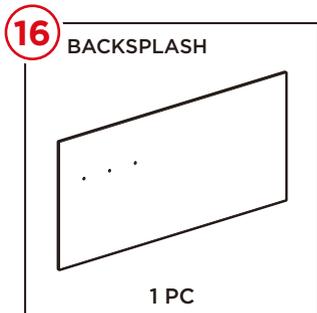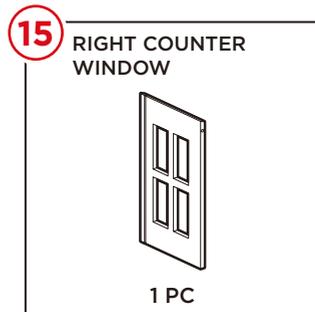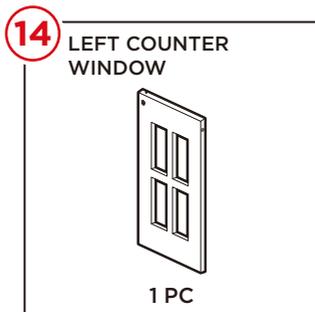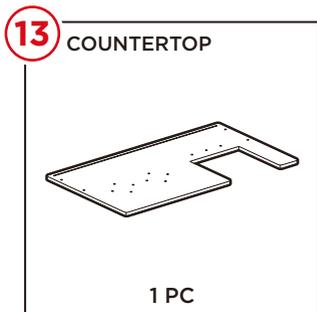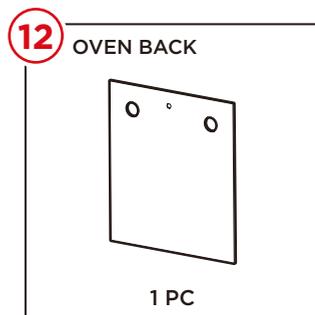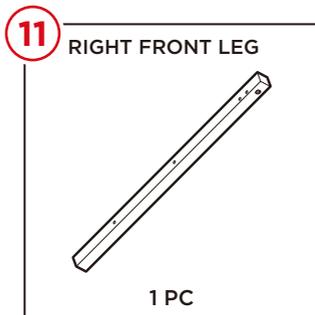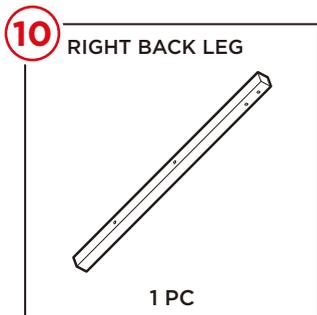


PARTS

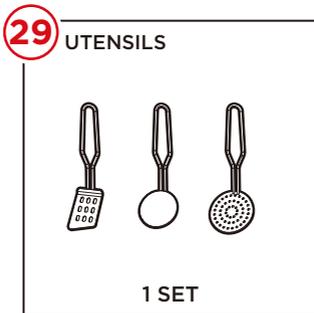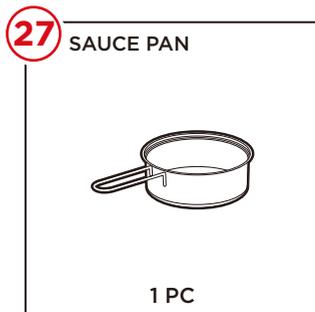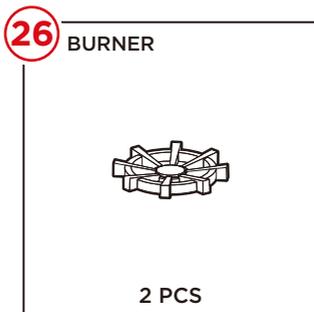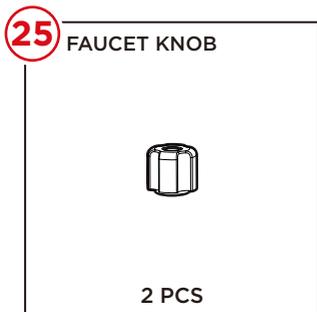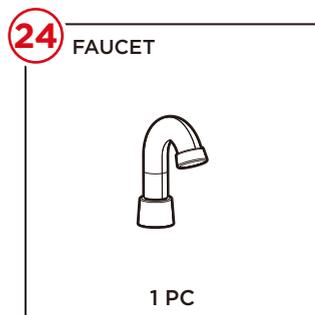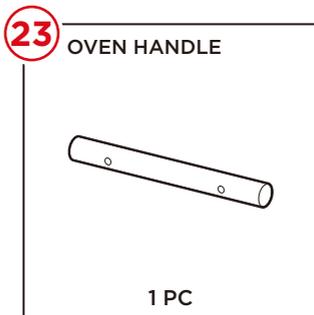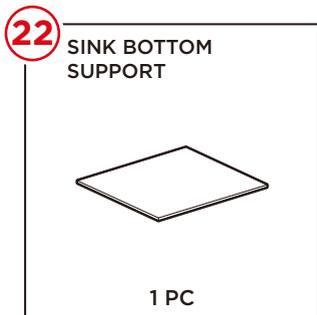

PRE-ASSEMBLY

1

Insert two part F dowels into the part 1 base.

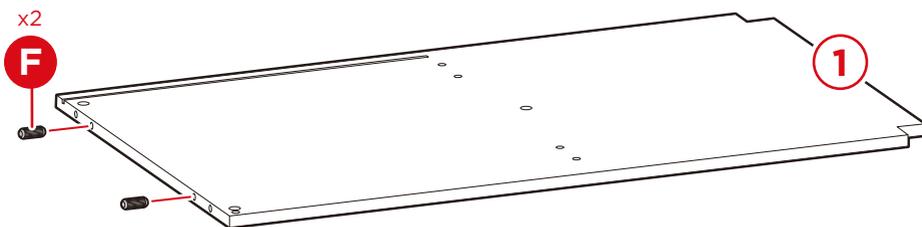


PRE-ASSEMBLY

2


Insert four part F dowels into the part 2 center wall.

Screw the part J door latch (female) to the part 2 center wall with two part D screws.

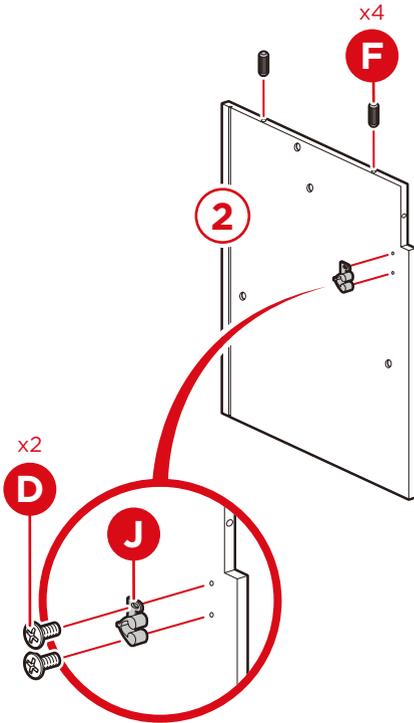


3

Insert two part F dowels into the part 3 left wall.

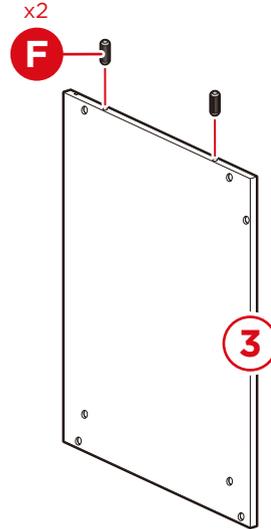


4

Insert four part F dowels into the part 5 right leg support.

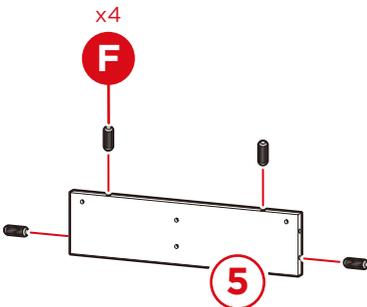

5


Insert four part F dowels into the part 6 sink side support. Repeat on a second sink side support.

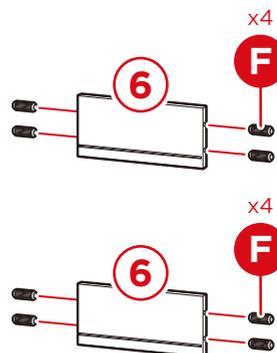

PRE-ASSEMBLY


6

Insert two part F dowels into the part 7 sink back support.

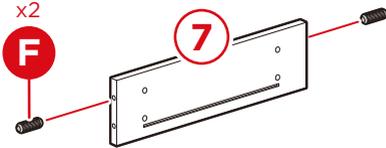

7


Insert two part F dowels into the part 8 counter panel, then attach the part L bracket with two part D screws.

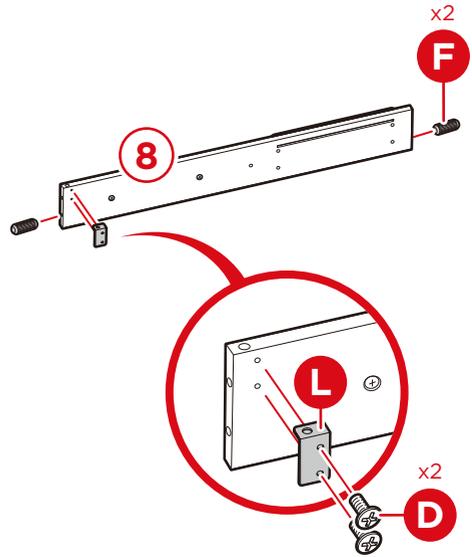

PRODUCT ASSEMBLY

1

Attach one part 21 center leg to the part 1 base with one part A screw.
Attach two part 20 left legs to the part 1 base with two part B screws.

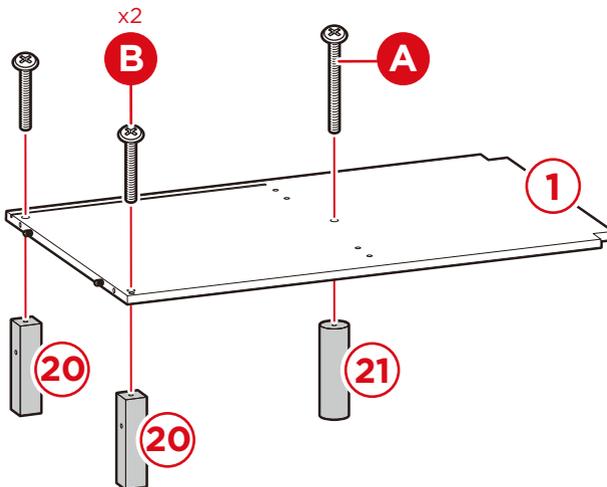


PRODUCT ASSEMBLY

2

Attach the part 3 left wall to the part 1 base and part 20 legs with two part B screws, and two part G screws.

Attach the part 2 center wall to the part 1 base with two part B screws.

Attach the part 4 center shelf to the center wall with two part B screws, set this assembly aside.

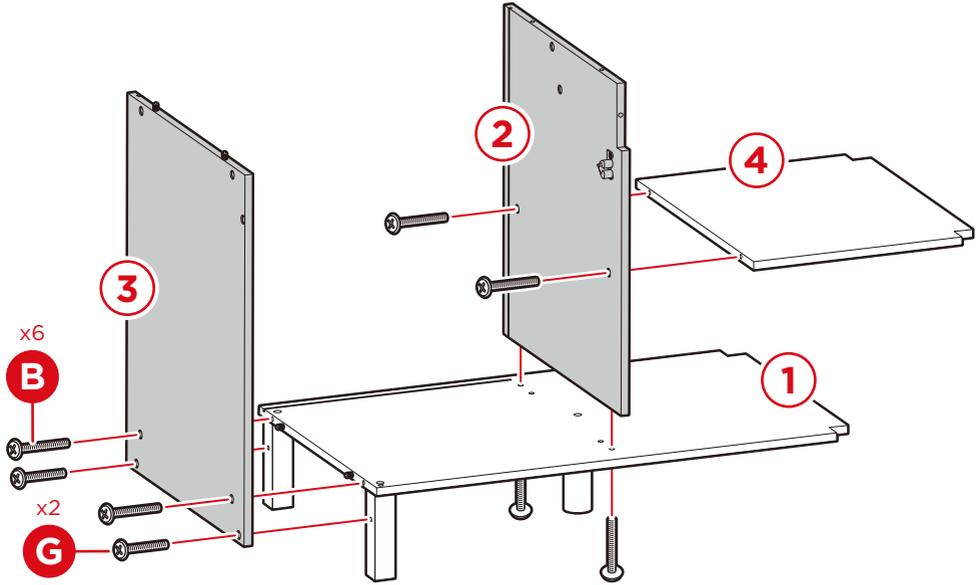


3

Locate the part I oven door and attach the part I door latch (male) with two part D screws.

Attach two part M hinge pegs to the top and bottom of the oven door with four part D screws.



Attach the part 23 handle with two part C screws.

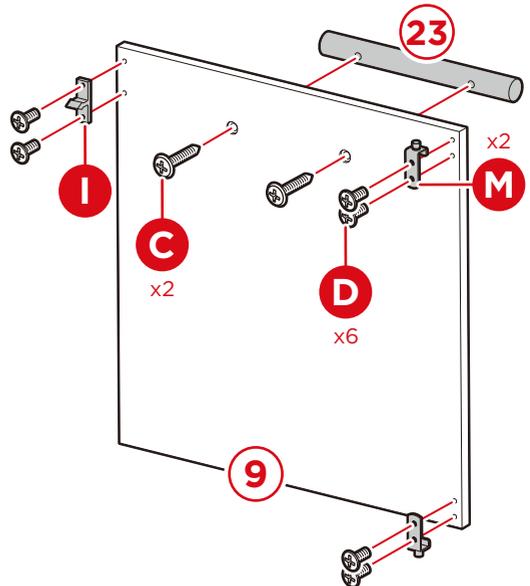

PRODUCT ASSEMBLY

4



Attach two part 6 sink side supports to the part 7 sink back support and attach this assembly to the part 2 center wall with one part B screw.

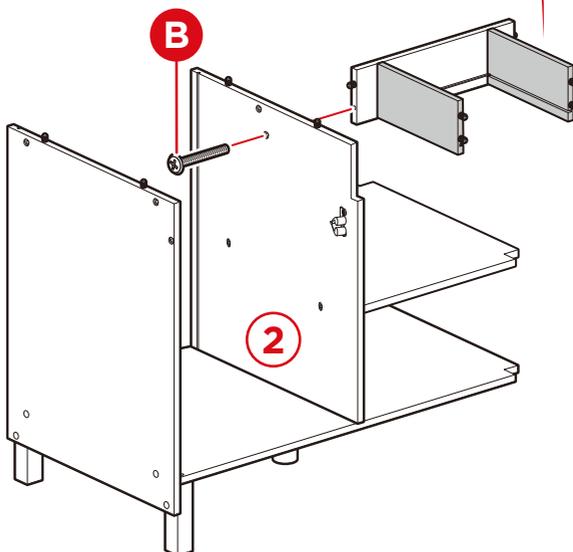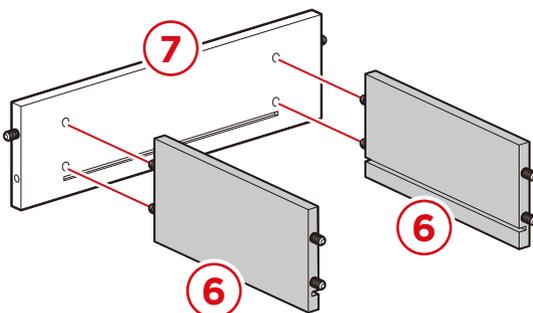

PRODUCT ASSEMBLY

5

Insert the part 22 sink bottom between the two part 6 sink side supports.

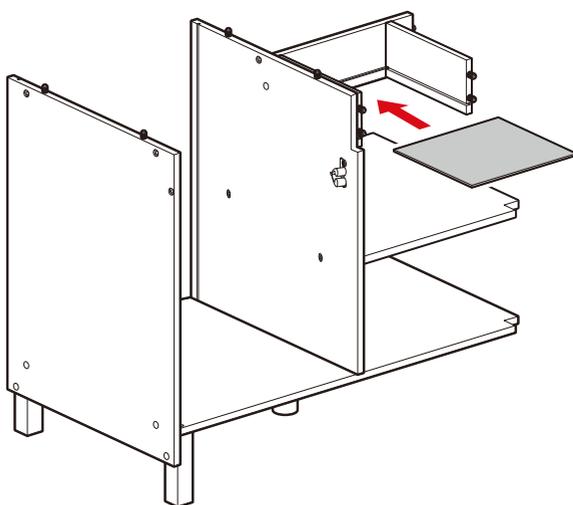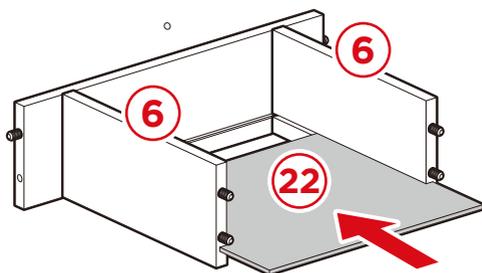


PRODUCT ASSEMBLY

6


Insert the lower hinge peg (see previous step) into the part 1 base.

Attach the part 8 counter panel to the two side supports, then secure to the part 2 & 3 walls with two part B screws.

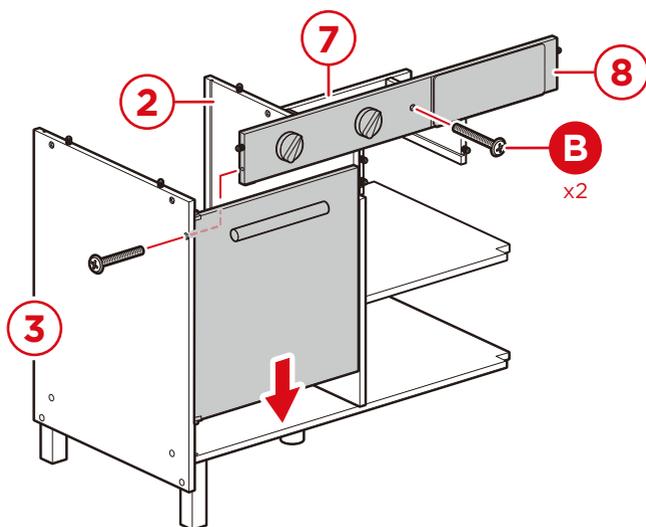

7

Attach two part 10 & 11 right legs to one part 5 right leg support with two part A screws.

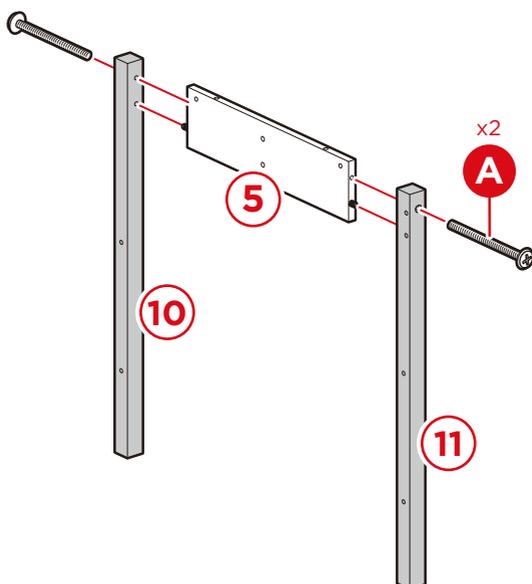


PRODUCT ASSEMBLY

8


Secure the part 10 back leg to the part 7 back sink support with one part B screw, then attach the right legs to the part 8 counter panel, part 4 center shelf, and part 1 base with five part A screws.

Insert the part 12 oven back between the part 2 & 3 walls.

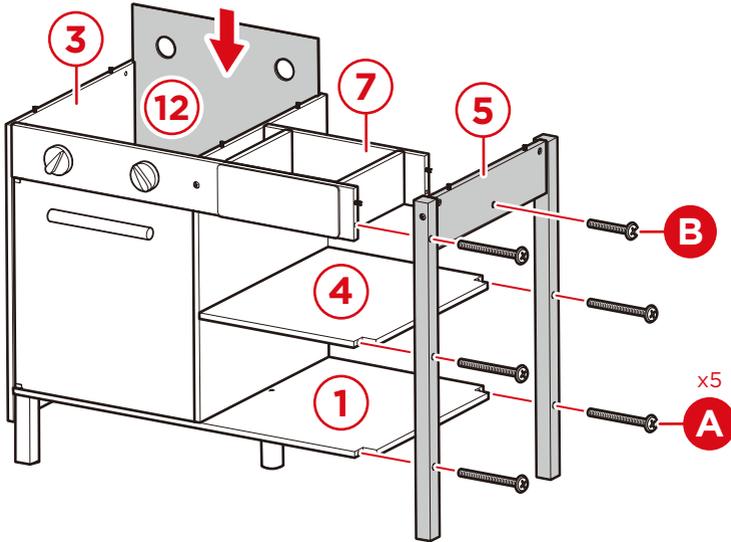

9

Insert five part H range connectors into the part 13 countertop then secure with five part D screws.

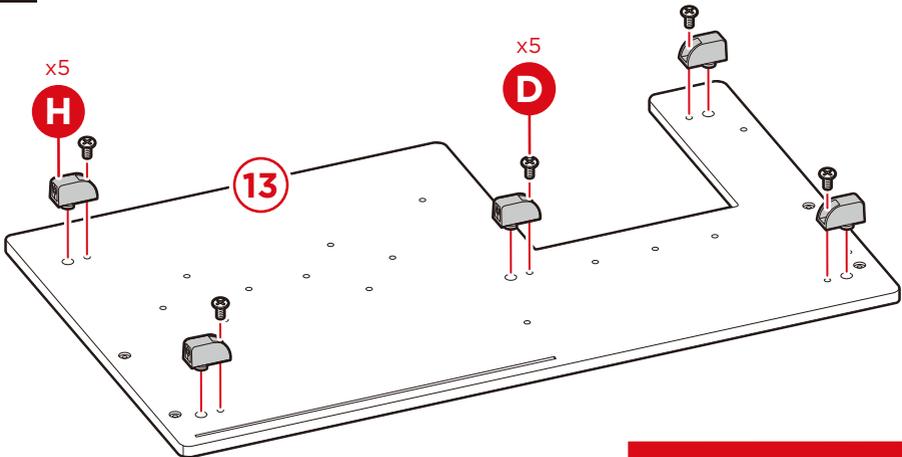


Use a hammer to secure the range connectors.

PRODUCT ASSEMBLY


10

Flip the countertop and attach two part 26 burners with eight part C screws, four per burner. Attach the part 24 and 25 faucet and faucet knobs with three part G screws.

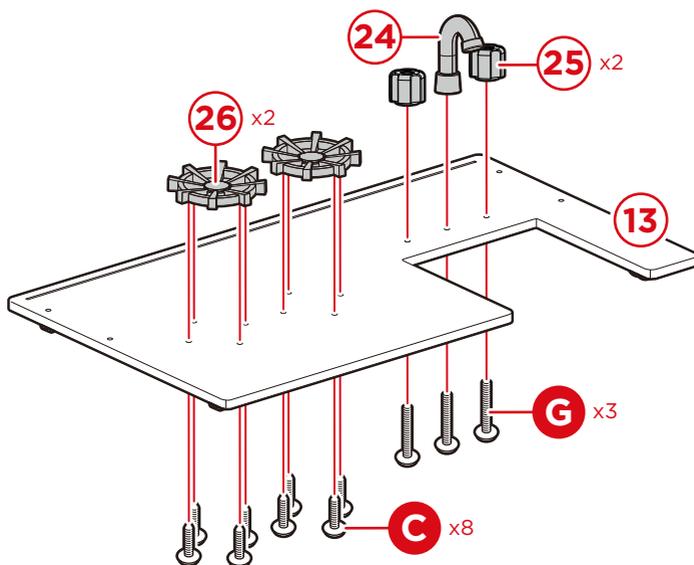

11


Attach the part 14 & 15 left and right counter windows with four part B screws. Set aside.

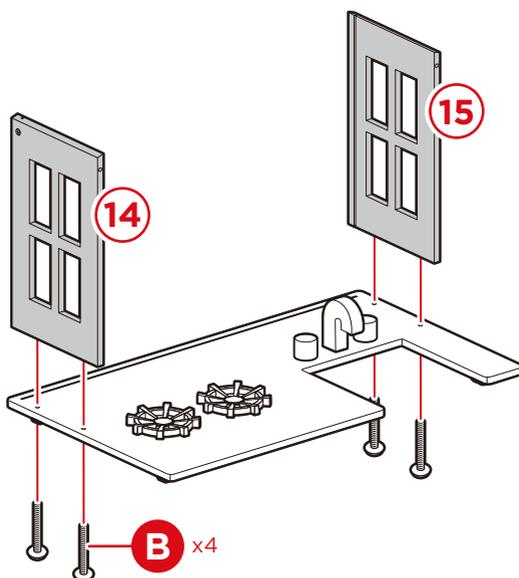

PRODUCT ASSEMBLY


12

Attach three part K utensil hangers to the part 16 backsplash with three part E screws. Insert the backsplash between the part 14 & 15 side windows.

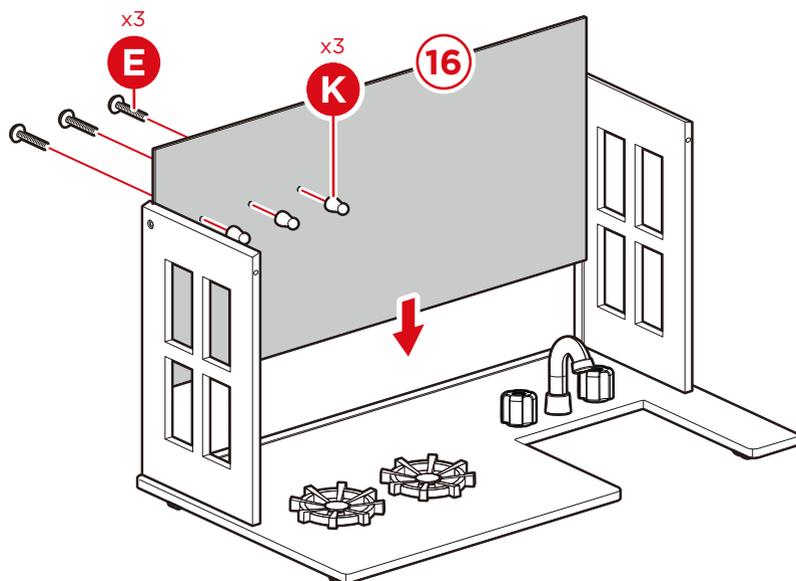

13


Attach the part 17 backsplash top with two part B screws.

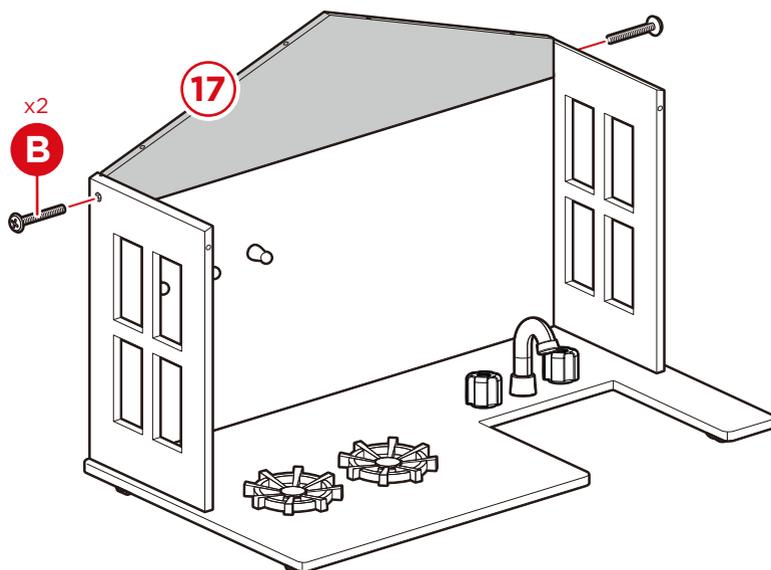

PRODUCT ASSEMBLY


14

Attach the part 18 roof front with two part B screws.

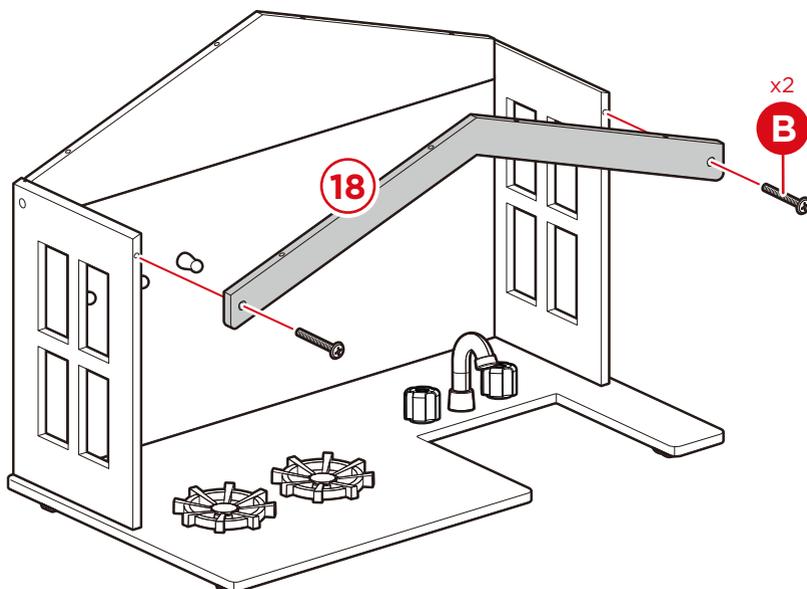

15


Attach two part 19 roof panels to the part 17 & 18 roof frames with eight part B screws, four screws per panel.

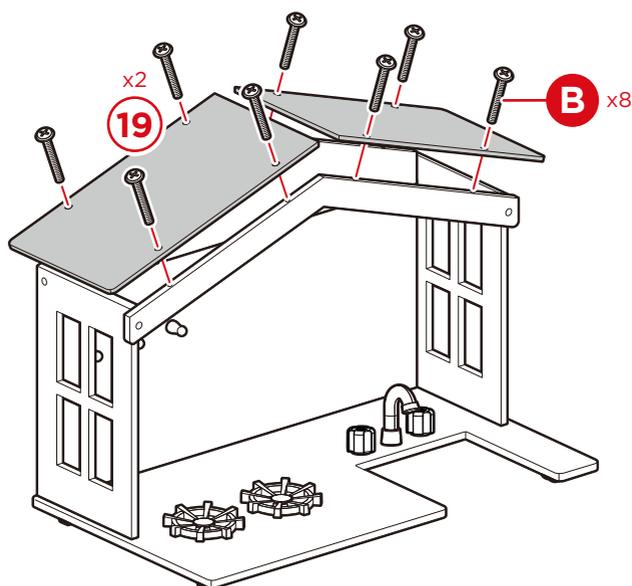

PRODUCT ASSEMBLY


16

Attach the part 13 countertop to the part 3 left wall and part 5 right leg support with five part C screws

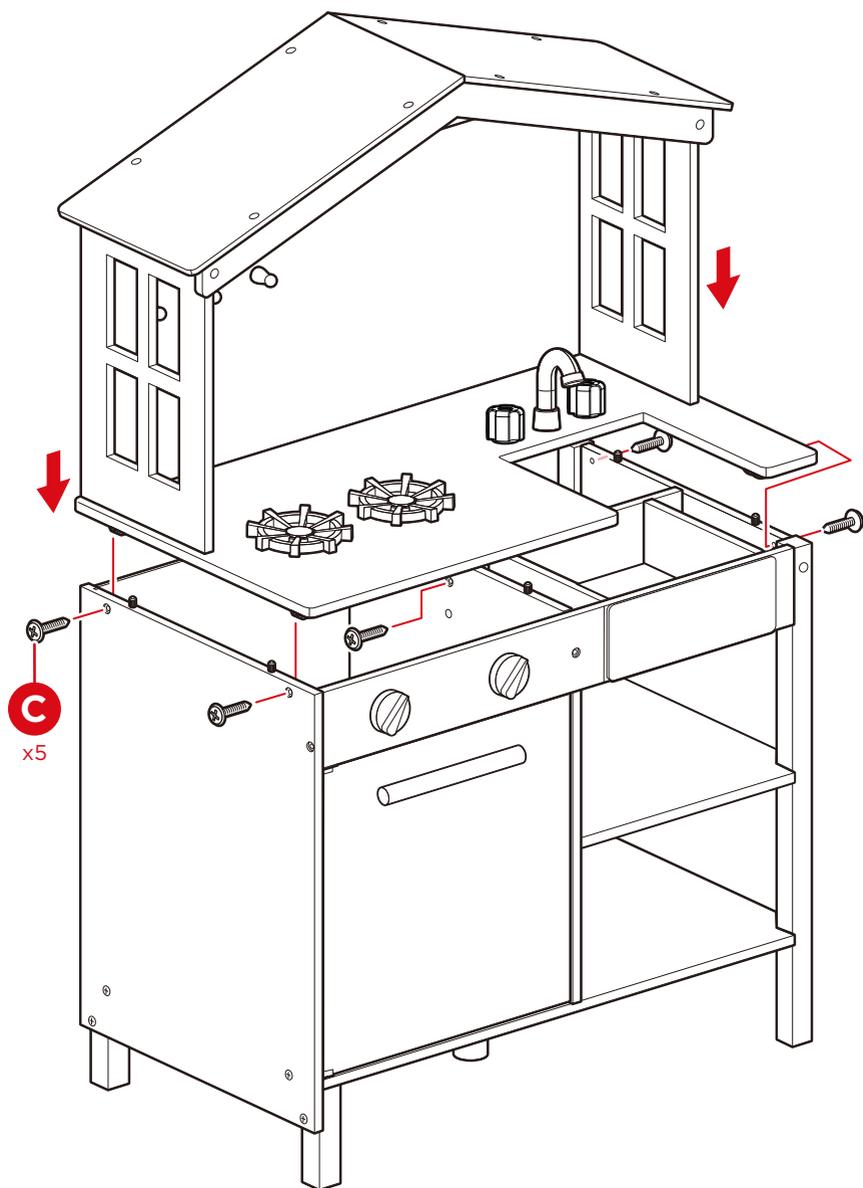

WALL MOUNTING

1. Select an appropriate location, then place the product against the wall. Open the part 9 oven door and mark the wall through the hole in the part 12 oven back. Move the product aside.
2. Drill a hole in the indicated spot on the wall, then insert the part N wall anchor. Insert one part A screw through the hole in the part 12 oven back and place the part O standoff onto the screw's end.
3. Return the product to overlap the wall, insert the screw end into the wall anchor, then tighten the part A screw to secure the product to the wall.

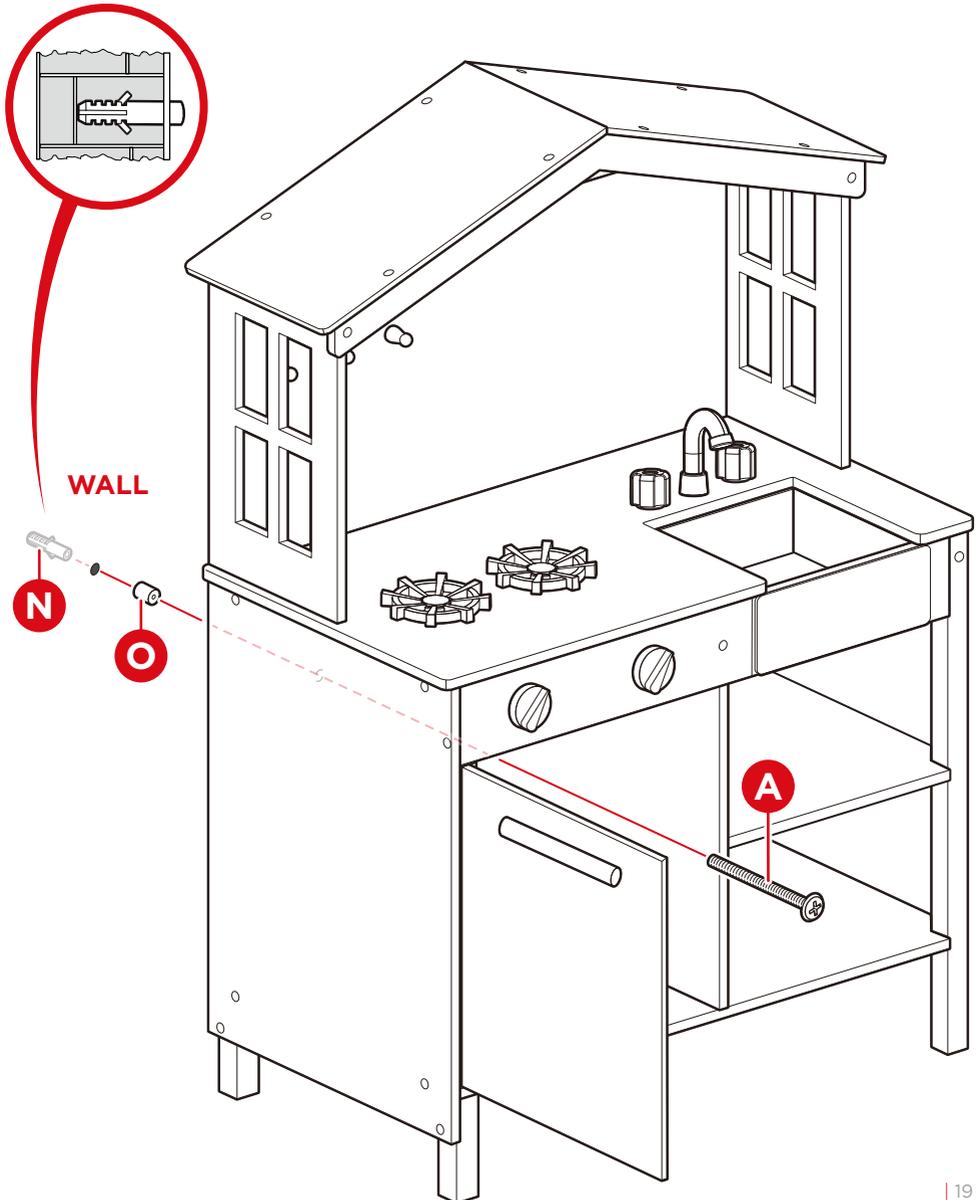



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.