 


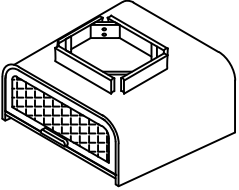




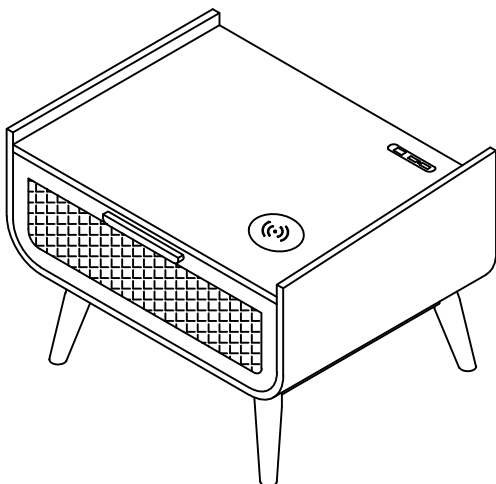 


ASSEMBLY INSTRUCTION

END TABLE

A Table Body  1pc	B Leg  4pcs	C Bolt Ø1/4"x60mm  8pcs	D Lock Washer Ø1/4"xØ10x1.5mm  8pcs
E Flat Washer Ø1/4"xØ16x1.5mm  8pcs	F Levelers Ø1/4"xØ19x15mm  4pcs	G Allen Key M4  1pc	H Adapter  1pc



Wireless charging operating manual

Charging your Device with the Wireless Charger

 
1. Your Device must have the Wireless Charging capability.
2. Turn the power switch of your Smart Table from "0" (Off) to "1" (On).
3. Place your Device on the round Fast Charge Panel.
4. You may have to remove the cover on your device.
5. Your Device will instantly start charging and the outer rim of the Fast Charge Panel Lights up GREEN. (Charging mode).

Charging your Device through the USB port


1. Turn the power switch of your Smart Table from "0" (Off) to "1" (On).
2. Connect your device to the Smart Table via the USB port.

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Attach the Leg (B) to Table Body (A) using Bolt (C), Lock Washer (D) and Flat Washer (E) by Allen Key (G).

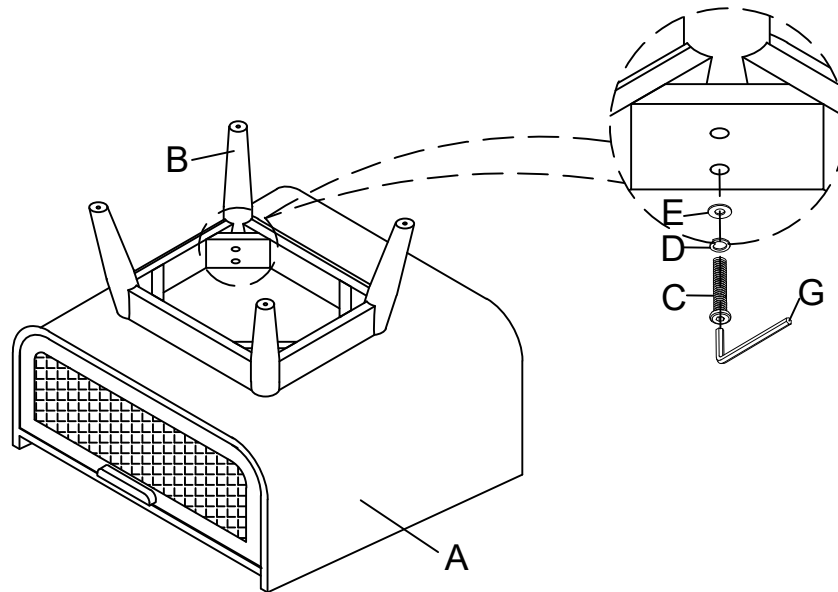

 - 2** Assemble Levelers (F) to Leg (B). Assemble Adapter (H) to Table Body (A).
Remark: If there is any gap between the legs and ground, please adjust the levelers until it reaches the ground.

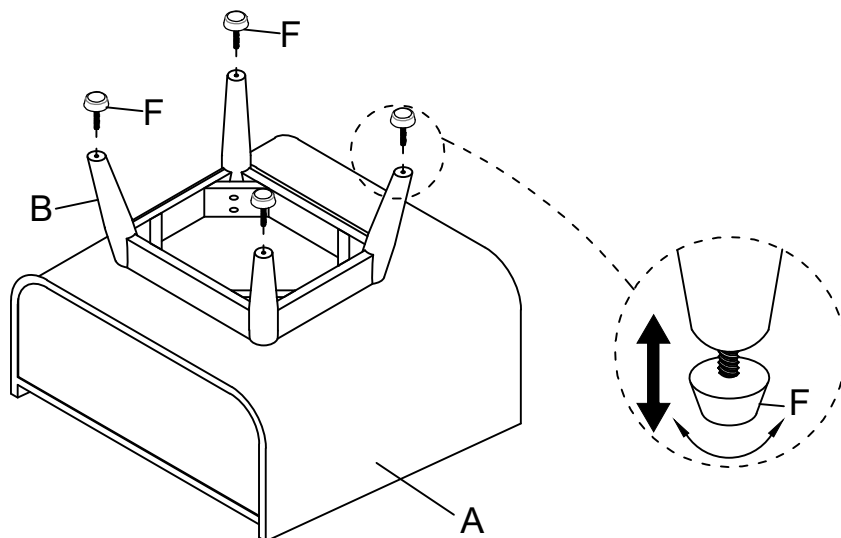

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.