

CW91611EU7

Russell Hobbs 34Cm Enamel Roaster&Rack;

Please retain instructions for future reference.

CARE AND USE

2 Year Guarantee*

Please retain instructions for future reference.

BEFORE FIRST USE Hand-wash thoroughly.

USING THE OVENWARE Suitable for domestic oven use only, up to 220 °C/ Gas Mark 7.

Not suitable for use on a hob, in microwave, under a grill, over a naked flame, on an open fire or barbecue.

Lightly coat the inner surface of the ovenware with grease to prevent sticking.

To increase the longevity of the ovenware, it is recommended to use silicone, wood or nylon utensils.

Do not use metal utensils.

Do not overheat the ovenware.

Never leave unattended whilst in use.

CLEANING AND STORING THE OVENWARE Always allow to cool before cleaning.

The ovenware is safe for dishwasher use with mild detergents.

Hand-wash using a mild detergent and nonabrasive sponge, rinse and dry thoroughly.

Do not store wet ovenware.

CAUTION Always use heat-resistant oven gloves to move the ovenware.

Never expose hot ovenware to cold liquid.

If there is any evidence of damage to the ovenware, dispose of it carefully.

Subject to the care and use being followed, the Russell Hobbs guarantee promises to replace, substitute or refund any product that fails due to faulty workmanship or materials.

This guarantee does not cover any damage caused by accident or misuse and is in addition to your statutory rights.

Should any defects due to faulty workmanship or materials appear within 12 months from the date of purchase, please return the goods with proof of purchase to the retailer.

To be eligible for the extended guarantee, please retain your proof of purchase.

Made in Romania

Manufactured by: UP Global Sourcing UK Ltd, Victoria Street, Oldham, Manchester OL9 0DD. UK
Ultimate Products Europe Ltd, 19 Baggot Street Lower, Dublin, D02 X658. ROI