



ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0139

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.


Hardware Package (included):

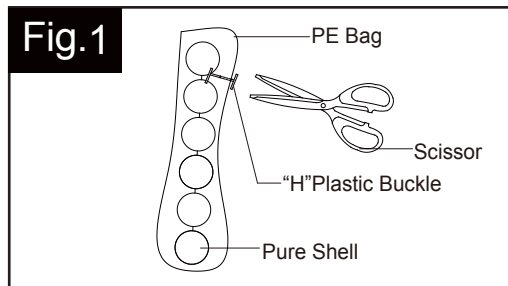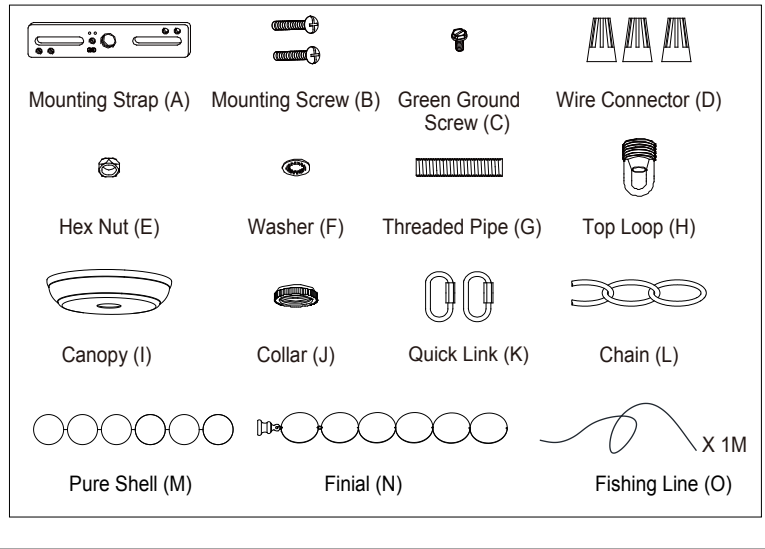

Installation Steps

Turn off the power at fuse or circuit box.

1. Cut the "H" plastic buckles with scissor when take down the PE bags. (See Fig.1)
2. Screw the finial (N) to the stem of the fixture.
3. Attach threaded pipe (G) to the mounting strap (A), then secure it with a washer (F) and hex nut (E).
4. Attach the mounting strap (A) to the outlet box by using two mounting screws (B).
5. Secure the top loop (H) to the threaded pipe (G).
6. Connect the chain (L):
 - Determine length of chain needed to achieve desired fixture height. (To remove excess chain section, use pliers to bend link open.)
 - Weave the fixture wires through the chain (L), collar (J) and canopy (I).

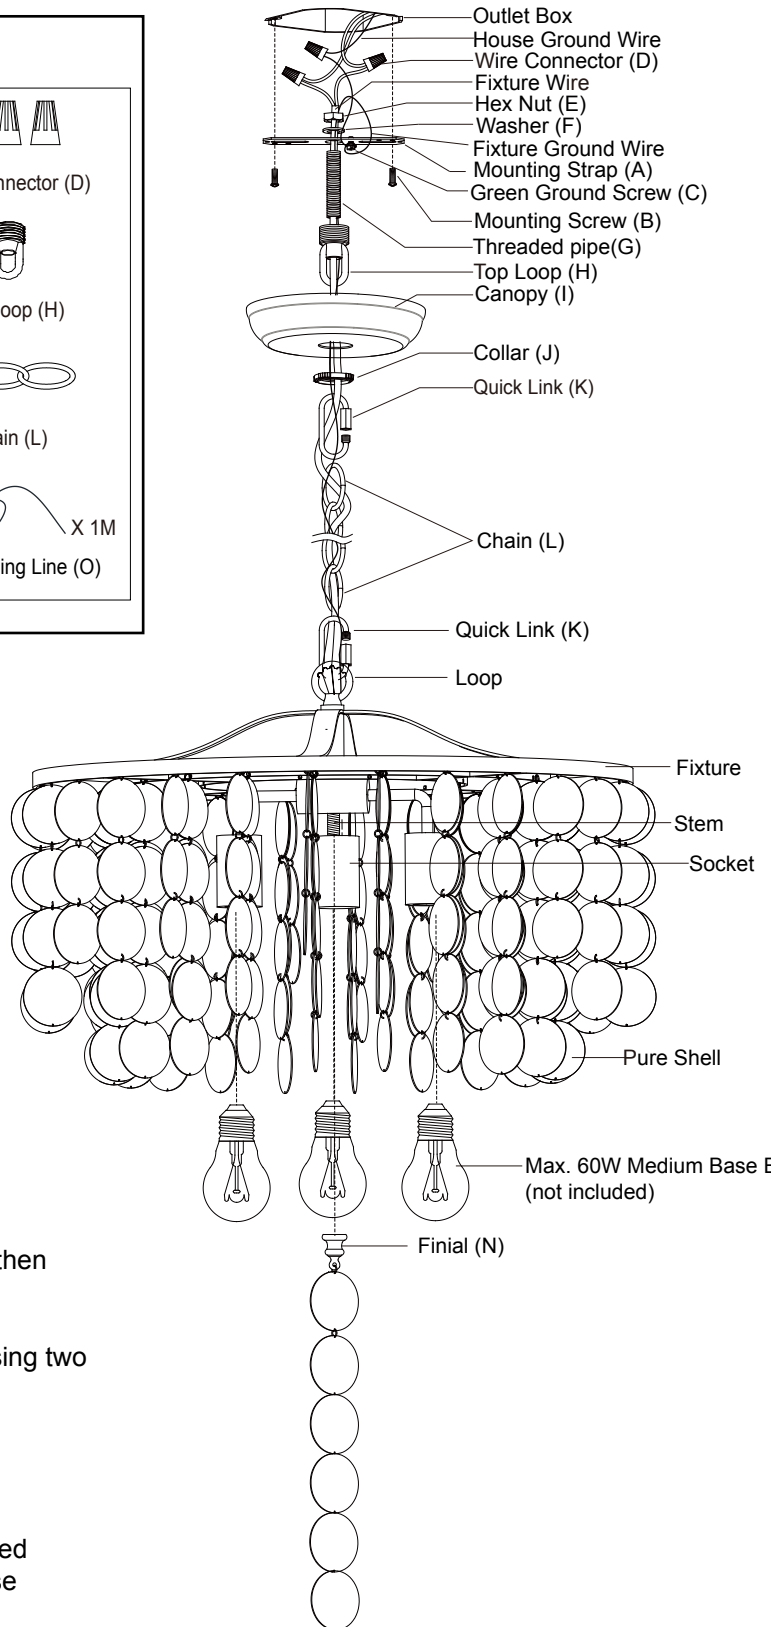

7. Connect one end of the chain (L) to the loop using a quick link (K) .
8. Connect the other end of the chain (L) to the top loop (H) using the other quick link (K).
9. Thread the fixture wire and fixture ground wire through the top loop (H), threaded pipe (G) and mounting strap (A).
10. Pull out the source wires from the outlet box. Make wire connections using wire connector (D) as follows:
 - Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire to the mounting strap (A) with the green ground screw (C), then connect it to the house ground wire with a wire connector (D) .
 Carefully put the wires back into the outlet box.
11. Attach the canopy (I) to the mounting strap (A) insert the top loop (H) through hole, then secure it by tightening collar (J).
12. Install 3 x 60W Max. medium base bulbs (not included). See relamping label at socket area or packaging for maximum wattage allowed.


Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

Spare Parts List:

Mounting Strap (A)	Mounting Screw (B)	Green Ground Screw (C)	Wire Connector (D)	Hex Nut (E)
Washer (F)	Threaded Pipe (G)	Top Loop (H)	Canopy (I)	Collar (J)
Quick Link (K)	Chain (L)	Pure Shell (M)	Finial (N)	Fishing Line (O)

↓ Assembly Kit 5223MM (1 SET)

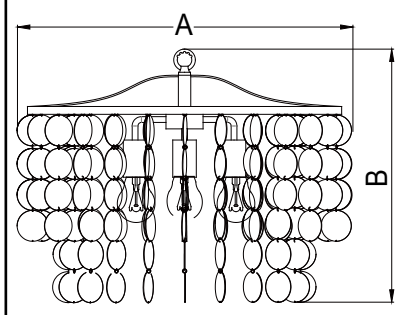

A: 19-3/4"
B: 18-1/2"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?
info@vaxcel.com
 1-800-482-9235