

SONANCE

 
 
 
18" PREMIUM ALUMINUM GROUND STAKE | SONANCE LANDSCAPE SERIES INSTALLATION GUIDE

READ THIS DOCUMENT IN ITS ENTIRETY BEFORE ATTEMPTING INSTALLATION.

This stake is intended for installation in accordance with the National Electrical Code and local code specifications. Failure to adhere to these codes and instructions may result in serious injury and/or damage to the stake and will void the warranty. These instructions cover most installation applications. For any special applications not covered, please contact Sonance for assistance.

INSTALLATION INSTRUCTIONS

1. Remove the Satellite Mounting Plate from the top of the stake by using an Allen Wrench to loosen and remove the locking bolt from the side of the stake. Lift the mounting plate straight up to remove (see Figure 1).
2. Thread the mounting plate to the satellite speaker and reserve for step 5.
3. Use a Phillips head screwdriver to remove the Wire Through Plate on the side of the stake, held by two screws (see Figure 1).
4. Drive the stake into the ground (see Figure 2).
 - For installation in soft soil: The stake can be installed without excavating the soil. Place a block of wood or the Sonance Premium Aluminum Installation Cap (sold separately, part #: 93447) on top of the stake and drive it into the ground by striking the wood or cap with a hammer.
5. Take the reserved satellite with attached mounting plate and thread the wire from the satellite through the top of the stake to pull through the side opening where the wiring plate used to be.
6. Place the satellite speaker and attached mounting plate into the top of the stake, careful to position the speaker toward the desired listening area and insert then tighten locking bolt. To adjust the speaker swivel in the threading of the mounting plate until the desired position is achieved.
7. Connect satellite to cable per the installation instructions for the satellite.

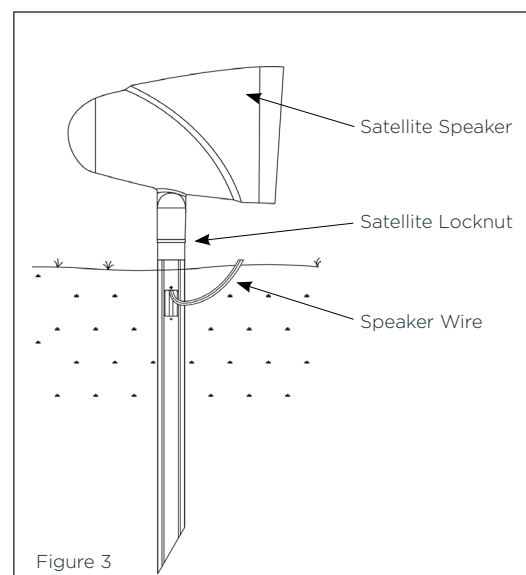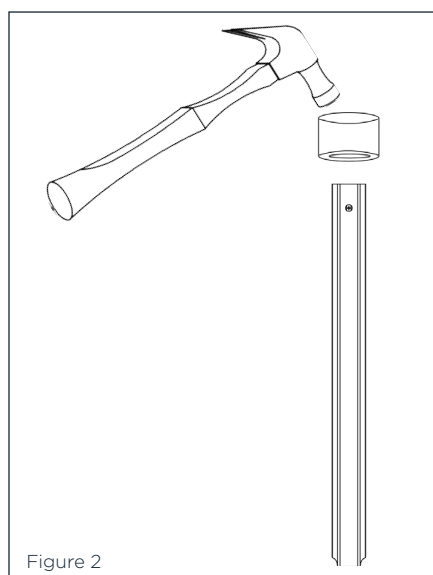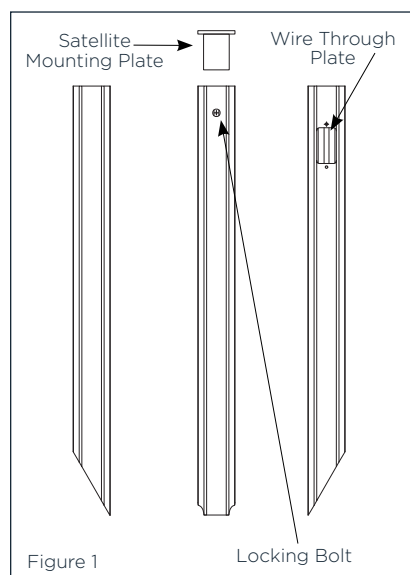

©2020 Sonance. All rights reserved. Sonance is a registered trademarks of Dana Innovations. Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest Sonance product specification information visit our website: www.sonance.com