

Beldray^{est 1872}[®]

**Our portable,
practical &
convenient radiator**

*This product is only suitable for
well-insulated spaces or occasional use.



**7 FIN OIL-FILLED
RADIATOR**
INSTRUCTION MANUAL



www.beldray.com

WARNING - READ BEFORE USE

Never use the product to dry laundry.

Do not leave the product unattended while in use.

Do not use heating appliances with an extension cable.

Do not use in dusty environments.

The product must be used on a stable, heat-resistant surface.

This product can be used for no longer than 4 hours, after which time it must be switched off.

Ensure that the product has at least 1 metre of free space in all directions before use.

Ensure that any flammable materials, such as furniture and curtains, are at least 1 metre away from the product when in use.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.

This product is not a toy - children should be supervised to ensure they do not play with the product.

Nominal voltage is still present in this product as long as the product is connected to the electrical source.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using

the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

The body of this radiator is filled with a precise quantity of special oil, any oil leakage must be reported to the manufacturer.

Do not allow the power cord to hang over sharp edges or come into contact with hot surfaces.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the product or plug in water or any other liquid.

Do not operate the product with wet hands.

Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not leave the product plugged in or operating overnight.

Do not use the product for anything other than its intended use.

Do not attempt to move the product whilst it is in use.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.

Only lift the product with the carry handles provided.

Do not use on carpets, rugs or other flammable floor-based textiles.

The product must not be located immediately below or next to a mains power supply.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.

This product is intended for domestic use only. It should not be used for commercial purposes.

CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



Hot surface – do not touch the hot section or heating components of the product.



WARNING: In order to avoid overheating, do not cover the product.

This product is not equipped with a device to control the room's temperature.

Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

When disposing of this product, please follow local regulations concerning the disposal of oil.

Thermal Cut-out Device

The oil-filled heater is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the oil-filled heater start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

STEP 1: Switch off the oil-filled heater.

STEP 2: Check that oil-filled heater is unplugged from the mains power supply and allow it to cool for approx. 15 minutes.

STEP 3: Plug in and switch on the oil-filled heater at the mains power supply.

CAUTION: In order to avoid a hazard, due to inadvertent resetting of the thermal cut-out, the oil-filled heater must not be supplied through an external switching device, such as a timer or connected to a circuit that is regularly switched on and off by the utility.

Care and Maintenance

Always unplug the oil-filled heater from the mains power supply and allow to cool sufficiently before performing any cleaning or maintenance.

Wipe the oil-filled heater with a soft, damp cloth and allow to dry thoroughly.

Do not clean the oil-filled heater with abrasive chemicals or materials, such as scourers, as this may damage the oil-filled heater and impair future function. This includes insecticide and chemical solvents.

Do not immerse the oil-filled heater in water or any other liquid.

Description of Parts



- | | |
|--|-----------------------------|
| 1. 7 Fin Oil-filled Radiator main unit | 7. Castor wheels |
| 2. Temperature control dial | 8. Oil-filled fins |
| 3. Heat indicator lights | 9. Wheel base assemblies |
| 4. 600 W heat setting I switch | 10. U-shaped bolts (qty. 2) |
| 5. 900 W heat setting II switch | 11. Nuts (qty. 2) |
| 6. Cord storage | 12. Vents |

Instructions for Use

Before First Use

STEP 1: Check that there is no damage to the oil-filled radiator.

STEP 2: Install the wheel base assemblies onto the bottom of the oil-filled radiator by carefully turning it upside down. Position the wheel base assemblies onto the bottom, below the two fins on either end of the oil-filled radiator. The u-shaped wheel base should be positioned on the control panel end of the oil-filled radiator.

STEP 3: Fix the wheel base assemblies into position using the u-shaped bolts and wing nuts (included).

STEP 4: Secure the castor wheels onto the ends of the wheel base assemblies using the fixings provided. The castors should be securely fixed, so that only the wheels are able to move.

STEP 5: Position the oil-filled radiator on a flat, stable, heat-resistant surface in an open space, at least 1 metre away from furniture, curtains or any other flammable materials.

NOTE: When using the oil-filled radiator for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the oil-filled radiator.

Using the 7 Fin Oil-filled Radiator

STEP 1: Plug in and switch on the oil-filled radiator at the mains power supply.

STEP 2: To turn on the oil-filled radiator, press any of the heat setting switches.

STEP 3: Operate the oil-filled radiator on a low heat setting by pressing the 600 W heat setting I switch. For a medium heat setting, press the 900 W heat setting II switch. Press both of the heat setting switches to operate the oil-filled radiator on the highest heat setting (1500 W).

STEP 4: The adjustable thermostat can be used to regulate the room temperature. Turn it in a clockwise direction to increase the heat output until the room temperature rises. To reduce it, turn the adjustable thermostat in an anticlockwise direction.

STEP 5: Turn off the oil-filled radiator by pressing any active heat setting switches.

NOTE: The heat indicator light for each heat setting switch will illuminate whilst the oil-filled radiator is warming up and will cycle on and off during use to show that the correct temperature is being maintained. It is not recommended to use the oil-filled radiator in draughty areas, as this may impact the operational efficiency.

CAUTION: The oil-filled radiator contains oil, which will cool down slowly after the mains power supply has been disconnected. Allow the oil-filled radiator to fully cool before moving.



Storage

Check that the oil-filled radiator is completely cool before storing in a cool, dry place. Never wrap the cord tightly around the oil-filled radiator; wrap it loosely to avoid causing damage.

Specifications

Product code: EH3748

Voltage: 220-240 V ~ 50/60 Hz

Power: 1500 W (600 W, 900 W and 1500 W)

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.


The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

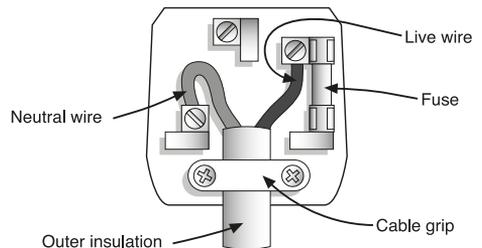

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.beldray.com

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

To be eligible for the extended guarantee,
go to <https://guarantee.upgs.com/beldray/> and
register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

www.beldray.com



©Beldray Trademark. All rights reserved.

CD170323/MD000000/V1

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Keep the appliance away from flammable materials.

**UK
CA CE**

EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD260324/MD000000/V1