

ASSEMBLY

RESPAWN SPECTER

PACKAGE
CONTENTS



1. Lay out and identify components on a nearby table or flat surface.
2. Turn 5-star base (D) upside down.
3. Install casters (E) by pushing casters into 5-star base (D) until seated.



4. Turn 5-star base (D) back over.
5. Place gas cylinder assembly (F) into center of 5-star base (D). Place 5-star base assembly on the floor.



6. Place seat bottom (B), bottom side up, on a flat surface.
7. Locate seat mechanism (H) and center it over the screw holes in the seat bottom, using the FRONT directional imprint to align correctly.



8. Locate 4 screws (J) for each corner of the seat mechanism (H). Working your way around, tighten the screws thoroughly in all 4 locations with the Allen wrench (M).



9. Locate arms (G), there is a right and a left arm, each arm will slant forward to front of chair. Align arm bracket holes with screw holes in seat bottom.
10. Attach arm to the seat bottom using 3 screws (K) with the Allen wrench (M).
11. REPEAT step 10 for opposite arm.



12. Locate seat back (A). Align and insert the connector bracket with bracket on the seat bottom (B), aligning the 4 screw holes.



13. Locate 4 screws (I) for each corner of the bracket. Start at the top and work around, tightening the screws thoroughly in all 4 locations with the Allen wrench (M).



14. Take completed seat assembly and place atop the gas cylinder (F) unit from Step B.



15. Locate headrest (C) and place atop seat back.
16. Align screw holes on headrest with seat back screw holes. Attach 2 screws (L) with the Allen wrench (M).



17. Last step is to sit in your new chair to fully secure the gas cylinder to the seat assembly and make sure chair is fully functional.

YOU'RE FINISHED, ENJOY!

VISIT OUR
WEBSITE TODAY



SCAN ME!
USING YOUR CAMERA
RESPAWNPRODUCTS.COM

SCAN NOW FOR INSTANT WEBSITE ACCESS:



ASSEMBLY
VIDEO



WARRANTY
INFORMATION



FUTURE DEALS
& GIVEAWAYS!

USAGE INFO

RESPAWN SPECTER

SAFETY INFORMATION



GENERAL CARE AND MAINTENANCE

- ✓ Extended exposure to direct sunlight can cause the chair material to crack and color to fade.
- ✓ Keep your pets off of the chair. Their claws and teeth may damage the chair material.
- ✓ Sweat may become an issue as the moisture and oils can damage the chair material. Follow the cleaning guide and wipe the chair clean every so often.
- ✓ Follow care and proper use. Misuse can lead to damage, not just to the chair but to you as well.

ATTENTION

Make sure all bolts and screws are fully tightened before using chair. Lubricate all moving parts and tighten all bolts/screws every 6 month or whenever needed.

⚠WARNING

To ensure proper assembly, follow all steps and use all parts. Failure to follow this warning can result in serious injury to yourself or others.

CONTROLS

HEIGHT ADJUSTMENT

Pull rear paddle lever UP on dual paddle lever to unlock gas cylinder to raise/lower chair.



ADJUSTABLE HEADREST

Dual adjustable headrest pivots back and adjusts in height for the best possible fit.



2D ARM ADJUSTMENT

2D arms allow for height adjustment as well as elbow pads that adjust front and back.



FLIP BACK ARMS

Flip back arms allow for in-the-moment action without interference.



SEAT SLIDE

Seat slide adjusts the depth of the seat, allowing more seat room for taller people and less for shorter.

 


TILT RECLINE

Push paddle down to release, pull paddle up to lock recline position. Select from 3 locking stops to a full 115 degree recline.



CLEANING

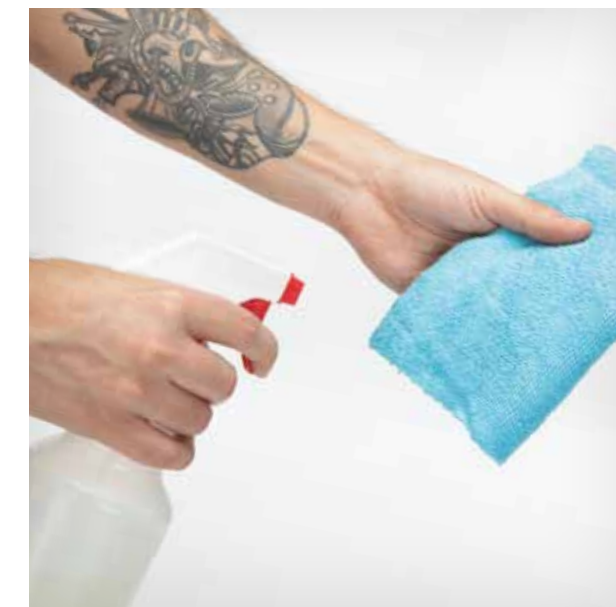

Use a lint-free microfiber cloth with a mild soap-and-water solution to clean the chair surfaces.



Gently wipe all areas to remove any surface dust.

VISIT OUR WEBSITE TODAY



SCAN ME!
USING YOUR CAMERA
RESPAWNPRODUCTS.COM

SCAN NOW FOR INSTANT WEBSITE ACCESS:



ASSEMBLY
VIDEO



WARRANTY
INFORMATION



FUTURE DEALS
& GIVEAWAYS!