



BEST CHOICE  
PRODUCTS



# INSTRUCTION MANUAL

---

## Zero Gravity Chair

SKY904 + SKY1935 + SKY3241 + SKY3243 + SKY3245 + SKY3246 + SKY3247  
SKY3733 + SKY6037 + SKY6038 + SKY6039 + SKY6040 + SKY6041 + SKY6128  
SKY6129 + SKY6402 + SKY6403 + SKY6404 + SKY6608 SKY6620 + SKY6621  
SKY6622 + SKY6632 + SKY6665 + SKY6666 + SKY6667 + SKY7101 + SKY7102  
SKY9710 + SKY9711 + SKY9772 + SKY9773 + SKY9774 + SKY9775

## ! NOTICE

 
Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

## PARTS

A

ACCESSORY TRAY



1 PC



250 LBS  
CAPACITY



1 PERSON  
ASSEMBLY





UP TO 5 MIN.  
ASSEMBLY

## PRODUCT ASSEMBLY

1

Pull open the chair to spread apart the chair legs.

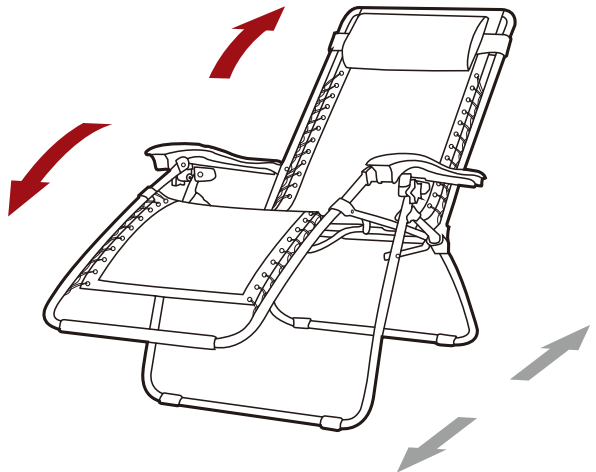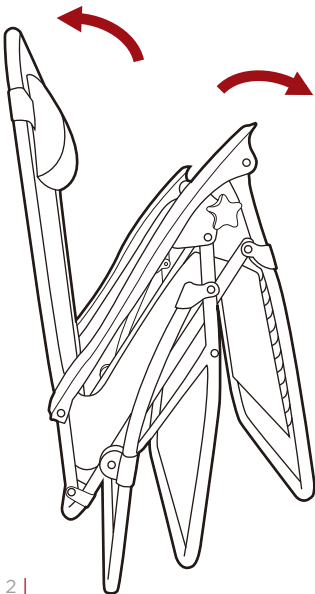


## PRODUCT ASSEMBLY

2


Loosen the knobs on both sides and recline the chair.

Lock the knobs at your desired position.

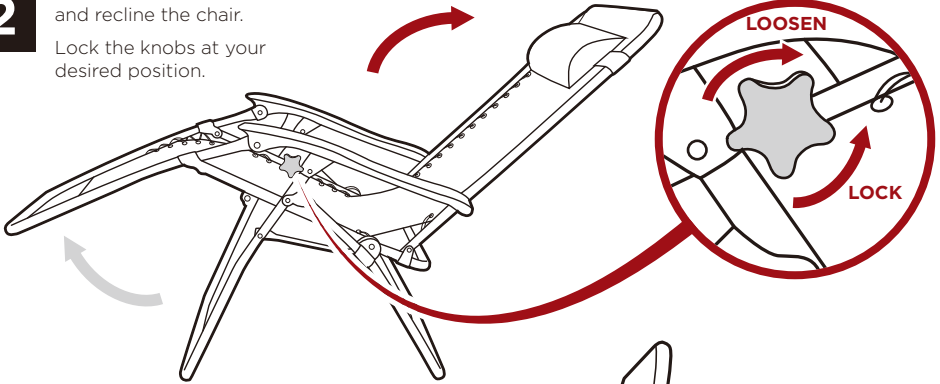

3


To return to an upright position, loosen the knobs, place a foot on the back chair leg, and push the backrest upright.

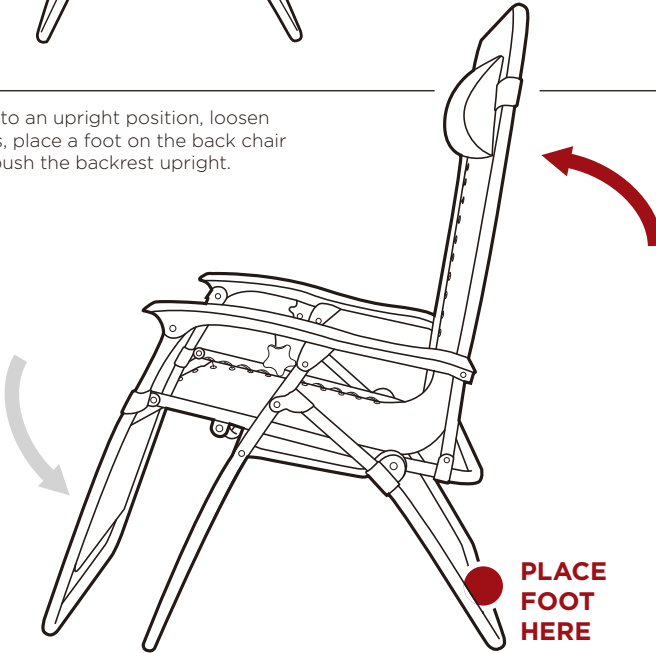

## ACCESSORY TRAY

To install **part A accessory tray**, slide the tray over the leg hinge and push down to lock it in place.

**NOTE:** remove the accessory tray before folding the chair.

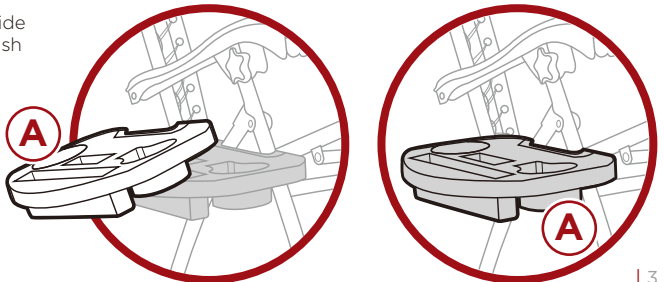



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledged by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.