

ASSEMBLY INSTRUCTION


5473A BROWN PU ARM CHAIR

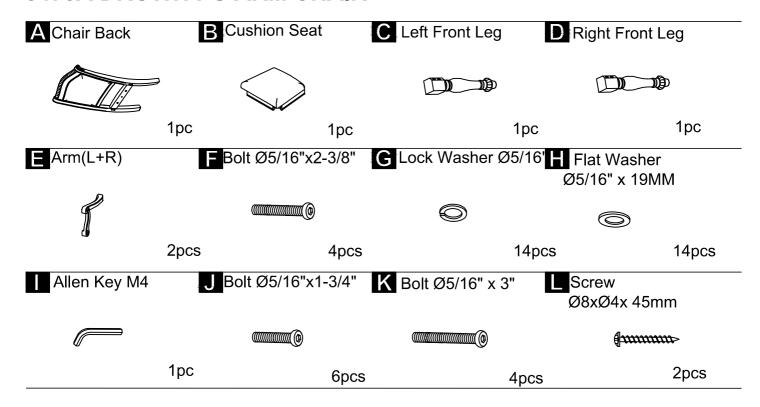

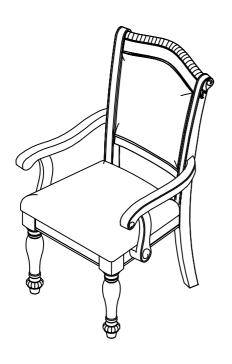


This page lists all the contents included in the box. Please take the time to indentify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Place the Chair Back (A). Tighten the Cushion Seat(B) on the face by Wood Tenon .

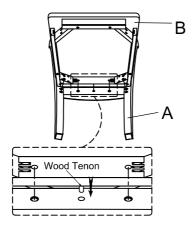


Place the Chair Back (A). Tighten the Cushion Seat(B) on the face by bolts (J)(K). Lock washer (G) and flat washer (H) with allen key (I).

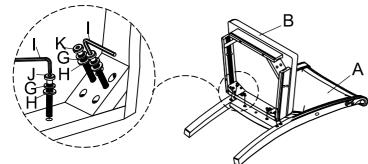


Take the Allen Key, and turn the bolts until the Mounting Plate are secure. DO NOT TIGHTEN COMPLETELY. Stop when feel you are adding force to tighten the bolt.


Place the cushion seat(B)(A) upside down smooth carpet surface. Tighten the left front leg (C) and right front leg (D) on the corner blocks by bolt (F), lock washer (G) and flat washer (H) with allen key (I).

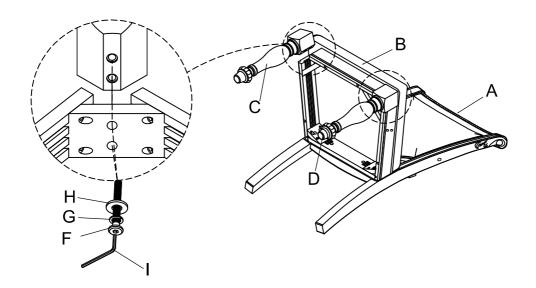

4

Place the Chair Back (A). Tighten the ARM (L+R) on side the chair by bolts (F), lock washers (G) and flat washers (H) with allen key. Fix the arm (L+R) on the legs, by screw (L).

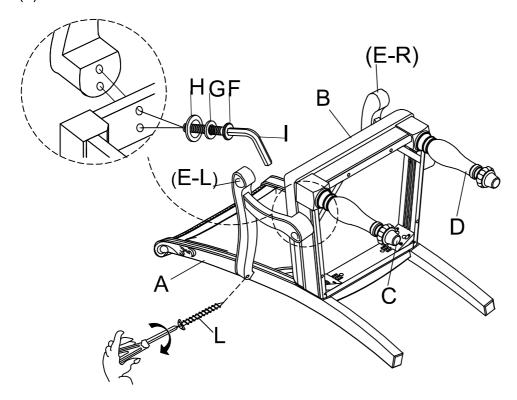

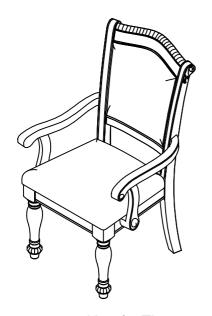

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corners, tighten all bolts, If balanced, apply downward pressure evenly in the center and tighten all bolts, Do not over-tighten beyond hole depth

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit on the chair while you tighten the bolts.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen overtime. Periodically check that all connections are tight.