 
 
 
 
 
 
 
 
 
 

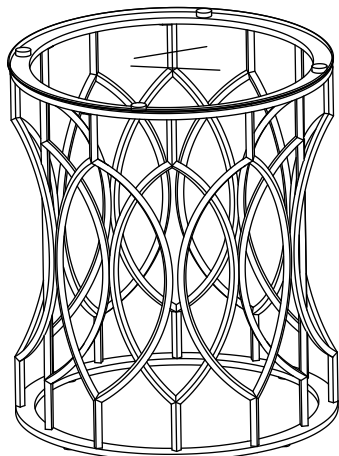 


ASSEMBLY INSTRUCTION

FOR 26" GLASS TOP

E180D-26(3A) & E345D(3A) ROUND CLEAR GLASS DINING TABLE


A Panel A  2pcs	B Panel B  2pcs	C Top Frame  1pc
D Bottom Frame  1pc	E Glass Top (In other carton of E180D-26(3A))  1pc	F Bolt 1/4"x3/8"  8pcs
G Bolt 1/4"x1-1/4"  8pcs	H Bolt 1/4"x3/4"  4pcs	I Leveler  4pcs
J Allen Wrench  1pc	K Connector (In other carton of E180D-26(3A))  4pcs	

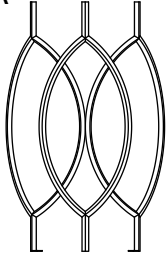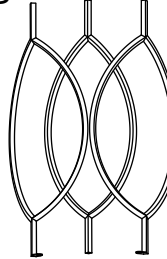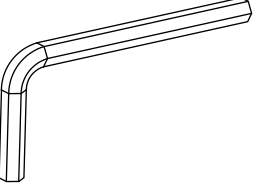


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**

 
- 1** Attach panel A (A) to top frame (C) using bolt (F) and allen wrench (J) as shown. Please attach to the inside holes.

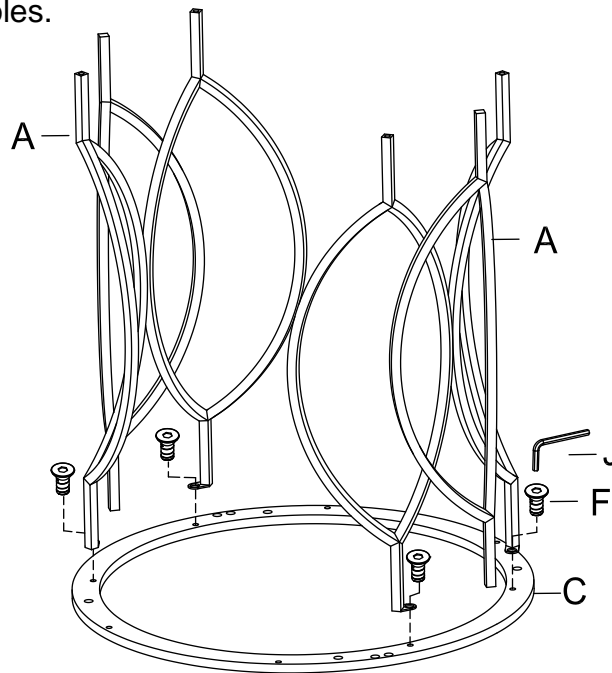

 
- 2** Attach panel B (B) to top frame (C) using bolt (F) and allen wrench (J) as shown. Please attach to the outside holes.

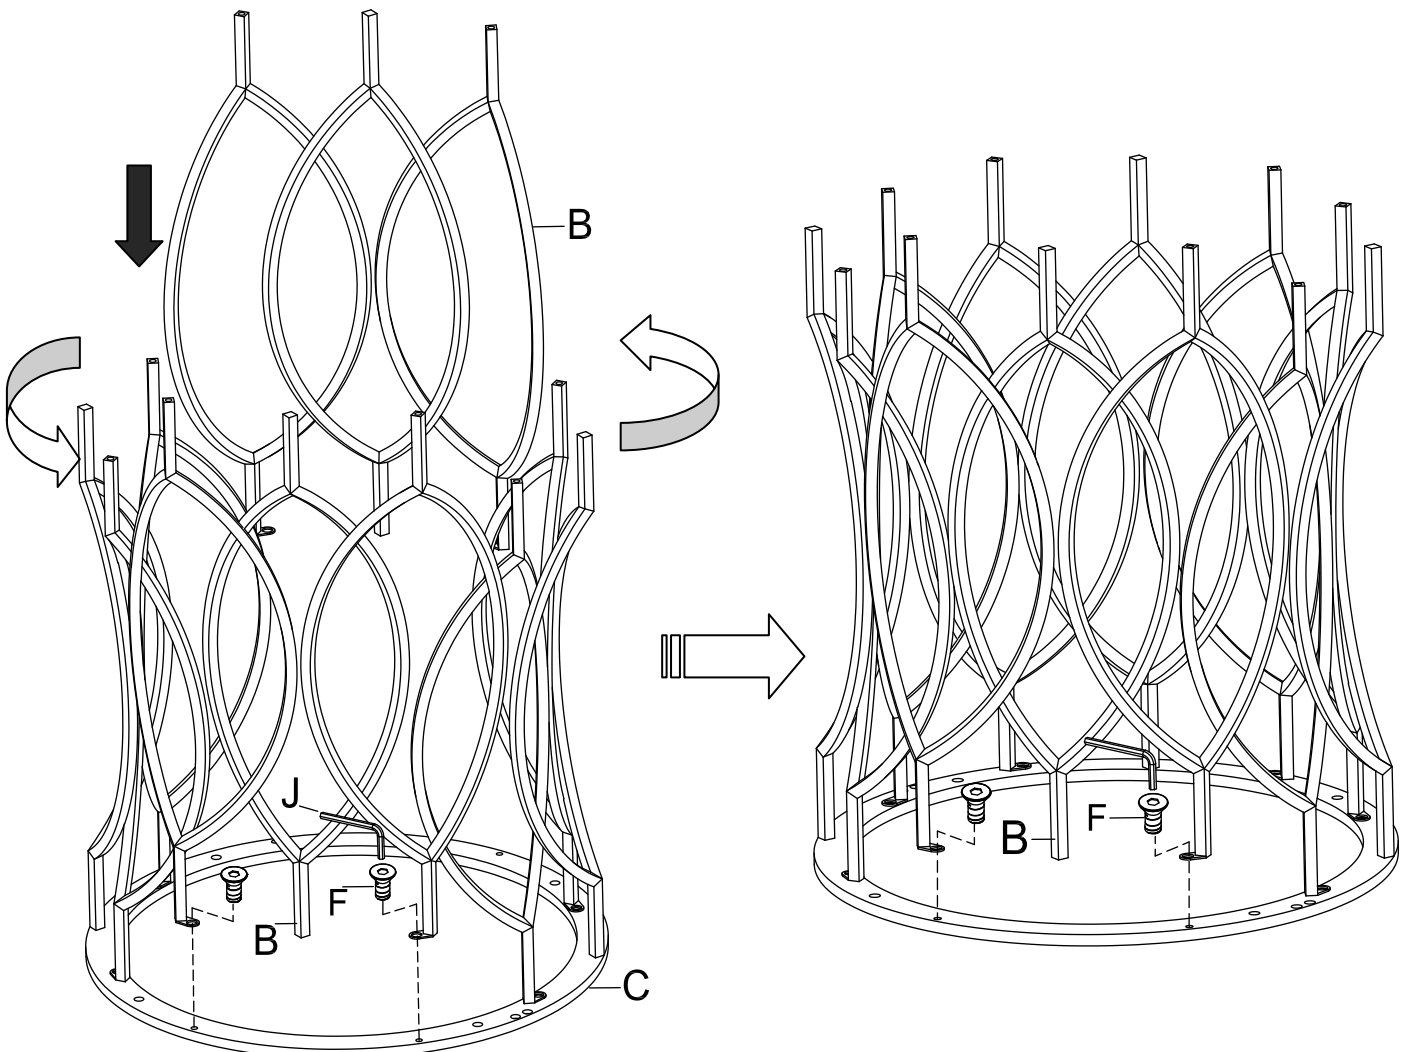

3 Attach bottom frame (D) to panel A (A) and panel B (B) using bolt (G) and allen wrench (J) as shown. Please attach panel A to the inside holes and panel B to the outside holes.

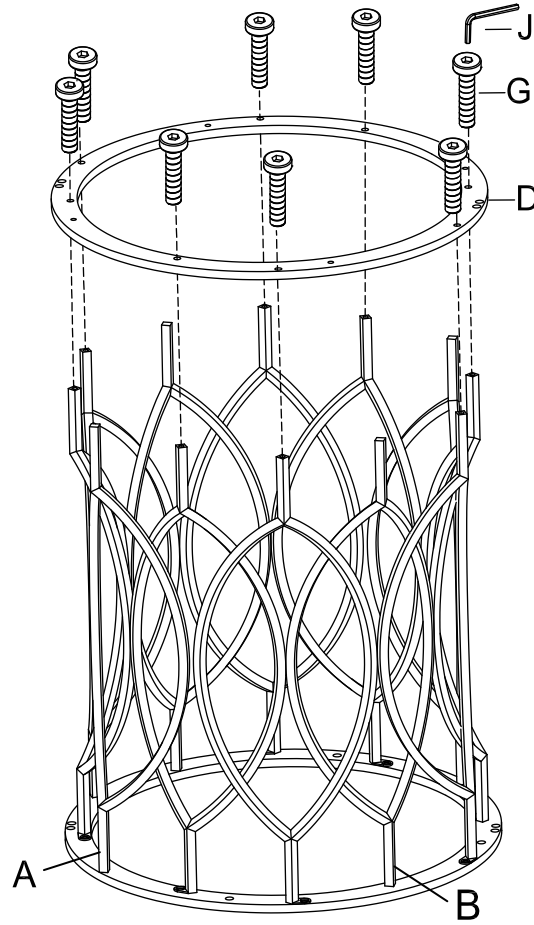 


4 Attach leveler (I) to bottom frame (D) as shown. Please tighten all bolts at this step.

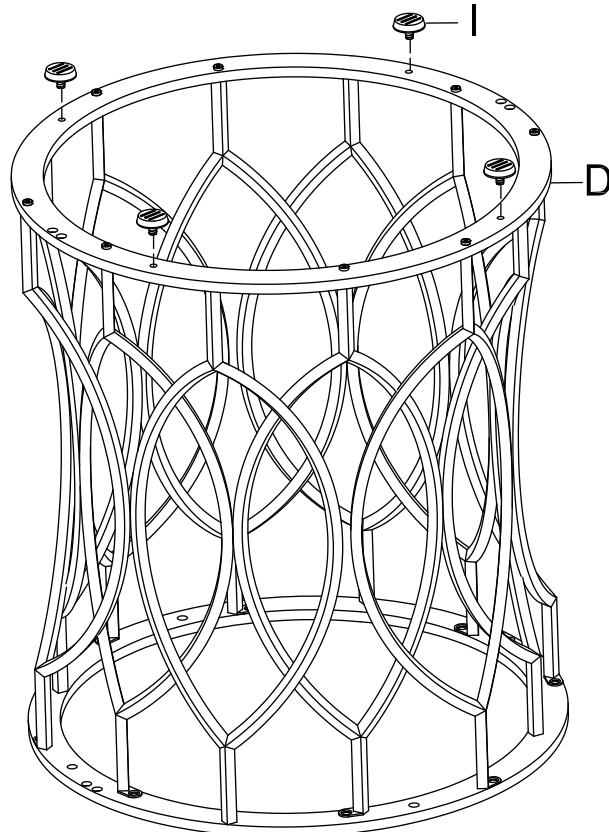 

5

 Attach Connector (K) to metal base by using bolt (H) and allen wrench (J). Then put on glass top (E).

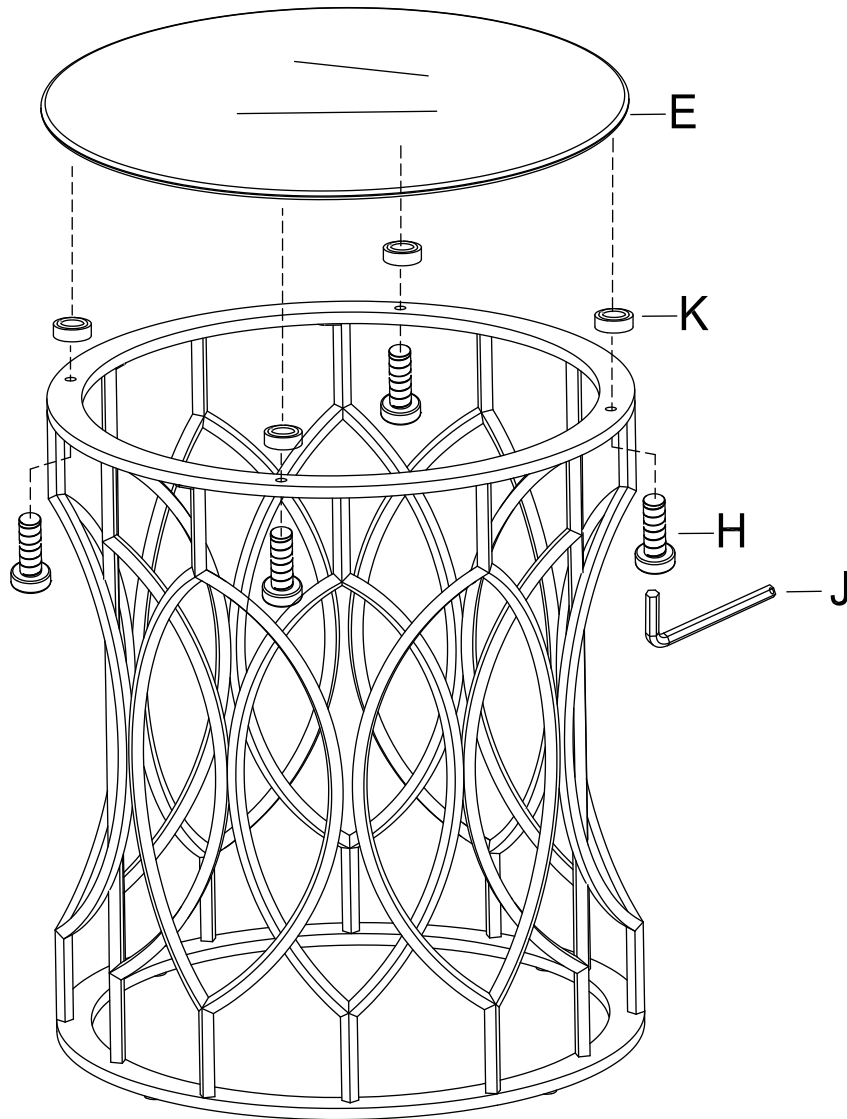

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.