



Text 1-812-652-2525
(US and Canada only, carrier fees may apply)



Visit www.maxicosi.com



Call 1-800-544-1108



Email support@djgusa.com



Learn More

©2025 Dorel Juvenile Group, Inc. (800) 544-1108 www.maxicosi.com. Styles, colors, and labeling may vary. Made in CHINA. Distributed by Dorel Juvenile Group, Inc., 2525 State St., Columbus, IN 47201-7494. Dorel Juvenile Canada, 2233 Argentia Road, Suite 110, Mississauga, ON L5N 2X7. Representante exclusivo en Chile: DOREL JUVENILE CHILE S.A. Av. del Parque 4161, oficina 602 A, Huechuraba, Santiago, Chile - Fono: 56 2 24971500 - www.infanti.cl - www.dorel.cl. Importado y distribuido en Perú por: COMEXA COMERCIALIZADORA EXTRANJERA S.A. SUCURSAL DEL PERÚ - Los Libertadores 455, San Isidro, Lima 27, Lima, Perú RUC 20431062870 - Fono: 4413029 - www.infanti.com.pe. En Centro América, Caribe y Ecuador por: Best Brands Group S.A. - Av. Balboa, Bay Mall Plaza, Planta Baja, local 9, Panamá. - Fono: (507) 300 2884. En Colombia por: Baby Universe S.A.S. - Vía 40 No. 77-29, Barranquilla, Colombia - Fono: (575) 353 1110 Importador: DJGM, S.A. DE C.V. Gabriel Mancera No. 1041 Col. Del Valle, Benito Juárez C.P. 03100 México, Ciudad de México R.F.C. DJG140305GN9  Tel. (55) 67199202




Fame™ Modular Stroller

6 M+

Max 50 lb (22.7 kg), 40 in. (101 cm)

Your model may look different than the one shown.

CV472

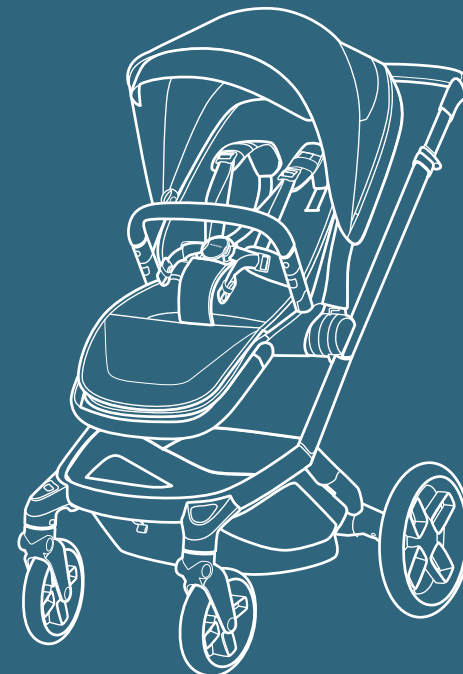

4358-8737A 09.18.25

Read all instructions before assembly and use of product. Keep instructions for future use.

STROLLER is suitable for a child, who can sit up unassisted, up to 50 lb (22.7 kg) and 40 in. (101 cm), and WHEN SEATED, the midpoint of the child's head is at or below the top of the stroller seat.

Storage maximum weight is 22 lb (10 kg).

Cup holder maximum weight is 2 lb (0.9 kg).

Storage pocket maximum weight is 2 lb (0.9 kg).

Adult assembly required.

 WARNING

- Failure to follow these instructions could result in the death or serious injury of your child.
- **NEVER LEAVE CHILD UNATTENDED. ALWAYS** keep child in view when in stroller.
- **AVOID SERIOUS INJURY** from falling or sliding out. **ALWAYS** use seat belt. Check frequently to make sure it is secure.
- **ALWAYS** keep fingers away from moving parts, when folding, unfolding, or adjusting stroller to prevent finger entrapment.
- **ALWAYS** make sure stroller is **FULLY OPEN AND LOCKED** before using.
- **ALWAYS** use the brakes when stroller is stopped.
- **ALWAYS** remove protective material and poly bags and dispose before assembly.
- **NEVER** put hot liquids in the cup holder.
- **NEVER** use stroller on stairs or escalators.
- **NEVER** rollerblade with stroller.

- **NEVER** allow children to play with or hang onto the stroller.
- **NEVER** allow children to climb into the stroller unassisted. Stroller may tip over and injure child.
- **NEVER** place or hang parcels, bags, or accessories on the handle or canopy. The stroller may tip over or the canopy may collapse.
- This product may become unstable if package carrying accessories, other than recommended by the manufacturer, are added.
- This product will become unstable if the manufacturer's recommended loads are exceeded.
- **ONLY** use this stroller with **ONE** child at a time.
- **STROLLER** is for use with children who can sit up unassisted, and is **NOT** recommended for newborns.

Table of Contents

Getting Started	5	LumiRide System and	
Parts of the Stroller	6	Connected Family App	29
Assembly	8	Installing the Power Bank	33
Unfolding the Stroller	9	Using the LumiRide System	34
Installing the Rear Wheels	10	Power and Charge	35
Installing the Front Wheels	11	Using the Connected Family App	36
Installing the Seat	12	Uninstalling the Power Bank	37
Installing the Bumper Bar	13	Car Seat Compatibility	39
Installing the Canopy	14	Attaching the Car Seat	
Removing the Canopy	15	to the Stroller	40
Installing the Cup Holder	16	Removing the Car Seat	42
Folding the Stroller	17	Adjustment and Fit	43
Use	20	Adjusting the Stroller	
Using the Parking Brake	21	Seat Harness Straps	44
Using the Swivel Wheel Lock	22	Securing Your Child	
Using the Canopy	23	in the Stroller	45
Reclining the Stroller Seat	25	Wash and Care	48
Adjusting the Footrest	26	Cleaning the Stroller	49
Adjusting the Handlebar	27	Installing the Seat Pad	50
Storage	28	Warranty	51

Getting Started

To help you get started using your child’s new stroller, these are the four main tasks you’ll need to complete.

1

Assemble the Stroller

2

Set Up the Accessories


3

Attach a Maxi-Cosi car seat if desired


4

Make Any Adjustments to Properly Fit Your Child and Buckle Up


Parts of the Stroller

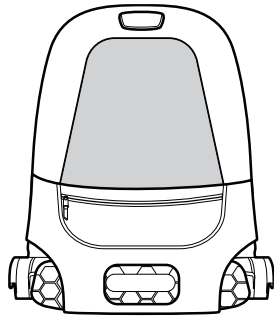


Seat

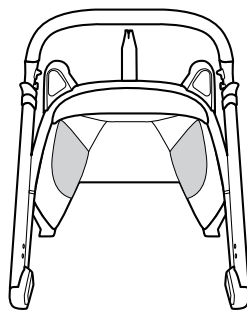

Stroller Frame

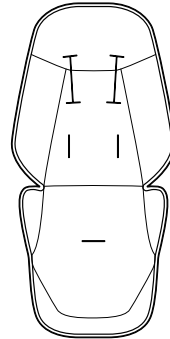


Seat Pad
(Installed)

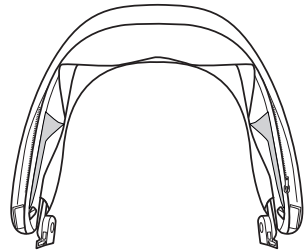


Canopy




Bumper Bar

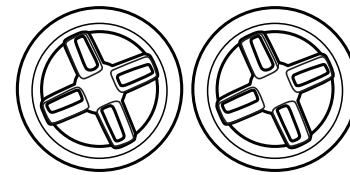

Rear Wheels

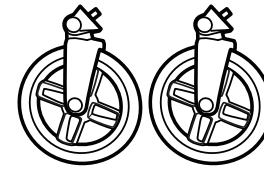

Front Wheels

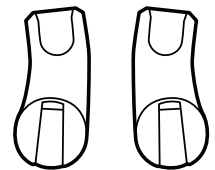

Car Seat Adapters



Power Bank



Cup Holder

Lay out and identify all of the parts.
If any parts are missing, **DO NOT**
return this product to the place
of purchase.

Please contact Consumer Care via:


- Phone: 1-800-544-1108
- Text: 1-812-652-2525
- Chat: www.maxicosi.com
- Email: support@djgusa.com

You will need to know the
model number (CV472) and
manufacture date.
It is located on a label on the
bottom of the kickstand.

Assembly


Unfolding the Stroller	9
Installing the Rear Wheels	10
Installing the Front Wheels.....	11
Installing the Seat.....	12
Installing the Bumper Bar	13
Installing the Canopy	14
Removing the Canopy	15
Installing the Cup Holder	16
Folding the Stroller	17

Unfolding the Stroller

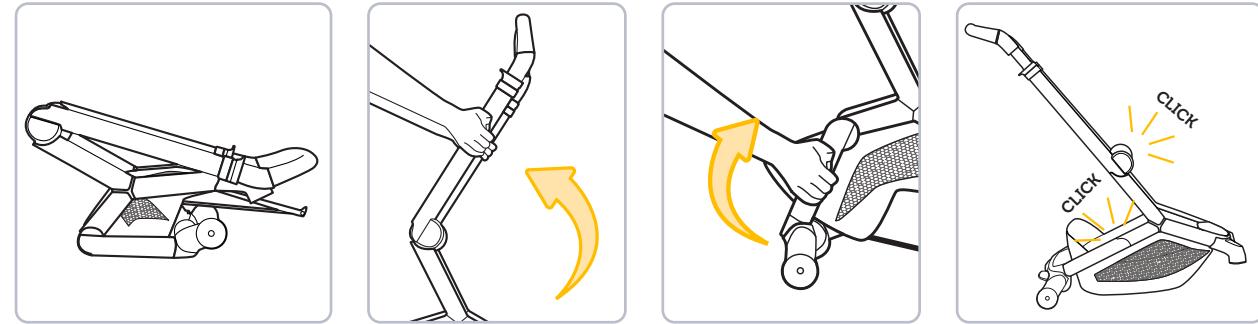


Pull back on the handlebar until it clicks into place. Unfold the bottom of the stroller by pulling one end of the base towards you. The other end folds out and clicks into place.


Installing the Rear Wheels

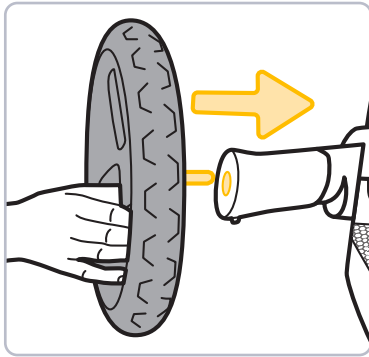


To install the rear wheels: Slide the wheels into the slots on the stroller frame until they click into place. Either wheel can insert into either slot. Pull gently on each wheel to make sure they are assembled securely.

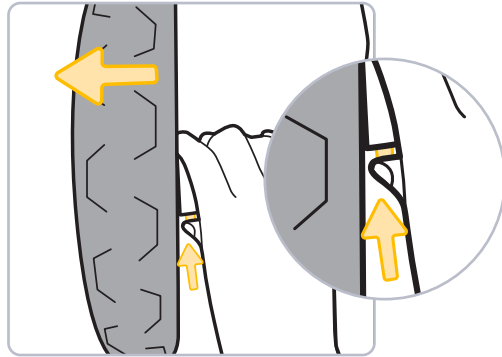

To remove the rear wheels: Press the button on the frame located next to each rear wheel. While holding the button, pull the wheel off the frame. Repeat for the other wheel.

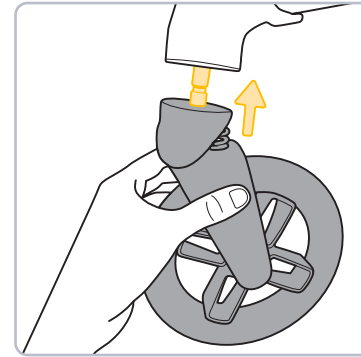


To install the front wheels: Slide the wheels into the slots on the stroller frame until they click into place. Either wheel can insert into either slot. Pull gently on each wheel to make sure they are assembled securely.

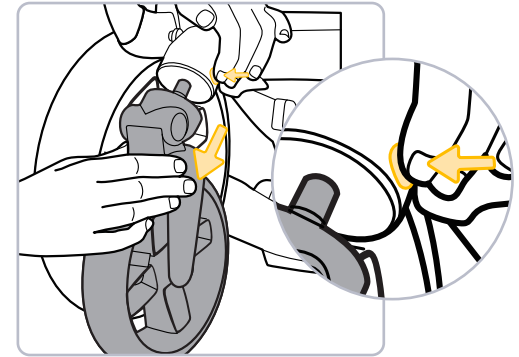


To remove the front wheels: Press the button on the frame located next to each front wheel. While holding the button, pull the wheel off the frame. Repeat for the other wheel.

Installing the Seat

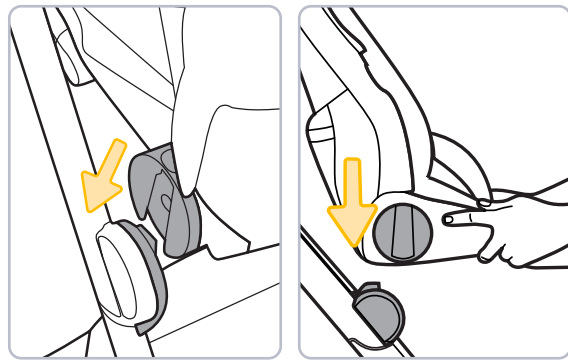


To install the seat: Slide the seat down onto the slots on the sides of the stroller frame.


The seat can be installed parent-facing or world-facing.

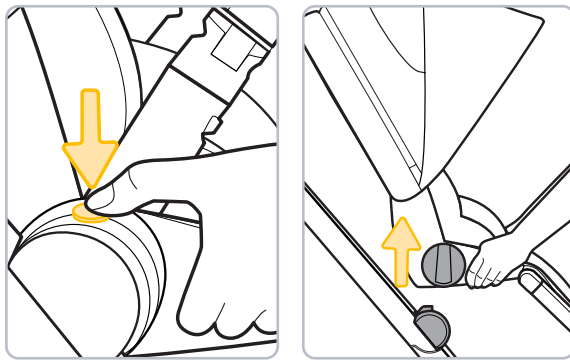


To remove the seat: Press down on the pin locks on either side of the stroller seat. Once both pin locks are fully pressed down, lift the seat out of the stroller.

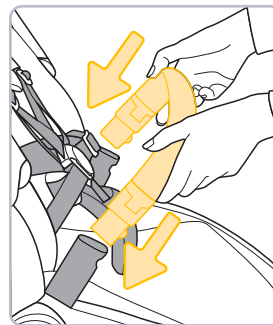

To install the bumper bar: Insert both ends of the bumper bar into their respective slots on the stroller frame.

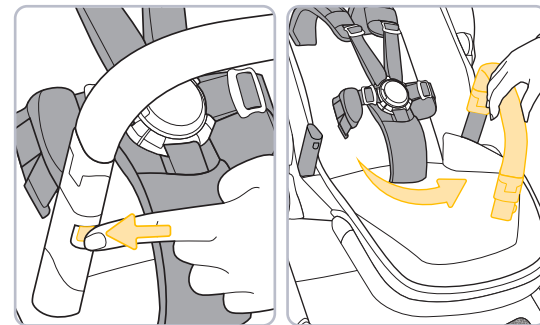

To open the bumper bar: Locate the bumper bar release buttons under the bar where the bar meets the stroller frame. Press one release button and pull one end of the bumper bar out from the frame. Rotate the bar out of the way as needed. Reinsert it into the slot to close the bumper bar.

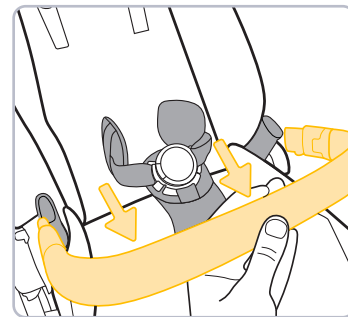


To remove the bumper bar: Press both bumper bar release buttons and pull the bar out from the frame.

⚠ WARNING

ALWAYS ensure bumper bar is in the upright locked position before using the stroller.

Installing the Canopy

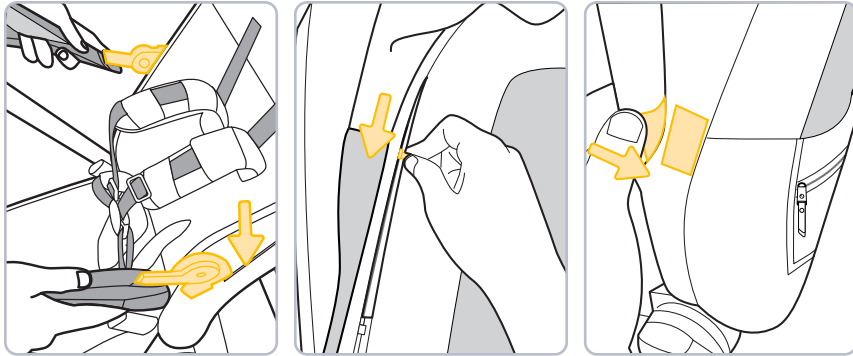


Slide the canopy down onto the notches on the side of the seat. The canopy can only be installed one way.

Attach the zipper on the canopy to the zipper on the seat. Zip the canopy to the seat.

Fasten the canopy to the seat using the hook-and-loop fastening strip.


Removing the Canopy

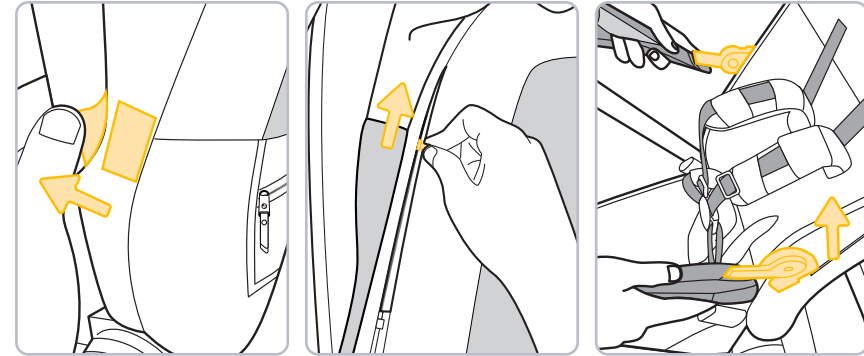

Unfasten the canopy from the seat using the hook-and-loop fastening strip.


Fully unzip the canopy from the seat.

Slide the canopy up and off the notches on the side of the seat. Some force may be required.

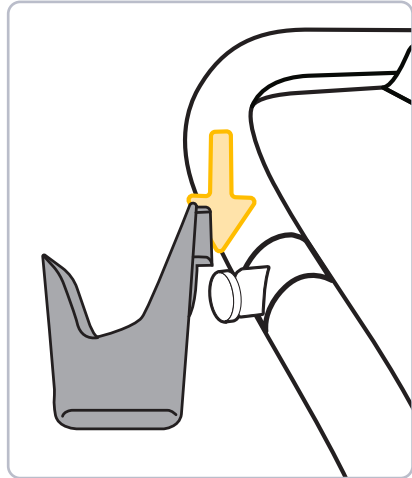

To install the cup holder: Slide the cup holder down onto the knob on the side of the stroller frame until it locks in place.

To remove the cup holder: Push up on the bottom of the cup holder until it slides off the knob.

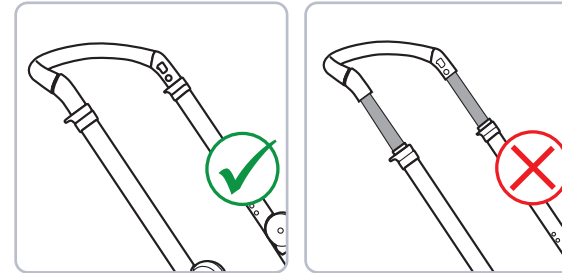


Before folding the stroller, make sure the handlebar is at the lowest possible height. To change the handlebar height, see page 27.


WARNING

ALWAYS keep fingers away from moving parts, when folding, unfolding, or adjusting stroller to prevent finger entrapment.


Folding the Stroller

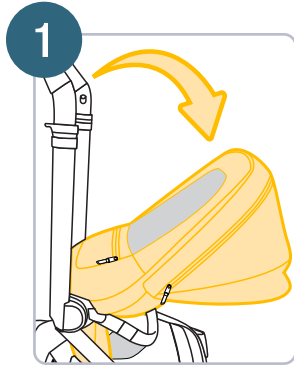


Before folding the stroller with the seat attached, use the seat's recline/fold lever to fully fold the seat.

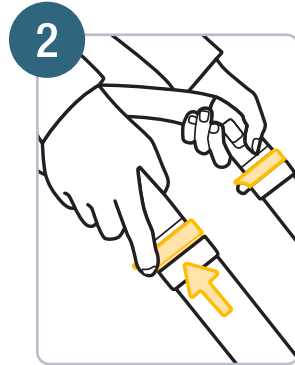


Locate both fold release tabs at the top of the stroller frame near the handlebar.

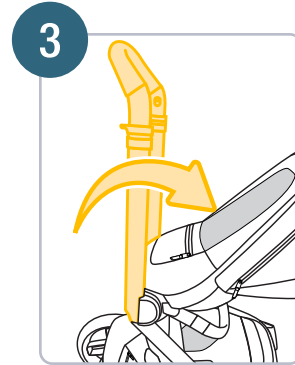


While pulling in both tabs, push the handlebar down.

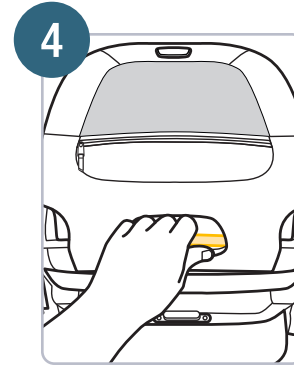

Pull up on the handle on the bottom of the stroller to completely fold it.

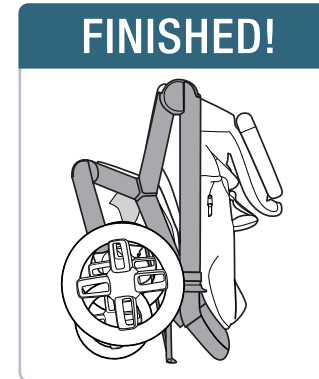

Note: The stroller can also be folded without the seat attached by lifting on the handle in the basket.

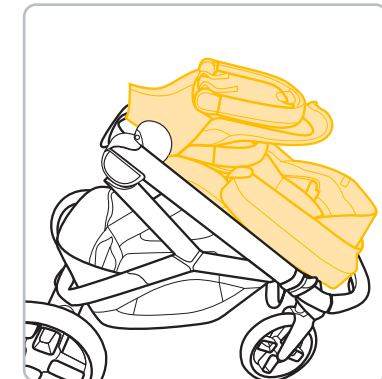


When folding the stroller with the seat attached in parent-facing mode, lift the footrest up, fold the seat forward 45 degrees, and then push the folded seat flat against the handlebar.

Use

Using the Parking Brake	21
Using the Swivel Wheel Lock.....	22
Using the Canopy.....	23
Reclining the Stroller Seat.....	25
Adjusting the Footrest.....	26
Adjusting the Handlebar	27
Storage	28



Using the Parking Brake

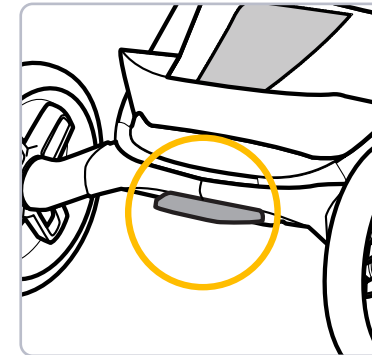

ALWAYS use the parking brake when standing still, even if only for a few moments!

To lock the brake: Push down on the back of the pedal in between the rear wheels.




To unlock the brake: Push down once more on the same pedal.

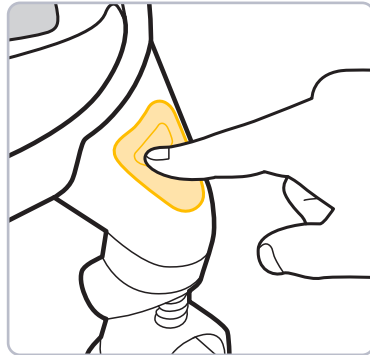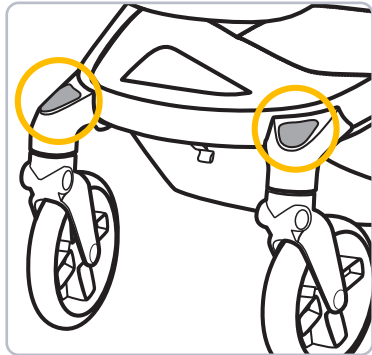

Use the swivel wheel lock when using the stroller in a straight direction for long periods of time.


To lock the swivel wheels: Press the buttons located on the stroller frame just above each front wheel until they click. The front wheels will not be able to swivel while the lock is engaged.

To unlock the swivel wheels: Press the same buttons again. The front wheels will be able to swivel.

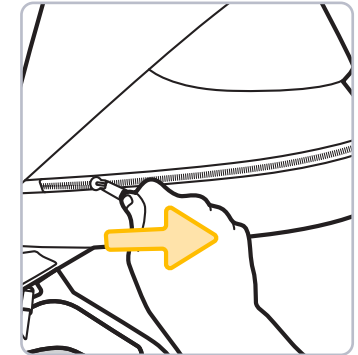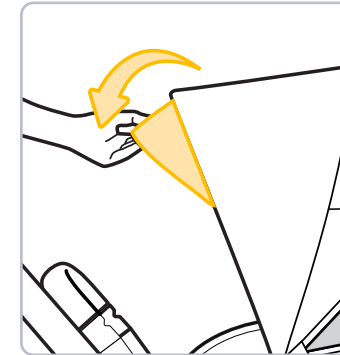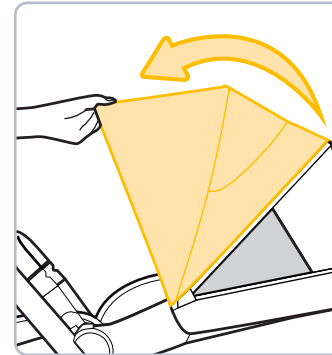


To extend the canopy: Pull the canopy away from the stroller. Pull the canopy visor out from under the canopy.

To use the mesh panels: Unzip the zipper where the canopy meets the frame. This will allow you to extend the canopy further and reveals a mesh panel in the back of the canopy.

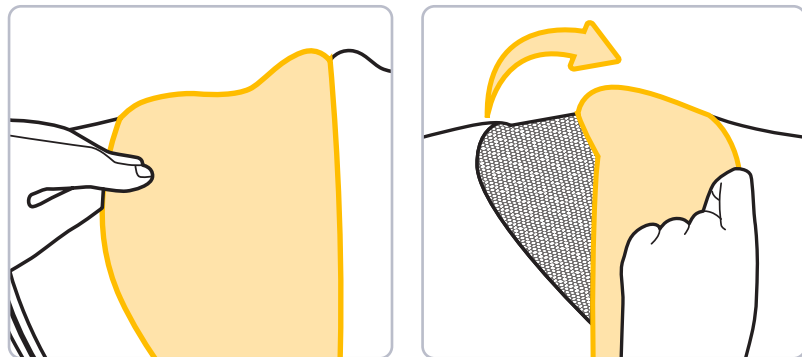


There is also a mesh panel on the roof of the canopy. Reveal this panel by pulling back the fabric flap on the top of the canopy.

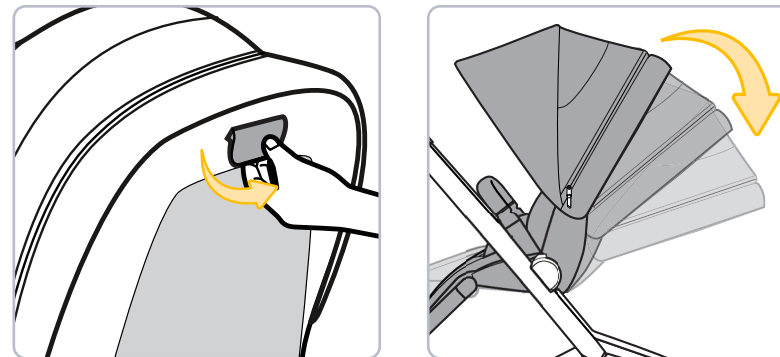

To recline the stroller seat: Pull the recline/fold lever at the top of the seatback. While pulling the lever, adjust the seat to the desired height.

There are three possible recline positions for the seat. The seat can also be folded fully forward to make folding the stroller easier. For information on how to fold the stroller, see page 18.


Adjusting the Footrest

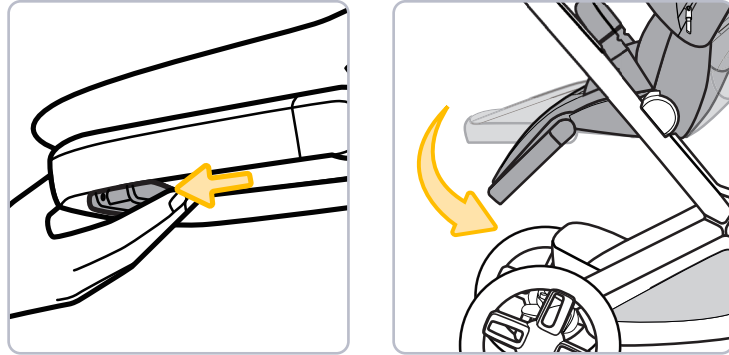

To adjust the footrest: Pull the lever under the footrest. While pulling the lever, adjust the footrest to the desired height.


There are two possible positions for the footrest. The footrest will click into each position.

Adjusting the Handlebar

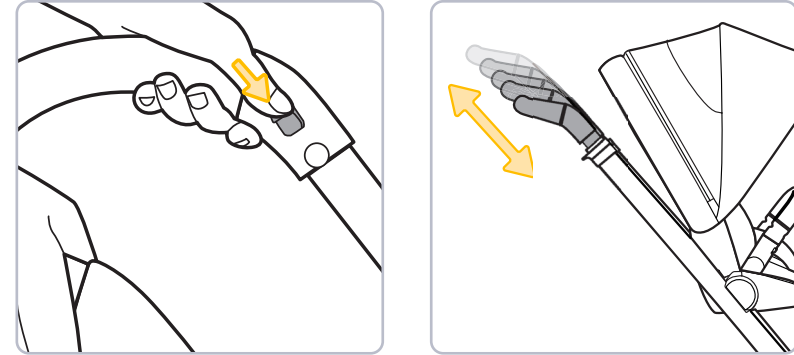

To adjust the handlebar height: Push in the handlebar adjustment levers located on either side of the handlebar. Then pull the handlebar out to the desired height.

There are six possible height positions for the handlebar.

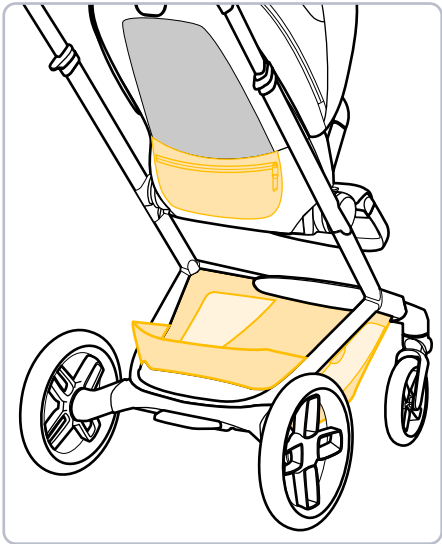

The storage basket at the bottom of the stroller has a weight limit of 22 lb (10 kg), and the storage pocket on the rear of the seatback has a weight limit of 2 lb (0.9 kg).

LumiRide System and Connected Family App

- Installing the Power Bank.....33
- Using the LumiRide System34
- Power and Charge35
- Using the Connected Family App36
- Uninstalling the Power Bank.....37

The Fame stroller is compatible with the power bank and the Connected Family app.

WARNING

Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.

- This product contains a battery. To prevent electric shock, all maintenance and cleaning **MUST** be performed by an adult. Children should not play with the battery.
- Before using the product, ensure that the power bank is fully charged.
- To reduce the risk of electric shock, **DO NOT** open the power bank or LumiRide system. Please leave all maintenance work to qualified personnel.
- To prevent electric shock, **DO NOT** open the body of the LumiRide system.
- **DO NOT** clean the product with water or other solvent while power bank in product is charging.
- Cable and cords present a potential strangulation hazard.
- **DO NOT** use the power bank when it is charging, and especially **DO NOT** use the LED light.
- **DO NOT** spill any liquid into power bank box, which may cause a short circuit.
- **NEVER** use the appliance close to a heat source.
- Prolonged Exposure to UV Rays, Rain and the Elements May Damage the Enclosure Materials, Store Indoors When Not in Use.
- Risk of fire and burns. **DO NOT** open, crush, heat above 113°F (45°C), or incinerate.
- Follow Manufacturer's instructions.

- Risk of explosion or leakage if:
 - Battery is replaced by an incorrect type
 - Battery is disposed of in fire or hot oven
 - Battery is mechanically crushed or cut
 - Battery is left in an extremely high temperatures
 - Battery is subjected to extremely low air pressure

Charging temperature range (ambient): 32° to 113°F (0° to 45°C)

Discharging temperature range (ambient): -4° to 95°F (-20° to 35°C)

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING – When using this product, basic precautions should always be followed, including the following:

- a. **DO NOT** put fingers or hands into the power bank or power bank box.
- b. **DO NOT** expose power bank to heat or fire. **DO NOT** store in direct sunlight or in a vehicle.
- c. Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury.
- d. **DO NOT** use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
- e. **DO NOT** use the power bank if it is damaged or has been modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.

- f. **DO NOT** disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
- g. Servicing should only be performed by a qualified service or repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- h. Switch off the power bank when not in use.
- i. **DO NOT** charge power bank with a power supply that exceeds power bank input ratings. Excessive input may result in damage to the power bank, risk of fire or injury.
- j. The Power Bank is a Lithium-Ion battery and **MUST** be removed from the stroller and placed in your carry-on baggage before boarding an airplane.

⚠ CAUTION

- **DO NOT** use the power bank when it is charging, and **DO NOT** use the LED light as they will dim when it is charging.
- Every effort has been made to ensure high standards of reliability of your product. However, if something does go wrong, please **DO NOT** try to repair it yourself—contact Consumer Care for assistance.
- When not in use, remove the power bank from the product.

Before using the power bank, remove the power bank from the stroller and remove the interrupter from the battery contacts.

To remove the power bank, see page 37.

Installing the Power Bank

Charge your power bank before installing using the USB-C port on the power bank and a (max) 5 VDC / 4.5 A adapter.




Power Bank Ratings:


Input: USB-C, 5 VDC / 4.5 A

Output: USB-C, 5 VDC / 3.0 A


Battery Capacity: 3.7 VDC, 5000 mAh, 18.5 Wh.

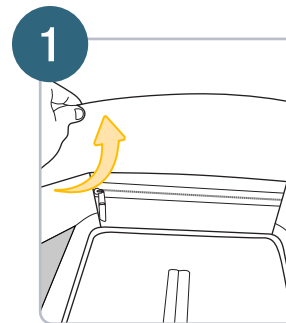


Lift the flap in the base of the stroller that covers the power bank pocket.

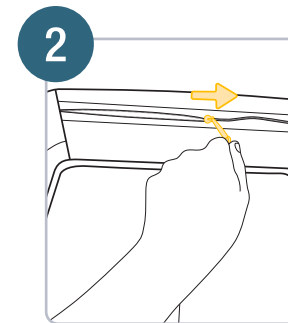


Unzip the power bank pocket to reveal the power bank slot.

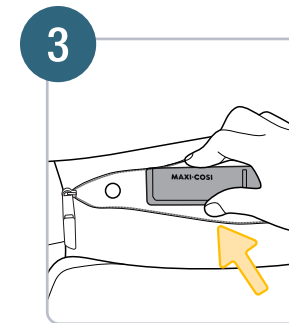

Insert the power bank into the power bank slot with the front side (the side with the Maxi-Cosi name) facing you.

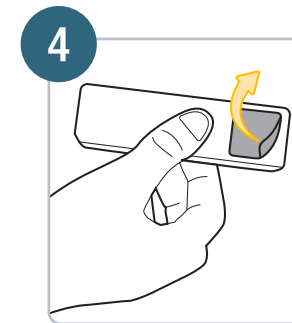

Pull the cover flap away from the power bank to reveal the charging port.

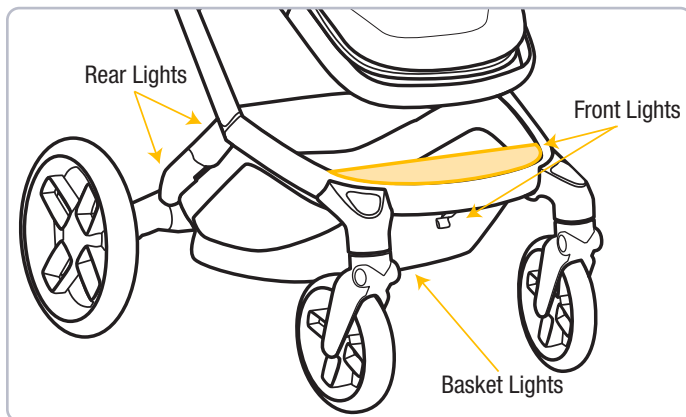


Once the power bank is installed, you may begin using your stroller's LumiRide System.

The stroller has lights on the front and rear of the frame and within the storage basket.

When paired with the Connected Family app, you can adjust the brightness levels of the front, rear, and basket lights. The app also allows you to change the color of the front and rear light.

To pair your stroller with the Connected Family app, see page 36.

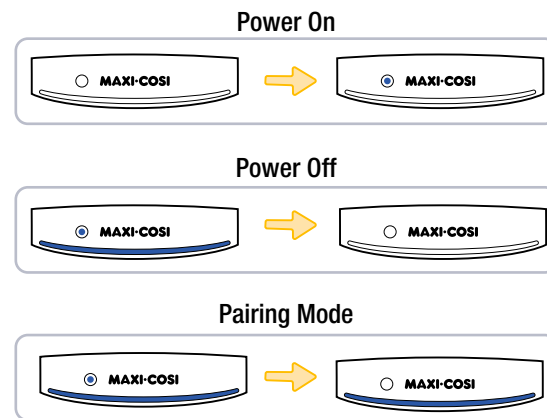

Tapping the power button once turns the LumiRide system on. Tap the power button again while the LumiRide system is on to turn the lights off.


Once the LumiRide system is turned on, hold the power button for five seconds to enter the stroller's pairing mode. The rear lights will pulse once pairing mode has been activated. In pairing mode, the stroller can be paired with the Connected Family app. See the Connected Family app section for more details.

If the battery bank is installed but the lights don't turn on, remove the power bank and reinstall.

There are multiple ways to check percentage of remaining power for the stroller's LumiRide system.



If the stroller's LumiRide system has 25% charge or more, the light on the power button will be blue. If the stroller's LumiRide system has less than 25% charge, the light on the power button will be red.

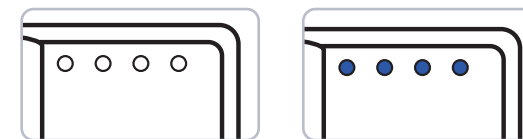

You can also view the power percentage by checking the lights on the power bank. There are four lights, each representing 25% power percentage. One light represents 25% power remaining, two lights represents 50%, etc.

You can use this stroller's power bank to charge your smartphone. Connect your smartphone to the stroller using a compatible USB-C cable (not included). The stroller's lights **MUST** be turned off to charge your cell phone.

Using the Connected Family App

This stroller is compatible with the Connected Family app, which allows you to control the LumiRide System from your smartphone.


To use the Connected Family app: Download the Connected Family app by searching for “Connected Family” on the Apple® App Store® or the Google Play™ Store. Make sure Bluetooth® is turned on for your smartphone. Log in or create an account, then tap the + icon to pair your stroller.

Follow the instructions in the Connected Family app to pair the stroller with your smartphone. Explore the features and functionality within the Connected Family app.



Download the Connected Family app to control your stroller's lights from your smartphone and interact with other compatible Maxi-Cosi products.

Uninstalling the Power Bank

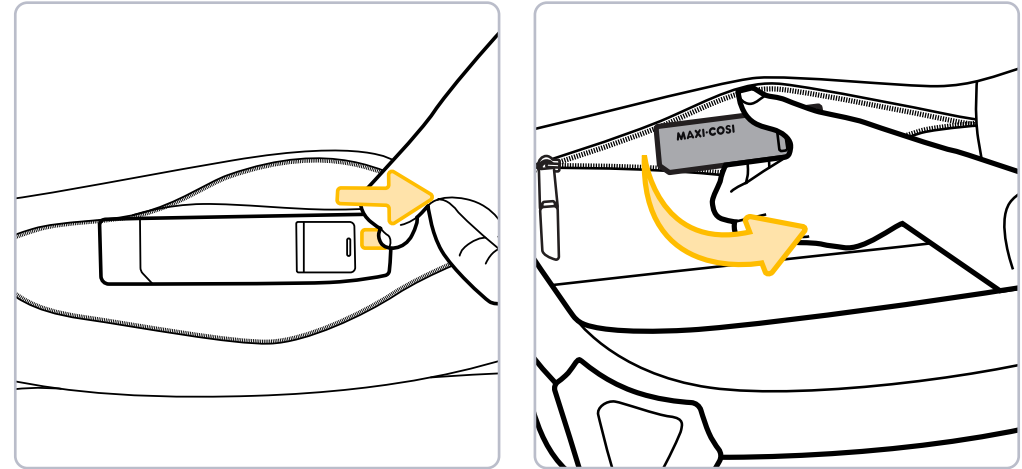

Pull the release lever next to the power bank to unlock it. Remove the power bank.

Disposal

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electronic equipment in accordance with your local laws. Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products, you make an important contribution to the protection of the environment. Please contact your recycling center for more information on the collection points in your area.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RADIO AND TELEVISION INTERFERENCE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by Dorel Juvenile Group can void your authority to operate this equipment under Federal Communications Commission's rules. Use of other accessories may not ensure compliance with the FCC exposure guidelines.

CAUTION: This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Car Seat Compatibility

Attaching the Car Seat to the Stroller.....40

Removing the Car Seat42

Attaching the Car Seat to the Stroller




⚠ WARNING

To avoid serious injury:



- Please refer to the manufacturer's instructions for the use of your infant car seat.
- **ALWAYS** remove stroller seat before installing car seat.
- **ALWAYS** install car seat facing to the rear of the stroller.
- **ALWAYS** use the restraint system in the car seat.



This stroller is compatible with all Maxi-Cosi infant car seats.
Car seats **MUST** be installed parent-facing (also known as rear-facing).

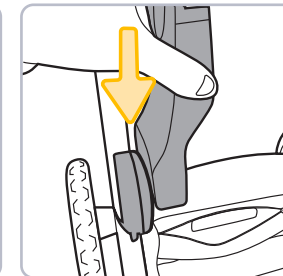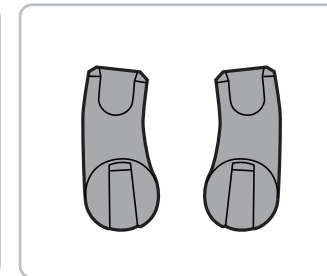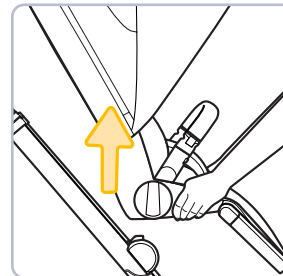



Remove the seat before installing the car seat (see page 12). Attach the car seat adapters to the stroller. Each adapter will only fit into one slot. **DO NOT** force an adapter into a slot it does not fit into.

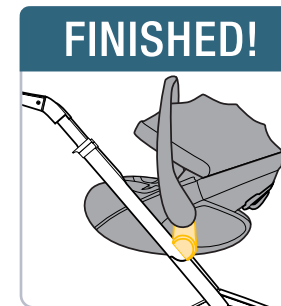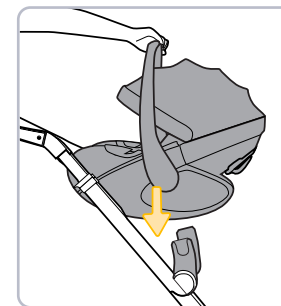



FINISHED!

Once the adapters are attached, lower the car seat onto the adapters. Pull gently on the car seat's handlebar to make sure it is attached securely to the stroller.

Removing the Car Seat

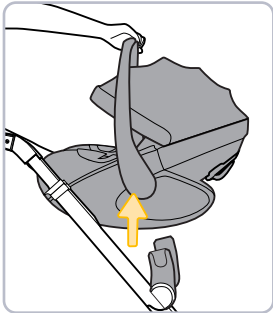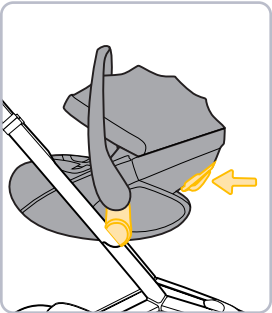

To remove the car seat: Press and hold the release button on the car seat, then lift the car seat off the stroller. Consult your car seat's instruction manual for detailed instructions.

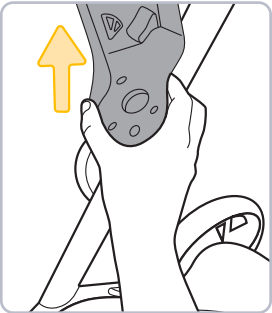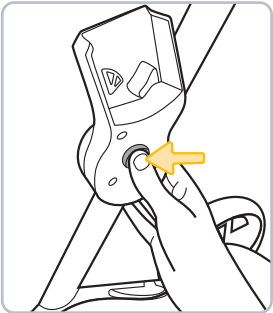


To remove the car seat adapters from the stroller: Push the release buttons on each adapter. While holding the buttons down, slide each adapter up and out from the stroller frame.

CAUTION

Before putting the folded stroller into a vehicle, the adapter **MUST** be removed.

Adjustment and Fit

Adjusting the Stroller Seat Harness Straps	44
Securing Your Child in the Stroller	45

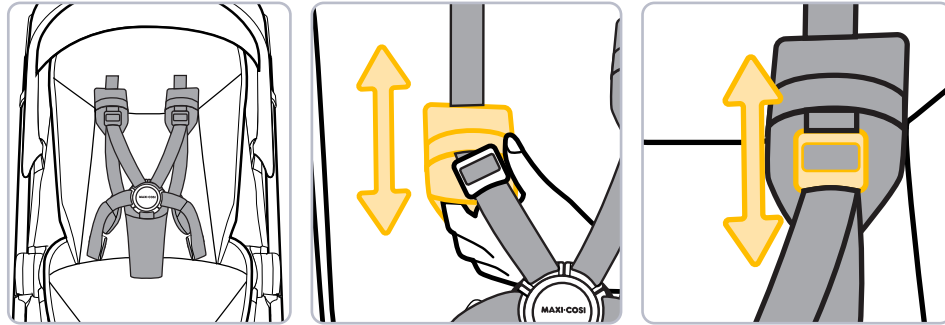

You may need to adjust the stroller's harness straps to best fit your child.

To adjust the harness straps: Push or pull the harness covers up or down until snug. You may also adjust the length of the straps by adjusting the slide ring of the harness straps under the harness covers.

WARNING


**IMPLANTED
ELECTRONIC
MEDICAL
DEVICES**

DO NOT use the magnetic chest clip with children who have an implanted electronic medical device.

A magnet is used to help secure the chest clip locking mechanism together which may interfere with the proper function of an implanted electronic medical device.


Parents or caregivers who have an implanted electronic device should keep their device away from the chest clip and consult their doctor and medical device manufacturer for specific information before using this chest clip.

If a parent/caregiver or child has an implanted electronic medical device, please contact Dorel (see back cover) for a replacement (non-magnetic) chest clip free of charge.

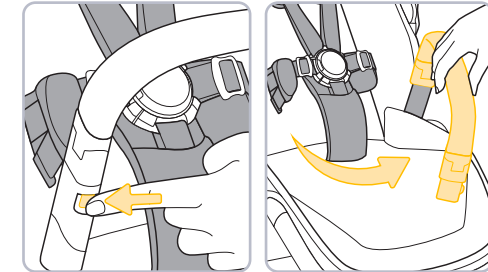


Before placing your child in the stroller, open or remove the bumper bar.


To open or remove the bumper bar, see page 13.

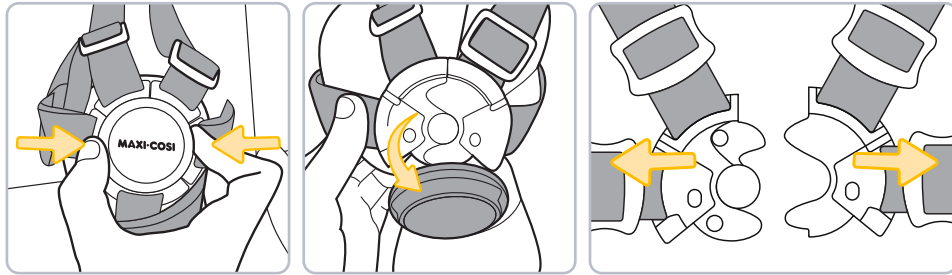

To unbuckle the harness system: Press the side buttons on the center buckle to release the magnetic cover. Remove the center cover and separate the two sides of the buckle.

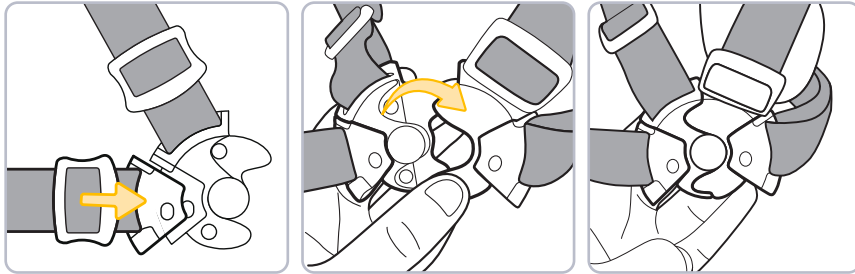

To buckle the harness system: Insert the right-side clip into the top right clip. Repeat for the left side. Lay the right clip over the left clip. It will snap into place magnetically.

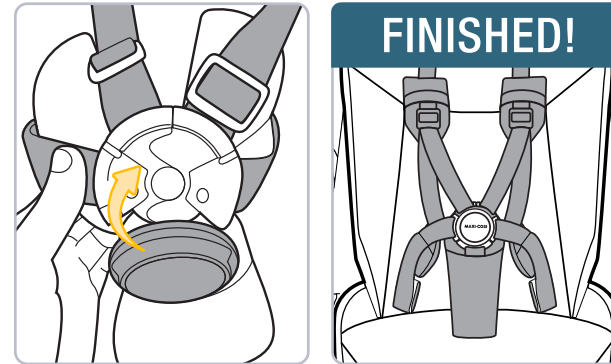

Once the clips are assembled securely, place the buckle over the clips. It will snap into place magnetically.
Once your child is secure in the stroller, close or replace the bumper bar.

⚠ WARNING

AVOID SERIOUS INJURY from falling or sliding out. **ALWAYS** use seat belt. Check frequently to make sure it is secure.


Wash and Care

Cleaning the Stroller	49
Installing the Seat Pad	50
Warranty	51


Cleaning the Stroller

The stroller's seat pad is machine washable with cold water on gentle cycles. **DO NOT** use bleach. Tumble dry on low heat or line dry. Spot clean only all other parts of the stroller with soap and warm water.



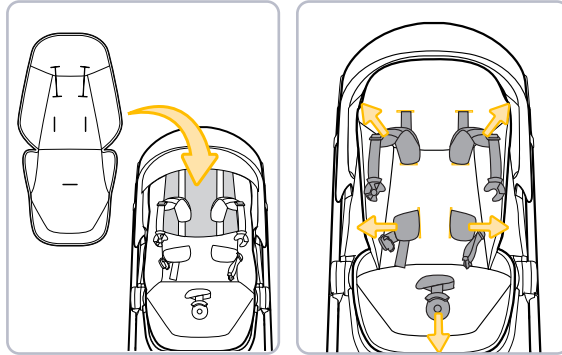

Pull the seat pad over the seat, pulling each strap through the holes in the seat pad as shown.

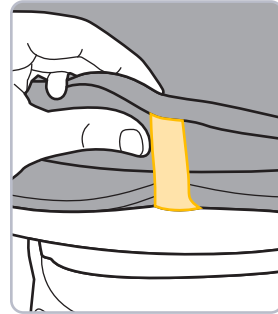

Use the seat pad strap, located near the footrest, to fasten the seat pad to the seat. Pull the strap through the loop on the bottom of the seat and buckle it back to the seat pad.

If you have questions or any concerns with this stroller, please contact our Consumer Care Department. For parts availability and questions, please contact us via phone, text, email, or chat. Include the model number (CV472) and manufacture date (found on a label on the bottom of the kickstand) and a brief description of the part.

Replaceable Parts List

- Front Wheels (2)
- Rear Wheels (2)
- Harness Strap Covers (2)
- Bumper Bar
- Canopy
- Cup Holder
- Car Seat Adapters (2)
- Power Bank

Call: 1-800-544-1108

Text: 1-812-652-2525

Email: support@djgusa.com

Chat: www.maxicosi.com

Hours of Operation

M-TH: 8:00 AM - 6:00 PM EST

FRI: 8:00 AM - 4:30 PM EST

Two-Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (Maxi-Cosi Fame™ Modular Stroller), is free from material and workmanship defects when used under normal conditions for a period of two (2) years from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc. will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to the Dorel Juvenile Group Consumer Care Department at the address noted on the back of this document and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replacement product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse. This warranty excludes any liability other than that expressly provided, including but not limited to, any incidental or consequential damages. ****SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.****