


2-Bar Electric Towel Warmer

INSTALLATION INSTRUCTIONS

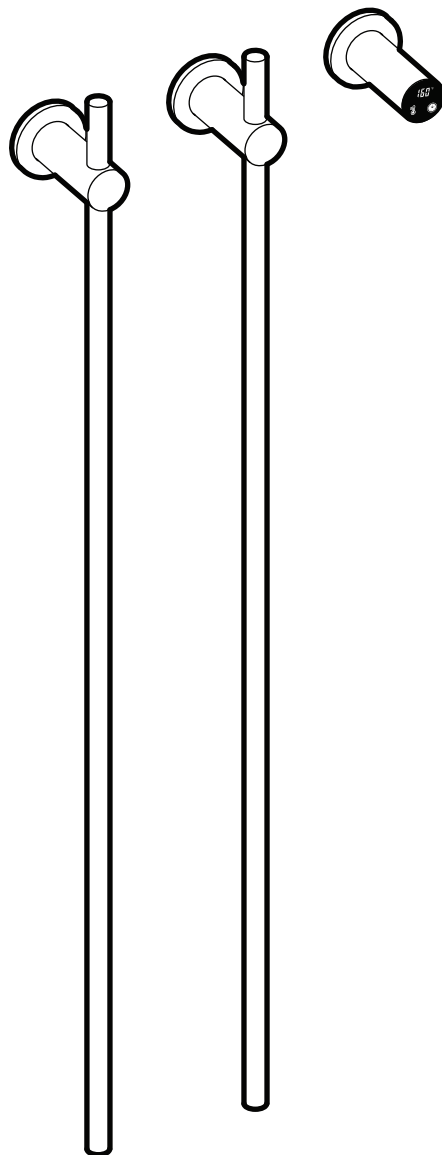



PRIOR TO INSTALLATION:

- Inspect product to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- All dimensions are nominal! Be sure to measure your towel warmer prior to installation.
- The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Swiss Madison cannot be held liable. It is recommended to install all Swiss Madison products by hiring a licensed professional.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

 **WARNING:** To reduce the risk of electrical shock, turn off power at the circuit breaker before installing this product.

 
QUESTIONS OR CONCERNS?

Please contact us:


1-434-623-4766

info@swissmadison.com

INCLUDED PARTS:




Towel warmer

 

Control Box



 Plastic anchors




Screws

SUGGESTED TOOLS:



 Safety Glasses



Level



Drill



Screwdriver




Pencil

INSTALLATION:


1 Prepare the Wall

- This model requires in-wall installation. If installing with a finished wall, make an opening of 4" by approximately 18.1" to the wall's desired location of the control box. The unit can be installed at a depth of 1.34" from the finished wall. Use a level to ensure alignment.

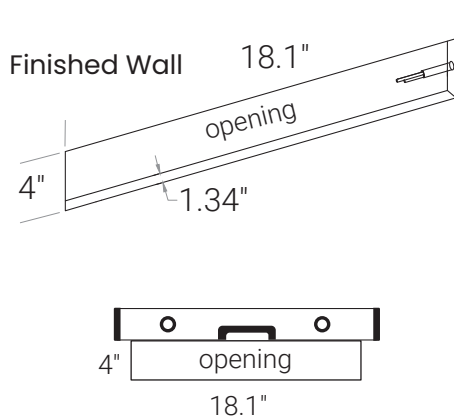


2 Position the Control Box

- Before securing the control box, connect the power supply wires to the unit.
- Position the control box to the opening slot on the wall.
- Using a pencil, mark the wall through the holes in the control box.

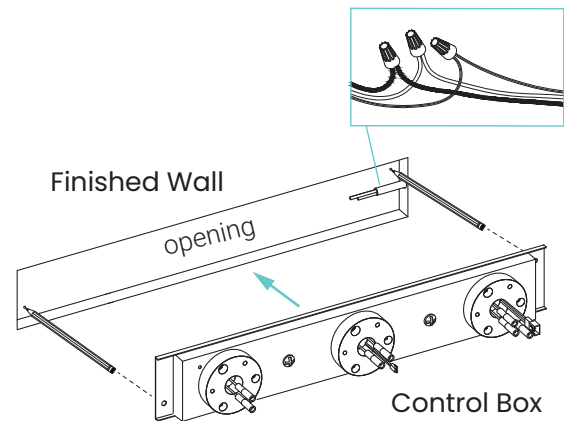


3 Drill the Wall

- Drill the wall through the 2 marked holes.
- Attach the plastic anchors to the holes.

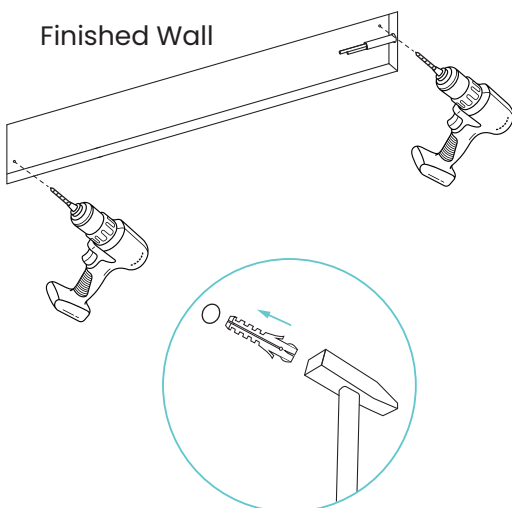


4 Attach the Control Box

- Attach the control box to the opening slot on the wall using screw.

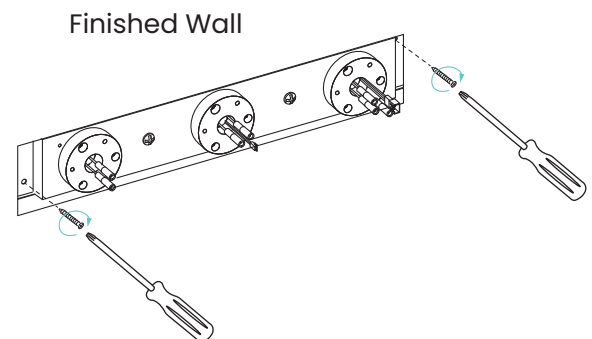


5 Smoothen the Wall Opening

- Smoothen the wall opening to level with the original wall. If using tiles, you can make holes in the tile to cover the opening.

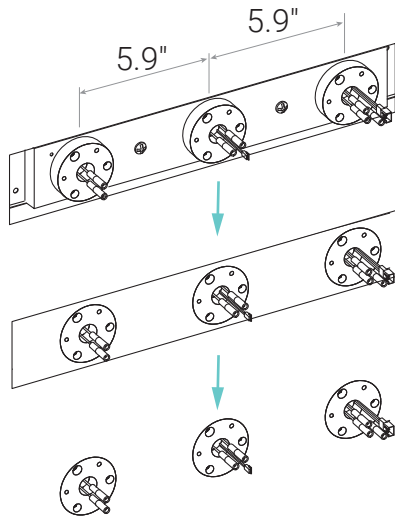


6 Install Fixing Piece

- Install the fixing piece on the towel bars with screws.

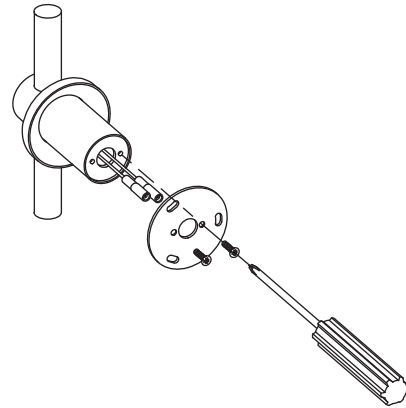


7 Connect Electric Wires

- Connect the towel bars electric wires to the corresponding control box wires.

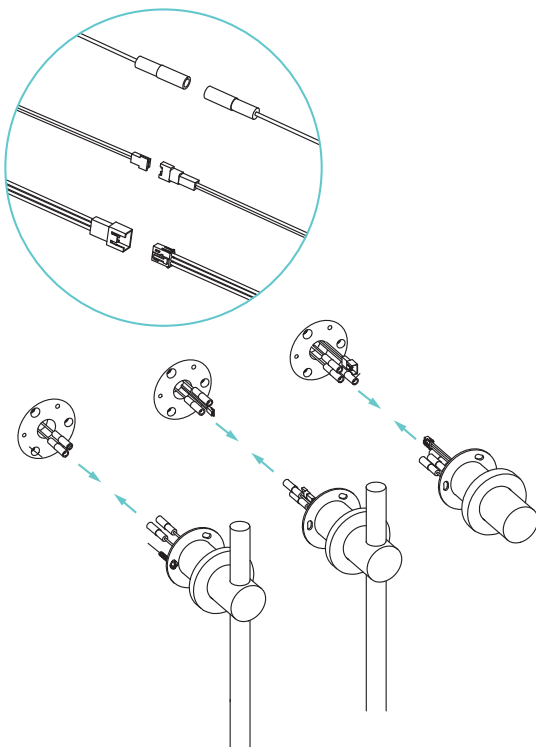

8 Secure Towel Bars

- Screw the towel bars through the installation plate. Each individual unit has 3 screw slots.
- Secure each cover for the 3 units.
- Turn power on. Turn on the device using the power button.

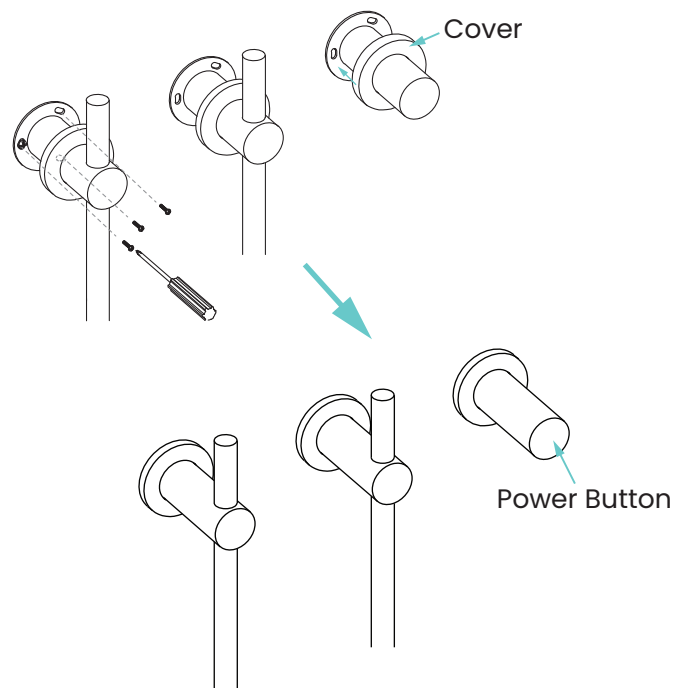



DIGITAL PANEL FUNCTIONS:

- To Switch On/Off: long press timer button icon at the bottom right of the control panel.
- To set Time: short press timer. Short press repeatedly to increase time. You have the option to set between 1-24 hours. The LED display will illuminate with the desired time. If you do not set a specified time and leave the display at "0" hours, the warmer will remain on indefinitely (NOT RECOMMENDED).

NOTE: after the desired time is up, the warmer will automatically turn off.

- To set temperature: short press thermometer icon on the left side of the control panel. Short press repeatedly to increase temperature. You have the option to set between 100 F – 160 F. The LED display will illuminate with the desired temperature.

Warm up time will be dependent on the temperature, ranging between 5 minutes for 100F, and 60 minutes for 160F.

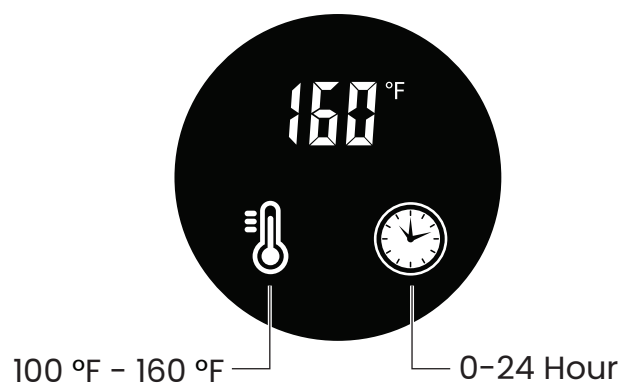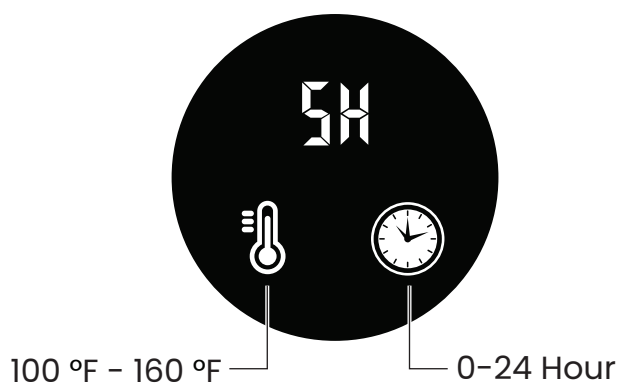

ONE-YEAR LIMITED WARRANTY

Swiss Madison® products are made with quality materials and excellent craftsmanship to provide our customers with beautiful, durable, long-lasting products. Should there be any defects in materials or craftsmanship under regular use that are discovered within the first year after delivery, Swiss Madison® will provide replacement parts at no charge, or at its discretion, replace any product or part of the product that is deemed defective, under normal installation, use, service or maintenance. This warranty applies only to the original purchaser. Proof of purchase must be submitted with any warranty claim.

Swiss Madison® recommends that all installations of Swiss Madison® products to be conducted by a licensed plumber or contractor. Swiss Madison® will not be held responsible for any damage or product failure due to improper installation, misuse, or failure to utilize a licensed plumber or contractor for installation. Swiss Madison® is not responsible for any installation or removal costs.

THIS ONE-YEAR LIMITED WARRANTY WILL BE VOIDED IF:

- The installation instructions were not followed by the installer
- The product has been moved from its initial place of installation
- The product has in any way been modified from its original condition
- The product has been subjected to improper maintenance, abuse, misuse, excessive use of chemicals, accidents, or other damages

Swiss Madison® makes no warranty that its products comply with any local building or plumbing codes. It is the consumer's responsibility and obligation to determine local code compliance prior to and during installation.

Swiss Madison® is not responsible for any special, incidental or consequential damages associated with the installation, replacement, return or use of the original purchaser's product. This includes, but is not limited to: freight costs, labor, travel time, lost profit, home damages and other contingent liabilities and costs (including, without limitation, costs associated with 'professionals' or 'experts', investigations, audits, analyses, attorneys and any other professional/hired services). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

The Swiss Madison® warranty is a comprehensive and explicit limit of liability. All other warranties are hereby disclaimed and waived.

QUESTIONS OR CONCERNS? Please contact us directly at: 1-434-MADISON (623-4766)



WARNING:

Contents of your order may contain sharp and possibly other harmful pieces and may cause hazard to children and adults. Swiss Madison® is not responsible in any way for personal injuries or damages.