 

 







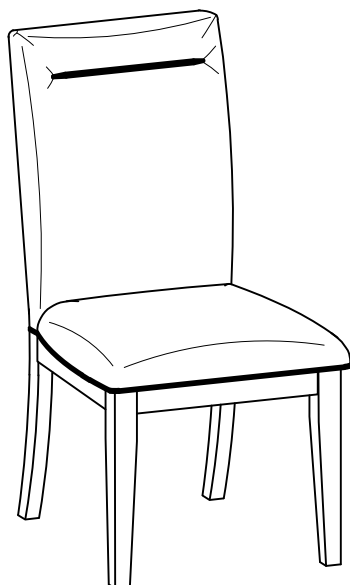 


ASSEMBLY INSTRUCTION

E641C DINING CHAIR


A	Chair Back	B	Seat Cushion	C	Front Legs	D	Bolts Ø1/4"x75mm
							
1pc		1pc		2pcs		4pcs	
E	Bolts Ø1/4"x40mm	F	Hex Nut Ø5/16"x12mm	G	Flat Washer Ø5/16"x19mm	H	Lock Washer Ø5/16"x13mm
							
3pcs		4pcs		11pcs		11pcs	
I	Allen Key 4mm	J	Wrench 12mm				
							
1pc		1pc					



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

 Attach the Front Leg (C) to Seat Cushion (B) using Flat Washer (G), Lock Washer (H) and Hex Nut (F) by Wrench (J). Do not fully tighten.

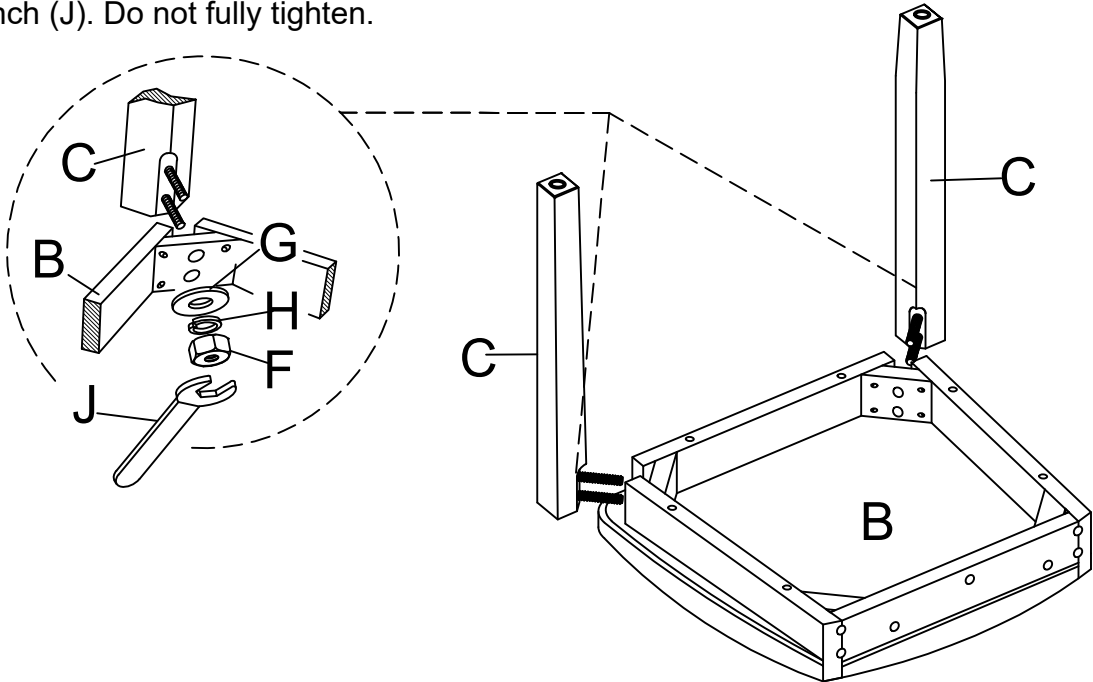


Take the Wrench, and turn the bolts until the legs are secure.
DO NOT TIGHTEN COMPLETELY.
 Stop when you feel you are adding force to tighten the bolt.

2

Attach Seat Cushion (B) to Chair Back (A) by securing the Flat Washer (G), Lock Washer (H) and Bolt (D) on corner. Flat Washer (G), Lock Washer (H) and Bolt (E) onto back rail and tighten with Allen Key (I). Hand tighten only at this moment by using Allen Key (I).

 Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

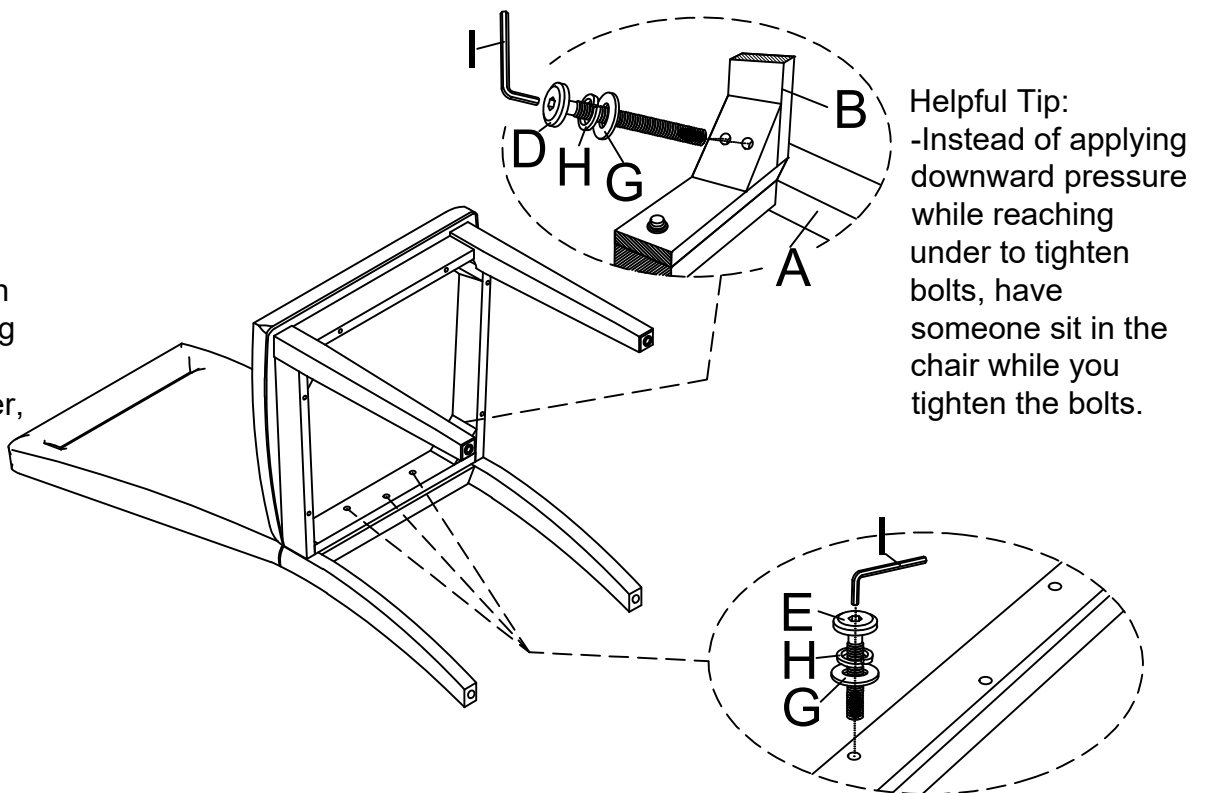

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.