# **home**styles<sup>®</sup>

#### 20 05520 0923

# Storage Island


#### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



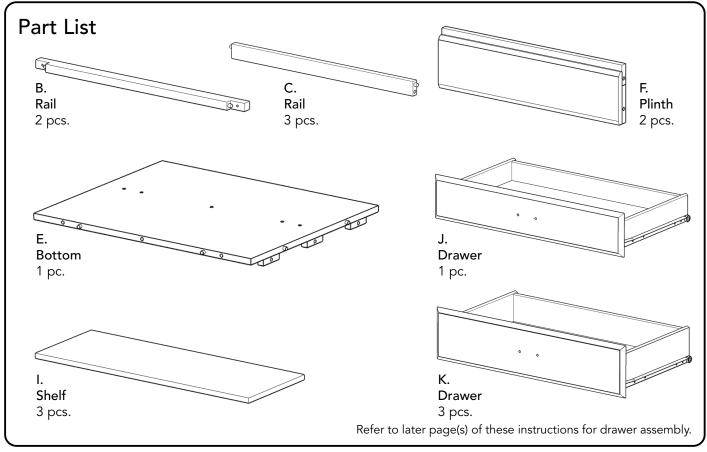

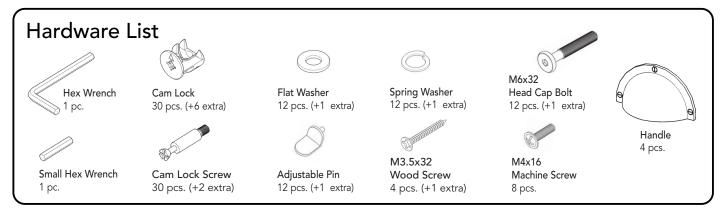

Cartons 20 05520 0921 and 0922 are also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/16" Drill Bit, 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

# Assembly Instructions 2/8

#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

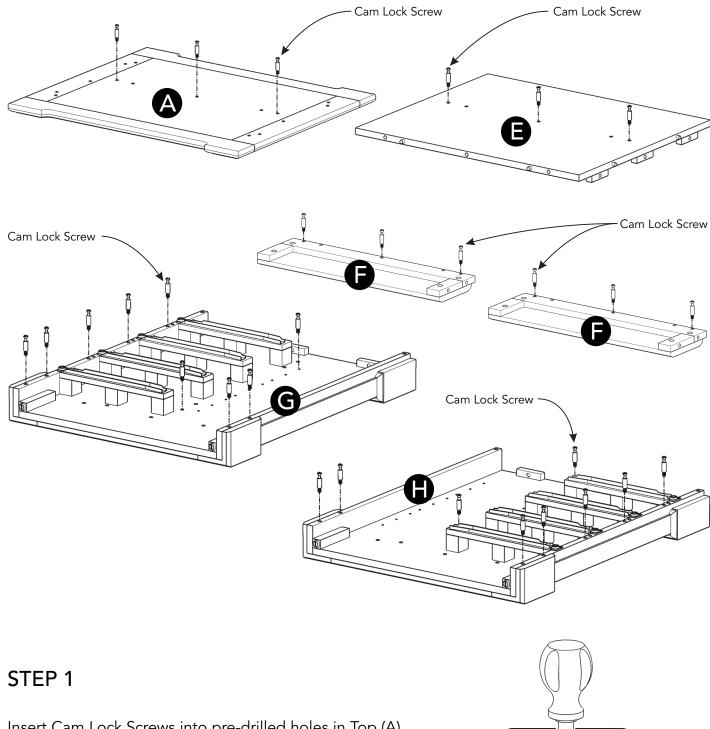

Insert Cam Lock Screws into pre-drilled holes in Top (A), Bottom (E), Plinths (F), Side Panels (G) and (H), then tighten. (See Figure 1)


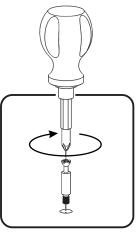


Figure 1

# Assembly Instructions 3/8

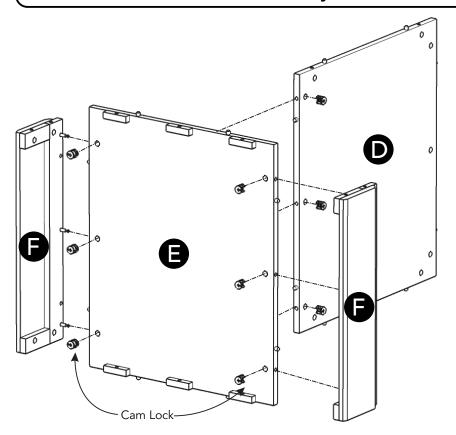

### STEP 2

Attach Back Panel (D) to Bottom (E) with Cam Locks. (See Figure 2)

Attach Plinths (F) to unit with Cam Locks.




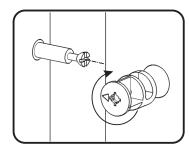


Figure 2

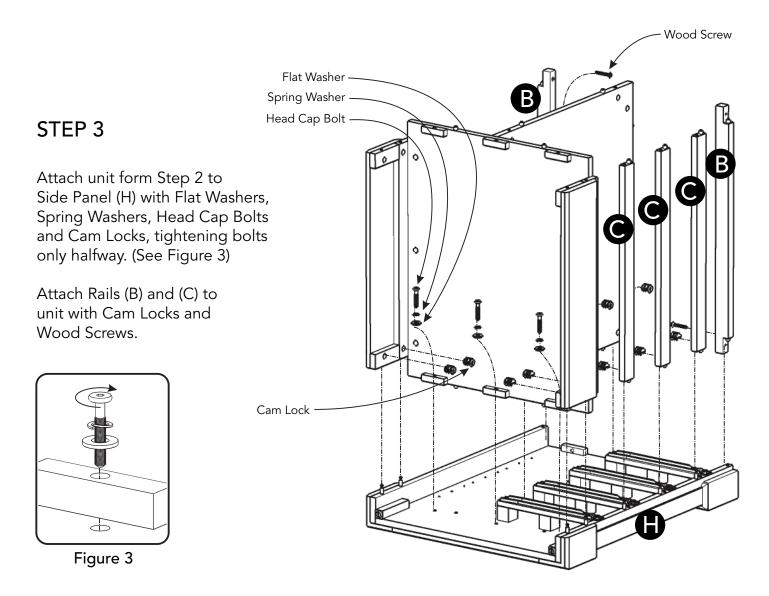

# Assembly Instructions 4/8

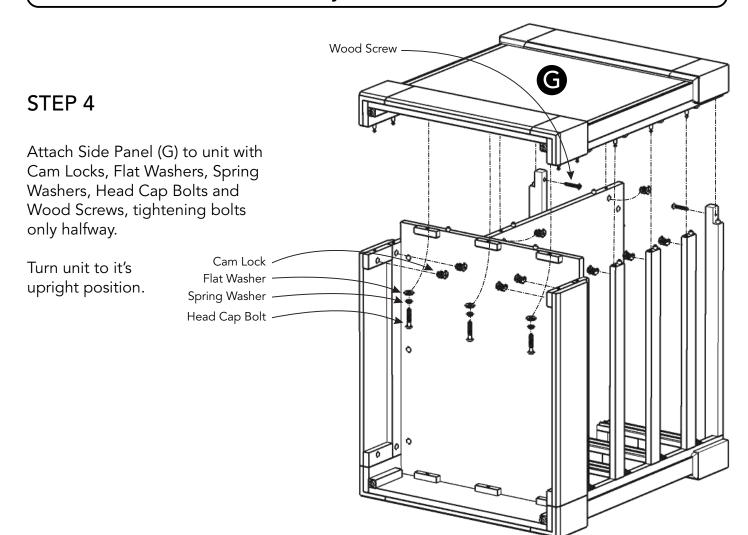

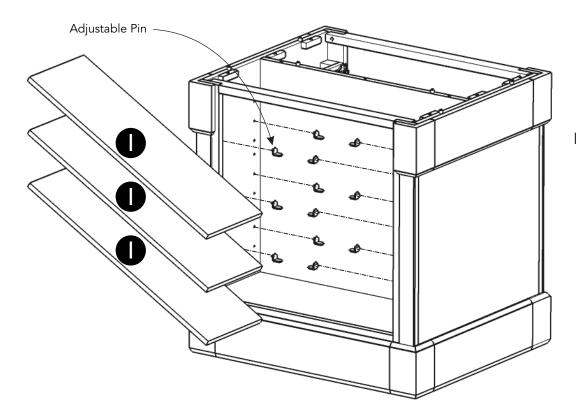


## STEP 5

Insert Adjustable Pins into side panels at desired level.


Place Shelves (I) into position.

# Assembly Instructions 5/8

# Drawer (J)

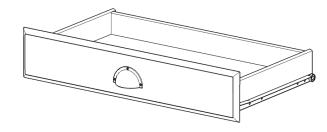

### STEP 6

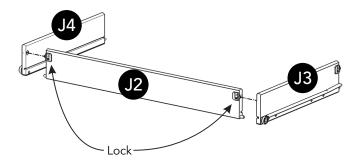

Attach Drawer Sides (J3) and (J4) to Drawer Back (J2), then flip Locks. (See Figures 4 and 5)



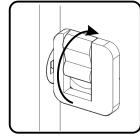



Figure 4


Figure 5

#### STEP 7

Slide Drawer Bottom (J5) into groove.


Attach Drawer Front (J1) to unit, then flip Locks.

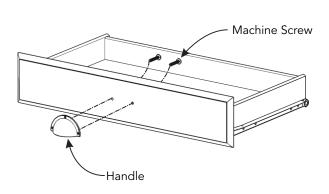

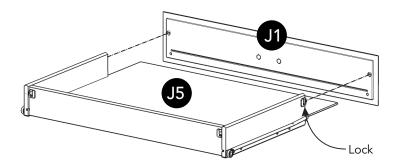


## STEP 8


Attach Handle with Machine Screw.

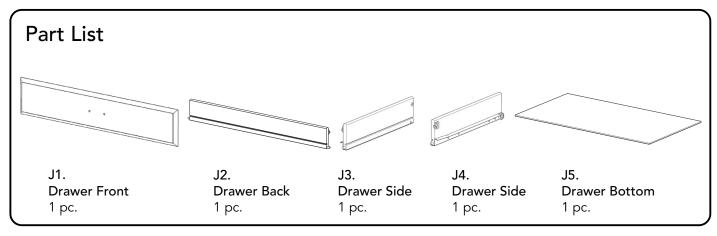

# Assembly Instructions 6/8

# Drawer (K)

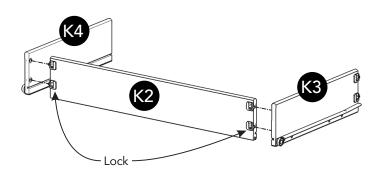

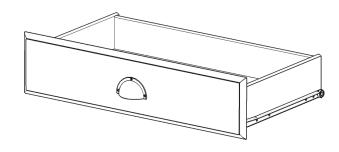


### STEP 9

Attach Drawer Sides (K3) and (K4) to Drawer Back (K2), then flip Locks.

## **STEP 10**

Slide Drawer Bottom (K5) into groove.


Attach Drawer Front (K1) to unit, then flip Locks.

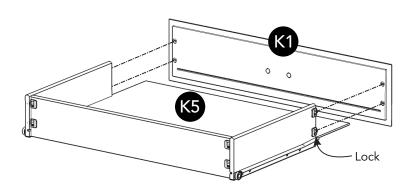


# Machine Screw Handle

### STEP 11

Attach Handle with Machine Screw.

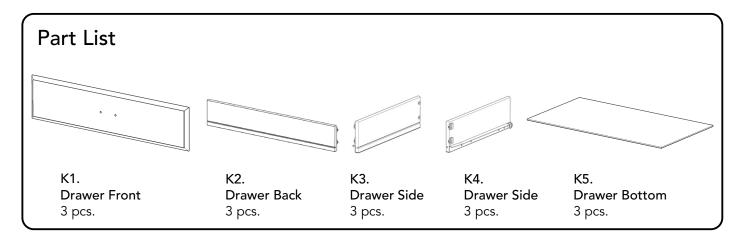

# Assembly Instructions 7/8

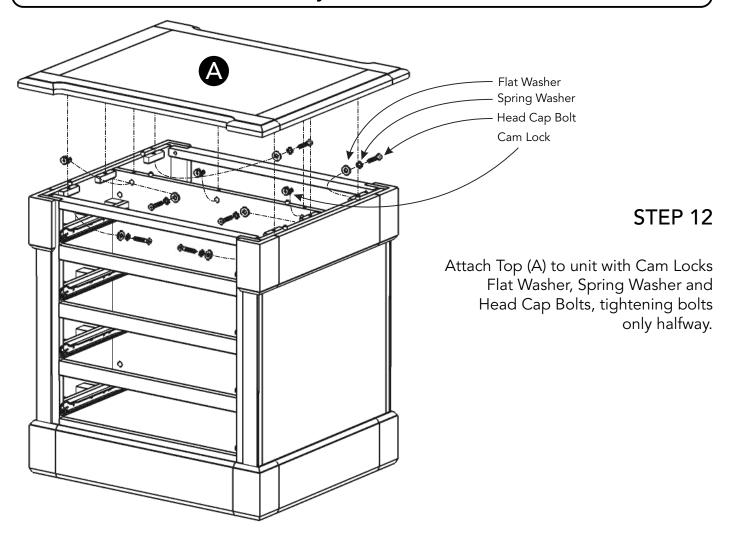

## **STEP 13**


Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 6)

Note: Unit must be level to work properly.

Slide Drawers (J) and (K) into position.



Figure 6

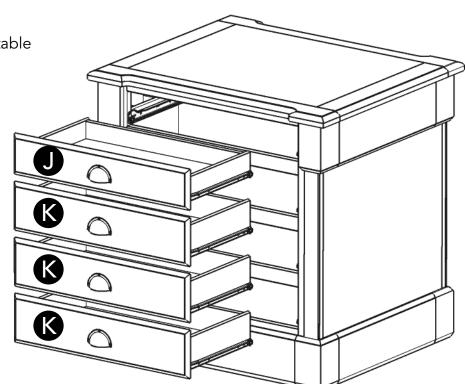

## Assembly Instructions 8/8

Per regulatory requirements, a Tip-over Restraint is included. Follow Step 14 to install it.

#### **STEP 14**

Drill a 3/16" hole 1/2" deep 1" below top of unit in middle of side panel that is against a wall.

Place unit at desired location.

Drill a 3/8" hole in wall in-line with 3/16" hole drilled in side panel.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at drilled hole in side panel of unit with Wood Screw.

Move unit back into place.

Slide Tip-over Restraint through Bracket on wall and Bracket on unit. (See Figure 7)

Put tie end of Tip-over Restraint into lock end of Tip-over Restraint and pull until tight.



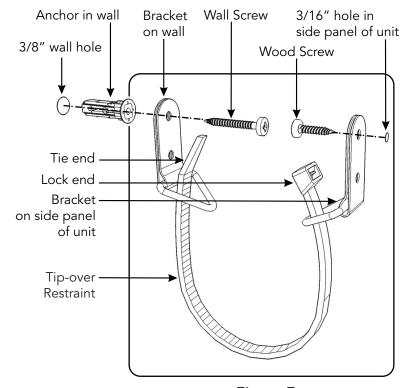


Figure 7

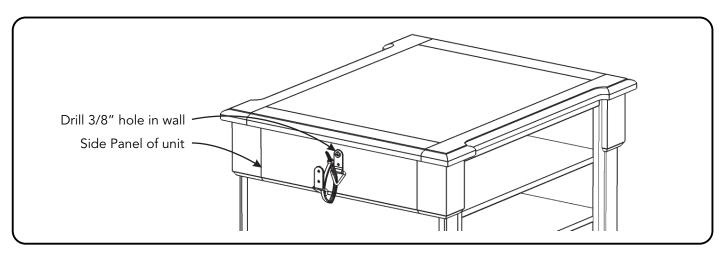

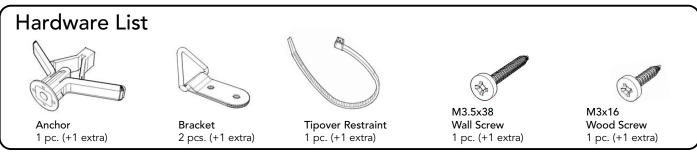

# CARE INSTRUCTIONS

# **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

# **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT

**FADING** 



Do not write directly on surface.

PREVENT

MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE

Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

# **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319