

STEP 4: When the cycle is complete, the milk frother will beep multiple times, and the indicator lights will turn off automatically.

STEP 5: Switch off and unplug the milk frother at the mains power supply. Carefully remove the stainless steel jug from the heating plate and pour out the milk.



NOTE: To interrupt heating/foaming at any time, remove the jug from the heating plate or press the lever.



WARNING: Do not touch the heating plate after the unit has been used as it will be extremely hot.

Frothing functions

The milk frother has three functions which can be used to create:

- 1. Hot foam
- 2. Hot milk/hot chocolate
- 3. Cold foam

Function	Best for	Max. fill mark
Cold foam	Frappé or iced cappuccino	250 ml
Hot foam	Cappuccino or macchiato	250 ml
Hot milk/hot chocolate	Hot chocolate or mocha	350 ml

Storage

Check that the milk frother is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around or inside the milk frother; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6526

Input: 220–240 V ~ 50/60 Hz

Output: 550–650 W




Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

User manual

Milk frother

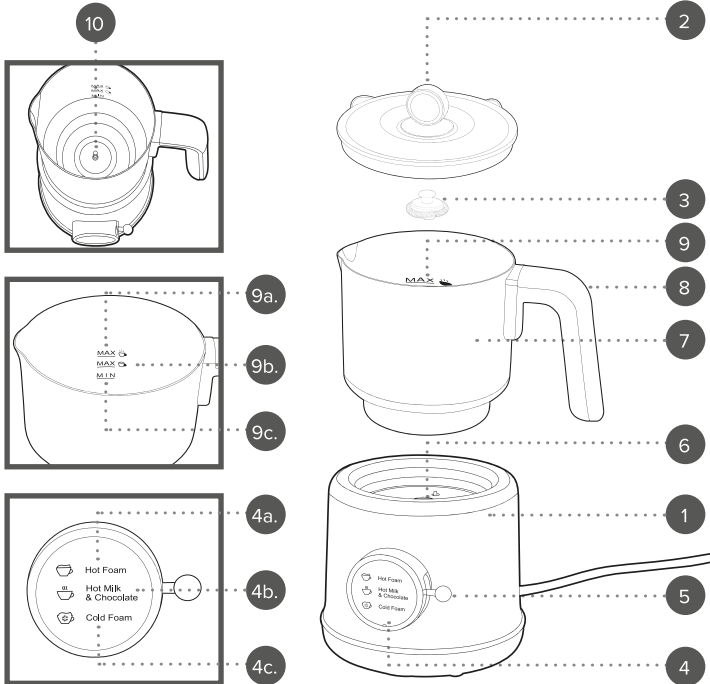

1. Milk frother main unit

2. Lid

3. Frothing whisk

4. Function panel

4a. Hot foam indicator light (☉)

4b. Hot milk/chocolate indicator light (☉)

4c. Cold foam indicator light (☉)

5. Lever

6. Heating plate
7. Stainless steel jug

8. Handle

9. Fill level indicator

9a. Heating milk/chocolate capacity (350 ml)

9b. Hot/cold foam milk capacity (250 ml)

9c. Minimum milk capacity (150 ml)

10. Spindle

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.

- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

Dos and don'ts

DO:

Check that the base of the milk frother is clean before each cycle. Always fill the milk frother above the min. fill mark. Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.

DON'T:

Connect the milk frother to the mains power supply before milk has been added. Allow any liquid to come into contact with the base. Exceed the max. fill mark when filling the milk frother cup. Operate the milk frother whilst empty.

Care and maintenance

Switch off and unplug the milk frother from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

STEP 1: Wipe the milk frother with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the interior of the milk frother with warm, soapy water, then rinse and dry thoroughly.

Do not use harsh or abrasive cleaning detergents or scourers to clean the milk frother, as this could cause damage.



NOTE: The milk frother should be cleaned after each use.



WARNING: The milk frother main unit is not safe for dishwasher use.

Instructions for use

Before first use

Clean the milk frother following the instructions in the sections entitled '**Care and maintenance**'.

Using the milk frother

STEP 1: Place the milk frother base onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

STEP 2: Position the frothing whisk onto the spindle at the bottom of the milk frother, ensuring it is securely fitted.

STEP 3: Fill the milk frother cup with the desired amount of milk. Ensure that the milk is above the min. milk capacity level but below the hot/cold foam milk capacity level.

STEP 4: Attach the lid and place the milk frother main unit onto the heating plate. Plug in and switch on the milk frother main unit at the mains power supply; the milk frother will beep and all presets will illuminate before turning off.

STEP 5: Lift the lever up for hot foam or push the lever down for cold foam. The indicator light will illuminate red for hot milk foam and the cold indicator light will illuminate blue for cold foam.

STEP 6: When the cycle is complete, the milk frother will beep multiple times and the indicator lights will turn off automatically.

STEP 7: Switch off and unplug the milk frother at the mains power supply. Carefully remove the stainless steel jug from the heating plate and pour out the milk.



NOTE: When using the milk frother for several cycles, rinse the inside of the milk frother with cold water between cycles for best results. Allow the milk frother main unit to cool down before using again.

Making hot chocolate

STEP 1: Fill the milk frother cup with the desired amount of milk. Ensure that the milk is above the min. milk capacity level but below the heating milk/chocolate capacity level.

STEP 2: Add a maximum of 45 g of chocolate flakes to the milk, based on 350 ml milk.

STEP 3: Lift up/push down the lever consecutively until the heating milk/hot chocolate icon has been selected.