



WARNING: Clean the washable filter regularly to preserve the suction of the vacuum cleaner.

Mixing wet and dry functions

To preserve the life of the vacuum cleaner and maintain optimum performance, do not mix the wet and dry functions.

Empty the dust container of any debris or dust before attempting to vacuum liquid.

Never tilt the vacuum cleaner backwards as this will allow liquid to enter the waterproof cover.

Emptying the dust container

STEP 1: Hold the vacuum cleaner with the dust container facing downwards. Press the dust container release button and carefully remove the dust container from the vacuum cleaner.

STEP 2: Remove the washable filter.

STEP 3: Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. If necessary, clean the individual parts with a soft, damp cloth and dry thoroughly.

The dust container and filter need to be emptied and cleaned regularly to preserve suction and prolong the life of the vacuum cleaner. For full instructions, see the online instruction manual.

Storage

The vacuum cleaner must be cool, clean, fully charged, and dry before storing in a cool, dry place.

Store the mains power adaptor separately, checking that it is not bent at the connections, as this could cause damage to the wires.

Specifications

Product code: BEL0676

Battery: 7.4 V  2200 mAh Li-ion

Adaptor input: 100–240 ~ 50/60 Hz, 0.3 A

Adaptor output: 9.6 V  0.5 A, 4.8 W

Waterproof level: IPX4

Dust container capacity: 500 ml

Average active efficiency: 80.94%

Efficiency at low load (25%): 81.21%

No-load power consumption: 0.026 W

Go to beldray.com/instruction-manuals.html and search **BEL0676** to access the instruction manual for your product.




Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Quick start guide

Hand vac

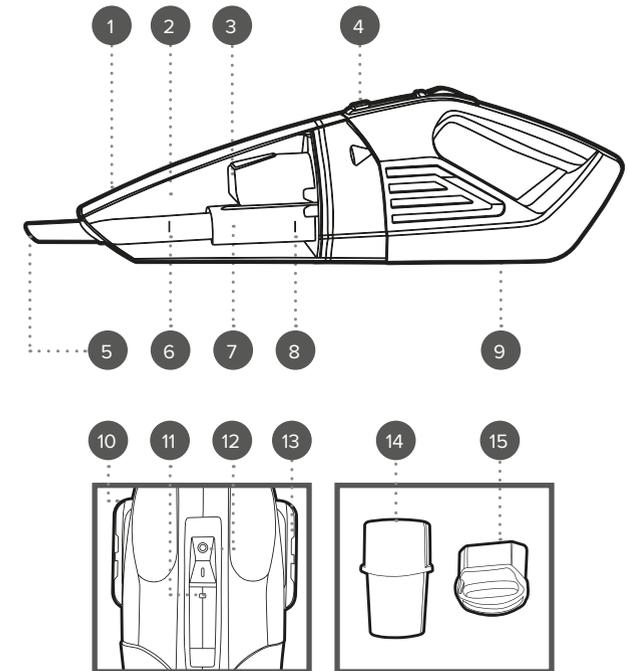

- | | |
|----------------------------------|----------------------------------|
| 1. Vacuum cleaner | 9. Charging port |
| 2. Dust container | 10. Wall-mountable charging base |
| 3. Washable filter | 11. Indicator light |
| 4. Dust container release button | 12. On/off switch |
| 5. Air inlet | 13. Accessory holder |
| 6. Liquid max. fill mark | 14. Crevice tool |
| 7. Waterproof cover | 15. Squeegee nozzle |
| 8. Dry max. fill mark | |



To register for your extended guarantee, scan the QR code or visit guarantee.upplc.com/beldray and register your product within 30 days of purchase. For any further queries, visit www.beldray.com.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. ROI.

MADE IN CHINA.
©Beldray trademark. All rights reserved.
CD300117/MD1410424/V6

beldray[®]
Est.1872

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
- Do not use the appliance for anything other than its intended use.
- Do not use this appliance if any of the openings are blocked.
- Take care when equipping accessories with rotating parts, as this could cause entrapment.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.

BATTERY SAFETY

- In the event of the battery pack leaking, do not allow any liquid to come into contact with the skin or eyes.
- If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Keep the battery pack out of the reach of children.
- Secondary battery packs need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.
- Do not leave battery packs on charge for prolonged periods of time.
- Do not use any charger other than that specifically provided for use with the product.
- The supply terminals are not to be short-circuited.
- Do not store above 60 °C. Avoid storing in direct sunlight.

- Do not use any battery packs that are not designed for use with the product.
- Do not dispose of the battery pack in a fire.
- Do not crush, puncture, dismantle or otherwise damage the battery pack.
- Do not dismantle, open or shred battery packs.
- Do not expose the battery pack to heat or fire as it may explode.
- Do not subject the battery pack to mechanical shock.
- Do not dispose of the exhausted battery pack in household waste.
- To dispose of the exhausted battery pack, take it to a local recycling station. Contact the local government offices for further details.
- This appliance is fitted with a non-removable 7.4 V 2200 mAh Li-ion (rechargeable) battery pack.

Dos and don'ts

DO:

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
Keep the appliance out of the reach of children.
Keep the appliance away from heat or sharp edges that could cause damage.
Switch off the appliance before changing or fitting attachments.
Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.
Check that the washable filter is kept clear of obstruction.
Make sure the dust container and washable filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.
Empty any liquid immediately after picking up liquid spills.
Clean the dust container and washable filter at least once every three weeks.

DON'T:

Use attachments if they are loose, damaged or broken.
Immerse the extension tube in water.
Use the appliance without the filter and filter cone in position.
Use the power supply cord to recharge non-rechargeable batteries or any other appliance.
Use the vacuum cleaner without the washable filter or dust container in position.
Use the vacuum cleaner to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
Empty the dust container indoors.
Use any other power adaptor than the one provided.

Care and maintenance

Always unplug the vacuum cleaner from mains power supply before attempting any cleaning or maintenance.
Do not immerse the vacuum cleaner in water or any other liquid.
Keep the washable filter clean after every removal of the dust container.

Instructions for use Installing the wall-mountable charging base

The wall-mountable charging base can be placed onto a flat, stable surface or fixed to a wall. It should be located close enough to a mains power supply to allow it to be plugged in without overstretching the cable.

See the online instruction manual for full installation instructions.

Charging the vacuum cleaner

Before using the vacuum cleaner, it must be charged for approx. 5–6 hours. Subsequent charging times will vary dependent upon use. If the vacuum cleaner battery runs down completely during use, it may take up to 4 hours to fully recharge again.

STEP 1: Secure the vacuum cleaner into position on the wall-mountable charging base.

STEP 2: Plug in and switch on the mains power adaptor at the mains power supply; the indicator light will flash red to confirm that the vacuum cleaner is correctly docked and charging.

STEP 3: Once the battery is fully charged, the indicator light will stop flashing and will illuminate red.



NOTE: Turn off the vacuum cleaner before charging. Whilst charging, the vacuum cleaner may begin to heat up and become warm; always switch off and unplug from the mains power supply when charging is complete.



WARNING: Never recharge the vacuum cleaner whilst liquid is present inside the dust container. Always empty and dry the dust container after vacuuming liquid spills.

Using the vacuum cleaner

The vacuum cleaner comes with a crevice tool, ideal for reaching into awkward corners and recesses in fabrics. It also includes a squeegee nozzle, suitable for clearing up wet spillages.

STEP 1: To use the vacuum cleaner, disconnect it from the wall-mountable charging base.

STEP 2: Fit the selected attachment (crevice tool or squeegee nozzle) by firmly inserting it into the air inlet.

STEP 3: Turn on the vacuum cleaner by sliding the on/off switch forward to the on position.



NOTE: Both wet spillages and dry debris can be vacuumed, but the two can never be mixed. Always empty liquid spillages before vacuuming dry debris and vice versa. Never tilt the vacuum cleaner backwards when liquid is inside.



CAUTION: Do not overfill the vacuum cleaner; empty it before the contents reach the liquid max. fill mark (≈) or the dry max. fill mark (—).

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the appliance away from other heat emitting appliances.
- Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not expose the appliance to rain.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance if it has been dropped or if there are visible signs of damage.
- Do not use the appliance for anything other than its intended use.
- Do not use any parts/accessories other than the parts supplied with this appliance, as this may cause damage.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not use this appliance if any of the openings are blocked.
- Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
- Do not use this appliance to pick up hard, sharp objects, such as glass or nails etc.
- Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.
- Take care when equipping accessories with rotating parts, as this could cause entrapment.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.

**UK
CA CE**

EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD151124/MD000000/V1