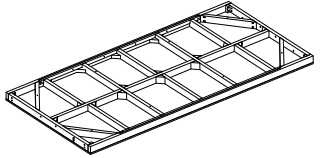
 
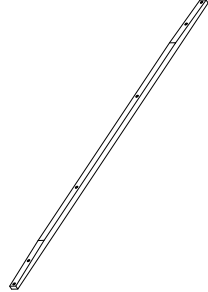
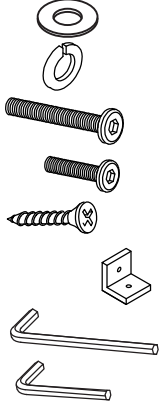



ITEM NAME / NOM D'ITEM: KATA DINING TABLE

ITEM # / NO. ITEM: 704100


PARTS LIST / LISTE DES PIÈCES

(1)	(2)	(3)	(4)
			A. Ø8x2mm x16 x16 B. Ø8x2mm x16 x16 C. M8x65mm x16 x16 D. M6x40mm x16 x12 E. M4x30mm x8 x8 F. 30x30x40mm x4 x4 G. M4x75mm x1 x1 H. M4x60mm x1 x1 
x1	x2	x2	

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

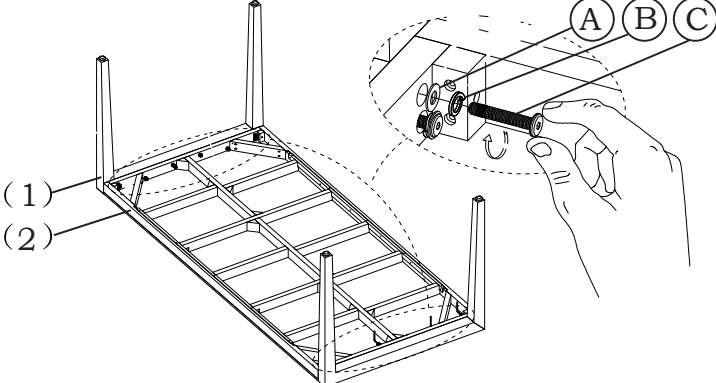


I

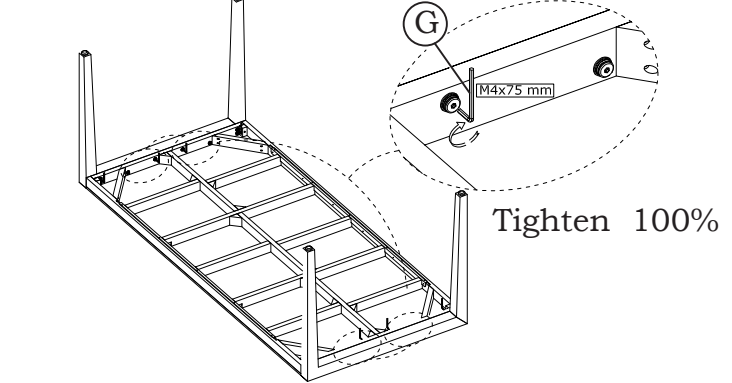


II

Tighten 100%

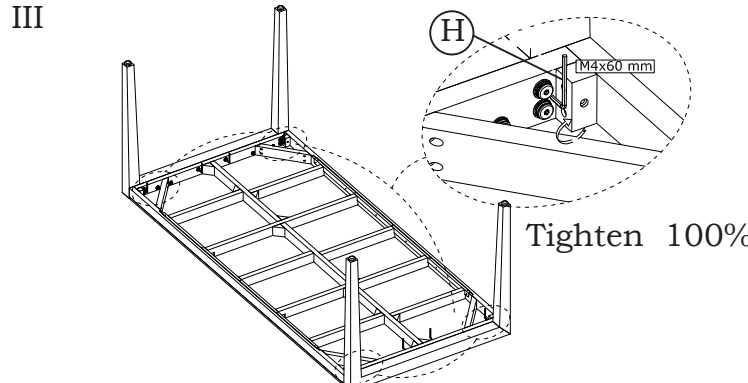


III


Tighten 100%

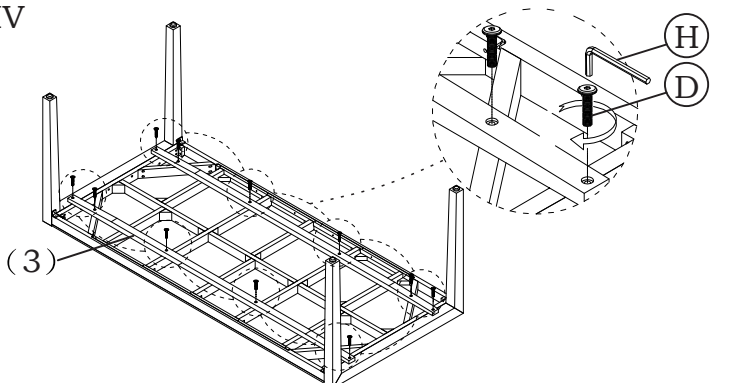

IV

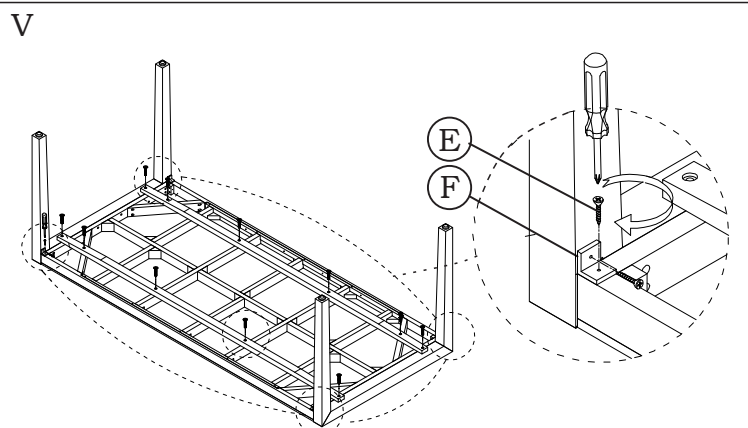

V

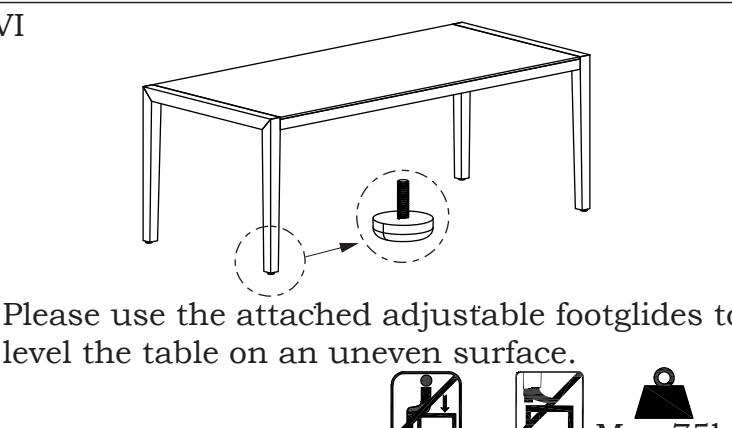

VI

Please use the attached adjustable footglides to level the table on an uneven surface.



For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico : (866)798-6663
AI-V1-L005-241230