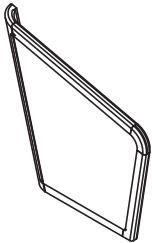 
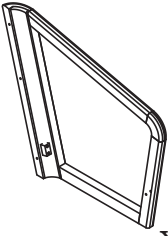 
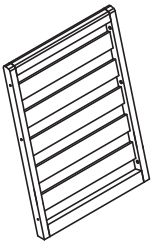 
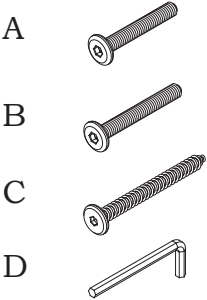 
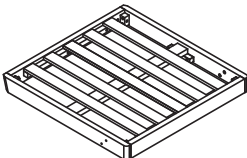 
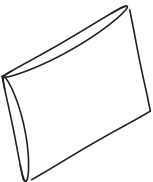 
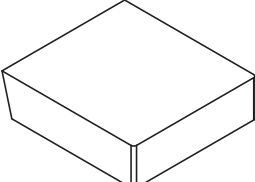 


ITEM NAME/NOM D'ITEM: SAKINA LOUNGE CHAIR
ITEM#/NO. ITEM: 704244


PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(7)
 x1	 x1	 x1	 A M6x40 x4 B M6x45 x6 C M6x60 x2 D x2
(4)	(5)	(6)	
 x1	 x1	 x1	


ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

 
I

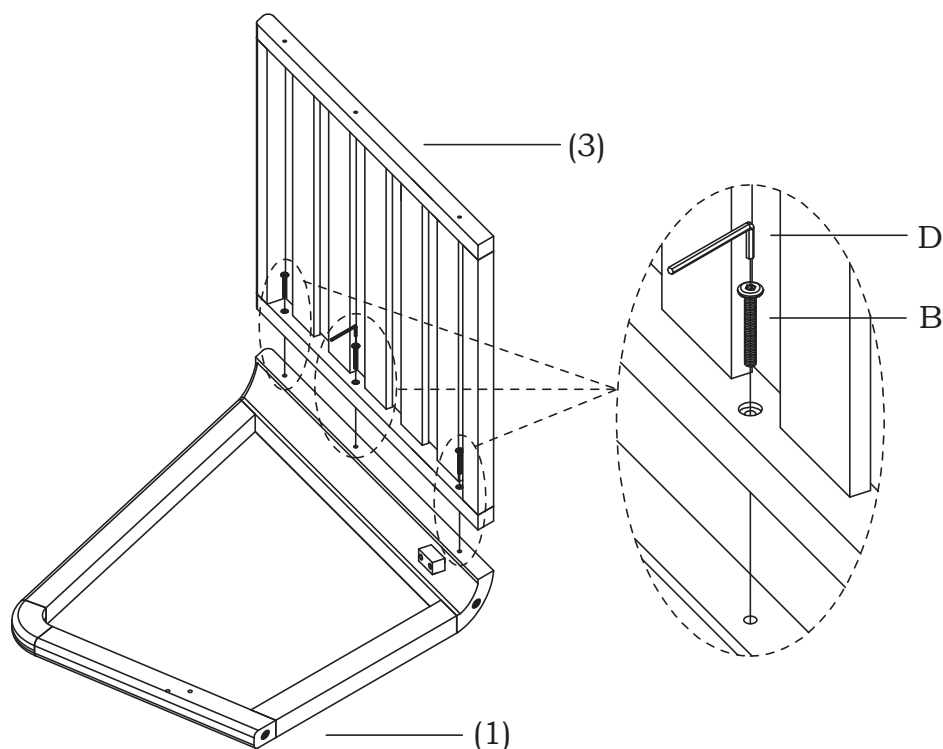


II

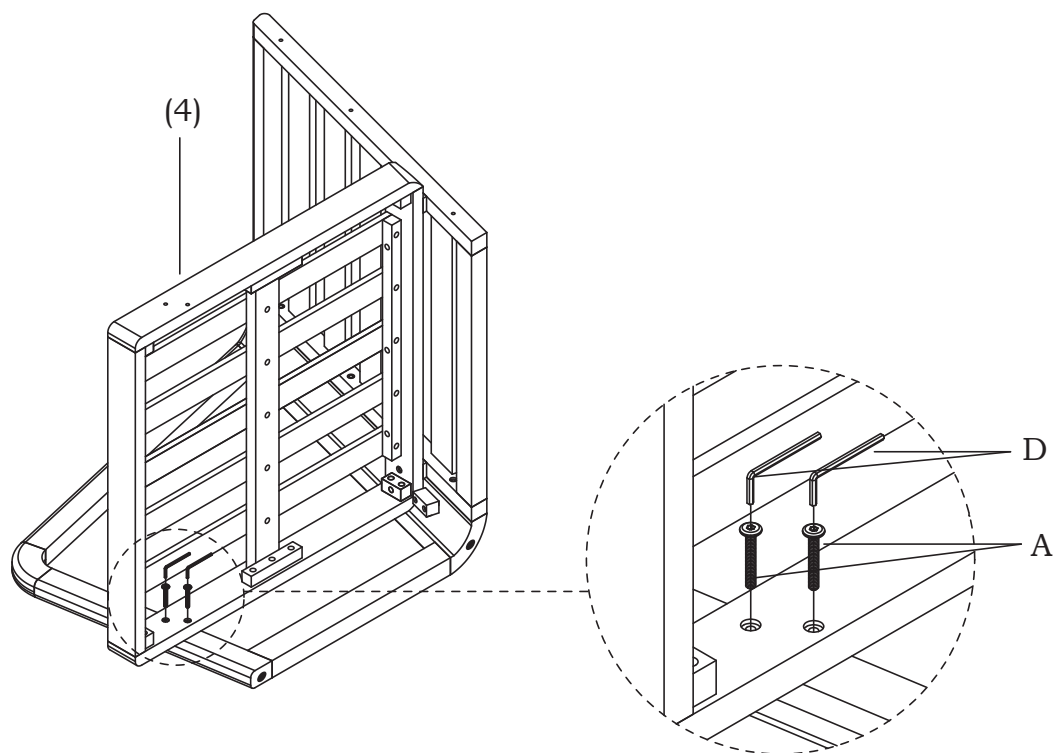 


III

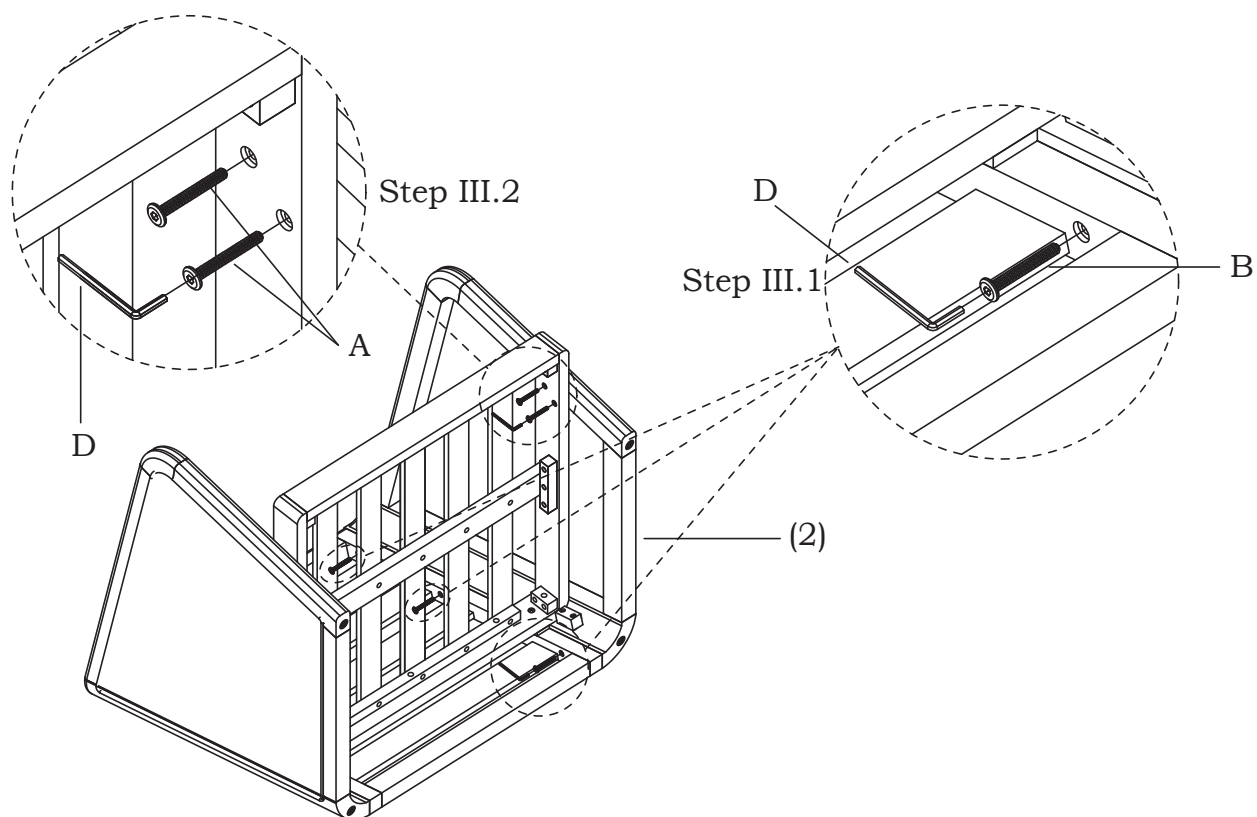 


IV

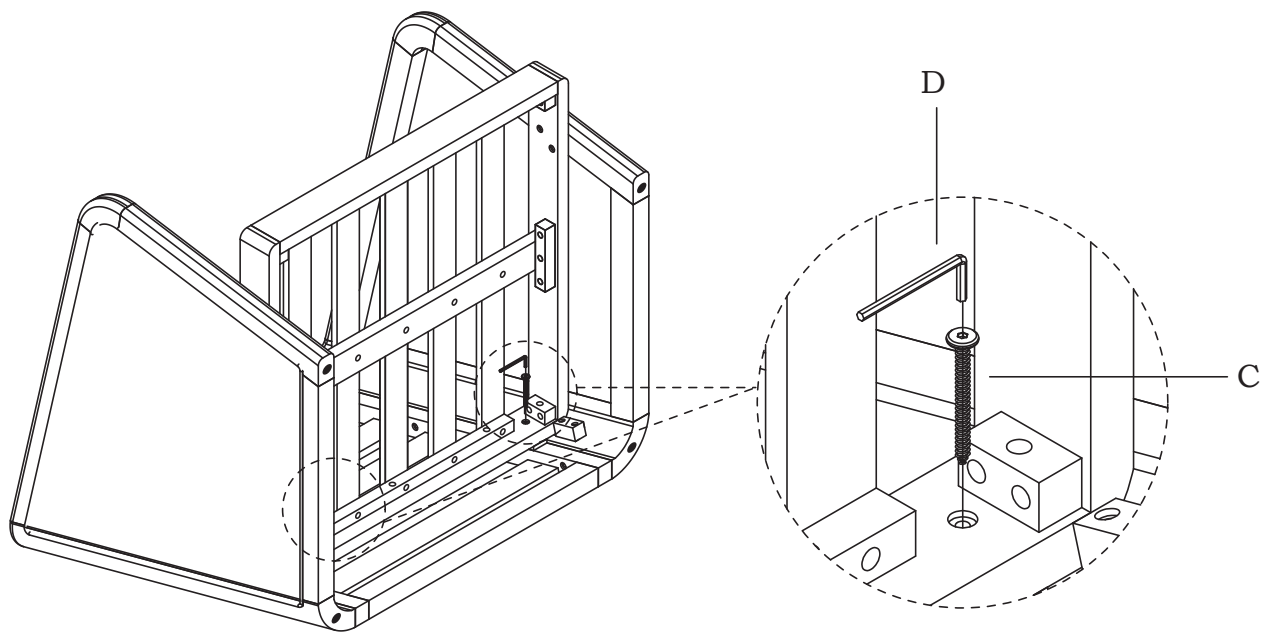 

V

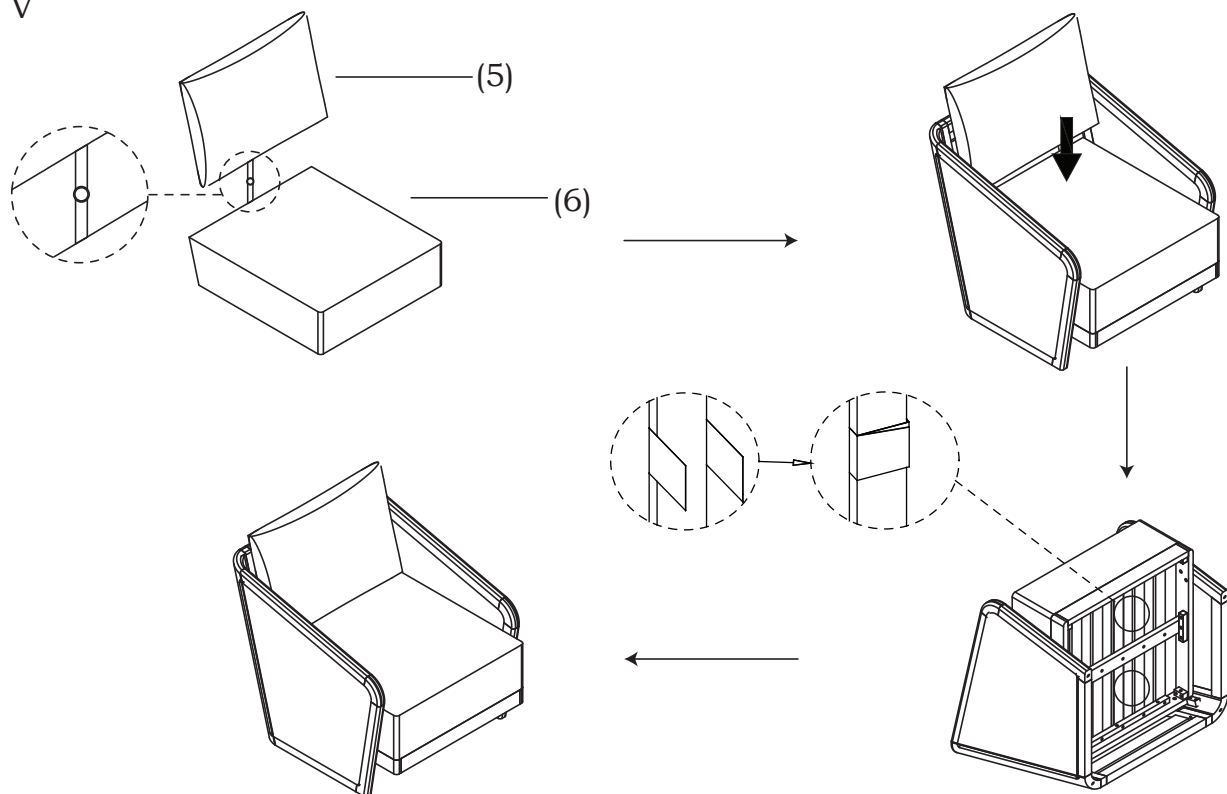 

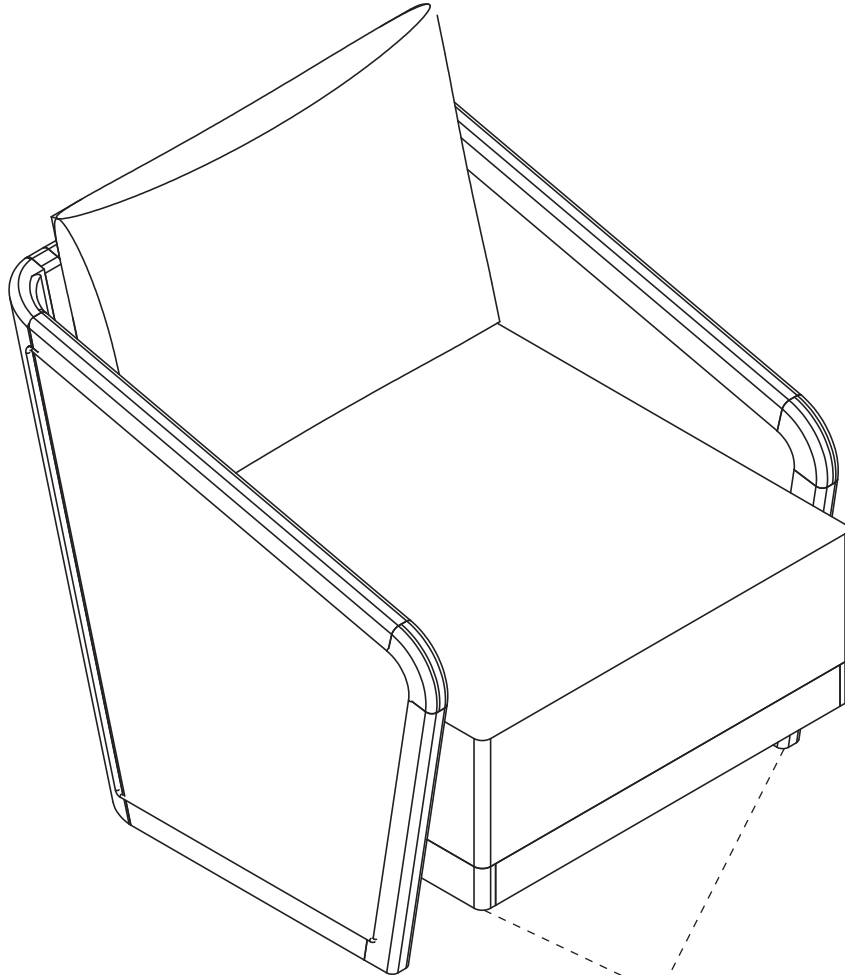 

Assembled

Please use the attached adjustable footglides
to level the chair on an uneven surface.

For missing part or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico:(866)798-6663
AI-V1-F008-260616