



TRIUMPH SPORTS ADVENTURE OVER THE DOOR BASKETBALL

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-800-467-1421

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com



Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: 45-6048W/F

Date Code: 2 - 45-6048W/F- - JL

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

***Most injuries are caused by misuse and/or not following instructions.
Use caution when assembling and using this system.***

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least one capable adults are required to assemble this product.

WARNING

**KEEP ASSEMBLY TOOLS
AWAY FROM CHILDREN**

**ASSEMBLY KIT CONTAINS
PARTS WITH SHARP EDGES**

**ASSEMBLY KIT CONTAINS
PARTS WITH SHARP POINTS**

CAUTION

**DO NOT HANG ON THE RIM IN ORDER TO AVOID
DAMAGE TO PRODUCT OR PERSONAL INJURY.**

WARNING

ADULT ASSEMBLY REQUIRED.
Assembly kit contains small parts
that present choking hazards to children.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Phillips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult.

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking, weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



Tools Required:

 
Allen Wrench with Phillips Driver (Included)
Phillips Screwdriver (Not Included)
3 pcs AAA Batteries optional (Not Included)

ASSEMBLY TIPS

Make sure you understand the following tips before you begin to assemble your basketball game.

1. Start all bolts by hand before tightening.
2. An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.
3. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
4. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
5. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.

HARDWARE IDENTIFIER (To Scale)



**H1 - M6 x 20mm
Allen Head Bolt
(4 pcs)**



**H2 - M3X10mm Phillips
Round Head Screw
(4 pcs)**




**H3 - F3X12mm Phillips
Flat Head Screw
(1 pc)**



**H4 - 3mm x 12mm Phillips
Round Head Screw
(4 pcs)**




**H5 - M6 Flat Washer
(1 pc)**

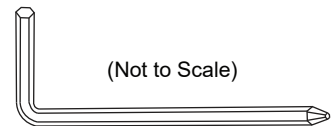


**T1 - Allen Wrench with
Phillips Driver
(1 pc)**


PARTS IDENTIFIER (Not to Scale)

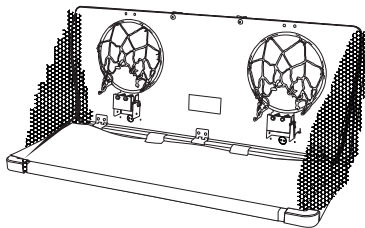

**P1 - Main Frame
(1 pc)**

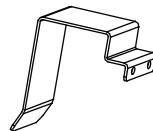


**P2 - Steel Hook Bracket
(over the door)
(2 pcs)**

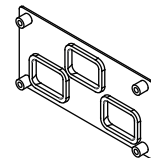


**P3 - Electronic Scorer
Face Plate
(1 pc)**

 Required 3 pcs AAA Batteries
(Not Included)



**P4 -Electronic Scorer
(1 pc)**

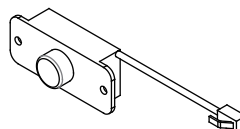

**P5 - Electronic
Scoring Sensor
(2 pcs)**



 
**P6 - Strap Hook
(1 pc)**



P7 - EVA Pad - A
2" × 1-2/4" × 2mm
(4 pcs)




P8 - EVA Pad - B
3" × 4/5" × 1"
(4 pcs)




P9 - EVA Pad - C
5-9/10" × 4/5" × 1"
(2 pcs)

ACCESSORIES IDENTIFIER (Not to Scale)

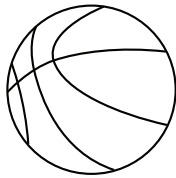

A1- 5" Basketball
(2 pcs)

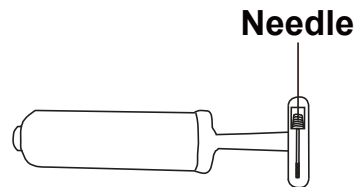

A2 - Air Pump
(1 pc)

PARTS REQUIRED

1pc - **P1** Main Frame
2pcs - **P2** Steel Hook Bracket
1pc - **P3** Electronic Scorer Face Plate
1pc - **P4** Electronic Scorer
4pcs - **P7** EVA Pad - A

4pcs - **H1** 20mm Allen Head Bolt
4pcs - **H2** 10mm Phillips Round Head Screw

STEP 1


Place the **P7** EVA Pad - A to each **P2** Steel Hook first as shown in **FIGURE 1**.

Attach the **P2** Steel Hook Brackets onto **P1** Main Frame using **H1** 20mm Allen Head Bolts as shown in **FIGURE 2**.

Tighten all the H1 bolts using T1 Allen Wrench.

Attach the **P3** Electronic Scorer Face Plate (front of backboard) to **P4** Electronic Scorer (back of backboard) together and install them to backboard using **H2** 10mm Phillips Round Head Screw as shown in **FIGURE 2**.

Do not over tighten or strip out the H2 screws.

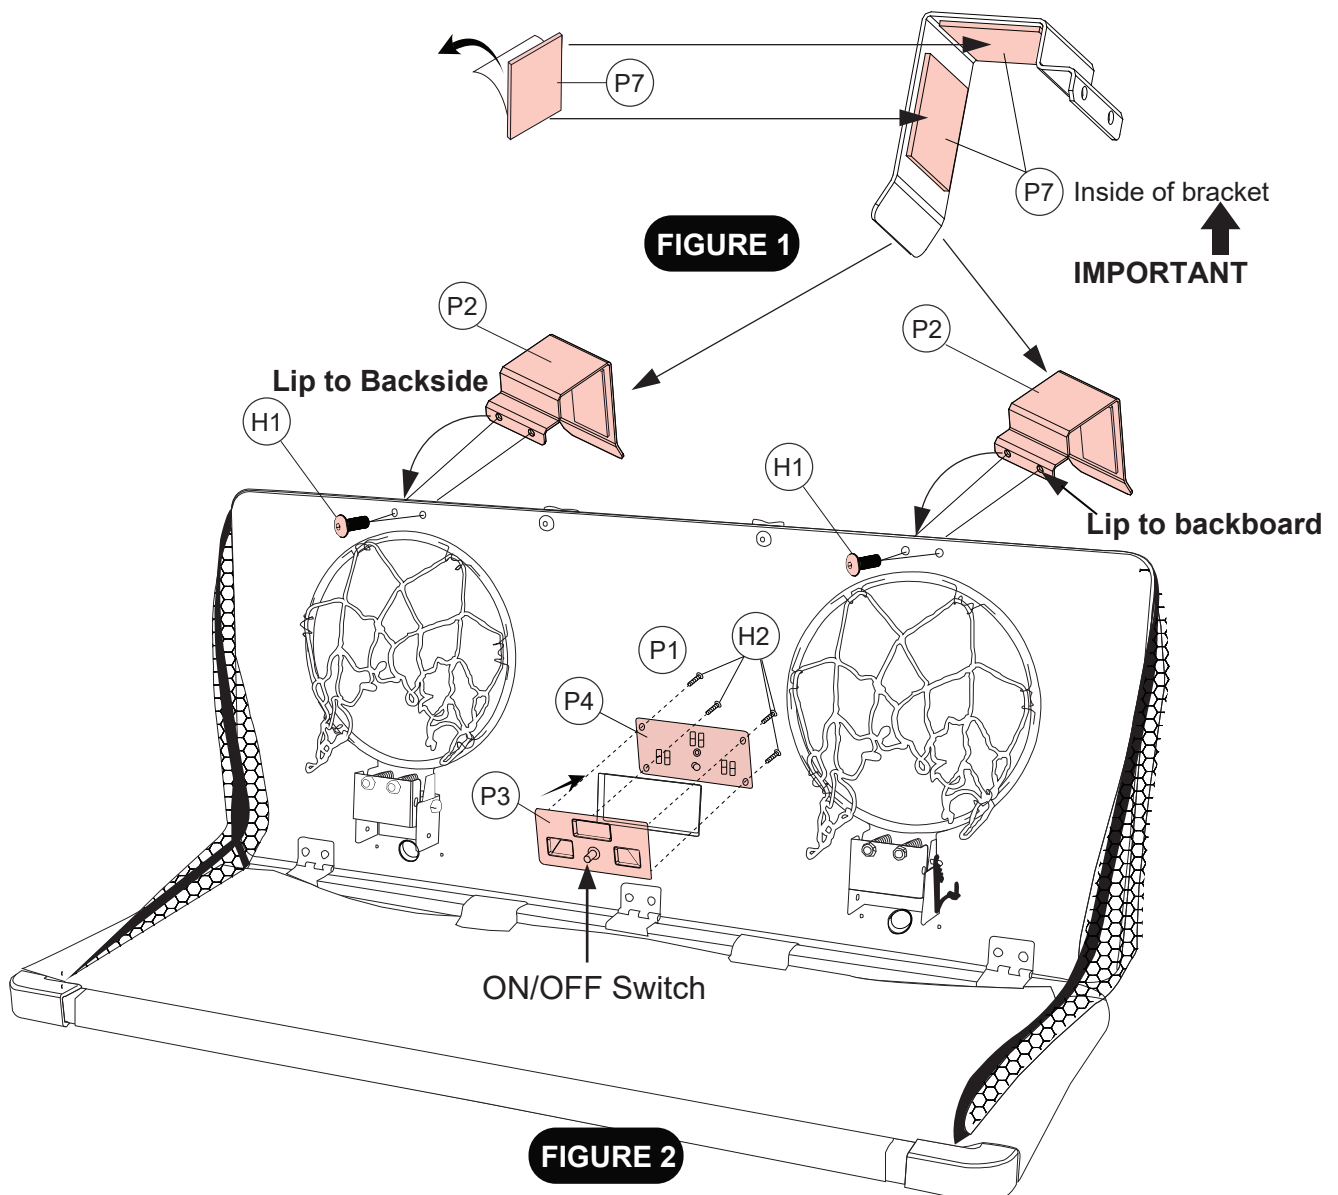

PARTS REQUIRED

2pcs - **P5** Electronic Scoring sensor
 1pc - **P6** Strap Hook
 4pcs - **P8** EVA Pad-B
 2pcs - **P9** EVA Pad-C

1pc - **H3** Phillips Flat Head Screw
 4pcs - **H4** Phillips Round Head Screw
 1pc - **H5** Flat Washer

STEP 2

Place the **P8** EVA Pad-B & **P9** EVA Pad-C to the back of **P1** Main Frame first as shown in **FIGURE 3**.

Attach the **P6** Strap Hook onto main frame backboard using **H3** Phillips Flat Head Screw and **H5** Flat Washer as shown in **FIGURE 3**.

Install the **P5** Electronic Scoring Sensors onto main frame backboard using **H4** Phillips Round Head Screw as shown in **FIGURE 3 & DETAIL A**. **Do not over tighten or strip out the H4 screws.**

Connect the wires of the scoring sensors and LED lights into the **P4** Electronic Scorer as shown in **FIGURE 3 & DETAIL B**.

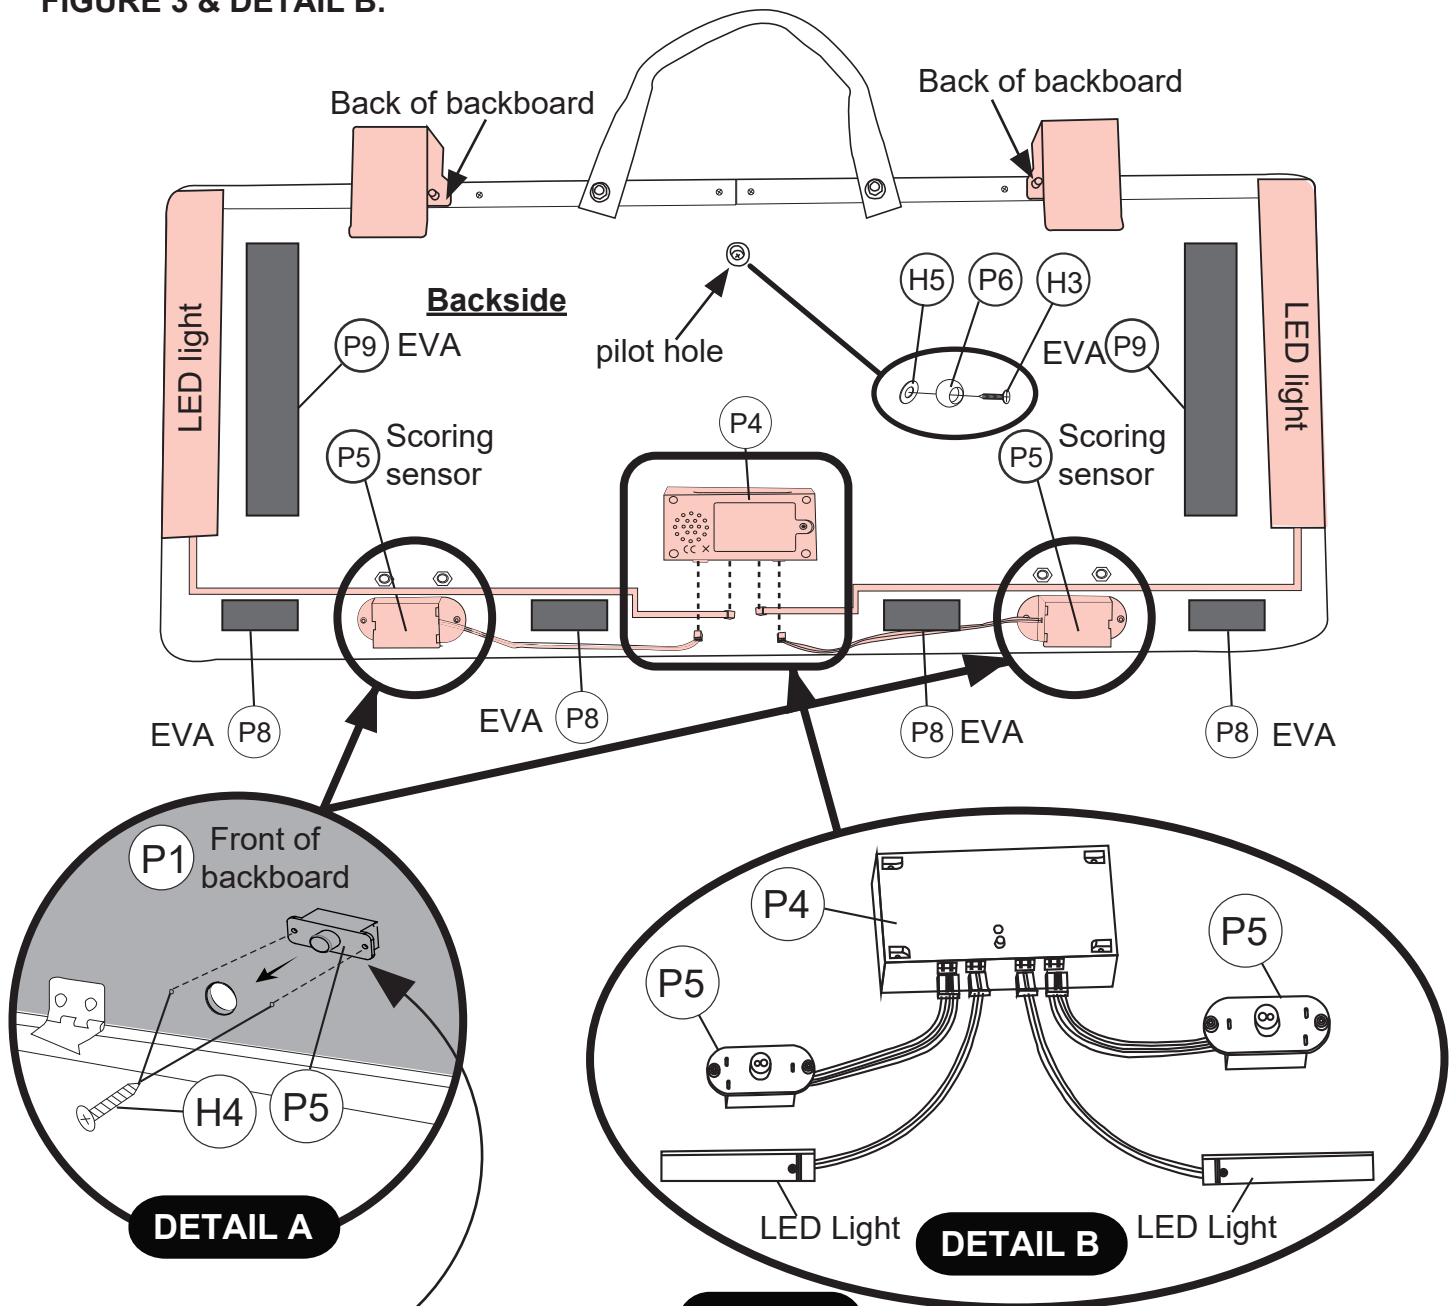


FIGURE 3

Electronic scoring sensor is plugged into place from the backside of backboard

STEP 3

Open the battery box cover using the **T1** Allen Wrench with phillips end and install 3pcs AAA batteries as shown in **FIGURE 4 & DETAIL C**.

Secure the wires of the LED Strips and Sensor wires using the hook and loop straps.

See” **FIRST TIME BATTERY INSTALLATION AND NOTICE** “ , before installing batteries, located on **page 3**.


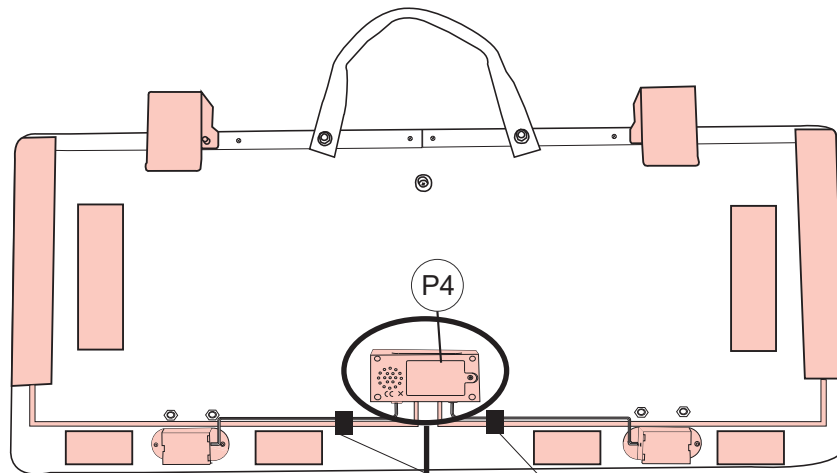


FIGURE 4

Hook and Loop straps

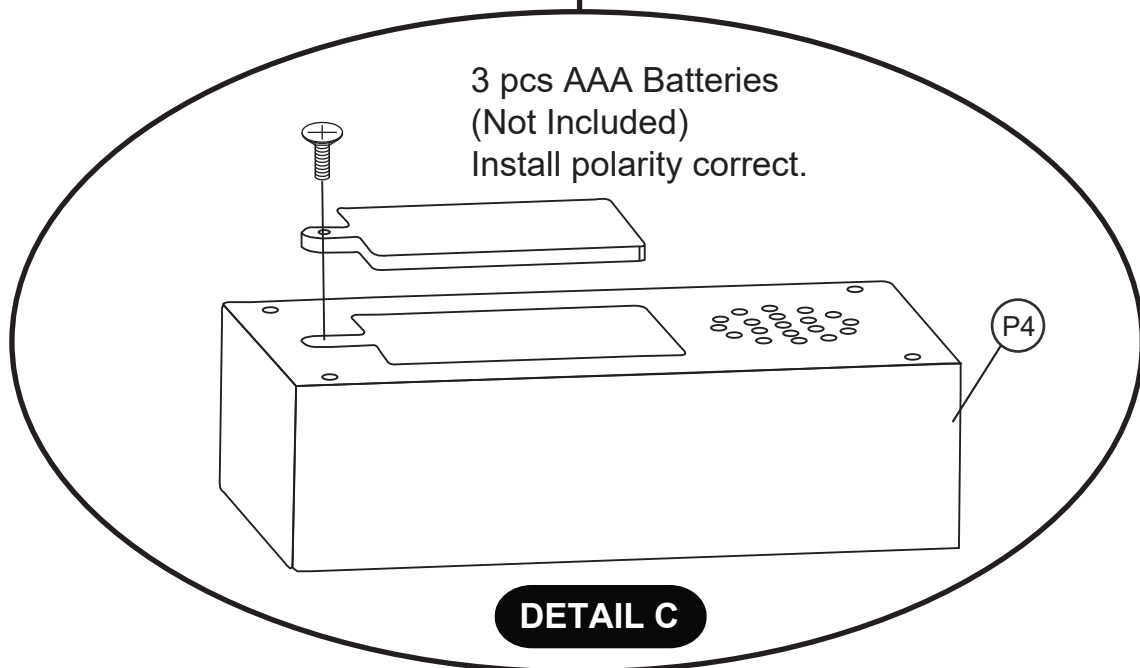


DETAIL C

FOLD UP STORAGE

STEP 1

Pull out the lock pin of both Rims and fold up as shown in **FIGURE 1 & DETAIL A & B.**

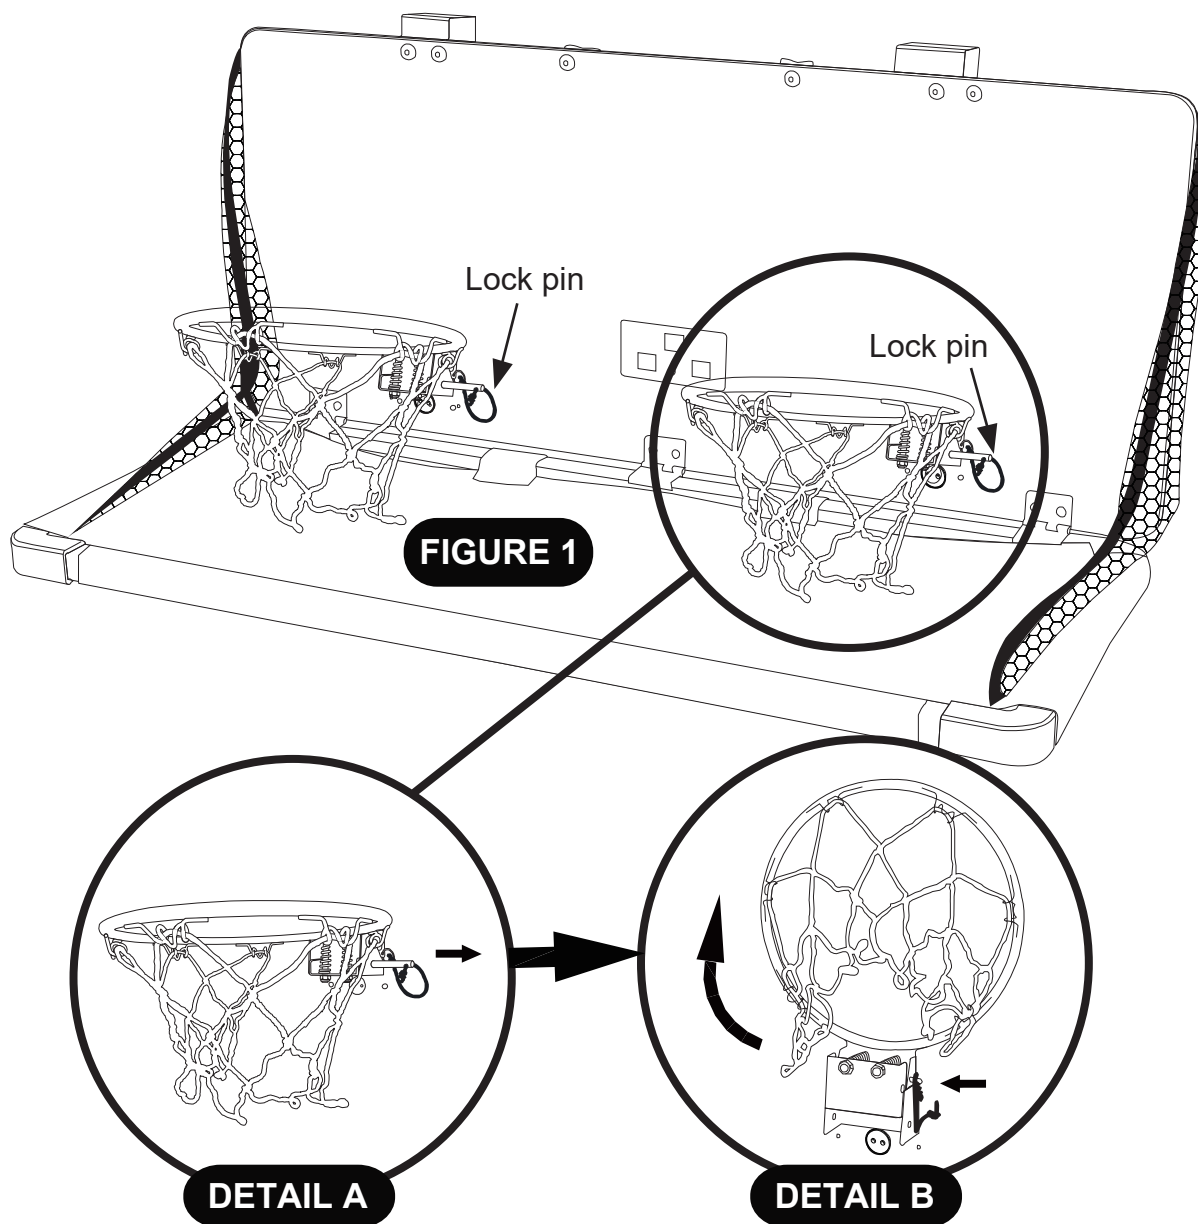

STEP 2

Stretch the elastic strap behind the backboard and buckle it onto the **P6** Strap Hook as shown in **FIGURE 2 & DETAIL C**.

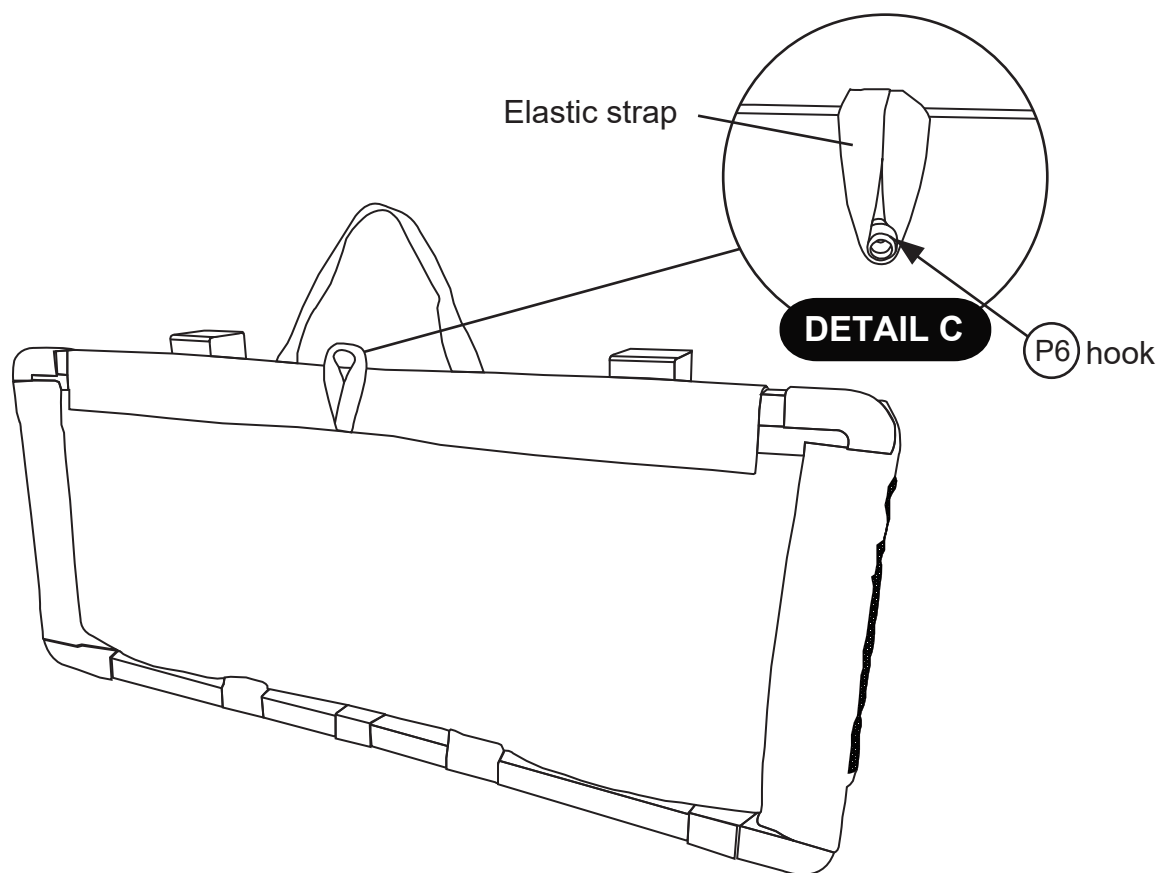


FIGURE 2

How to play

Press red button on electronic scorer to start game.

One game is 1 minute.

Press the red button to start the next game.

Long press the red button to end the game.

Congratulations! You have now assembled your basketball game. Please note the Care and Use instructions below to insure many years of trouble-free use of your Basketball Game.

CARE AND USE FOR YOUR PRODUCT

1. Product can be used in the dry **OUTDOORS**, but must be stored **INDOORS**.
2. **DO NOT** place backside of this product against wall as during play, the backside of product could become damaged or your wall could become damaged.
3. **DO NOT** sit, climb or lean on the basketball shootout.
4. To prevent damage to the electronics or to your wall, do not place this unit any closer than six inches from the wall.

PRODUCT PARTS LIST FOR MODEL # 45-6048W/F

Key #	Part #	Description	Qty.
H1	45-6048JLH1	M6 x 20mm Allen Head Bolt	4
H2	45-6048JLH2	M3X10mm Phillips Round Head Screw	4
H3	45-6048JLH3	F3X12mm Phillips Flat Head Screw	1
H4	45-6048JLH4	3mm x 12mm Phillips Round Head Screw	4
H5	45-6048JLH5	M6 Flat Washer	1
T1	45-6048JLT1	Allen Wrench	1
P1	45-6048JLP1	Main Frame	1
P2	45-6048JLP2	Steel Hook Bracket	2
P3	45-6048JLP3	Electronic Scorer Face Plate	1
P4	45-6048JLP4	Electronic Scorer	1
P5	45-6048JLP5	Electronic Scoring Sensor	2
P6	45-6048JLP6	Strap Hook	1
P7	45-6048JLP7	EVA Pad - A	4
P8	45-6048JLP8	EVA Pad - B	4
P9	45-6048JLP9	EVA Pad - C	2
A1	45-6048JLA1	Basketball	2
A2	45-6048JLA2	Air Pump with Needle	1
K1	45-6048JLK1	Hardware Kit	1
M1	45-6048JLM1	Owner's Manual	1

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.