 
 
 
 
 
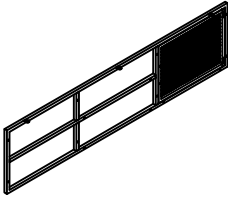 
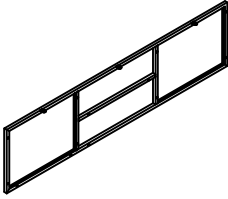 
 
 


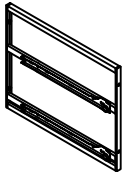 


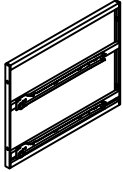





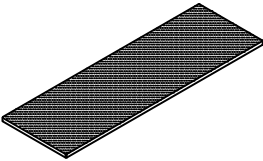

 



 

 
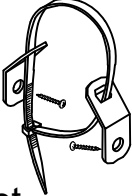 
 
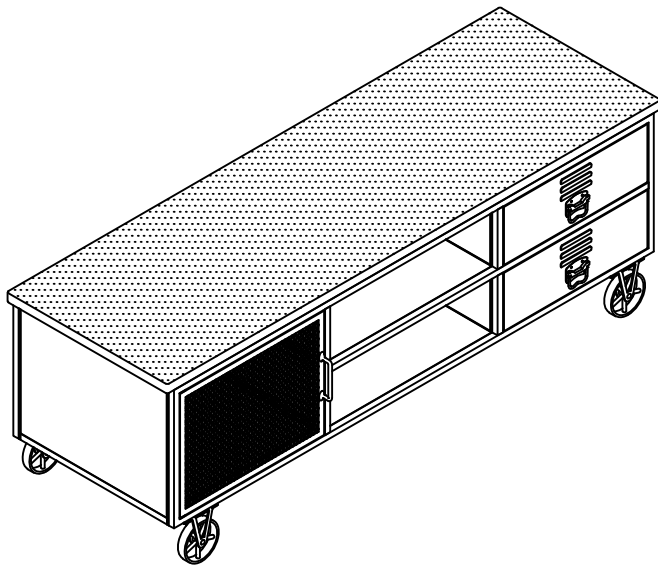 


ASSEMBLY INSTRUCTION

E934-T TV STAND


A Front Frame  1pc	B Back Frame  1pc	C Left Panel  1pc	D Left Middle Panel  1pc
E Right Middle Panel  1pc	F Right Panel  1pc	G Shelf Panel  2pcs	H Bottom Panel  1pc
I Top Panel  1pc	J Wheel Branch  4pcs	K Wheel  4pcs	L Handle  1pc
M Drawers Front  2pcs	N Drawers Back  2pcs	O Drawers Bottom  2pcs	P Drawers Side - Left  2pcs
Q Drawers Side - Right  2pcs	R Bolt Ø1/4"x5/8"  16pcs	S Bolt Ø1/4"x1/2"  6pcs	T Bolt Ø1/4"x5/8"  12pcs
U Bolt Ø3/16"x8mm  24pcs	V Bolt Ø3/16"x10mm  8pcs	W Bolt Ø3/16"x25mm  2pcs	X Flat Washer Ø16mm  18pcs

Y Flat Washer Ø12mm	Z Allen Key M4	AA Bolt M6x28mm	AB Nut Ø11.5x8mm
			
26pcs	1pc	8pcs	8pcs
AC Nut Ø1/4"x22mm	AD Anti-Tipping Kit	AE Screwdriver (Not Provided)	
			
4pcs	1set	1pc	




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 - 1** Attach Front Frame (A) and Back Frame (B) to Left Panel (C), Left Middle Panel (D), Right Middle Panel (E) and Right Panel (F) using Bolt (R) by Allen Key (Z).

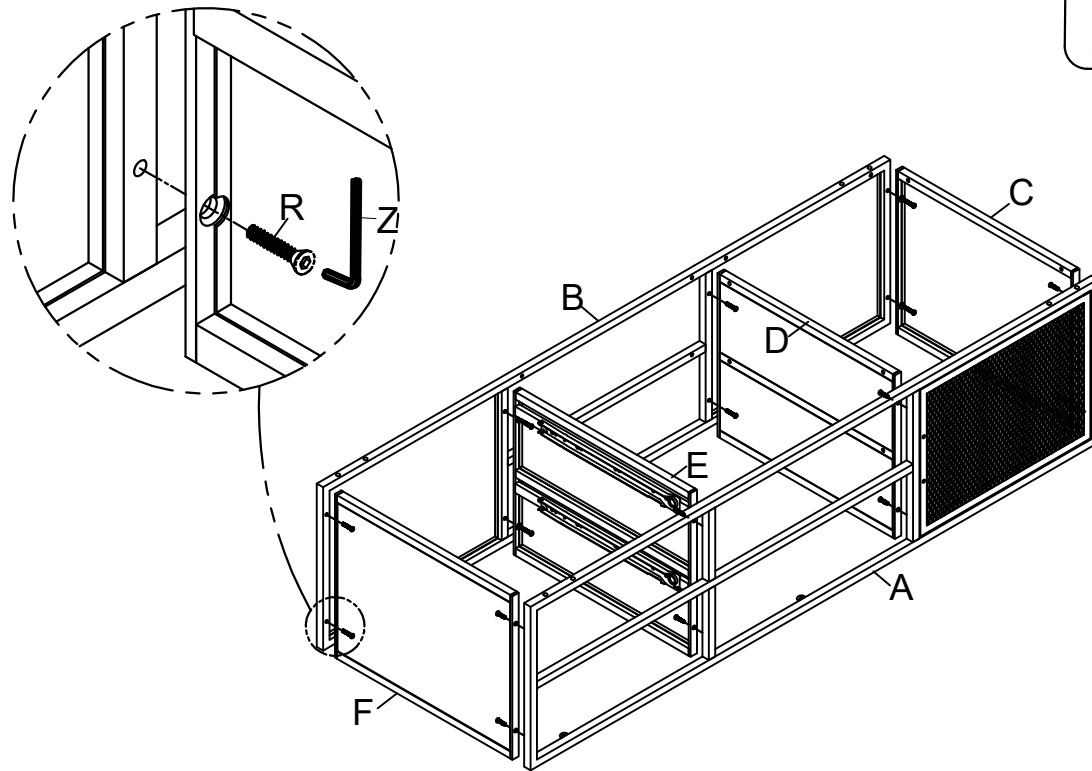


R 16PCS
Z

 - 2** Attach Front Frame (A) and Back Frame (B) to Top Panel (I) using Bolt (S), Flat Washer (X) by Allen Key (Z).

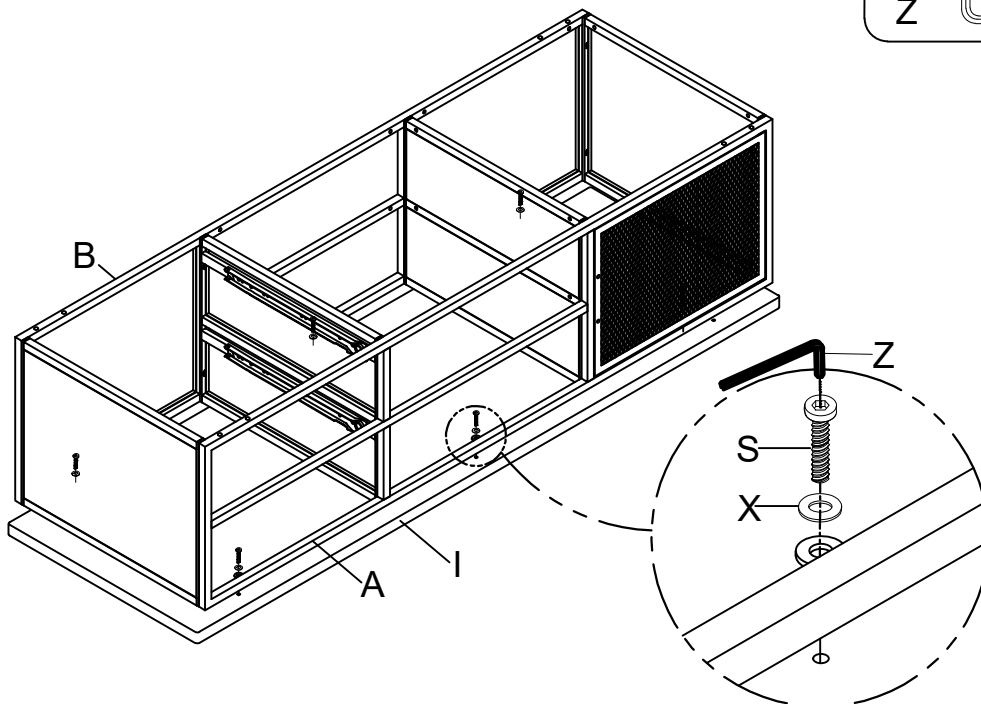


S 6PCS
X 6PCS
Z

 
- 3** Attach one Shelf Panel (G) to Left Middle Panel (D) and Right Middle Panel (E) by using Bolt (U), Flat Washer (Y), and tighten with Screwdriver (AE).

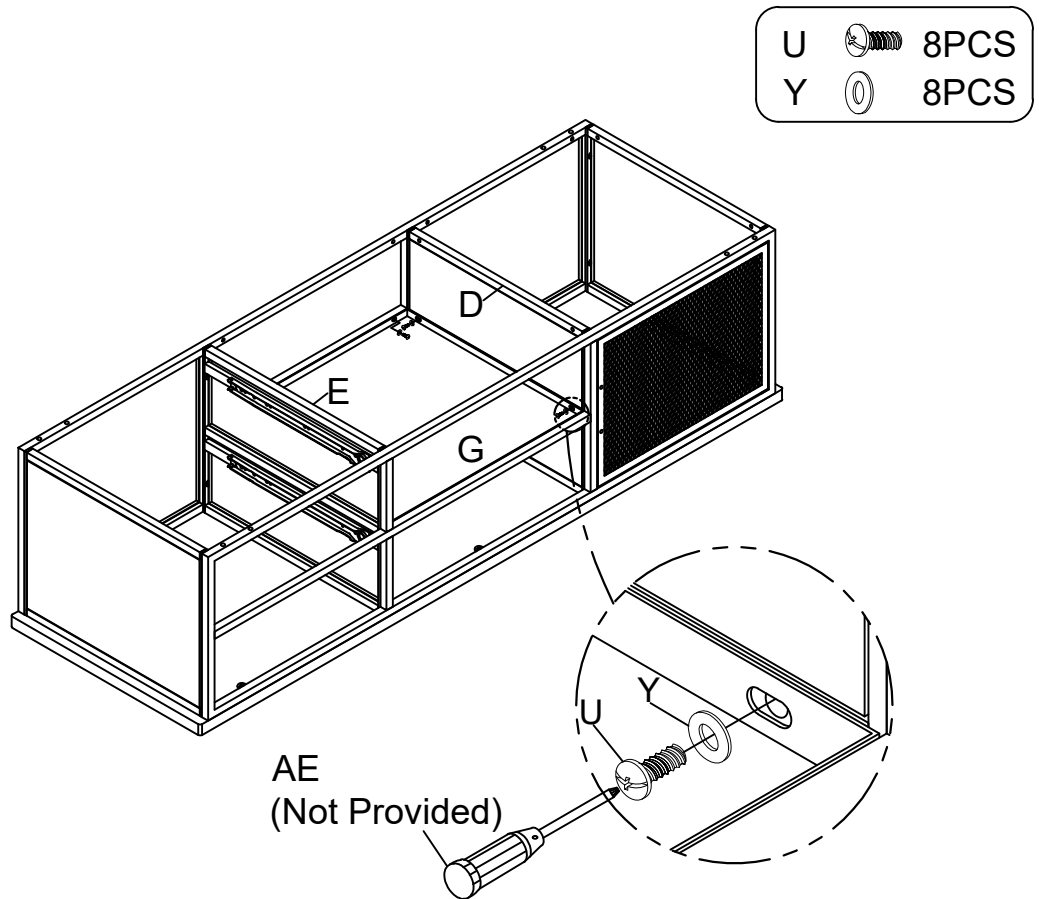

 
- 4** Attach the other one Shelf Panel (G) to Left Middle Panel (D) and Right Middle Panel (E) by using Bolt (U), Flat Washer (Y), and tighten with Screwdriver (AE).

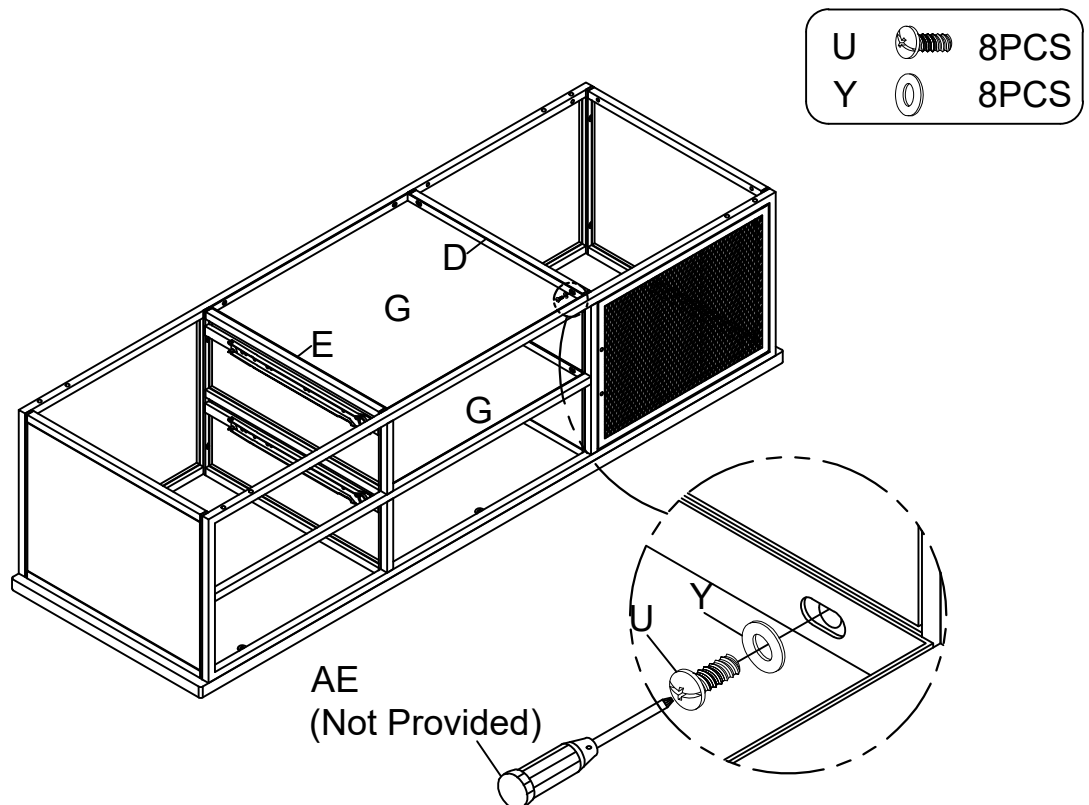

 
- 5** Attach Bottom Panel (H) to Left Panel (C) and Left Middle Panel (D) using Bolt (U), Flat Washer (Y), and tighten with Screwdriver (AE).

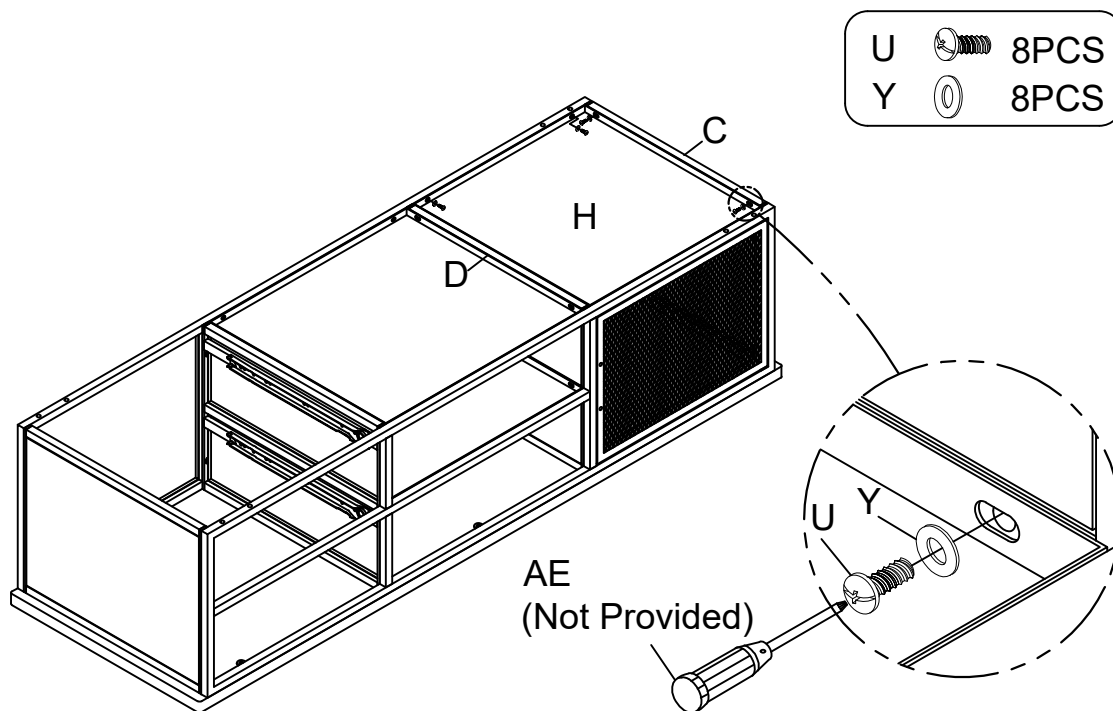

 
- 6** Attach the Wheel Branch (J) to Front Frame (A) and Back Frame (B) using Bolt (T), Flat Washer (X) by Allen Key (Z).

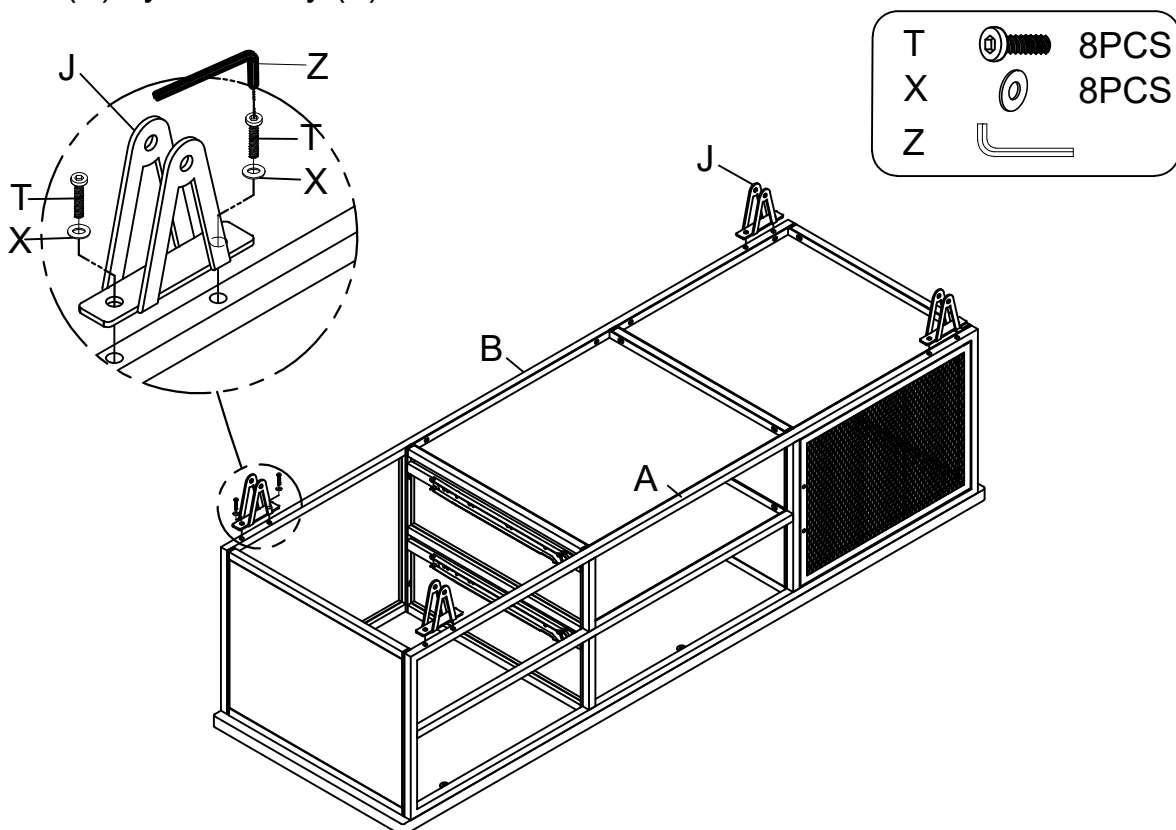

 
- 7** Attach Wheel (K) to Wheel Branch (J) using Bolt (T), Flat Washer (X) by Allen Key (Z) and tighten simultaneously with Nut (AC) by Allen Key (Z).

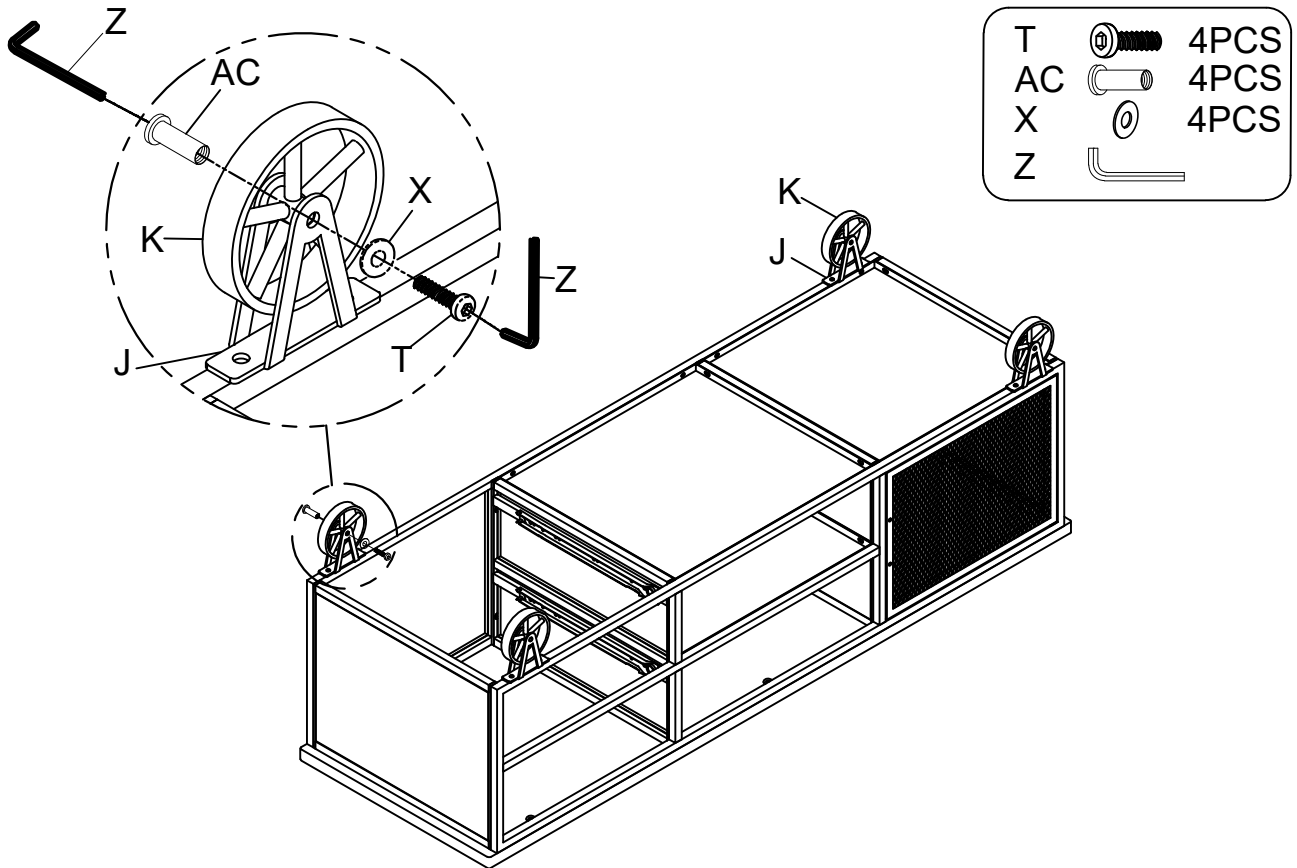

 
- 8** Attach Drawers Side - Left (P) and Drawers Side - Right (Q) to Drawers Back (N) using Bolt (AA), Nut (AB), and tighten with Screwdriver (AE).

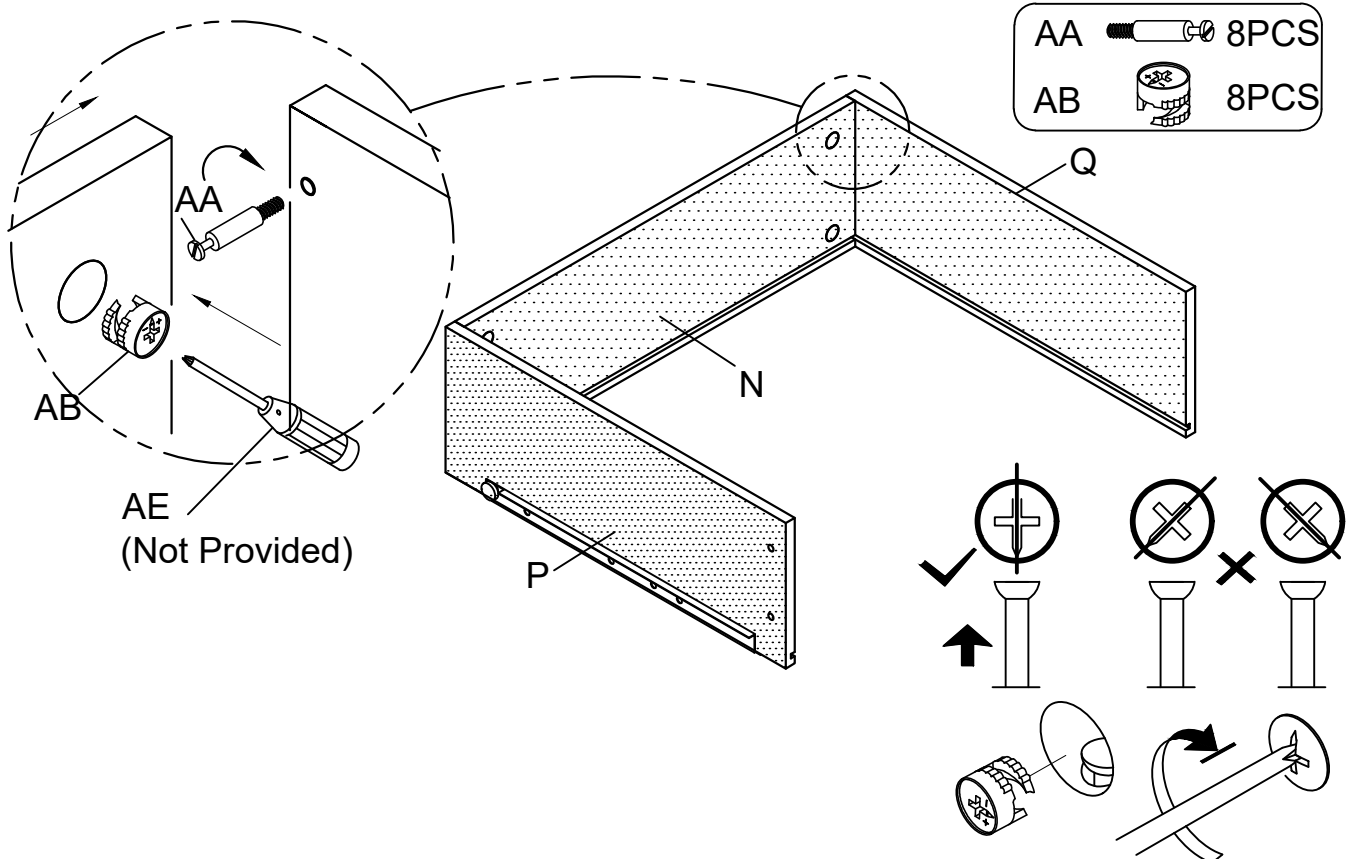

 
- 9 Put Drawers Bottom (O) into Drawers Side - Left (P) and Drawers Side - Right (Q) and Drawers Back (N).

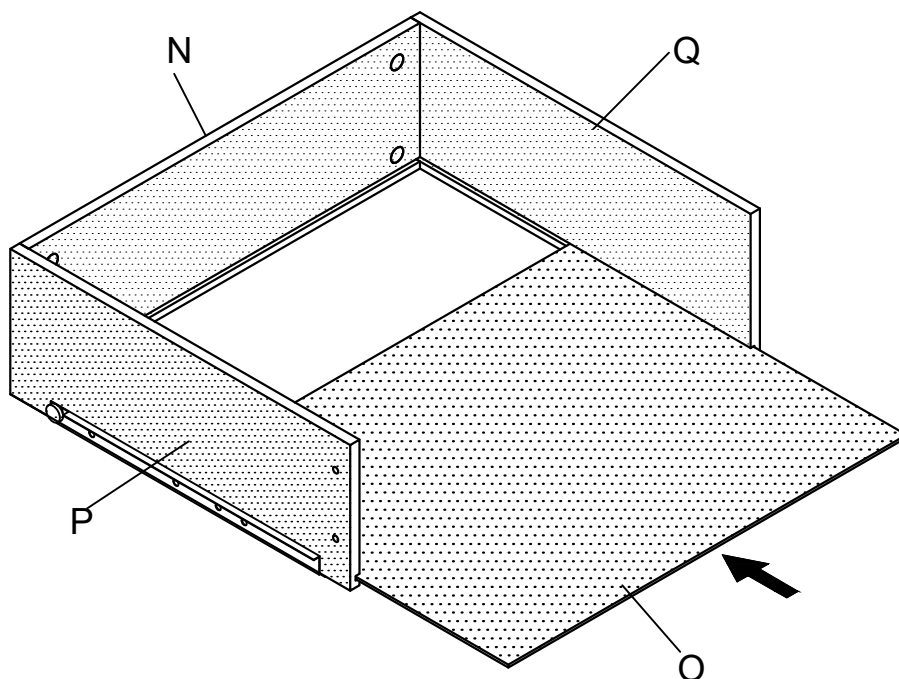

 
- 10 Attach Drawers Front (M) to Drawers Side - Left (P) and Drawers Side - Right (Q) using Bolt (V), and tighten with Screwdriver (AE).

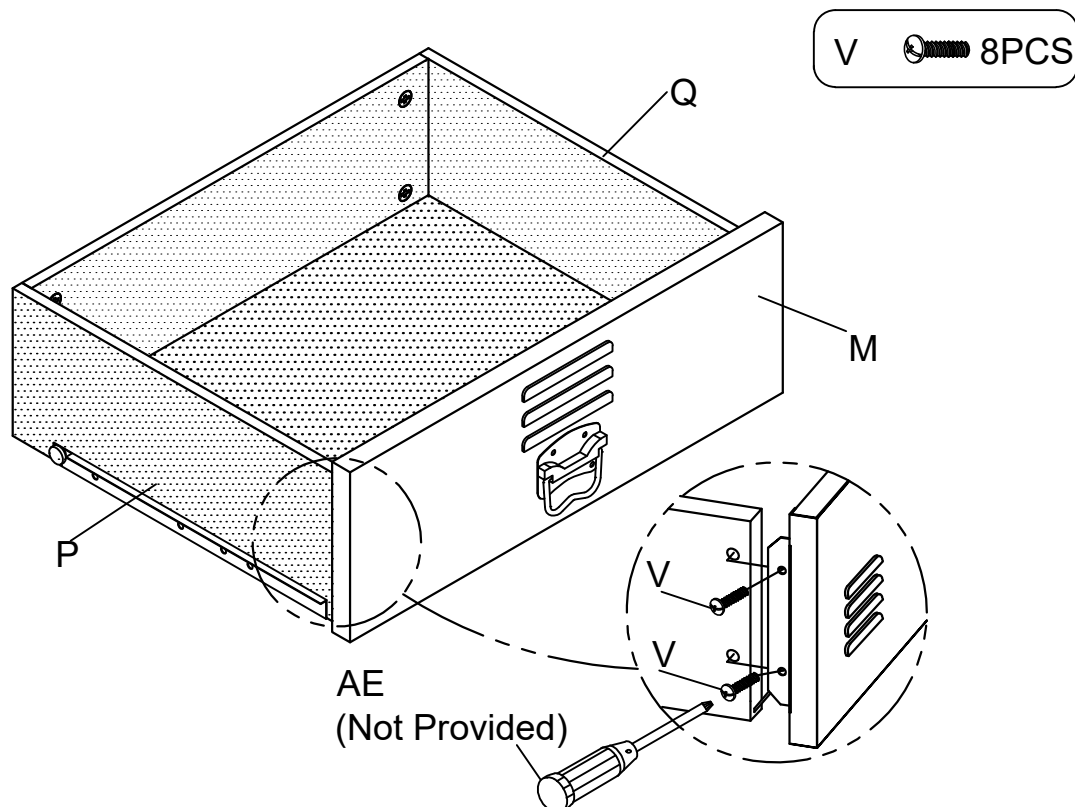

 
11 Hold drawers horizontally, and slide runners into TV Stand.

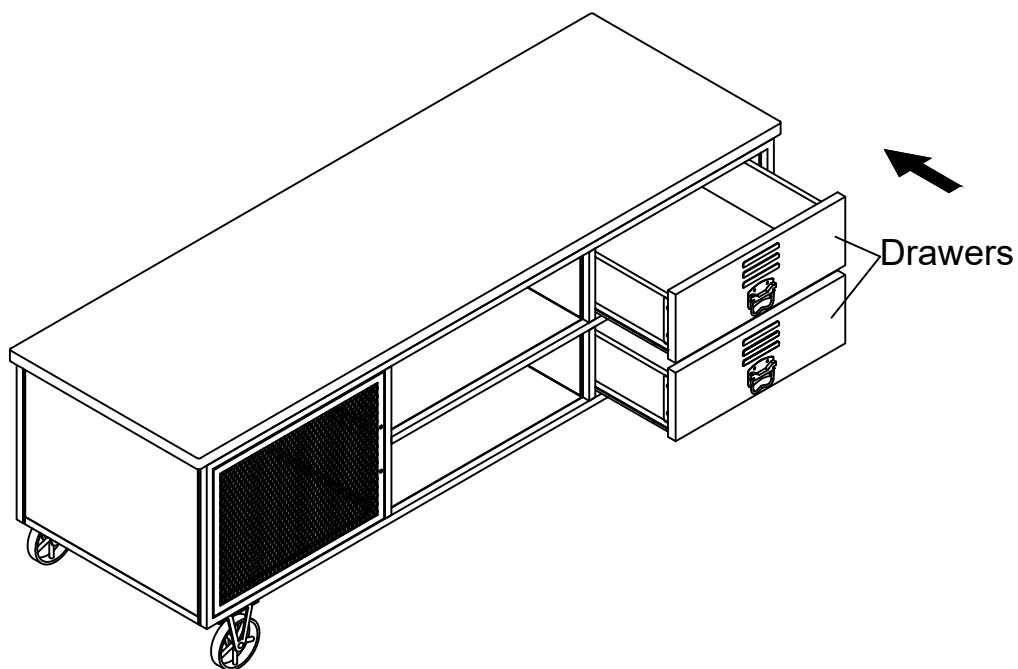

12 Attach Handle (L) to the door using Bolt (W), Flat Washer (Y), and tighten with Screwdriver (AE).

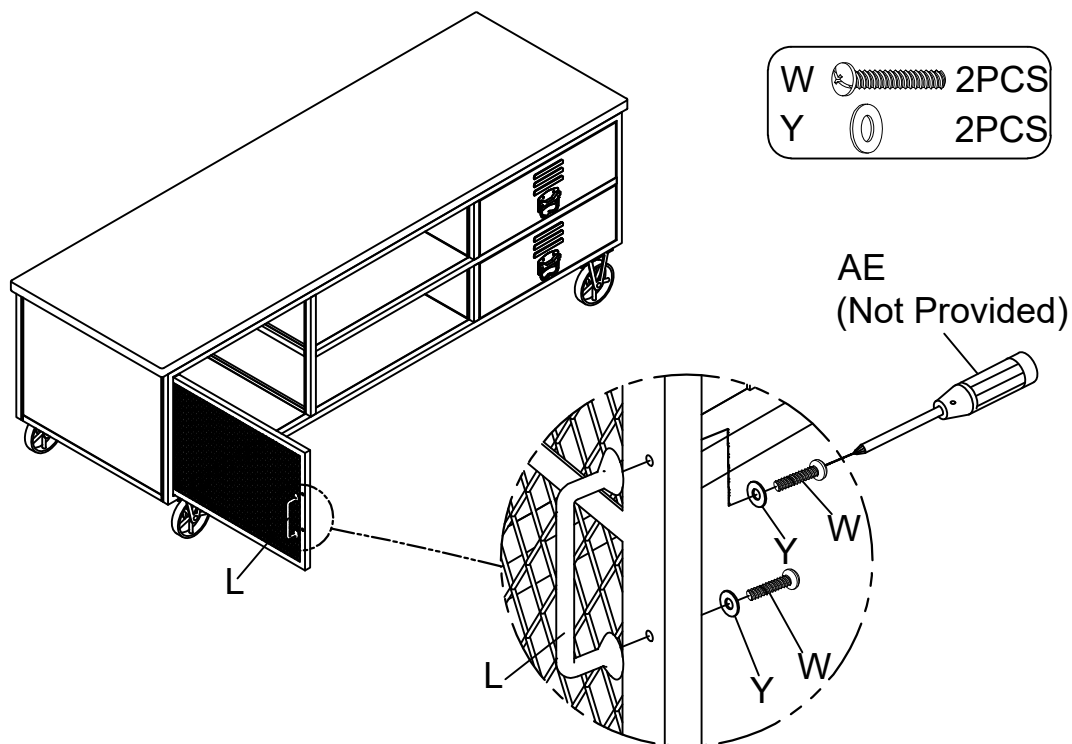 

 - 13** Remark: there is a tip restraint kit provided on the back of this product. Please read the instruction thoroughly and install immediately when placed in home. To prevent tip over, the product must be attached to wall.

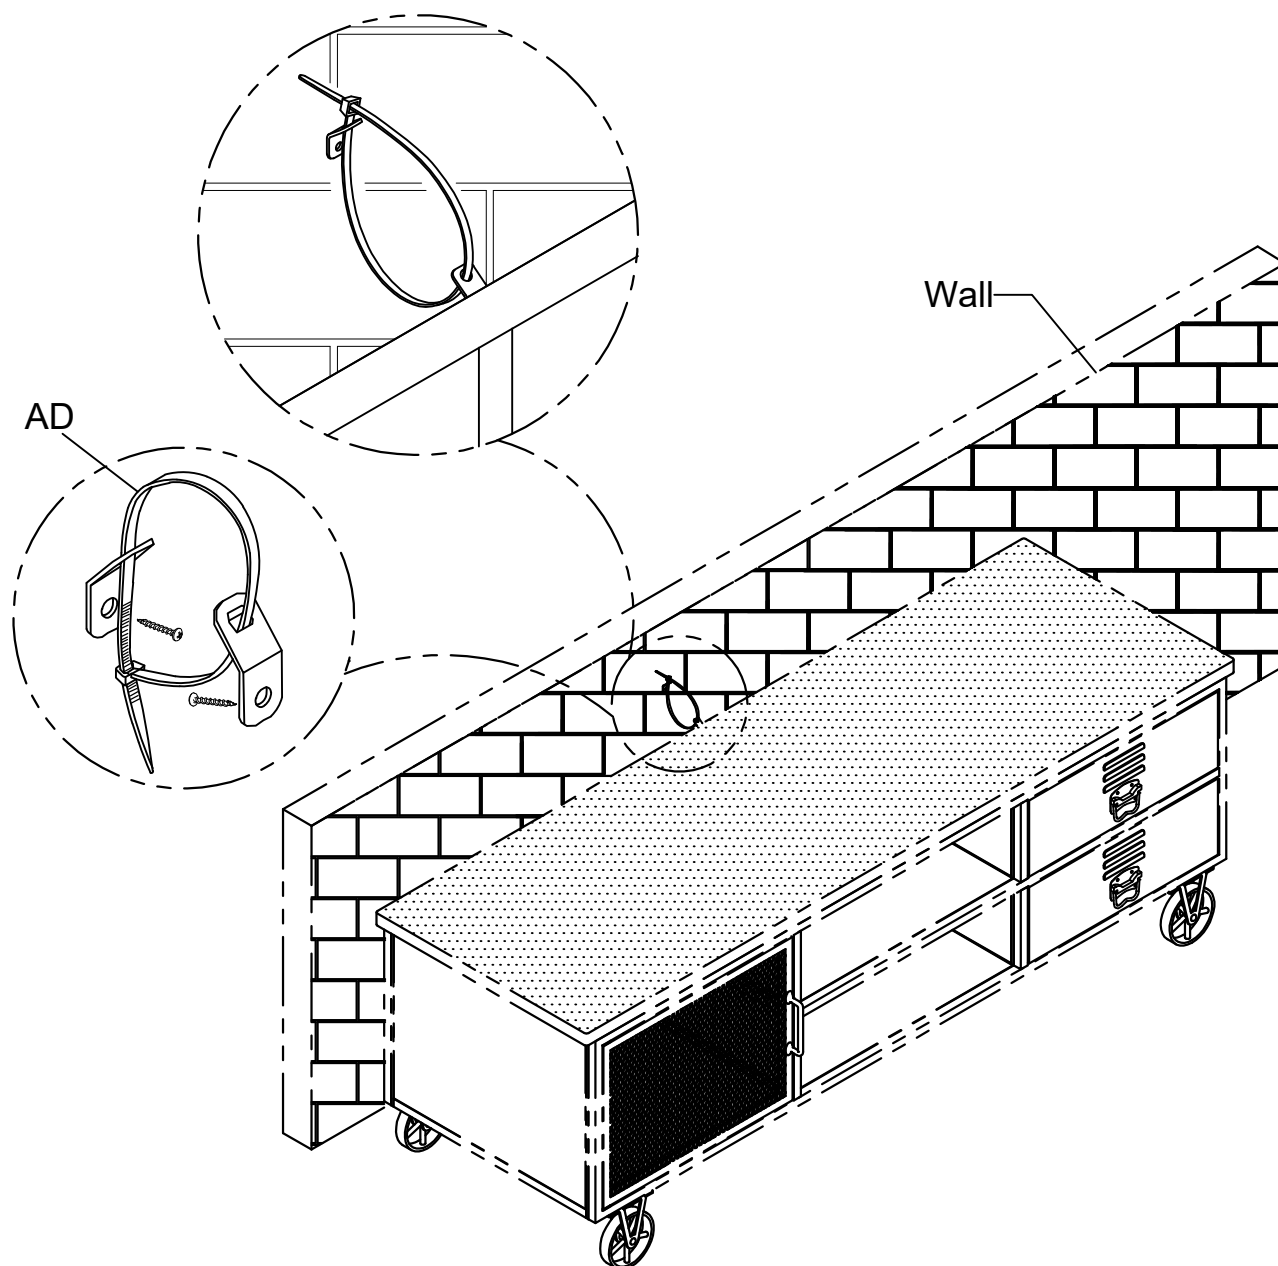

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.